
## LICENSE PLATE LAMP LENS REPLACEMENT

een111 00

## HINT:

- •□ COMPONENTS: SEE PAGE 75-44.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Install is in the reverse order of removal.
- 1. REMOVE[BACK[DOOR[TRIM[COVER[SEE[PAGE]75-47]
- 2. REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY DUTSIDE SEE PAGE 76-33)

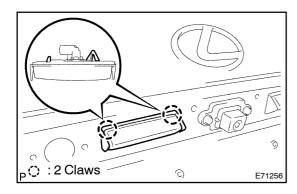

## 3. REMOVE LICENSE PLATE LAMP ASSY

- (a) Release the 2 claw fittings and disconnect the license plate lamp assy as shown in the illustration.
- (b) Disconnect the connector and remove the license plate lamp assy.

## 4. REMOVE LICENSE PLATE LAMP BULB

- (a) Remove the license plate lamp bulb, the license plate lamp socket and wire.
- (b) Remove the license plate lamp bulb from the license plate lamp socket and wire.
- 5. REMOVE LICENSE PLATE LAMP SOCKET AND WIRE
- 6. REMOVE LICENSE PLATE LAMP LENS