
## REAR[LAMP[ASSY OVERHAUL

6E0110 0

## HINT:

- •□ COMPONENTS: SEE PAGE 75-47.
- Use[]he[same[procedures[]or[]he[RH[side]and[]LH[side.
- The procedures listed below are for the LH side.
- Reassembly[istint] the treverse order of overhaul.
- 1. REMOVE[BACK[DOOR[TRIM[COVER[SEE[PAGE[75-47]

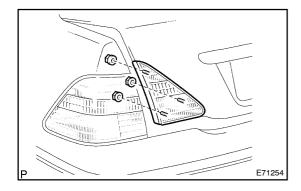

## 2. REMOVE REAR LAMP ASSY LH

- (a) Disconnect the connectors.
- (b) Remove the 3 nuts and the rear lamp assy LH.

## 3. REMOVE REAR COMBINATION LAMP BULB

- (a) Remove the rear combination lamp bulb and the rear combination lamp socket from the rear lamp assy LH.
- (b) Remove the rear combination lamp bulb from the rear combination lamp socket.