

BO006-02

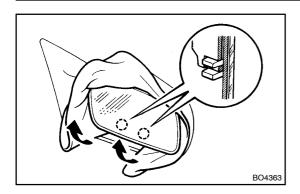


## REPLACEMENT

## 1. IF NECESSARY, DISCONNECT MIRROR


- (a) Insert the shop rag between the mirror and the mirror body to wrap up the mirror in the shop rag.
- (b) Pull up the lower side of the shop rag to disconnect the mirror joint.

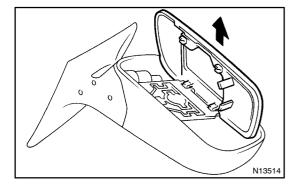

(c) Pull up the mirror and disconnect it.

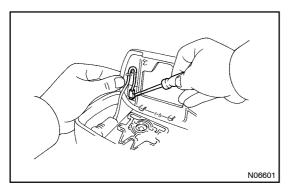

(d) Disconnect the connector.

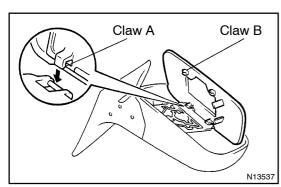

## 2. CONNECT MIRROR

- (a) Connect the claws (A) and set the mirror to the mirror body.
- (b) Push the mirror to connect the claws (B) and connect it.