
## **Position of Parts in Instrument Panel**

## [LHD]

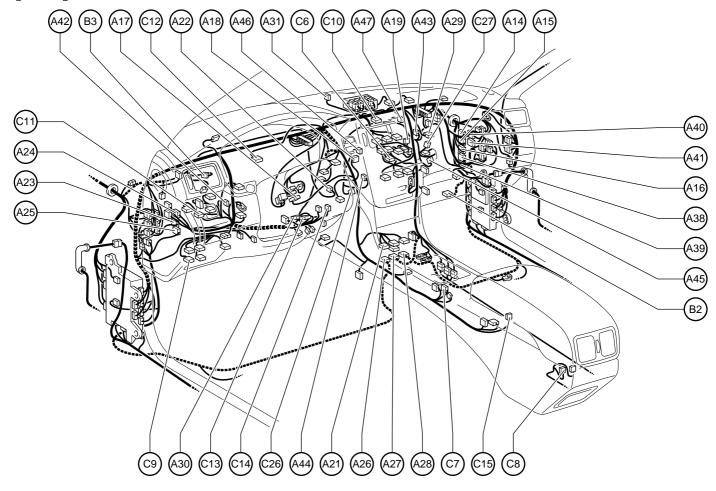

- A14 A/C Control Assembly A15 A/C Control Assembly A16 A/C Control Assembly
- A17 A/C Room Temp. Sensor
- A18 A/C Room Temp. SW (Driver's Side)
- A19 A/C Room Temp. SW (Front Passenger's Side)
- A21 Absorber Control SW
- A22 Accel Position Sensor
- A23 Air Suspension ECU
- A24 Air Suspension ECU

- A24 Air Suspension ECU
  A25 Air Suspension ECU
  A26 Airbag Sensor Assembly
  A27 Airbag Sensor Assembly
  A28 Airbag Sensor Assembly
  A29 Airbag Squib (Front Passenger Airbag Assembly)
- A30 Airbag Squib (Steering Wheel Pad)
  A31 A/C Solar Sensor (Front)
- - Automatic Light Control Sensor
- A38 A/C Control Assembly A39 A/C Control Assembly A40 AFS ECU

- A41 AFS ECU A42 AFS Off SW
- A43 Air Inlet Control Servo Motor
- A44 Air Mix Control Servo Motor (Driver Side)
- A45 Air Mix Control Servo Motor (Front Passenger Side)
- A46 Air Vent Mode Control Servo Motor (Driver Side)
- A47 Air Vent Mode Control Servo Motor

(Front Passenger Side)

- B 2 Blower Motor
- B 3 Brake Pedal Load Sensing SW
- C 6 Center Cluster Integration Panel
- C 7 Cigarette Lighter (Front) C 8 Cigarette Lighter (Rear)
- 9 Clearance Sonar Buzzer (Front)
- C10 Clock
- C11 Coin Box Illumination
- C12 Combination Meter
- C13 Combination SW
- C14 Combination SW
- C15 Console Box Illumination
- C26 Cool Air Bypass Servo Motor (Driver Side)
- C27 Cool Air Bypass Servo Motor (Front Passenger Side)