
## TELEVISION CAMERA ASSY

## REPLACEMENT REPLACEMENT

## HINT:

- •□ COMPONENTS: SEE PAGE 75-44.
- •□ LOCATION: SEE PAGE 67-2.
- •□ Installation[]s[]n[]the[]reverse[order[of[]removal.
- 1. REMOVE REAR COMBINATION LAMP SERVICE COVER RH (SEE PAGE 75-47)
- 2. REMOVE REAR COMBINATION LAMP SERVICE COVER LH (SEE PAGE 75-47)
- 3. REMOVE[LUGGAGE[COMPARTMENT[LAMP[ASSY[NO.1[SEE[PAGE[75-47]
- 4. REMOVE[BACK[DOOR[TRIM[COVER[SEE[PAGE[75-47]
- 5. REMOVE[LUGGAGE[OPENER[CANCEL[CYLINDER]&[KEY[SET[(SEE[PAGE]75-47)]
- 6. REMOVE[LUGGAGE[DOOR[OPENING[\$WITCH[ASSY[]SEE[PAGE[75-47]
- 7. REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY DUTSIDE (SEE PAGE 76-33)

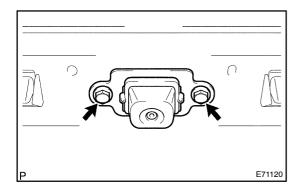

## 8. REMOVE TELEVISION CAMERA ASSY

- (a) ☐ Disconnect The Connector.
- (b) Remove the 2 bolts and television camera assy.
- 9. | INSTALL|TELEVISION|CAMERA|ASSY
- (a) Install the television camera assy with the 2 bolts.
- (b) Connect the connector.

10. ADJUST CAMERA POSITION W/BACK GUIDE MONITOR SYSTEM (SEE PAGE 05-1914)

87144 01