

SYSTEM DIAGRAM

05l38-01

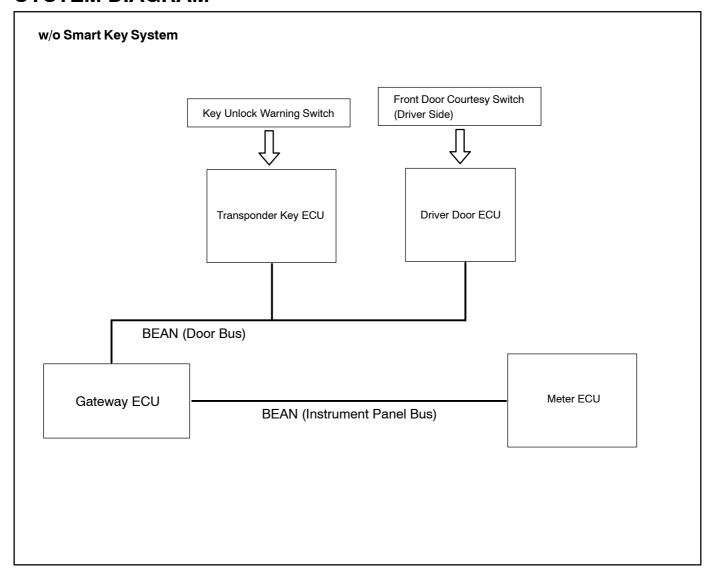

Sender	Receiver	Signal	Communication Line
Transponder Key ECU	Meter ECU	Buzzer Sound Signal	BEAN
Driver Door ECU	Transponder Key ECU	Front Door Courtesy Switch Signal (Driver Side)	BEAN

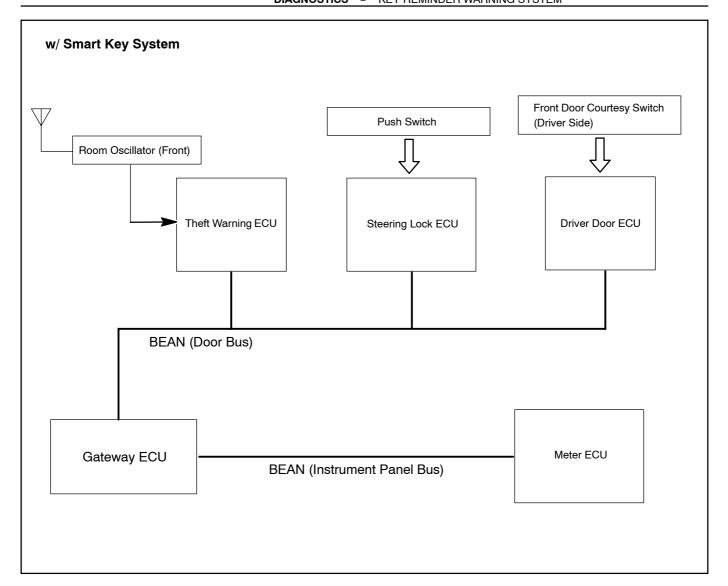

Sender	Receiver	Signal	Communication Line
Steering Lock ECU	Meter ECU	Buzzer Sound Signal	BEAN
Driver Door ECU	Steering Lock ECU	Front Door Courtesy Switch Signal (Driver Side)	BEAN