
MICROPHONE ASSY REPLACEMENT

6714C 01

HINT:

- •□ COMPONENTS: SEE PAGE 76-50.
- •□ LOCATION: SEE PAGE 67-2.
- Installation is in the reverse order of removal.
- 1. REMOVE[MAP[LAMP[ASSY[SEE[PAGE[76-52]]

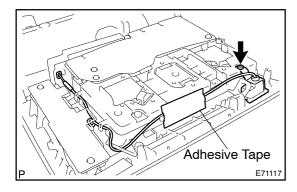

2. REMOVE MICROPHONE ASSY

- (a) Disconnect the connector.
- (b) Remove the screw.
- (c) Peel the adhesive tape and remove the microphone assy.