
SYSTEM DIAGRAM

05HZM-01

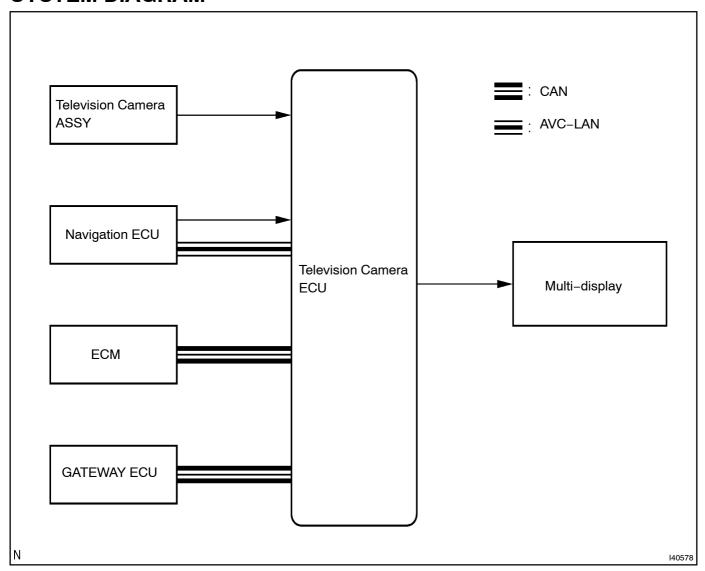

Input and output signals of each ECU.

Transmitting ECU (transmitter)	Receiving ECU	Signals	Communication method
ECM	Television Camera ECU	Shift R position signal	CAN