
## FRONT NO.2 SPEAKER ASSY REPLACEMENT

0714A O

## HINT:

- •□ LOCATION:\BEE\PAGE\67-2.
- Installation is in the reverse order of removal.
- 1. REMOVE [INSTRUMENT [PANEL [\$AFETY [PAD [\$UB-ASSY []SEE [PAGE [71-6])]

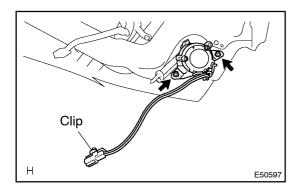

## 2. REMOVE FRONT NO.2 SPEAKER ASSY

- (a) Disconnect the connector.
- (b) Disengage the clip.
- (c) Remove the 2 nuts and front No.2 speaker assy.
- (d) Perform the same procedure on the other side.