
SYSTEM DIAGRAM

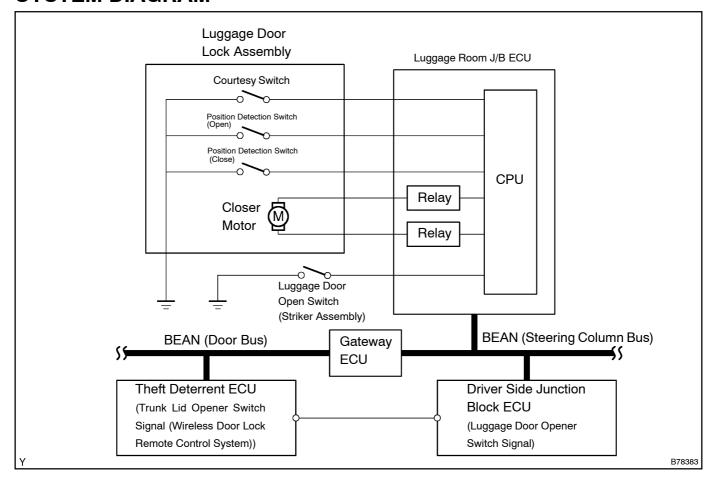

Sender	Receiver	Signal	Communication Line
Driver Side J/B ECU	Theft Deterrent ECU	Luggage opener activation signal	BEAN
Theft Deterrent ECU	Luggage Room J/B ECU	Luggage open output request signal	BEAN
Luggage Room J/B ECU	Theft Deterrent ECU	Luggage key-linked signal Luggage courtesy switch signal Luggage switch signal	BEAN

05I5O-01