#### Modbus RTU RS485 1 路 12V 繼電器模組 1 路輸入



首頁 > 採開平台 > 功能模组零配件, 繼電器模組 > MODBUS RTU RS485 1路 12V 繼電器模組 1路輸入 帶光耦隔離 支援 ARDUINO, PC, 樹梅派, PLC 通新



https://www.taiwansensor.com.tw/product/modbus-rtu-rs485-1%E8%B7%AF-12v-

<u>%E7%B9%BC%E9%9B%BB%E5%99%A8%E6%A8%A1%E7%B5%841%E8%B7%A</u> <u>F%E8%BC%B8%E5%85%A5-</u>

%E5%B8%B6%E5%85%89%E8%80%A6%E9%9A%94%E9%9B%A2-

%E6%94%AF%E6%8F%B4-arduino-pc-%E6%A8%B9/


# Modbus RTU RS485 1 路 12V 繼電器模組 1 路輸入 帶光耦隔離 支援 Arduino, PC, 樹梅派, PLC 通訊

繼電器電壓: 12V繼電器,供電 12V,繼電器通訊:多機組網 485 通訊,基於 MBDBUS-RTU協議,默認通訊地址為 1,用戶可通過指令自行修改地址。

- 1. RS485 通訊接口
- 2. TTL 通訊接口
- 3.1路輸入
- 4.1路輸出
- 5.一個用戶 LED 指示燈
- 6.一個 STM32F030F4 單片機
- 71個繼電器狀態指示 LED 燈
- 10. 電源端子接口(12V 供電)

### 1路资料参数说明




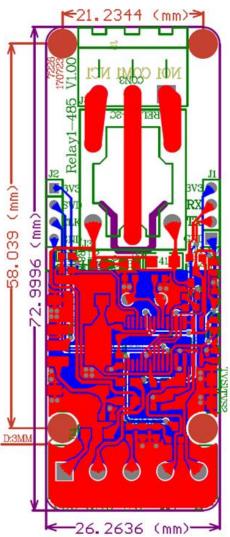



#### 硬件资源:

- 1. RS485通讯接口
- 2.TTL通讯接口
- 3. 1路输入
- 4.1路输出
- 5.一个用户LED指示灯
- 6.一个STIVI32F030F4单片机
- 71个继电器状态指示LED灯
- 10. 电源端子接口(12V供电)

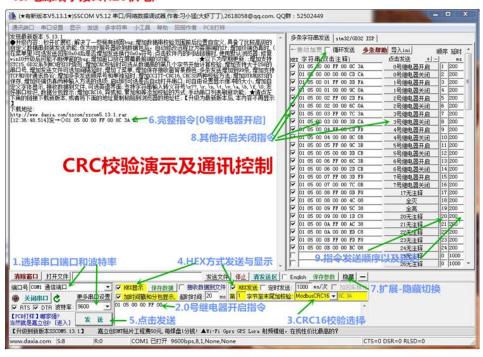

#### Modbus RTU 指令

波特率: 9600 8 NONE 1

16 進制發送 / 16 進制接收

操作步驟:

1.軟件設置通訊波特率

2.設置地址(通訊使用的設備地址,默認地址為01)

/\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*/

注意:只接一個設備,否則地址都會被設置。

```
設置地址為:01
00 10 00 00 00 01 02 00 <mark>01</mark> 6A 00//修改成 01
設置地址為:02
00 10 00 00 00 01 02 00 <mark>02</mark> 2A 01//修改成 02
設置地址為:03
00 10 00 00 00 01 02 00 <mark>03</mark> EB C1//修改成 03
讀取地址
00 03 00 00 00 01 85 db
返回:
00 03 02 00 01 44 44 //01 為地址
各字節代表的意義:
[1 號地址]
//-----
1 號繼電器開啟: 01 05 <mark>00 01 <mark>01 00</mark> 9d 9a</mark>
字節 1:地址
字節 2:功能嗎
字節34:寄存器地址
字節56:寄存器數據
字節 78: CRC 校驗
[1 號地址]
//----
0號繼電器開啟: 01 05 00 00 FF 00 8C 3A
0 號繼電器關閉: 01 05 00 00 00 00 CD CA
1 號繼電器開啟: 01 05 00 01 FF 00 DD FA
1 號繼電器關閉: 01 05 00 01 00 00 9C 0A
//----
2號繼電器開啟: 01 05 00 02 FF 00 2D FA
2號繼電器關閉: 01 05 00 02 00 00 6C 0A
//-----
3號繼電器開啟: 01 05 00 03 FF 00 7C 3A
3號繼電器關閉: 01 05 00 03 00 00 3D CA
//-----
4 號繼電器開啟: 01 05 00 04 FF 00 CD FB
4號繼電器關閉: 01 05 00 04 00 00 8C 0B
```

```
//-----
5號繼電器開啟: 01 05 00 05 FF 00 9C 3B
5號繼電器關閉: 01 05 00 05 00 00 DD CB
//-----
6 號繼電器開啟: 01 05 00 06 FF 00 6C 3B
6號繼電器關閉: 01 05 00 06 00 00 2D CB
//----
7號繼電器開啟: 01 05 00 07 FF 00 3D FB
7號繼電器關閉: 01 05 00 07 00 00 7C 0B
//----
讀取 0 號繼電器狀態: 01 01 00 00 00 01 FD CA
讀取 1 號繼電器狀態: 01 01 00 01 00 01 AC 0A
讀取 2 號繼電器狀態: 01 01 00 02 00 01 5C 0A
讀取 3 號繼電器狀態: 01 01 00 03 00 01 0D CA
讀取 4 號繼電器狀態: 01 01 00 04 00 01 BC 0B
讀取 5 號繼電器狀態: 01 01 00 05 00 01 ED CB
讀取 6 號繼電器狀態: 01 01 00 06 00 01 1D CB
讀取7號繼電器狀態:01 01 00 07 00 01 4C 0B
讀取所有繼電器狀態: 01 01 00 00 00 08 3D CC
閃開指令:
說明:開啟後馬上關閉,100MS為一個單位[1代表100MS]
1 號地址:
0 號繼電器閃開: 01 05 02 00 07 00 CE 42 //700MS = 7*100MS = 700MS
1號繼電器閃開: 01 05 02 01 08 00 9A 72 //800MS
返回:跟發送指令一樣
2 號地址:
0 號繼電器閃開: 02 05 02 00 05 00 CF 11 //500MS
1 號繼電器閃開: 02 05 02 01 06 00 9E 21 //600MS
全滅: 01 0F 00 00 00 08 01 00 FE 95
全亮: 01 0F 00 00 00 08 01 FF BE D5
單一翻轉指令:
0號繼電器翻轉:01 05 00 00 55 00 F2 9A
1號繼電器翻轉:01 05 00 01 55 00 A3 5A
2號繼電器翻轉:01 05 00 02 55 00 53 5A
```

3 號繼電器翻轉: 01 05 00 03 55 00 02 9A 4 號繼電器翻轉: 01 05 00 04 55 00 B3 5B 5 號繼電器翻轉: 01 05 00 05 55 00 E2 9B 6 號繼電器翻轉: 01 05 00 06 55 00 12 9B 7 號繼電器翻轉: 01 05 00 07 55 00 43 5B

全部翻轉指令:


01 05 00 00 5A 00 F7 6A

讀取所有接口輸入狀態

發送: 01 02 00 00 00 08 79 CC //讀取 8 個輸入狀態

返回: 01 02 01 00 A1 88

## Modbus RTU 1 Channel 12V Relay Output Board Module Switch Input RS485 / TTL ND

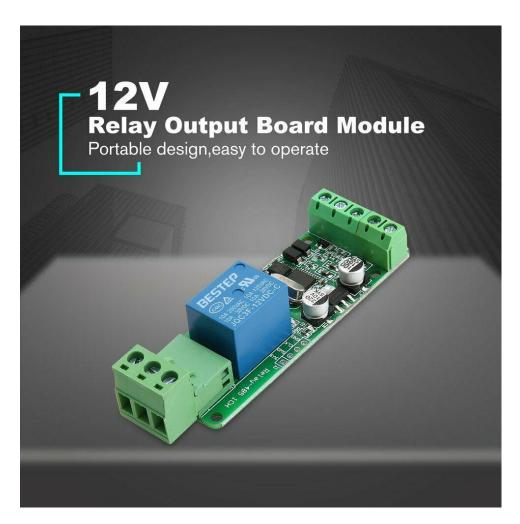

#### Features:

1. This is a 1 Channel 12V Relay Output Board Module.

- 2.Easy to install.
- 3.Good quality, durable.
- 4. Portable design, easy to operate.
- 5.Low power, high precision, RS485 / TTL Communication.

Descriptions:

This is a 1 Channel 12V Relay Output Board Module, Low power, high precision.

Specifications:

Color:green

Item size:8.3x2.5x1.7cm/3.3x1x0.7in

Item weight:24g/0.85oz

Package information:

Size:105x65x17mm/4.1x2.6x0.7in

Weight:25g/0.88oz

Polybag Package

Package included:

1 x Relay Output Board Module