

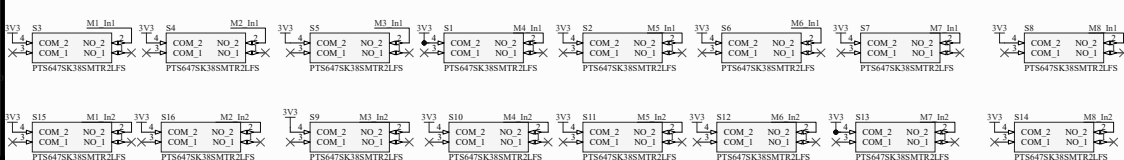

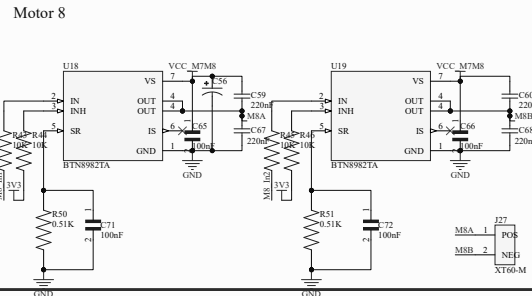
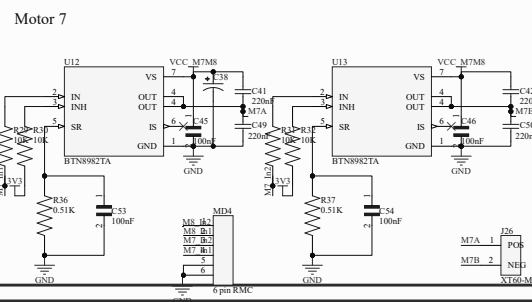
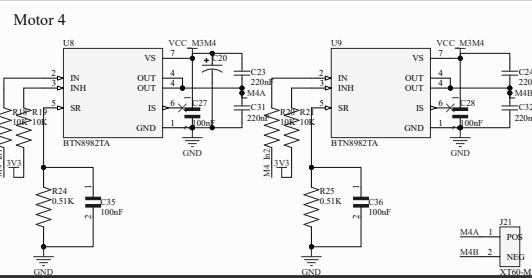
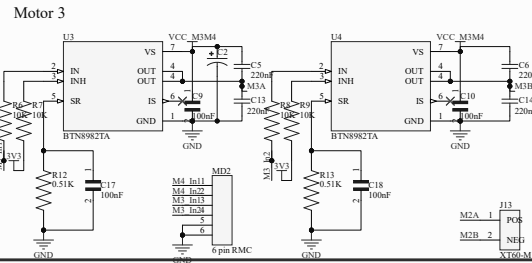
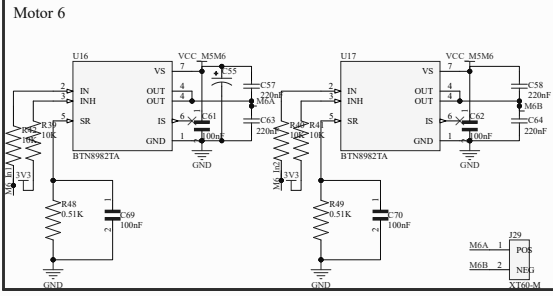
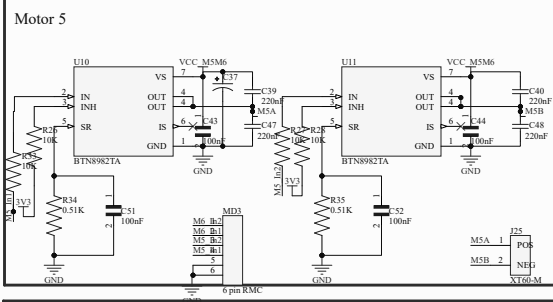
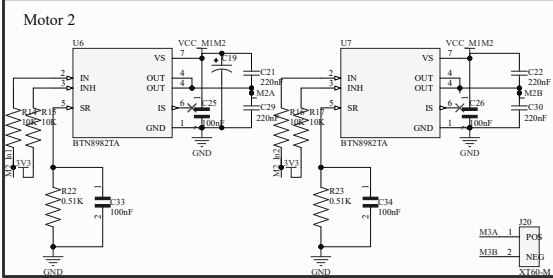



Motor Driver(BTN8982TA)

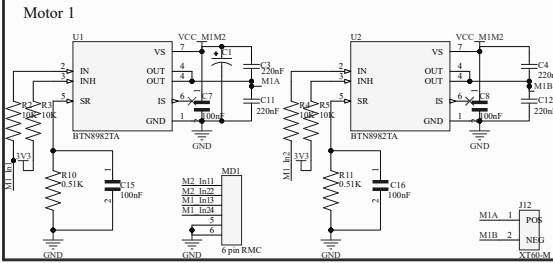


Servo Motors

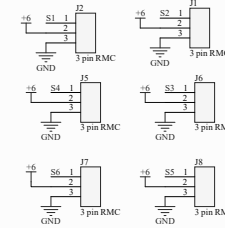


BLDC Motors

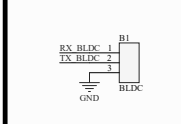


Stepper Motors

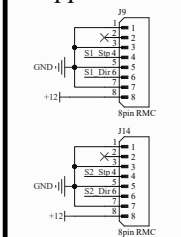


LIMIT SWITCHES

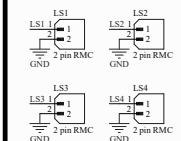


Power

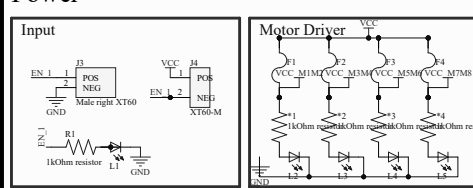


Teensy 4.1




Servo




Encoders




Stepper




Teensy 4.1

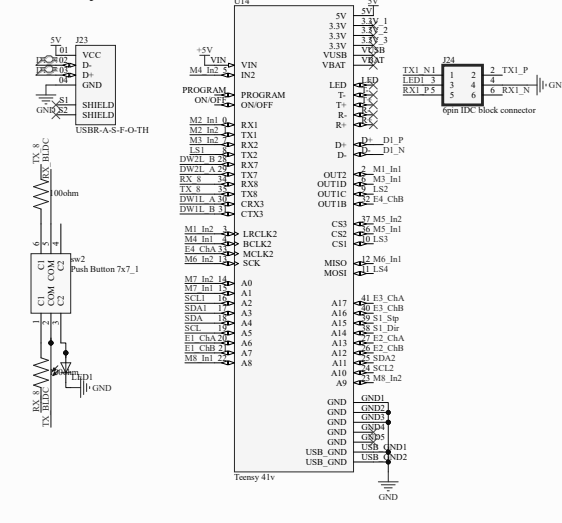


Pixy




BNO-055

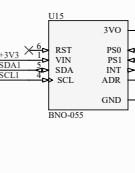


Encoders



Relay



Ethernet

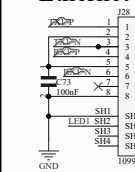

Title	Size	Number	Revision
	A2		
Date: 5-28-2026	File: C:\Users\Interface SchDoc	Sheet of: 8	Drawn By: