



Battery Input

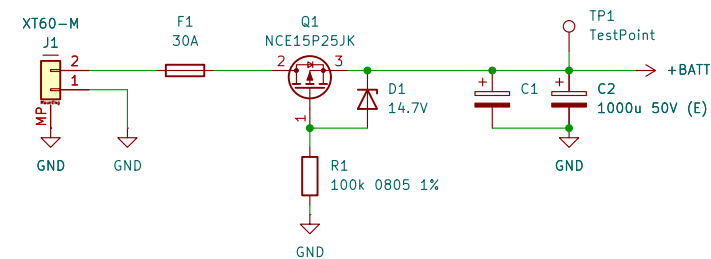


Raspberry Pi

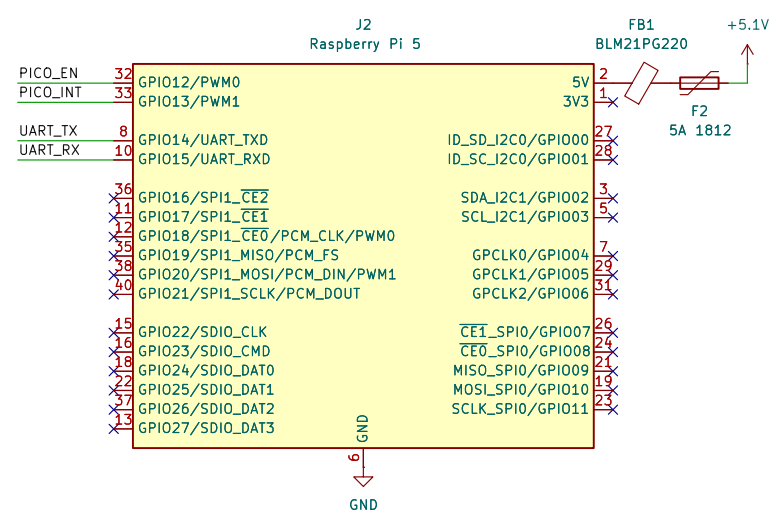


Warning: No back-power protection.
Use an isolator if connecting directly to Pi with USB. Remote PC preferred.

Raspberry Pi Pico

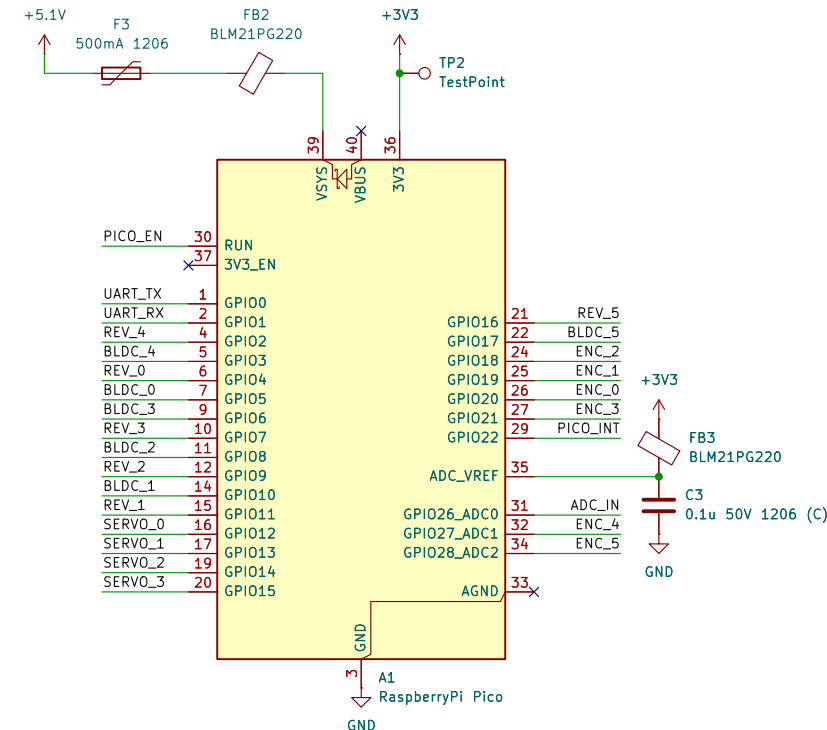


22.2V to 12V

External DC/DC Converter
Recommended >10.8 A

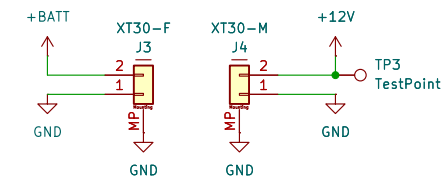


22.2V to 7.5V

External DC/DC Converter
Recommended >10 A

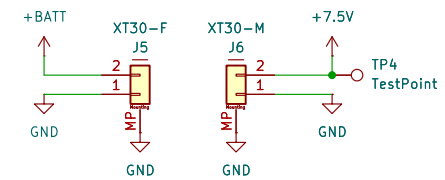


12V to 5.1V

Adjustable XL4015 buck converter module.
Change until Raspberry Pi 5V pin is exactly 5.1V

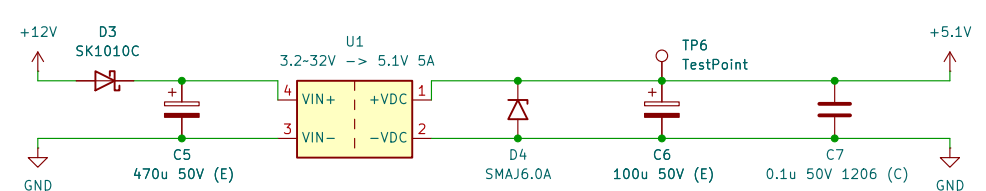


Battery Monitor

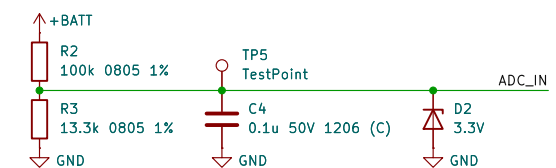


DC Motors

Recommended 36GP-3626 43RPM 12V w/ built-in PWM speed controller

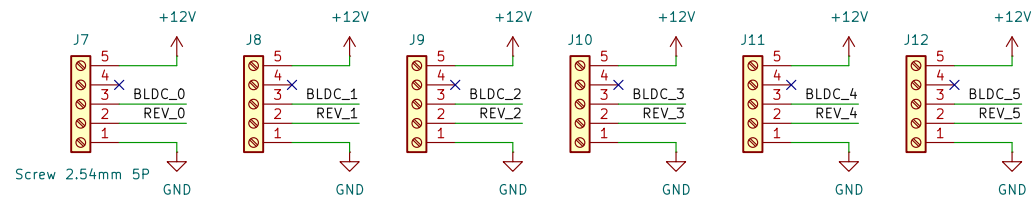


Servo Motors

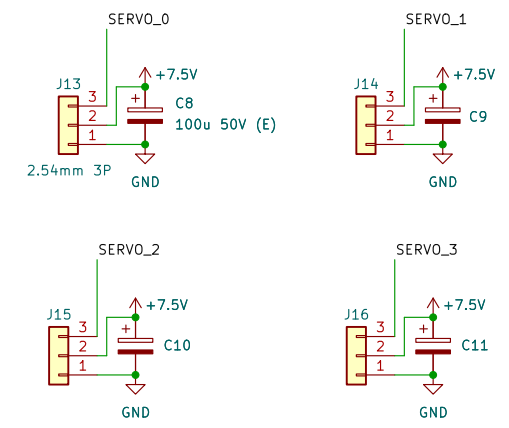


DC Motor Encoders

Recommended ST3215-7.4V Servo

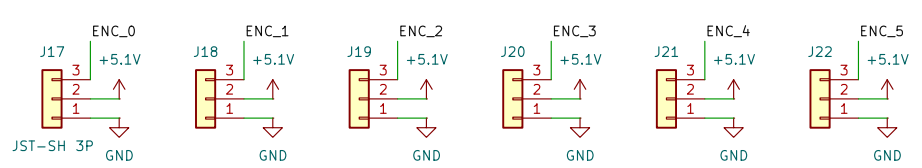

Status LEDs

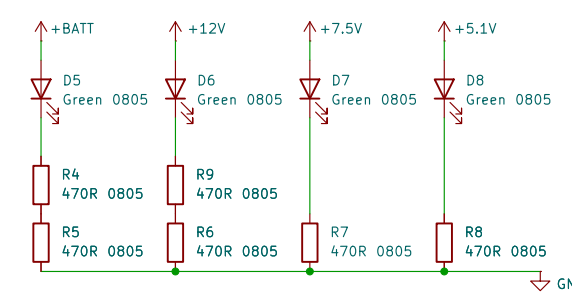

Mounting

