

Transfer K-Scale & TouchScale User's Manual

Index

1. Program description	3
2. Required elements	3
3. Auxiliary files	4
a. ipServidora.txt	4
4. How the application works.....	5
a. Application overview.....	5
b. How to start.....	7
c. Transfer files to the Scales	8
d. Importing files from the Scales	10
e. Deleting files on the Scales.....	11
f. Start-up parameters	13

1. Program description

This application has been developed in order to easily transfer files to K-Scale and TouchScale, to copy the files that already exist on these scales to a PC and/or to be able to delete the content of the folders of these scales. For this purpose, an easy directory structure has been created to allow a final user to organize the elements to be sent in different folders. The current directory structure is the following:

Images	Item pictures.
Labels	Label designs.
Logos	Company logo (logos to be printed).
Publicity	Advertising Images and Videos.
Tickets.....	Ticket designs.
Keyboard.....	Screen designs.
Vendors.....	Salesclerk pictures/photos.

2. Required elements

The program generates every element needed for the execution.

In order to use the information located in Hydra database (either executing by start-up parameters or using the visual interface), it is necessary to run Transfer.exe from the same directory where dbaseTouch.mdb is stored.

3. Auxiliary files

a. `ipServidora.txt`

In this file, Transfer will store the IP address of the last Scale operated by Transfer, if this address is introduced manually (using the 4 application textboxes).

This option is enabled in order to work without using the Hydra database (pointing directly to the server address).

This file is created automatically when the application closes (if the IP address has been introduced manually).

4. How the application works

a. Application overview

The appearance of the main form will vary depending of the working mode. These are the configurations:

- Starting Transfer with no Hydra database associated.



- Starting Transfer with Hydra database associated.

The form appearance is similar to the previous case. The difference is that it appears a label with the server IP address, the destination where Transfer will act.



Using the “FTP/LAN” selector, we can choose which kind of Transfer would be done. There are two options:

1. FTP (selector checked)
 - a. File transfer using FTP protocol.
 2. LAN (selector unchecked)
 - a. File transfer in the same network. This transfer is much faster, so in case the Transfer is done inside the same local network, it is recommended to use the program with this selector **unchecked**.
- Running Transfer with Start-up parameters.

Just a Form with a log will be shown, where the program will write the result of the actions done by the program.



b. How to start

When the Transfer starts, it checks the existence of the directories to be sent. If these directories don't exist, it creates:

- Images
- Labels
- Logos
- Publicity
- Tickets
- Keyboard
- Vendors


Then, the program looks for a HydraTouch database in the working directory. If it exists, the program reads the information stored in Hydra and shows the IP address of the server scale. If there is no HydraTouch database in the same directory than Transfer.exe, the program will show 4 textbox for introducing the IP of the sending destination.

By using the Checklist, we can choose between which directory or directories Transfer will be acting to and if we want to overwrite the existing files (just for "Transfer" and "Get Files"). When the Checkbox is unchecked, if a file already exists on the destination device, it won't be overwritten.


c. Transfer files to the Scales

This option is used to send files from a PC to the scales. The procedure is listed below:

1. Select destination device (using the Hydra database or introducing the IP address of the scale).
2. Choose the folders to be transferred.
3. Check if files, with the same name, have to be overwritten or not.

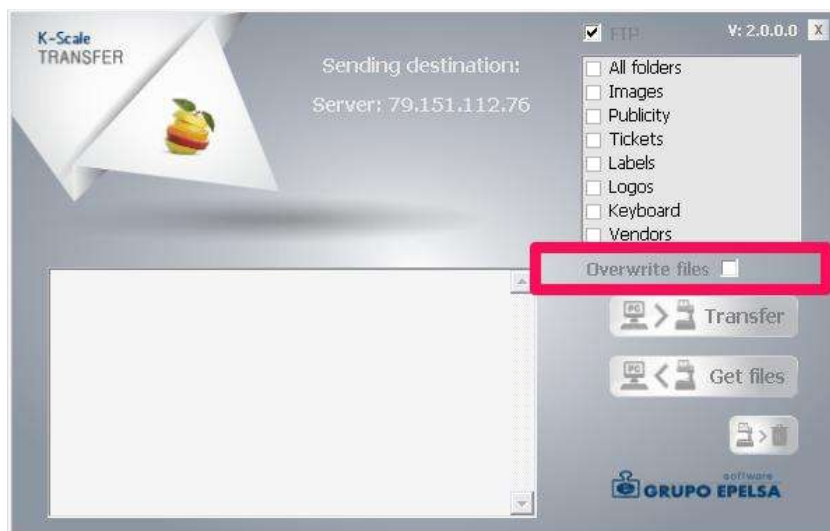

4. Once configured, press on Transfer button to send the files.

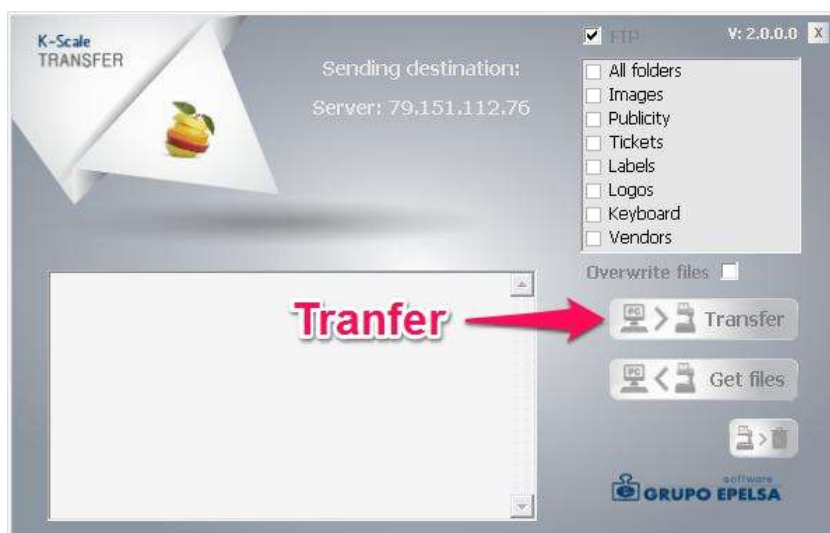


While transferring, the progress will be shown on the Log:



d. Importing files from the Scales

To absorb the existing files on the scales. The procedure is similar to the file transfer.

1. Choose from where Transfer will get the files (scale source).
2. Choose the folders to be copied.
3. Check if the files would be overwritten or not.
4. Once configured, press over the “Get files” button to start the process.

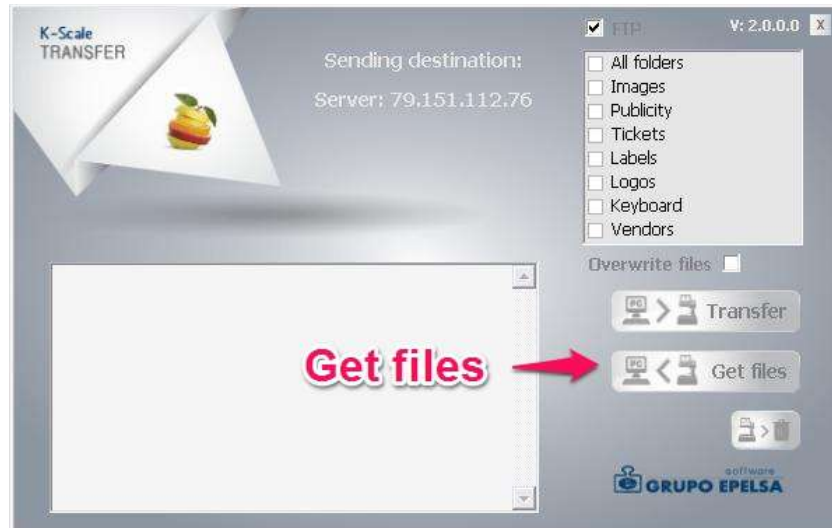

During the process, Transfer will show how the files are copied on the log.




e. Deleting files on the Scales

To delete the files stored in the machines. This tool should be useful in order to match the content between the PC and the Scales. It can be used after getting all the scale files and once modified on the PC, delete the content on the scales and transfer back again using the Transfer.


The procedure is similar to transfer or getting files from the scales.

1. Select the scale where the files will be deleted.
2. Select the folders which their content will be erased.
3. Once configured, press the Delete button.

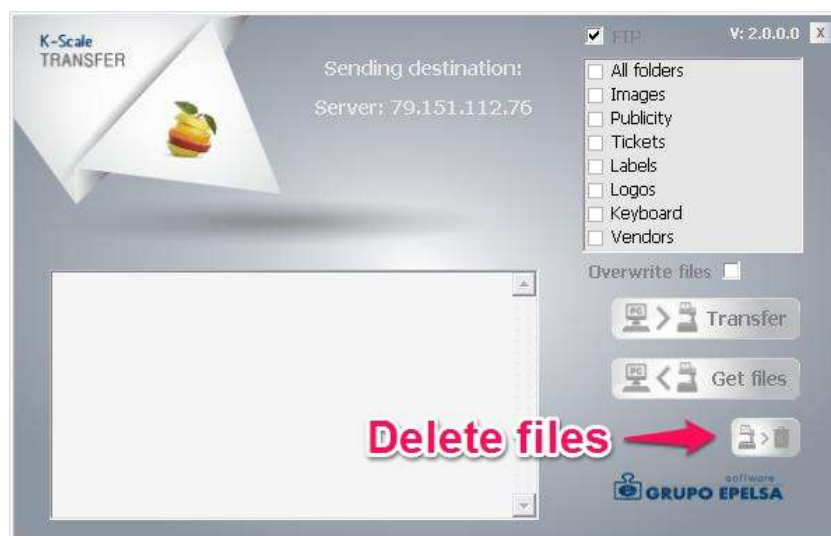

4. Since this action cannot be undone, the program asks for 2 confirmations before the deletion.
 - a. 1st Confirmation.

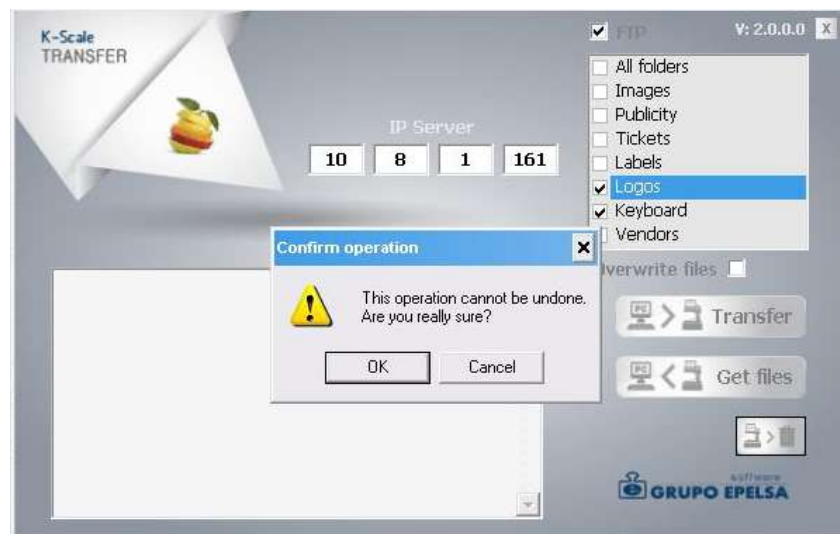

b. 2nd Confirmation.

If these messages are accepted, the program will show how the files are deleted on the application log.



f. Start-up parameters

Used without parameters, Transfer shows the same form previously explained.

In order to use the information stored on the Hydra database, Transfer.exe must be in the same directory than dbaseTouch.mdb.

When Transfer is started-up by parameters, it can be used just for **LAN** sending.

Syntax

TransferKScale [\\ipDest] [-dir [Directories]] [-o] [-h]

Parameters

\\ipDest: Specifies the destination device. Sending options:

- \\ip.....To send data to a particular IP.
- \\ServerTo send data to the server Scale (Hydra database must exist).

-dir: Specifies the directories to be sent. If you omit **-dir**, Transfer will send all the folders.

Directories: List of the directories to be copied, separated by blank spaces ' '.

-o: Specifies that if a file already exists in the destination Scale, it will be replaced by the new one sent. It will be overwritten. If **-o** is not specified, by default files won't be overwritten.

-h: Specifies if the progress will be shown on a form or not. If **-h** is omitted, the progress won't be shown and once the transfer is finished, the application will close.

Examples:

- To send all directories to the server scale, without showing any progress on the main form:
 - TransferKScale \\Server -h
- To send Images, Labels & Logos to the server scale, overwriting files on destination.
 - TransferKScale \\Server -dir Images Labels Logos -o