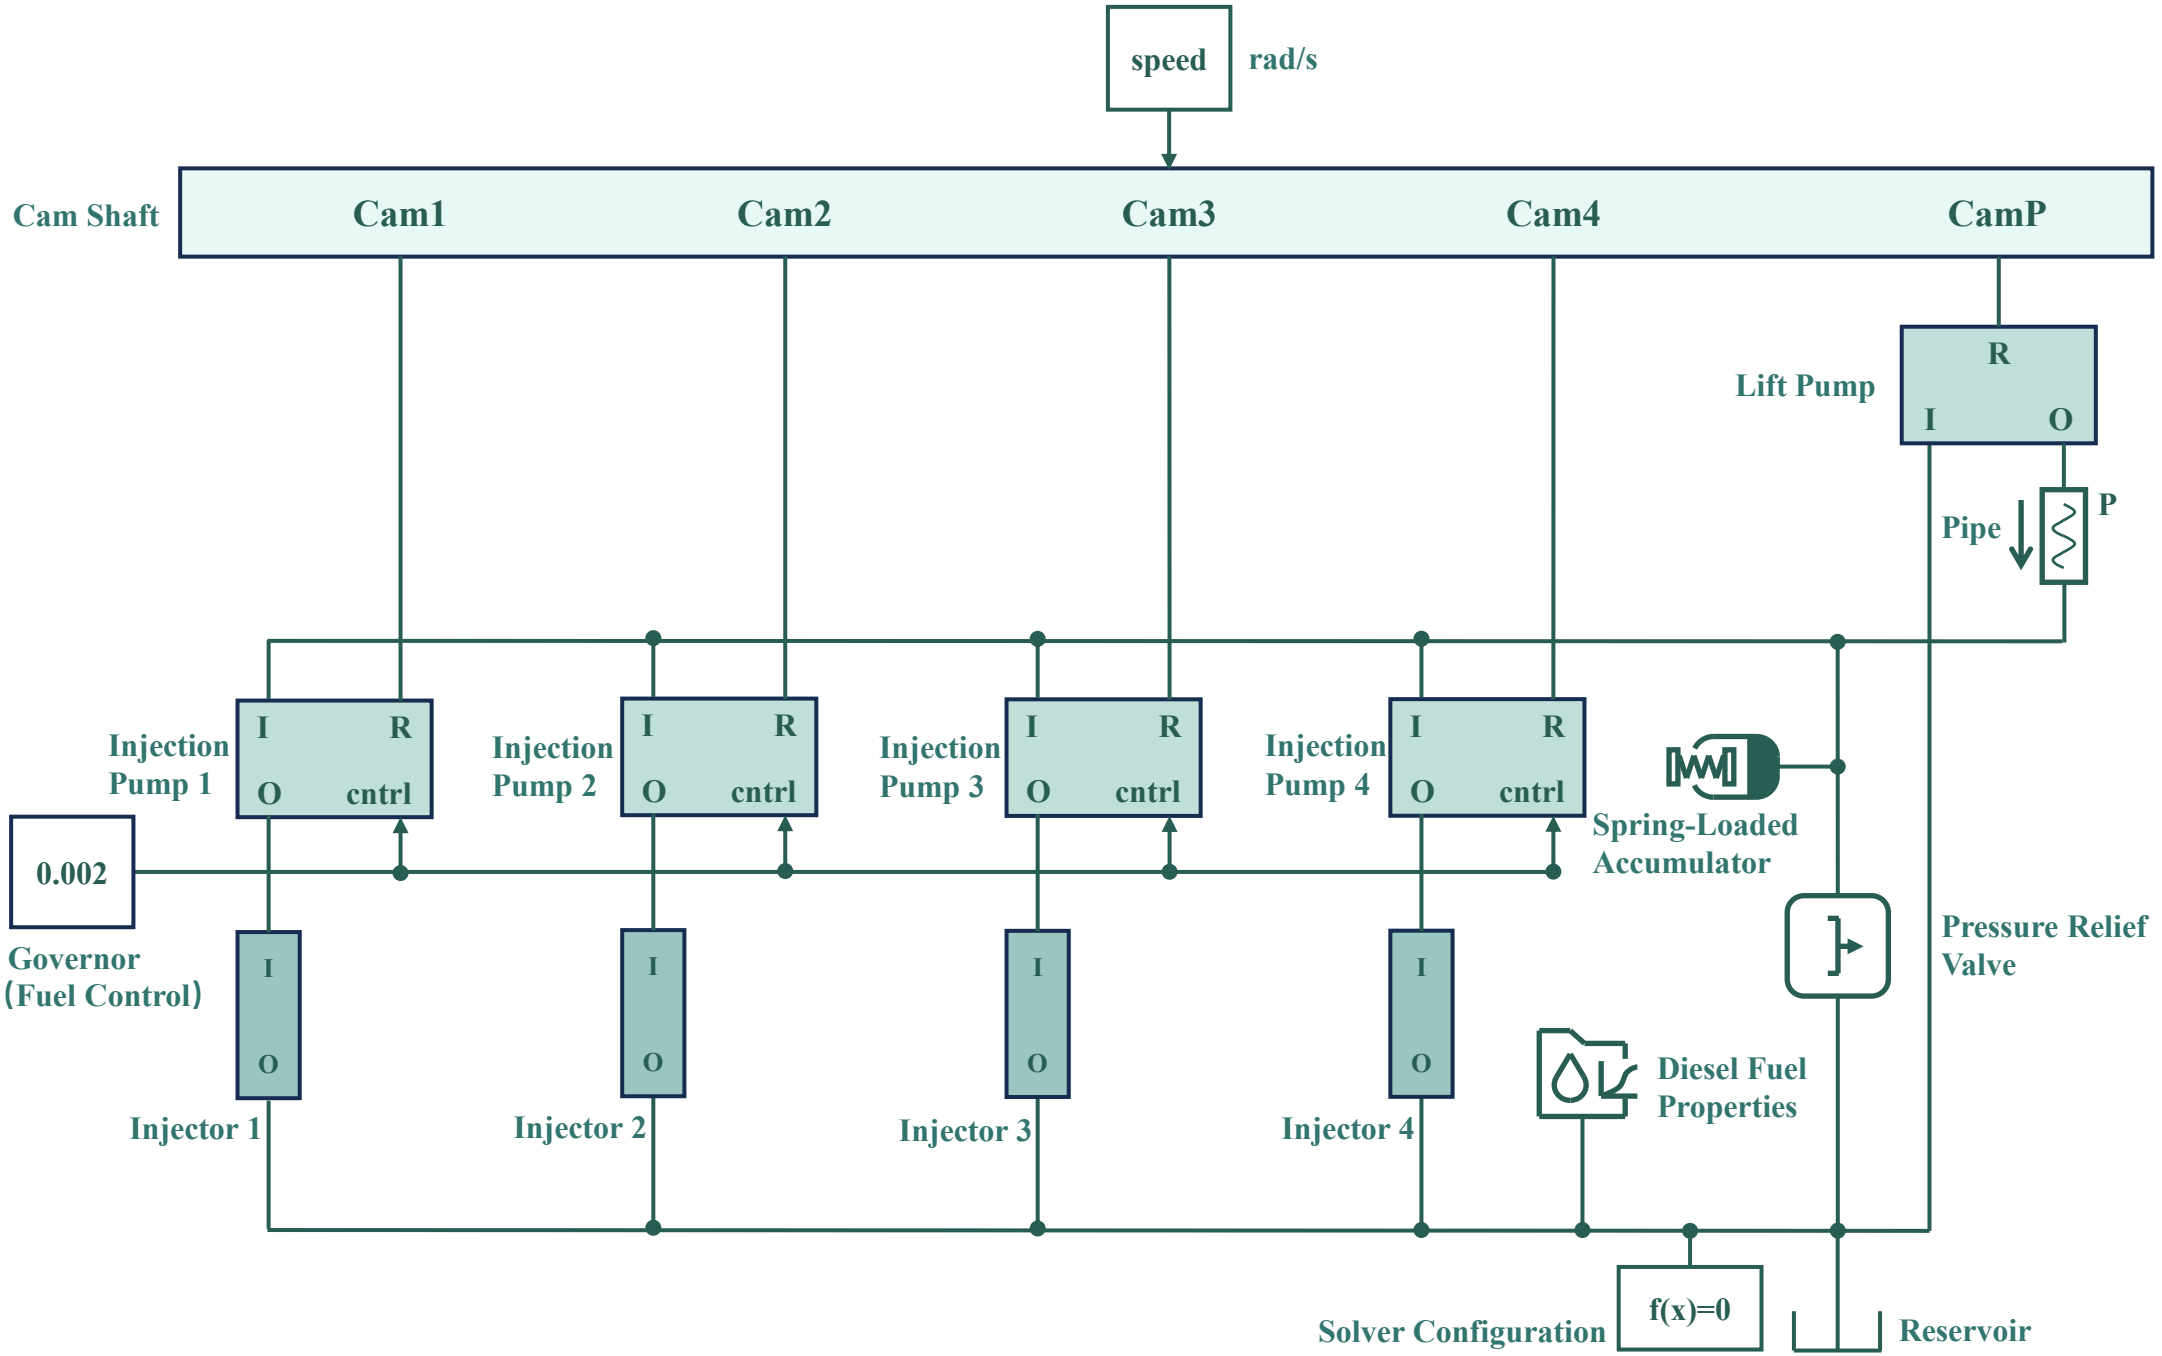

speed
rad/s
Cam Shaft
Cam1
Cam2
Cam3
Cam4
CamP
Lift Pump
R
I
O
Pipe
P
Injection Pump 1
Injection Pump 2
Injection Pump 3
Injection Pump 4
I
R
O
cntrl
0.002
Governor (Fuel Control)
Spring-Loaded Accumulator
Pressure Relief Valve
Diesel Fuel Properties
Injector 1
Injector 2
Injector 3
Injector 4
Solver Configuration
f(x)=0
Reservoir

(a)