EdgeVisor | PROVISION | CONFIGURE | UPDATE

QUICK GUIDE


Home

In EdgeVisor's Home page user can monitor and manage different states of devices with their properties. There are five different tabs: Unconfigured, Not Connected, Production, Maintenance and Add Device.

Clicking on Unconfigured, Not Connected, Production, and Maintenance tabs lists the devices in that state and their properties. Click on Add Device to add new devices.

Add New Device & Capture Power Usage

In this section, User can find the process of adding a new device and configuring the devices to monitor power consumption.

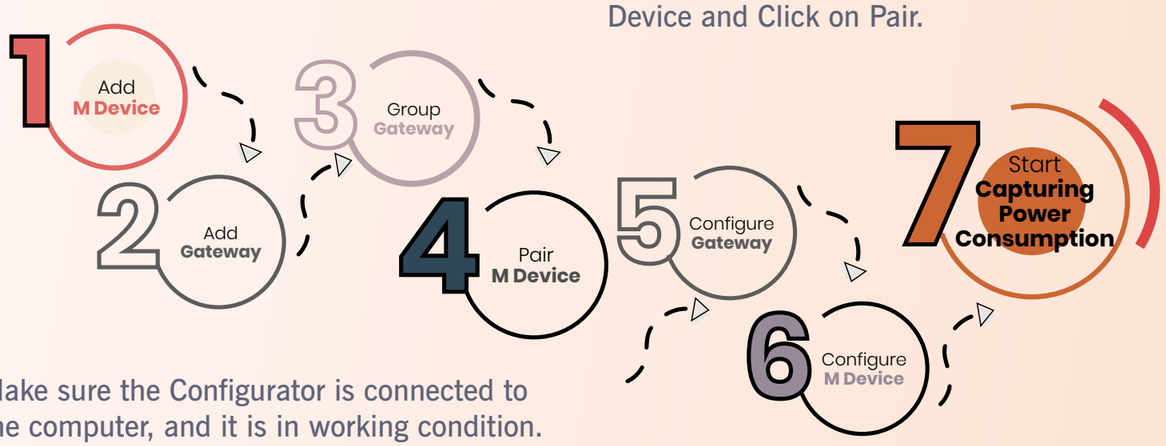

Make sure the Configurator is connected to the computer, and it is in working condition.

1. Add M Device (from Home or Devices)

- Click on Add Device to start.
- Use the Barcode Scanner to scan the QR code of new devices (M Device or Gateway Device).
- After scanning the QR code, the user gets a success message. Click on Add More to add more devices.

2. Add Gateway Device

Add a Gateway in the same way as you would add a M Device.

3. Group Gateway – Unconfigured

- The newly added devices will be moved to Unconfigured state.
- Click on the action menu of Unconfigured Gateway and Click on Create Group.
- Add Group Name and Select Gateway. Click on Save to create a new Group for Gateway.

4. Pair M Device – Unconfigured

- Click on Action Menu of Unconfigured M Device and Click on Pair.
- Add Name, Machine and select the Group. Each selected Group will load the linked Gateway. Click on Save to Pair M device to Group.

5. Configure Gateway – Not Connected

- Devices will be moved to Not Connected
- state.
  Click on Action Menu of Gateway and Click
- Make sure the Start Measurement is turned on and Click on Save.

  Note: There are two additional features available on the Gateway Configuration page.

- Shutdown ⏻ : Puts the Gateway in factory default state.
- Restart ↻ : Reboots the Gateway.


6. Configure M Device – Not Connected

- Click on Action Menu of M Device and Click on Configure.
- Add Measurement Interval, Line Frequency and Sensor settings of Meter Settings. Click on Save.

7. Production

The Devices will move to Production, after Configuring the M Device and Gateway. Now, the M Device will start capturing the Power Consumption data of Machine and sends it to Gateway.

Maintenance of M Device

To access the Maintenance feature of M Device, switch the mode from Production to Maintenance. 

Maintenance of M Device has six action items. Click on action button to access menu.

1. Configure

Customize the device configuration settings of M Device to capture the power consumption.

2. Unpair

Unpair M Device from the Group.

3. Diagnostics

Perform this test to find Bluetooth connections, Peripheral connections, and the overall connectivity status of the M Device.

4. Log Details

Perform this test to find previous log details.


5. Test

Perform this test to find previously captured power consumption data.

6. Firmware

Update the firmware of device.

Note: Gateway cannot be moved to Maintenance.

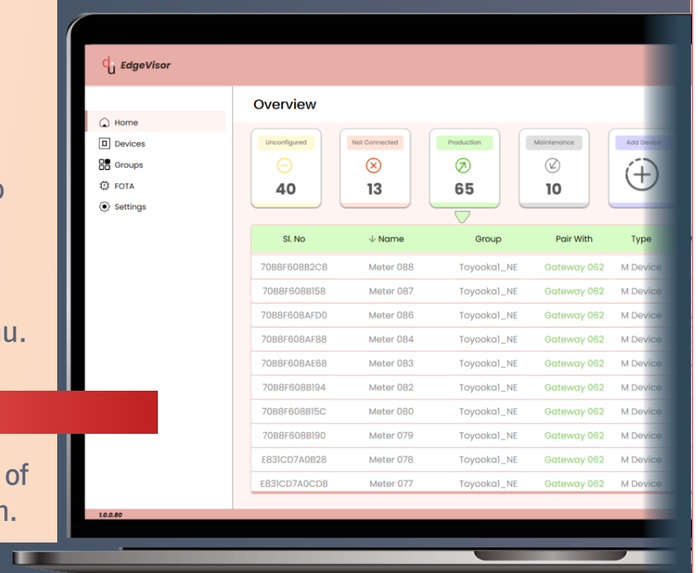

EdgeVisor | USER GUIDE

About

EdgeVisor is a versatile tool designed for Provisioning, Configuring, and Updating devices over-the-air (OTA) seamlessly.

It streamlines the process of setting up and managing devices like the Configurator, Power Meters, and Gateways. With EdgeVisor, user can deploy new devices, configure settings, and push updates.

Splash and Login Screen

The **splash screen** gives the Application Version, Copyright Information and Status of Configurator Connection. This screen appears once the user launches the application.

Login Screen

The Login functionality allows the authorized user to access an application with valid credentials. Enter the Login credentials given by the EdgeVisor team.

Home

EdgeVisor's **Home** page provides a comprehensive overview of different states of devices. There are five quick tabs: Unconfigured, Not Connected, Production, Maintenance and Add Device.

Clicking on the Unconfigured, Not Connected, Production, Maintenance tabs, it gives detailed information about associated devices and their status. Clicking Add Device allows the user to add new devices.

Add a New Device & Capture Power Usage

Make sure the Configurator is connected to the computer, and it is in working condition.

1. Add Device (from Home or Devices)

- Click on Add Device to start.
- Use the Barcode Scanner to scan the QR code of new devices (M Device or Gateway Device).
- After scanning the QR code, the user gets a success message. Click on Add More to add more devices.
- In this way, add one M Device and one Gateway to move further.

2. Group Gateway – Unconfigured

- The newly added devices will be moved to Unconfigured state.
- Click on the action menu of Unconfigured Gateway and Click on Create Group.
- Add Group Name and Select Gateway. Click on Save to create a new Group for Gateway.

3. Pair M Device – Unconfigured

- Click on Action Menu of Unconfigured M Device and Click on Pair.
- Add Name, Machine and Select the Group. Each selected Group will load the linked Gateway. Click on Save to Pair M device to Group.

4. Configure Gateway – Not Connected

- Devices will be moved to Not Connected
- state.
  Click on Action Menu of Gateway and Click
- on Configure.
  Make sure the Start Measurement is turned on and Click on Save.

Note: There are three additional features available on the Gateway Configuration page.

- Latest Update : Gets the latest Gateway settings.
- Shutdown : This will stop the functions of Gateway and move it to Unconfigured state.
- Restart : This allows to restart the Gateway.


5. Configure M Device – Not Connected

- Click on Action Menu of M Device and Click on Configure.
- Add Measurement Interval, Line Frequency and Sensor settings of Meter Settings. Click on Save.

6. Production

The Devices will move to Production, after Configuring the M Device and Gateway. Now, the M Device will start capturing the Power Consumption data of Machine and sends it to Gateway.

Maintenance of M Device

To access the Maintenance feature of M Device, switch the mode from Production to Maintenance. 

Maintenance of M Device has six action items. Click on action button to access menu.

1. Configure

This feature allows to customize the device configuration settings of M Device to capture the power consumption.

2. Unpair

This feature allows to Unpair the M Device from the Group.

3. Diagnostics

This feature allows to run a Diagnostic test to find Bluetooth connections, Peripheral connections, and the overall connectivity status of the M Device.

4. Log Details

This feature allows to run a Log Details test to find previously performed actions.

5. Test

This feature allows to run a Test to find previously captured power consumption data.

6. Firmware

This feature allows the user to update Firmware.

Note: Gateway cannot be moved to Maintenance.

