


Slave 文件夹中是 esp32c6 从机固件，对应 esp-host 0.0.27 版本，当 esp-hosted 版本发生变化时请使用 esp_hosted/slave 中的固件，使用方法：

先进入 slave 文件夹

```
cd slave
```

```
idf.py menuconfig
```

(top)->Example Configuration ->SDIO Configuration ->SDIO Slave Timing 这一部分为路径，仅在此展示具体进入，其他的按照路径进入：

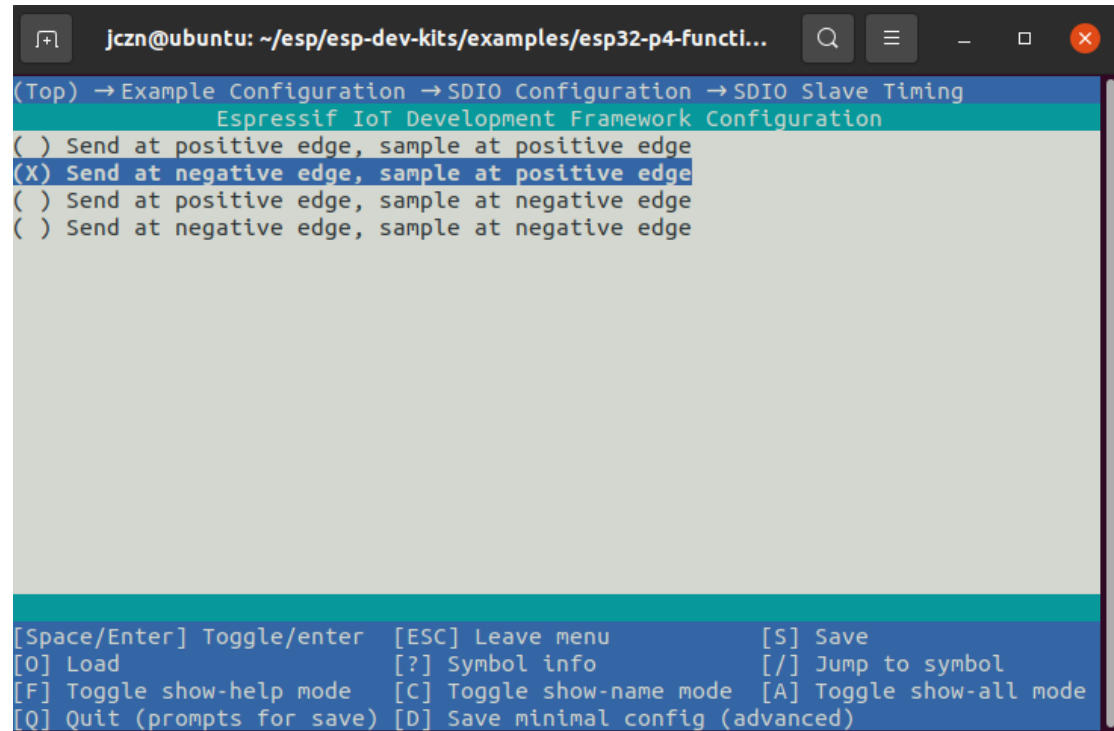

烧录 C6 时需使用 ch340 串口下载，c6 已经烧录 400Mhz，SDIO 模式，没有特殊需求可以不再烧录，直接使用，接线如下所示：

3.3V	<----->	3.3V
GND	<----->	GND
RX	<----->	TX
TX	<----->	RX
IO9	<----->	IO (BOOT)
EN	<----->	RST

以下为具体进入方法：

Idf.py menuconfig

```
jczn@ubuntu: ~/esp/esp-dev-kits/examples/esp32-p4-functi...
(Top)
Espressif IoT Development Framework Configuration
Build type --->
Bootloader config --->
Security features --->
Application manager --->
Boot ROM Behavior --->
Serial flasher config --->
Partition Table --->
Example Configuration --->
Compiler options --->
Component config --->
[ ] Make experimental features visible

[Space/Enter] Toggle/enter  [ESC] Leave menu          [S] Save
[O] Load                    [?] Symbol info          [/] Jump to symbol
[F] Toggle show-help mode   [C] Toggle show-name mode [A] Toggle show-all mode
[Q] Quit (prompts for save) [D] Save minimal config (advanced)
```

```
jczn@ubuntu: ~/esp/esp-dev-kits/examples/esp32-p4-functi...
(Top) → Example Configuration
Espressif IoT Development Framework Configuration
Configure GPIOs based on an ESP Development Board (No specific development b
Transport layer (SDIO) >
SDIO Configuration --->
(4096) ESP-Hosted task stack size
(22) ESP-Hosted task priority
[ ] Enable Mempool
[*] OTA workaround - Add sleeps while OTA write
Hosted Debugging --->

[Space/Enter] Toggle/enter  [ESC] Leave menu          [S] Save
[O] Load                    [?] Symbol info          [/] Jump to symbol
[F] Toggle show-help mode   [C] Toggle show-name mode [A] Toggle show-all mode
[Q] Quit (prompts for save) [D] Save minimal config (advanced)
```

```
jczn@ubuntu: ~/esp/esp-dev-kits/examples/esp32-p4-functi...
(Top) → Example Configuration → SDIO Configuration
Espressif IoT Development Framework Configuration
[*] Enable SDIO Streaming Mode
(-1) Slave GPIO pin to reset itself
SDIO Bus Speed (High Speed (40 MHz)) --->
Hosted SDIO GPIOs --->
SDIO Slave Timing (Send at negative edge, sample at positive edge) --->
(20) SDIO RX queue size
[ ] SDIO checksum ENABLE/DISABLE

[Space/Enter] Toggle/enter [ESC] Leave menu [S] Save
[O] Load [?] Symbol info [/] Jump to symbol
[F] Toggle show-help mode [C] Toggle show-name mode [A] Toggle show-all mode
[Q] Quit (prompts for save) [D] Save minimal config (advanced)
```