

RollCall™ Infrastructure Management Suite

Software Installation Guide & Operational Overview

© 1997 - 2004

www.snellwilcox.com

Snell & Wilcox Ltd., Southleigh Park House, Eastleigh Road, Havant, Hants, PO9 2PE, United Kingdom.

For technical assistance contact:

Tel: +44 (0)23 9248 9000

Fax: +44 (0)23 9245 1411

For general and sales assistance contact:

Tel: +44 (0)20 8917 4300

Fax: +44 (0)20 8607 9466

e-mail: product.support@snellwilcox.com

About this Manual

This manual covers the following products:

- RollCall™ Control Panel Software and RollCall™ Middleware Services Installation Guide & Operational Overview

Packing List

The product is supplied in a dedicated packing carton or via an Internet distribution provided by the manufacturer and should not be accepted if delivered in inferior or unauthorised materials. If shipped goods are received, carefully unpack the carton and check for any shipping damage or shortages.

Any shortages or damage should be reported to the supplier immediately.

Enclosures:

- RollCall Middleware Services Installation Disk Version 3.5 or later

Internet Distributions:

- RollCall Control Panel Installation executable
- RollCall Middleware Services Installation executable

Software Version Amendments

Notes about Versions Fitted RollCall Middleware Services Installation Disk Version 3.5 or later

Manufacturers Notice

The information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Snell & Wilcox.

© 1997 - 2004 Snell and Wilcox. All rights reserved.

Acknowledgements

Snell & Wilcox, the Snell & Wilcox logo, Alchemist, CLEAN CUT, DEFT, Golden Gate, Kudos IQ, Kudos, Magic DaVE, Multimedia Bridge, Prefix, RollCall, RollSNMP, RollTrack, RollMap and Supervisor are trademarks of Snell & Wilcox Ltd.

Microsoft Windows is a registered trademark of Microsoft Corporation.

Copyright protection claimed includes all forms and matters of copyrightable material and information now allowed by statutory or judicial law or hereinafter granted, including without limitation, material generated from the software programs which are displayed on the screen such as icons, screen display looks etc.

Reproduction or disassembly of embedded computer programs or algorithms prohibited.

Information in this manual and software are subject to change without notice and does not represent a commitment on the part of Snell & Wilcox Ltd. The software described in this manual is furnished under a licence agreement and may not be reproduced or copied in any manner without prior agreement with Snell & Wilcox Ltd. or their authorised agents.

Table of Contents

SECTION		Page
1	Software Installation Guide & Operational Overview	
	System Requirements	1.1
	Connecting the hardware:	1.1
	Calculating a RollNet segment length	1.2
	ROLLPROXY – IP Connection Multiplexor.....	1.3
	ROLLPROXYCONTROL	1.3
	Single RollCall Client	1.3
	Multiple RollCall Clients – with connection redundancy	1.4
	Multiple RollCall Clients – efficient / security model	1.5
	Configuring ROLLPROXYCONTROL.....	1.5
	Connecting RollProxy to IQ chassis	1.7
	Connecting to RollProxy with RollCall Control Panel.....	1.9
	Naming Network Nodes.....	1.10
	IP Security via RollProxy	1.11
	Adding In A LogServer to proxy.....	1.14
	Viewing Control and Logging Connections.....	1.14
	Summary of support for different versions of Microsoft Windows.	1.17
	Software Installation	1.17
	Overview.....	1.18
2	RollCall Communications Controller (COMMTROL.EXE)	
	RollCall card settings.....	2.2
	Serial driver settings	2.3
	TCP/IP driver settings.....	2.3
	Setting the PC name	2.4
	Setting the Time Zone	2.4
	Setting toolbar buttons	2.5
	Time server setup.....	2.5
	Commctrl command line parameters	2.6
	RollCall Network Listing.....	2.7

3 RollCall Control Panel (ROLLCALL.EXE)

Starting	3.1
Disconnecting a remote connection manually	3.2
General Operation	3.3
Opening multiple windows to the same unit	3.4
Changing User Access Level	3.4
Setting a Supervisor Password	3.5
Auto-template extraction	3.5
Manually installing a template from a unit	3.6
Manually installing a template from a file	3.8
Caching Menus	3.8
Delete Menu Cache	3.9
Read-only control screens	3.9
Configuration Directories	3.9
Changing Fonts	3.10
Saving the current state of a unit (manual mode)	3.11
Automatic Saveset Manager	3.12
Restoring a set-up from file	3.13
Access Control	3.15
Editing Menu Cache	3.15
Updating the control display	3.17
Unit Documentation	3.17
About Current Unit	3.17
RollCall User Manual	3.18
General Options	3.19
RollCall Command Line Parameters	3.21
Windows shortcuts to specific units	3.22

4 RollCall Log Server (ROLLLOG.EXE)

Setting the Current Status File	4.1
Setting the Running Log File	4.2
Fixed log file name	4.3
Automatic file name based on time and date	4.3
Setting Polling parameters	4.4
Setting the polling list	4.4
Setting the Mask file	4.6
Advanced Parameters	4.6
View IP Connection List	4.7
General Options	4.8
Restart Polling	4.8
Enable Polling	4.8
About RollLog	4.8

5 RollCall Log Viewer (ROLLVIEW32.EXE)

Establishing connection to a LogServer	5.1
Setting the Display List	5.2
Setting up the Column Headers	5.3
Editing Headers	5.4
Overriding Headers	5.5
Setting Alarm Events	5.8
Creating an Alarm Entry	5.8
Creating Command Line Actions	5.9
Creating Global Alarms	5.10
Generating a RollTrack Action	5.12
Alarms via SNMP	5.13
Changing the Display Font	5.14
Changing the Display Colours	5.15
General Options	5.16
Understanding the LogViewer display	5.17
Viewing Unit Details	5.17
Controlling a RollCall Unit	5.18
Masking units	5.18
Configuring the columns in System Alarms View	5.19
Sorting Columns	5.19
Pinned columns	5.20
Enabling Highlights	5.20
Configuring Highlights	5.21
History and Current Status Toolbar	5.21
Creating a new Tab	5.22
Autosaving History Tab Contents	5.23

6 Additional logging information.

7 RollCall IP Sharer (ROLLIPSH.EXE)

Configuration	7.1
IP Server Port	7.1
Access List	7.1
Allow Unknown Clients	7.3
Connection Window	7.3
Event Logging	7.3
About ROLLIPSH	7.4

8 Command Line RollTrack (ROLLTRAK.EXE)

Command line syntax	8.1
Modes	8.1
Multiple command line from file input	8.2

SOFTWARE INSTALLATION GUIDE

System Requirements


The minimum requirement for installing and running the RollCall software is:

- One of the software suites:
 - RollCall Control Panel
 - RollCall Middleware Services
- A RollCall compatible device, e.g. IQ Modular 1RU or 3RU rack with Gateway card installed.
- PC running Microsoft Windows XP (SP1 or greater) or 2000 (Service pack 3 recommended)
- Either a RollCall PC card, (RollPCI, RollPCM, or IQCPC), an RS232 to RS422 9 way converter fitted to the PC serial port, or a TCP/IP connection to a RollCall IP Server or Ethernet equipped IQ chassis (IPShare) via twisted pair Ethernet network.

Connecting the hardware:

There are 4 basic choices for connecting the PC to the RollCall system:

1) TCP/IP connection between PC Workstation and Ethernet enabled IQ Chassis*

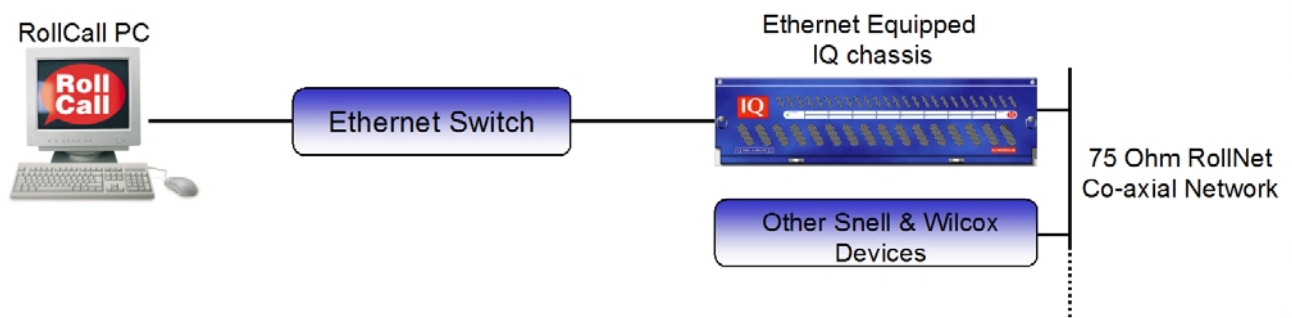

Ethernet enabled IQ chassis ship with default IP Address of 192.168.151.1 and RollCall TCP port 2050. To connect your PC to the IQ chassis, configure the PC with an IP Address and subnet mask that will enable communication with the IP session on the chassis. Once connected to the TCP/IP session on the IQ chassis any other enclosures connected via the RollNet Co-axial network will also be available.


Alternatively, connect to the IQ chassis using one of the other connectivity methods and configure the TCP/IP setting of the IQ chassis to fit your company address policy.

For further information on configuring TCP/IP settings, please consult your network administrator.

More advanced TCP/IP installations, including connecting multiple sites are covered by the "Rollproxy" IP multiplexing sections later in this chapter

* Requires Ethernet equipped IQ 3U Chassis, part number: IQH3A-E. To upgrade an IQH3A chassis without an Ethernet enabled gateway card, please order IQH3A-E-GATE from your local sales representative.

2) 75 Ohm co-axial cable BNC for box-to-box connections running at 2.5 Mbit/sec

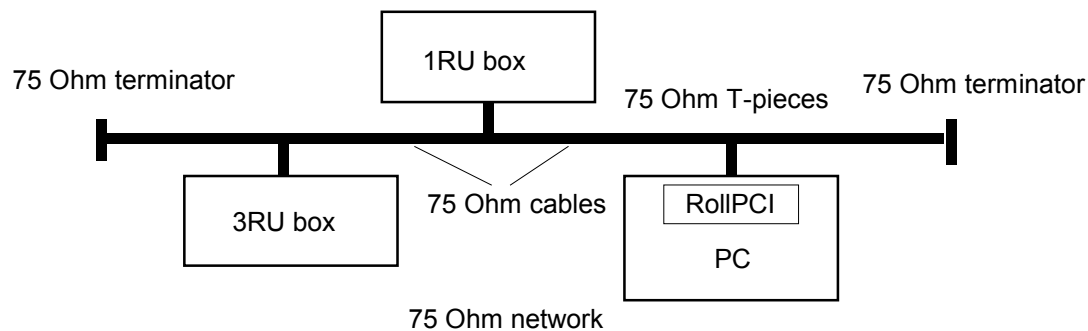

RollNet offers a deterministic and high speed communications interface. Each unit is physically joined to the network via a 75-Ohm T-piece connector. Each T-piece is connected by 75 Ohm co-ax cable to create a segment. Each segment of cable can be up to 400m dependant on cable quality. Each end of the network is terminated by a 75 Ohm terminator.

Calculating a RollNet segment length

The maximum length of an individual RollNet network segment is dependent on the properties of the co-axial cable used. Please use the following formula to calculate the maximum distance (termination to termination) for your cable type.



$$\text{Max Segment Length} = \frac{\text{6dB @ 5MHz total Loss}}{\text{Loss per meter of your cable type @ 5Mhz*}}$$

* The loss per length at 5MHz is usually quoted for cables. If its not specified, use loss at 10MHz.

Example:

BBC PSF1 cable. Attenuation is rated at 1.9dB per 100 meters @ 5Mhz or 0.019 dB per meter @ 5Mhz.

The calculation is: 6dB / 0.019dB/m = **316 meters max length per segment.**

ROLLPROXY – IP Connection Multiplexor

ROLLPROXY is a core building block in providing highly extensible and fault tolerant systems for control and monitoring. It has several possible modes of operation depending on what the user needs to achieve. These modes are:

- Aggregating multiple Ethernet enabled IQ chassis together
- Joining geographically / logically separate RollCall networks
- Providing fault tolerant control networks to equipment via IP & RollNet

There are two versions of ROLLPROXY, depending on which version of RollCall is installed.

Note: Configuration of RollProxy is NOT required if RollCall control Panel is connecting to only one Ethernet enabled IQ chassis or if the RollCall connection is to be established via RollNet or RS422.

ROLLPROXYCONTROL.EXE – supplied with the web download version of RollCall Control Panel. This version is designed to aggregate connections from multiple TCP/IP enabled IQ chassis and provide a single connection list within the RollCall Control Panel. This version does not provide capability for Logging data or totally fault tolerant control networks.

ROLLPROXYSERVICE.EXE – supplied with the full RollCall Middleware Services package. This version can perform multiple functions, including aggregation of separate networks, providing complete fault tolerant control, combining separate LogServer datasets as well as providing the capabilities provided by ROLLPROXYCONTROL.

ROLLPROXYCONTROL

This section covers configuration of the Proxy service provided with the web download version of RollCall Control Panel. Please refer to the next section for information on configuring the RollCall Middleware Services Edition of RollProxy.

There are three modes of configuration that should be considered, dependant on the number of RollCall Control Panel Clients required in a network system.


- Single RollCall Client, Multiple Ethernet IQ chassis
- Multiple RollCall Clients, with connection redundancy
- Multiple RollCall Clients, efficient / security model

Single RollCall Client

A standard Ethernet Gateway provides connectivity via one TCP/IP connection to control of all modules within the chassis and also control of any other Snell & Wilcox devices connected to the Chassis via RollNet. PROXYCONTROL is needed in a system to enable connection to more than one Ethernet enabled IQ chassis.


These chassis may be geographically separate, however if they are present within the same physical building then a RollNet network can also present between the IQ chassis providing a redundant control link. This link is capable of tolerating a failure of any of the IP

links on an IP chassis with connection to all other boxes being present on the RollNet through each remaining IP link.

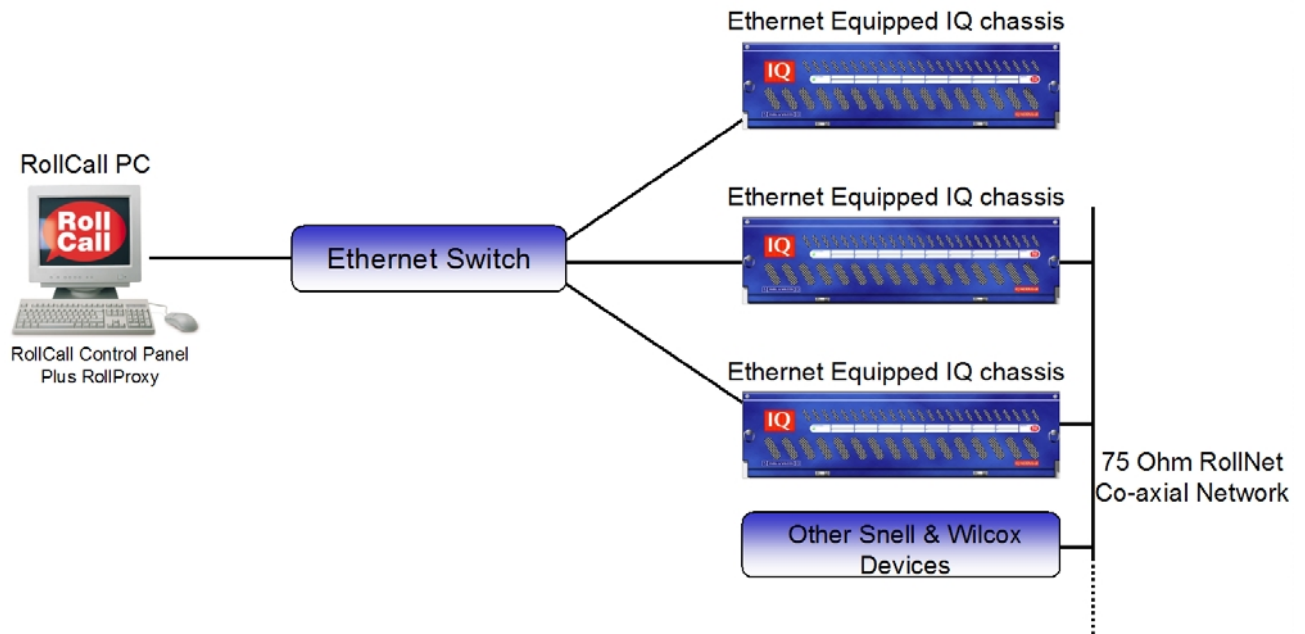


Multiple RollCall Clients – with connection redundancy

This model caters for a failure of the RollProxy Service by running an autonomous copy per RollCall client workstation. This model is less efficient than the previous multiple clients model as there are more connections across the network into the IQ chassis. The configuration of this model is identical to the Single RollCall Client model, but with multiple installations.

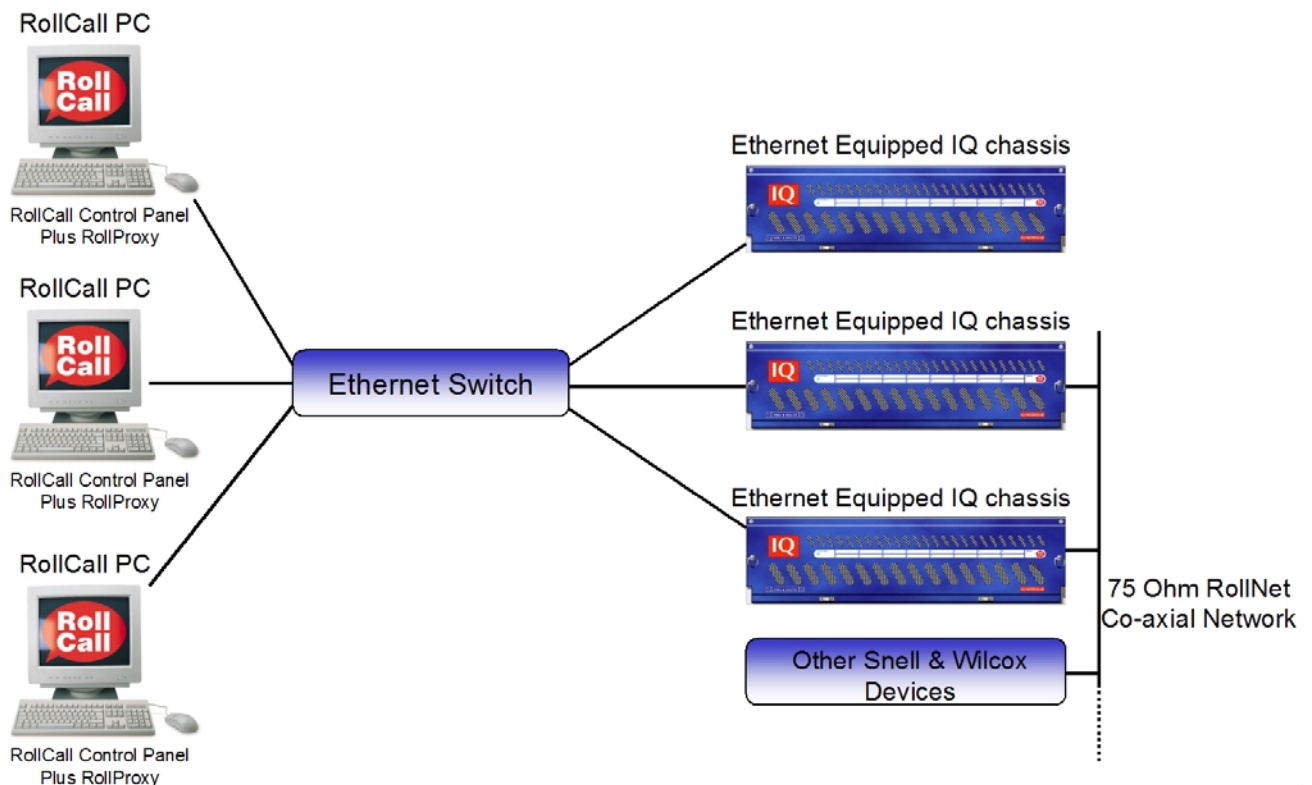


Multiple RollCall Clients – efficient / security model

This model differs from the above by funnelling all traffic destined for the IQ Chassis / RollCall network through a single connection. This can be desirable for security reasons where only one machine is given direct access to the Infrastructure network, but accessed by many clients that do not any other access to the Infrastructure network apart from control requirements.

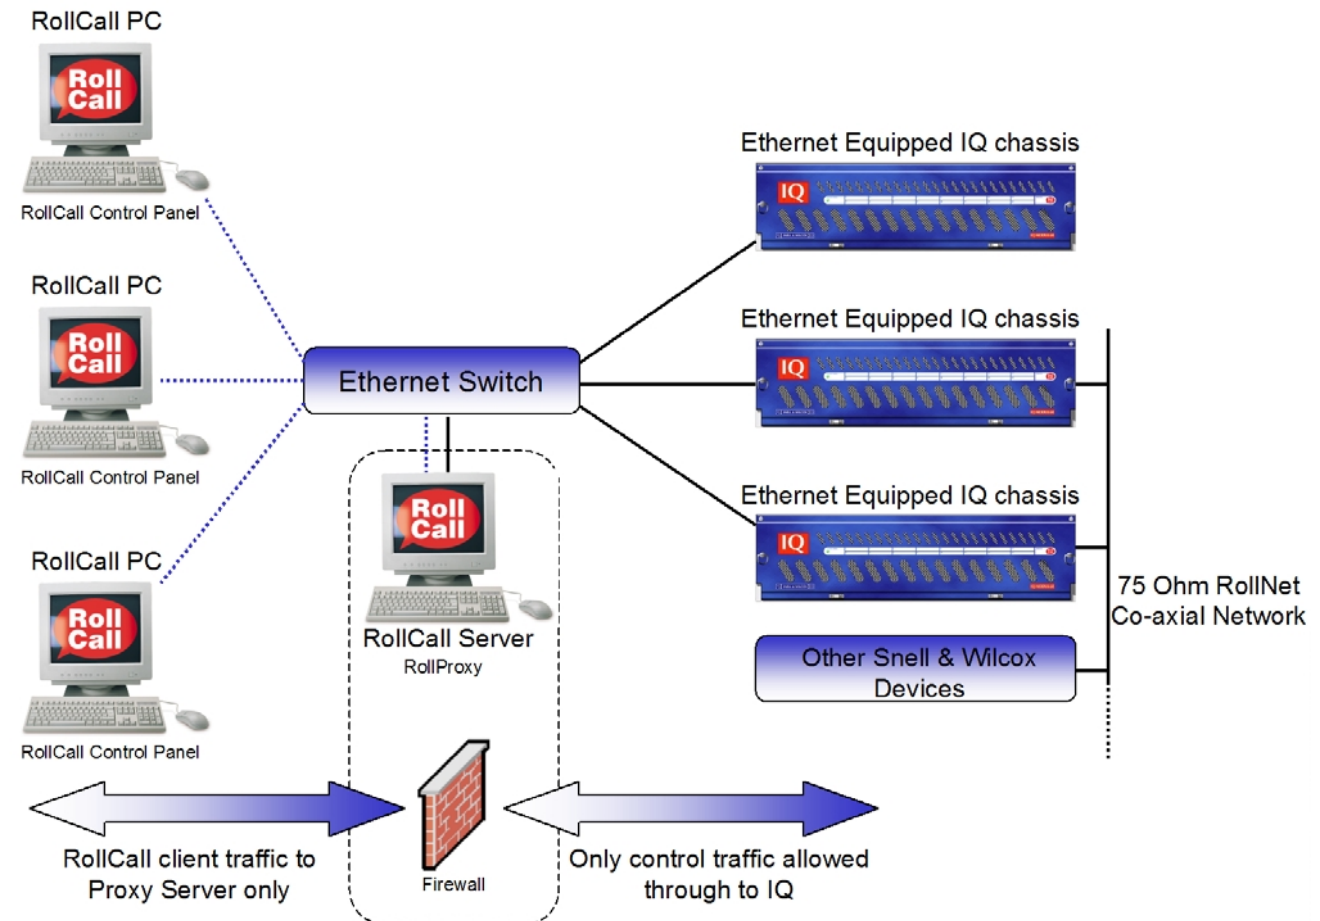


Configuring ROLLPROXYCONTROL

ROLLPROXYCONTROL is installed as a service when the Web edition of RollCall Control Panel is installed. The service is not started by default.

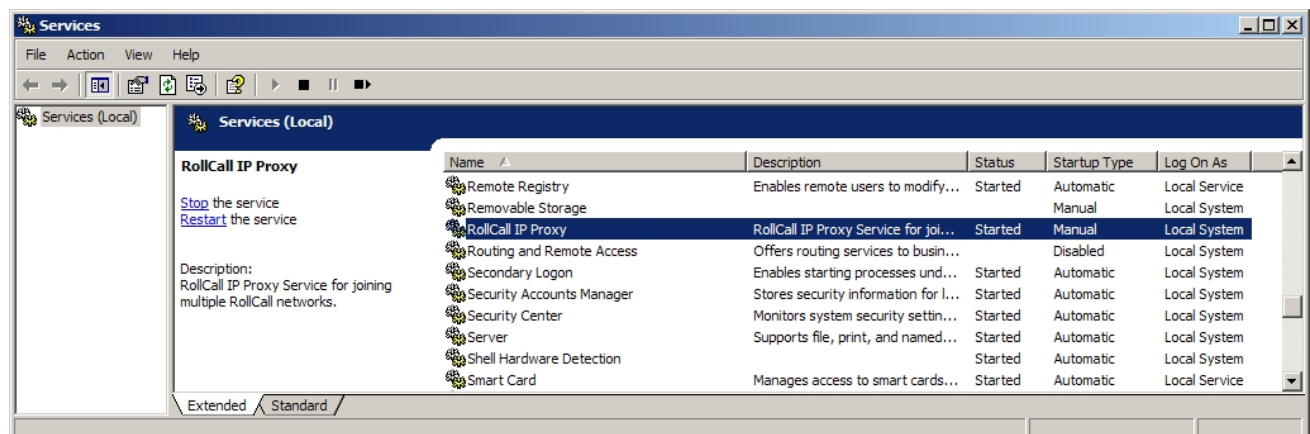


For Windows XP & 2000 go to
“Start Menu->Control Panel->Administrative Tools->Services->RollCall IP Proxy”

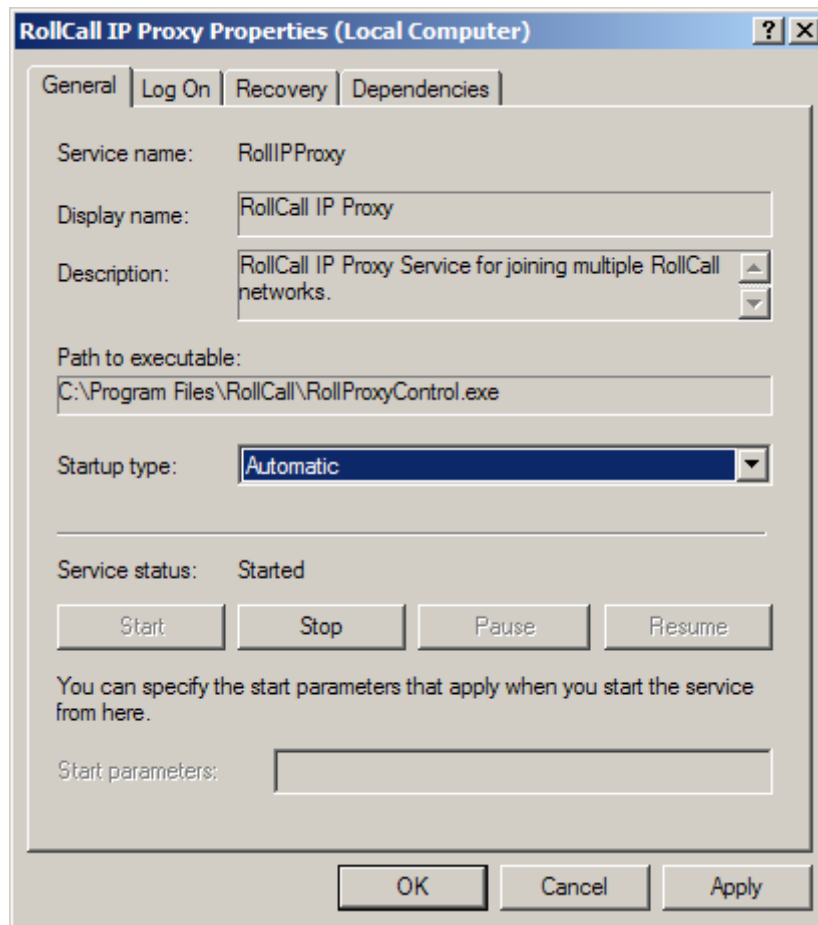


Start the RollProxy Service from the Windows Service Manager and set its Start-up properties to Automatic so it will restart on boot up in future.

RollProxy is now running, signified by the RollProxy icon being present in the task bar. Double click on this taskbar icon to access the RollProxy configuration GUI

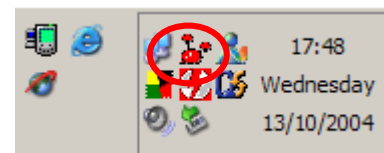

All configurations of the RollProxy connections are performed from the following GUI.

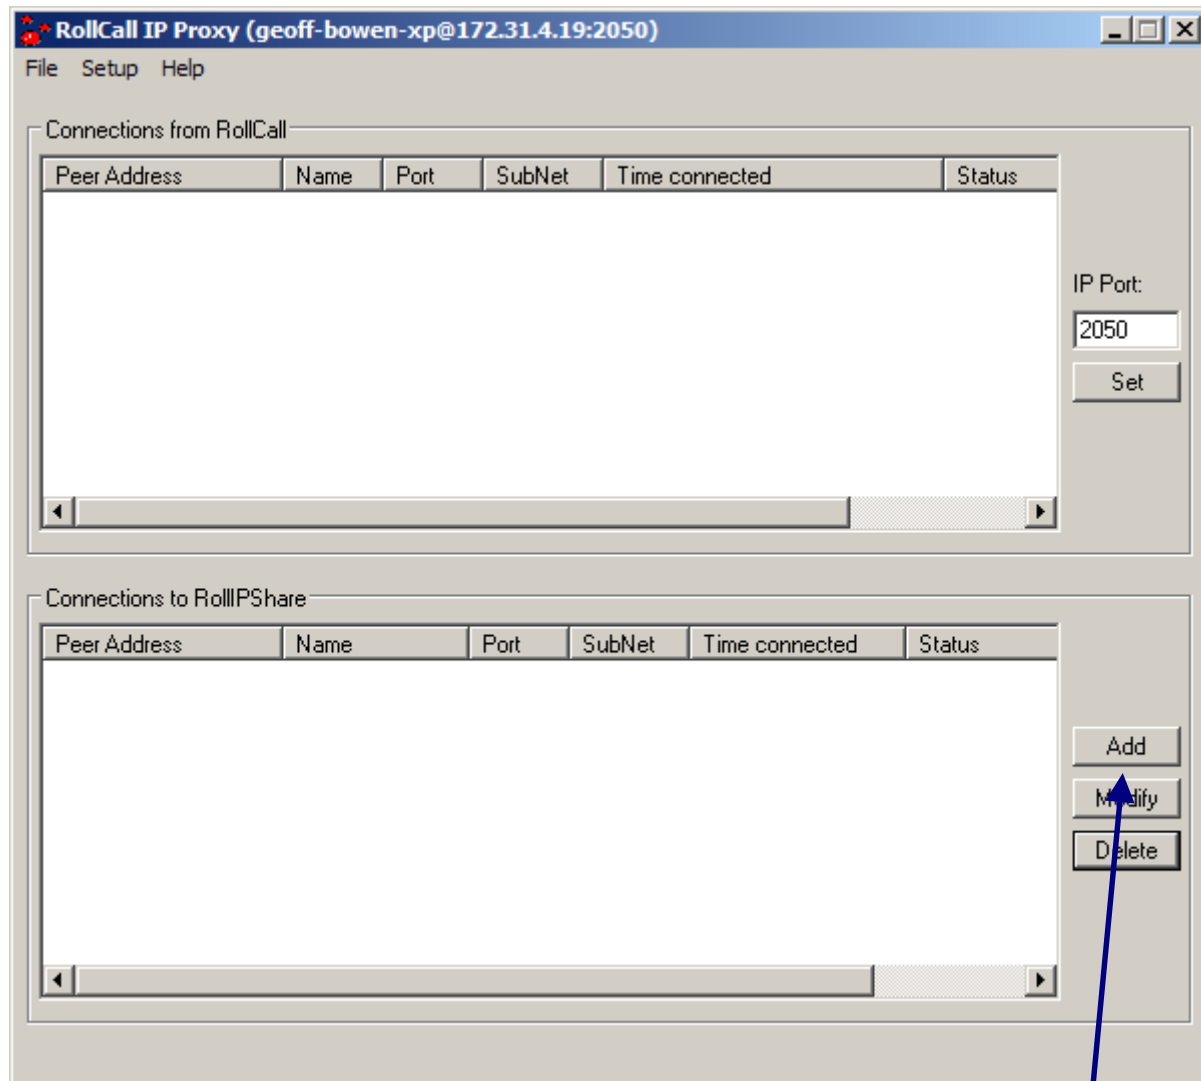


Connecting RollProxy to IQ chassis

To add in one or more IQ chassis into the RollProxy service, Click the Add Button in the "Connections to RollIPShare" section of the screen.

The resulting dialog box enables configuration of the IP Address of the IQ chassis, the IP port number that the RollCall control service is provided on (by default all IQ chassis provide these services on port 2050) and the RollCall Substitution Address for the Chassis. The substitution address is the first four numbers of the RollCall address and this number must be set to a non-zero value.


The IP Address may be supplied either as a numeric entry such as "192.168.10.10" or a qualified hostname such as "lqchassis21.snellwilcox.com" providing a host entry or DNS service exists to resolve the hostname.

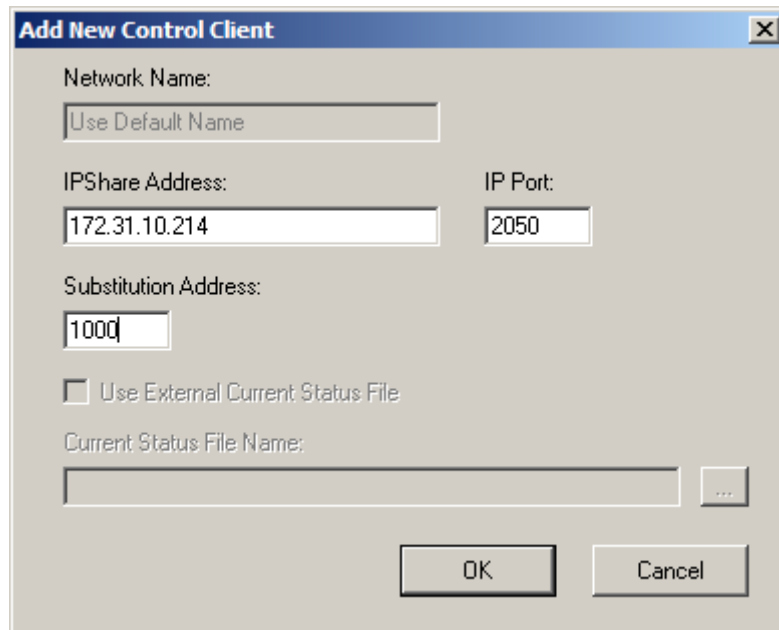

The "Add New Control Client" dialog box contains the following fields and controls:

- Network Name:** A text box with "Use Default Name" entered.
- IPShare Address:** A text box with "172.31.10.214" entered.
- IP Port:** A text box with "2050" entered.
- Substitution Address:** A text box with "1000" entered.
- ☐ **Use External Current Status File**
- Current Status File Name:** A text box with a browse button (three dots) to its right.
- OK** and **Cancel** buttons at the bottom.

Once the information has been entered correctly, click the "OK" button. Providing the IP Address is correct, the entry will appear in the "Connections to IPShare" with a status of "Connected". If the IQ chassis cannot be found, the status will be "Calling".

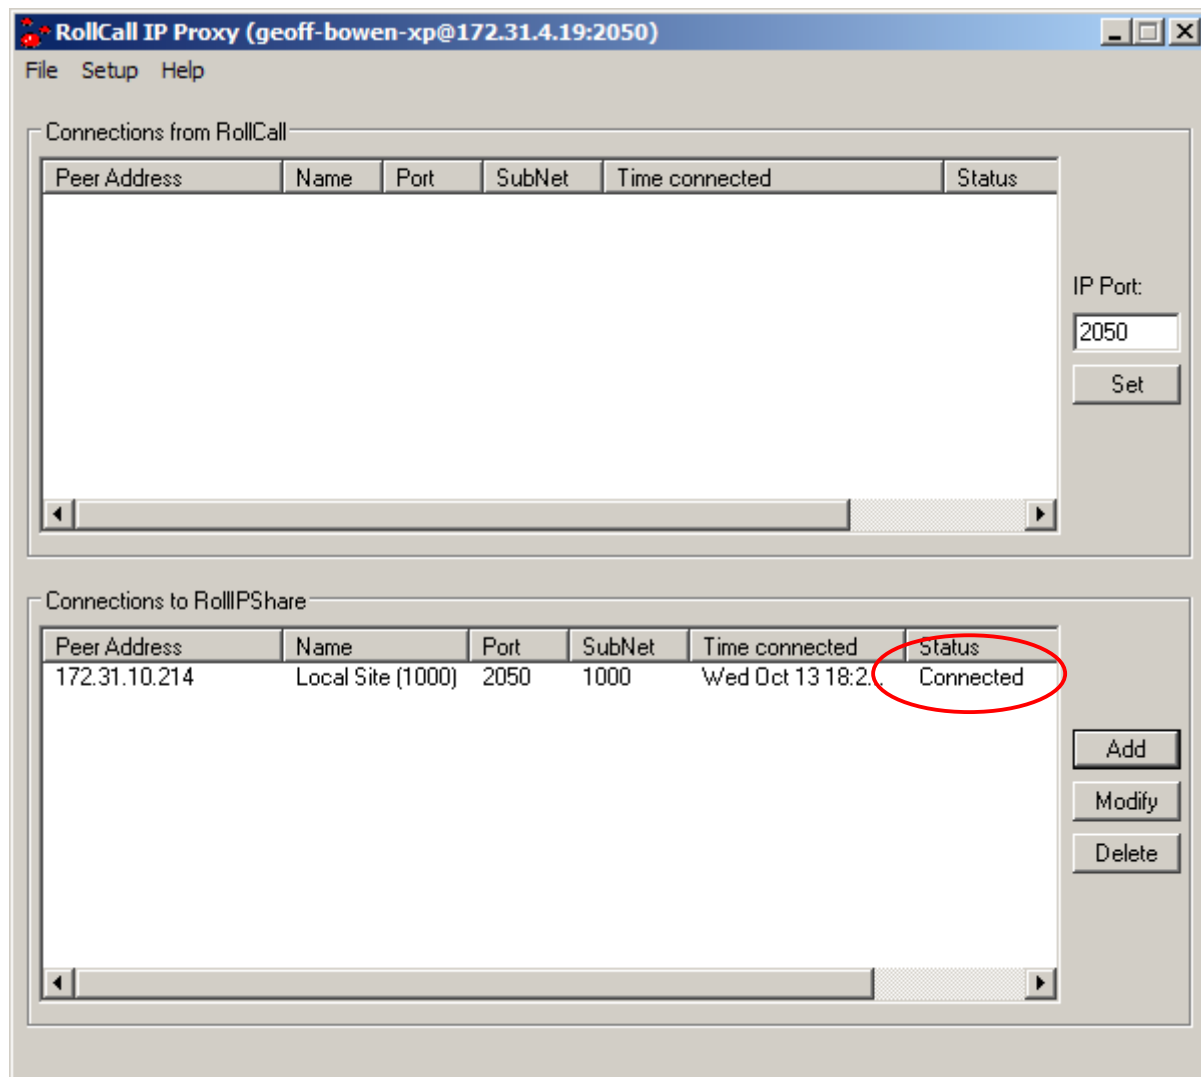

The "RollCall IP Proxy" main window displays two connection lists and control buttons.

Connections from RollCall

Peer Address	Name	Port	SubNet	Time connected	Status
--------------	------	------	--------	----------------	--------

Connections to RollIPShare

Peer Address	Name	Port	SubNet	Time connected	Status
172.31.10.214	Local Site (1000)	2050	1000	Wed Oct 13 18:2	Connected

On the right side of the window, there is an **IP Port:** field with "2050" and a **Set** button. Below the "Connections to RollIPShare" table are **Add**, **Modify**, and **Delete** buttons.

Repeat adding in the chassis until all units are present in the proxy list.

Note: If units are connected via RollNet to an Ethernet enabled IQ chassis, these units appear in the network tree underneath the Chassis.


Connecting to RollProxy with RollCall Control Panel

For additional information on the general set-up and configuration of communications for the RollCall Control Panel, refer to section 2, Communication Controller.

Once RollProxy is configured, RollCall Control Panel must be configured to connect to the proxy service.

When the proxy service is running on the same local machine as the control panel, configure the Commtrol application to use an IP Server with IP address set either as 127.0.0.1 or a hostname of localhost. These are the local loopback addresses and provide a more efficient connection to the local network services than using the full machine IP Address.


To set Commtrol to use the Proxy Server, use the “File->Configure Comms...” menu.

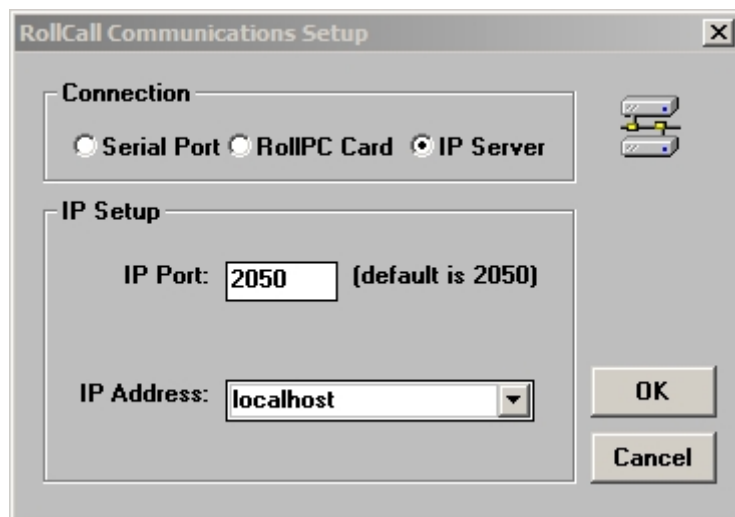

Select Connection type as “IP Server” and enter the local IP Address. By default, all RollCall control sessions occur on port 2050, do not change this number unless you have configured you IQ chassis to provide control sessions on a different port number.

Once Commtrol is connected to the Proxy Service, all the connection IQ frames and any other devices connected to them will be shown under the Address node given to the frame in RollProxy.


Nodes can be expanded and collapsed to view their contents.

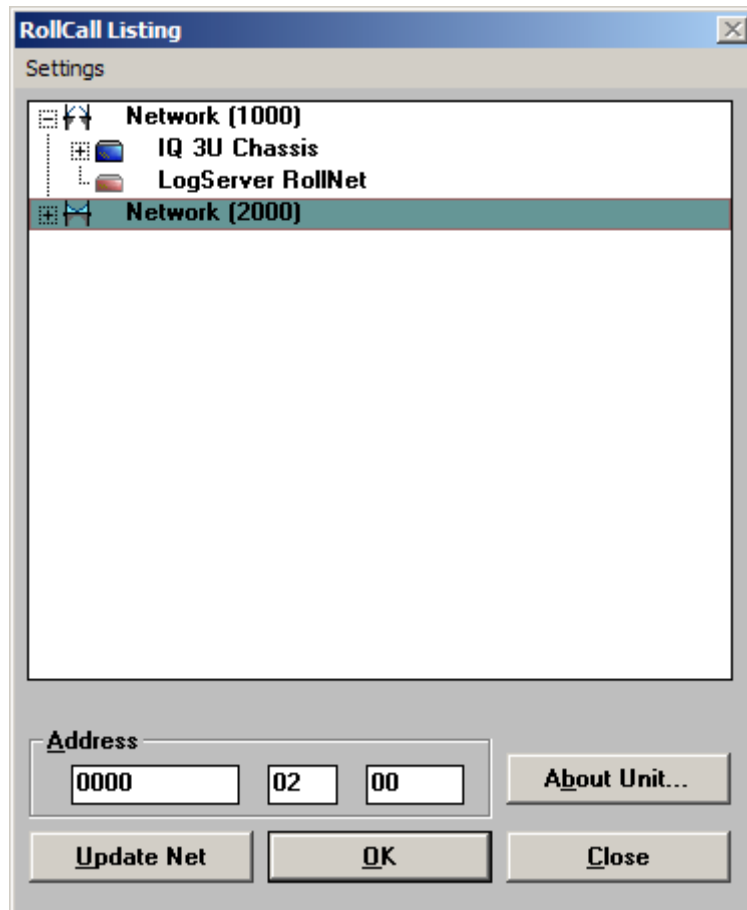


Naming Network Nodes

In the opposite screenshot, all network connections are called "Network". It would be useful if these connections could be renamed to indicate the location or network type. To set the names of these network nodes, select the "Set-up->Names..." menu within the RollProxy GUI.

Edit the names of each of the configured Network nodes. There is a limit of 19 characters for the name. The address at the end of the string is optional and may be removed if desired.

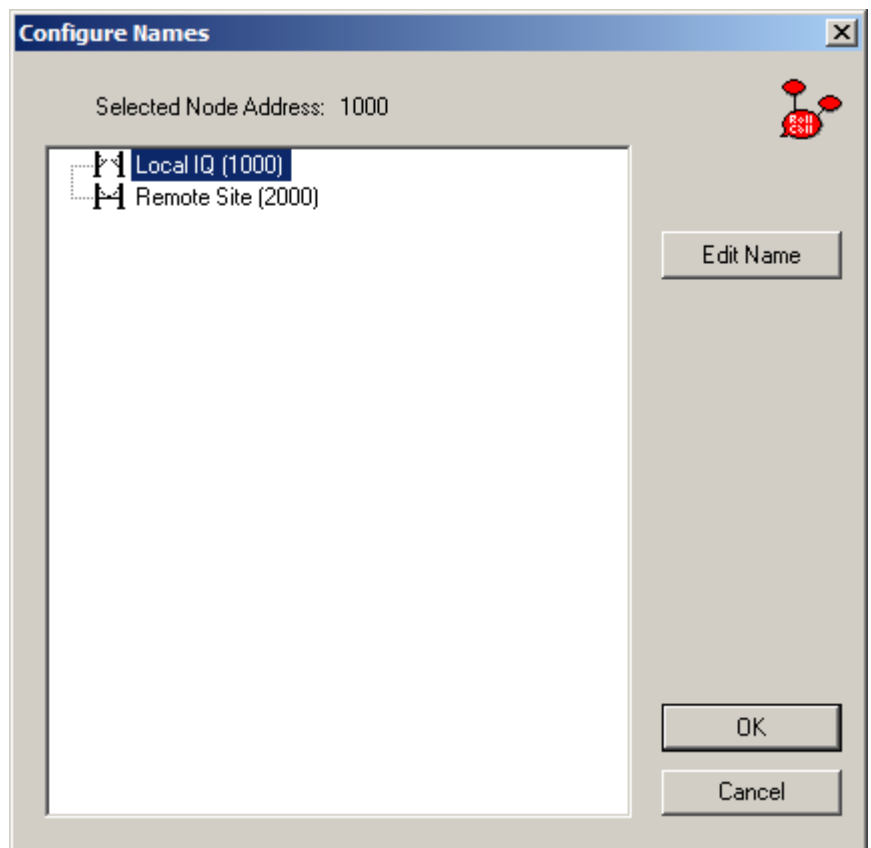


The RollProxy GUI can be used to view the current state of all client and server side connections.

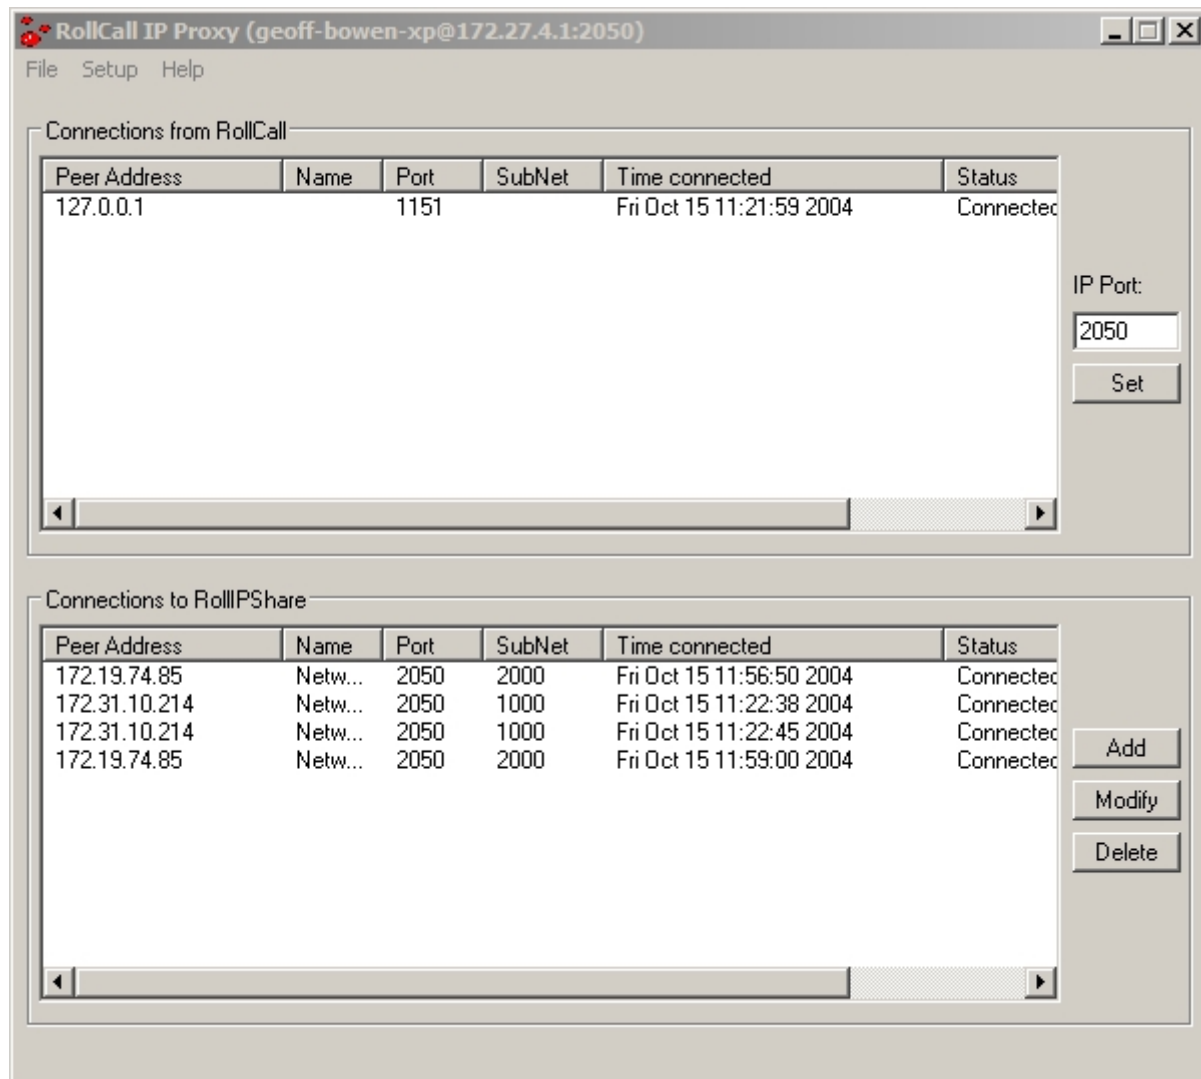

IP Security via RollProxy


RollProxy supports TCP/IP Guest lists to restrict access to the RollCall network. Guest lists can be defined as individual IP Addresses or as ranges of IP Addresses, e.g.: a subnet.

Select the "Set-up->Access List..." menu to access the security settings.

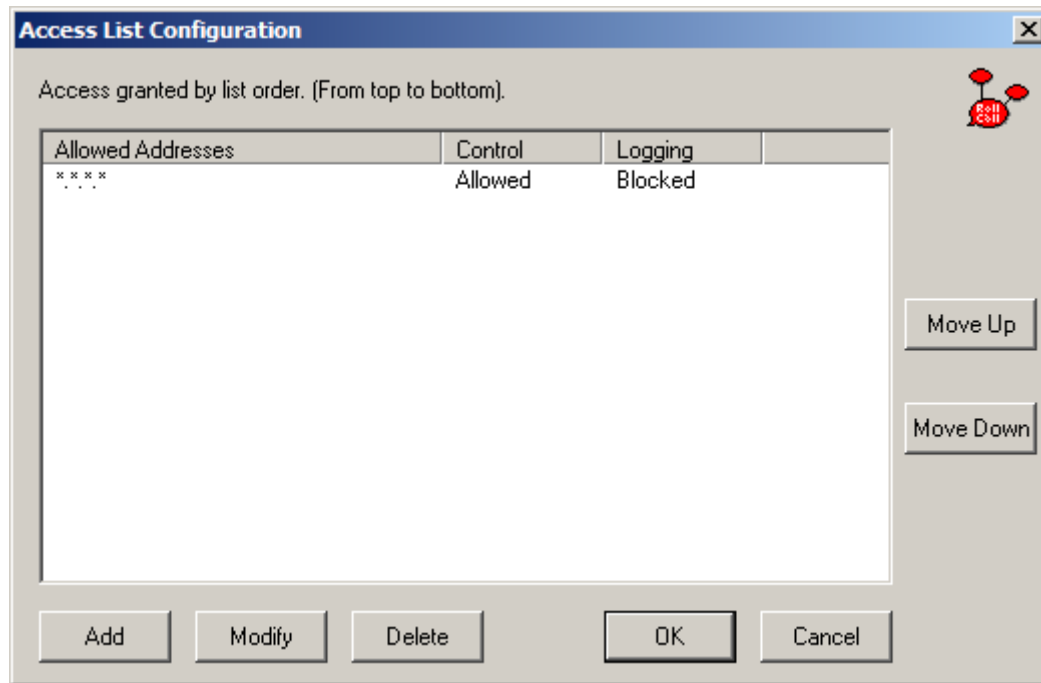

The default rule in Proxy is to allow all IP Addresses access to the network. Delete this rule if you wish to use the security functions within RollProxy.

To add a new rule, click the “Add” button on the above dialog.

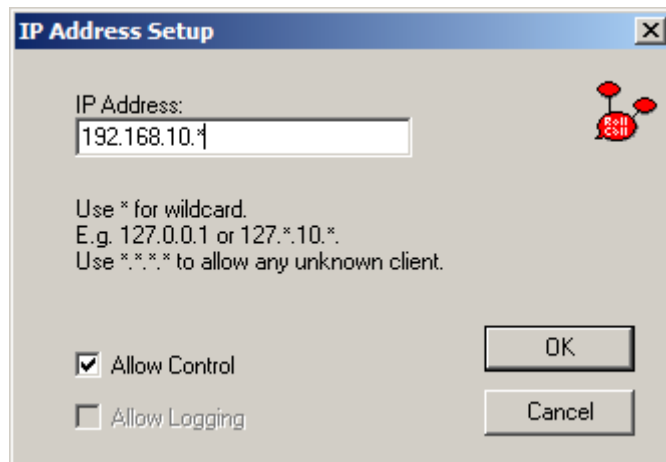

the above rule provides access for all PCs within the class C subnet ‘192.168.10.x’ where x is any IP address from .1 to .255.


Note: The control only version of RollProxy does not support configurable access for both control and logging sessions. This functionality is only available with RollCall Middleware Services.

Configuring ROLLPROXYSERVICE

The major difference between the Control only version of the proxy service supplied with the RollCall Control Panel and the full version supplied with RollCall Middleware Services, is the addition of Logging connection aggregation.

All of the configuration information provided for the Control only version of the service is applicable for the Full version, please refer to the Control only section for details of how to configure the Control aspect of the Service.

The following section will detail the additional logging configuration options available in ROLLPROXYSERVICE (herein called RollProxy or the Proxy Service). The visible difference is the addition of two new sections on the service GUI, related to logging.

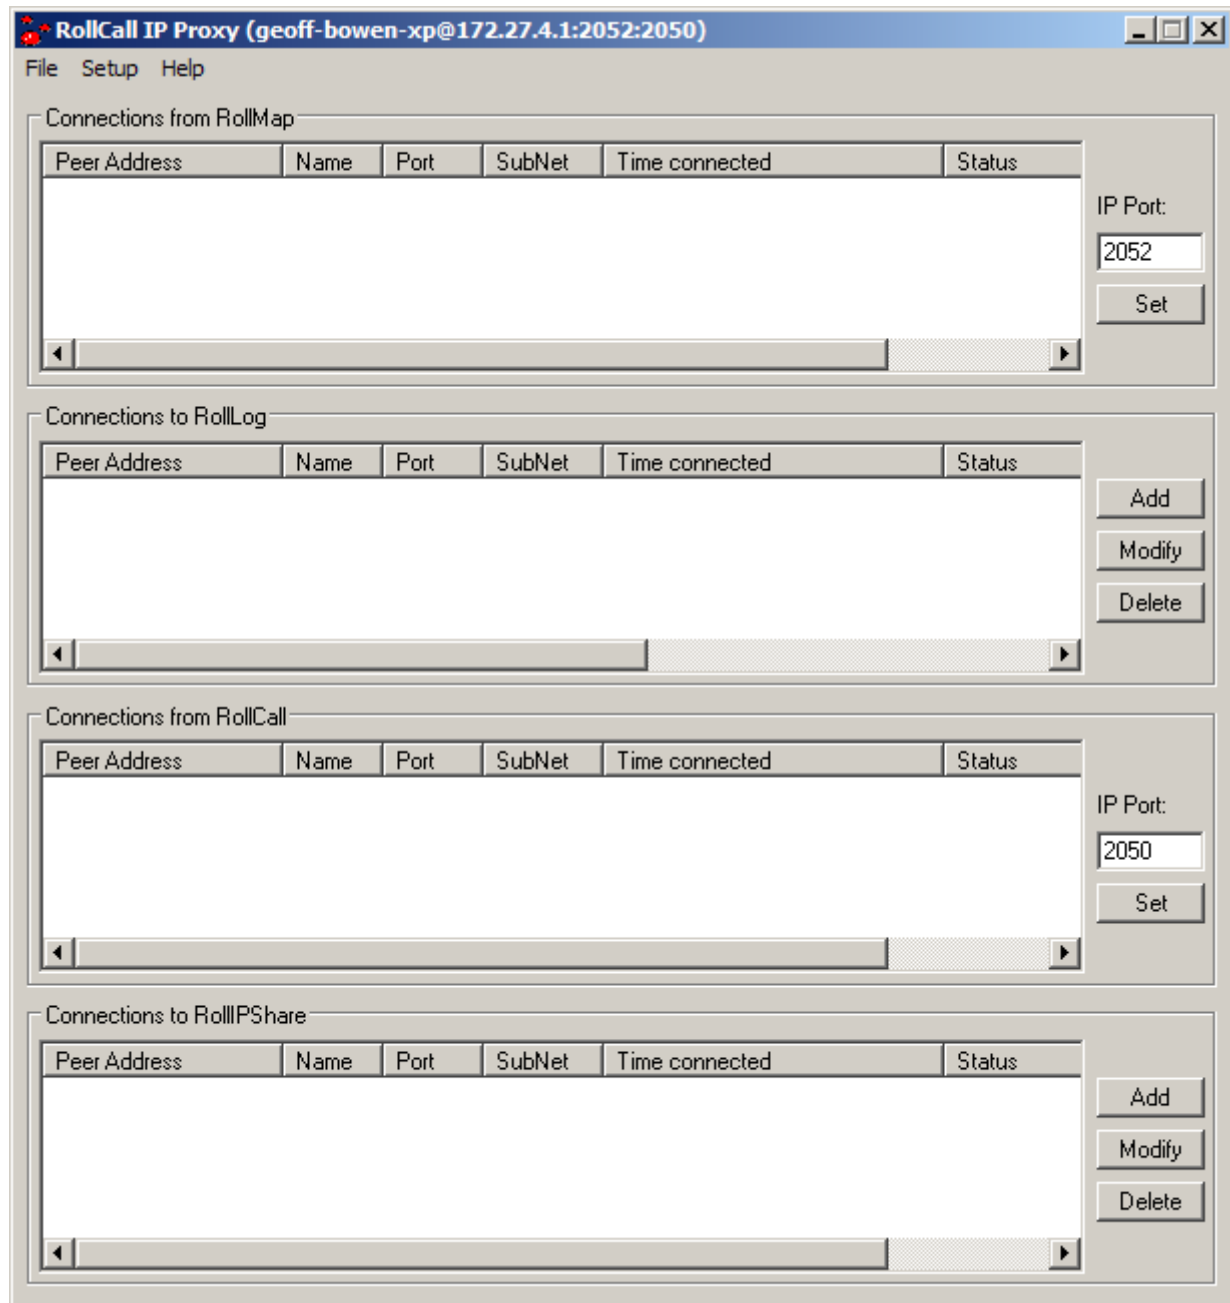

The first section, "Connections from RollMap" details all currently active connections from Logging clients.

IMPORTANT NOTE: By default, if the Proxy Service is installed and running on the Same PC as the RollCall LogServer, the default port for connections from RollMap will conflict with the standard port for the RollCall LogServer.

In order to ensure correct functionality within the system, it is necessary to either:


Change the default port number for Connections from RollMap to a value other than “2052”. The recommended value to set this port to is “2054”.

Or

Change the Port number on RollCall LogServer to a non-default value. (Only do this if you aware of the configuration requirements of LogServer IP ports within ROLLOG & ROLLPROXY).

Adding In A LogServer to proxy


Select the “Add” button within the “Connections to RollLog” section of RollProxy to add in an external LogServer. Enter the IP Address and TCP port number. if changed from the default. The user is also required to enter a RollCall substitution address. This should be same substitution address as entered for the IPShare that matches this LogServer.

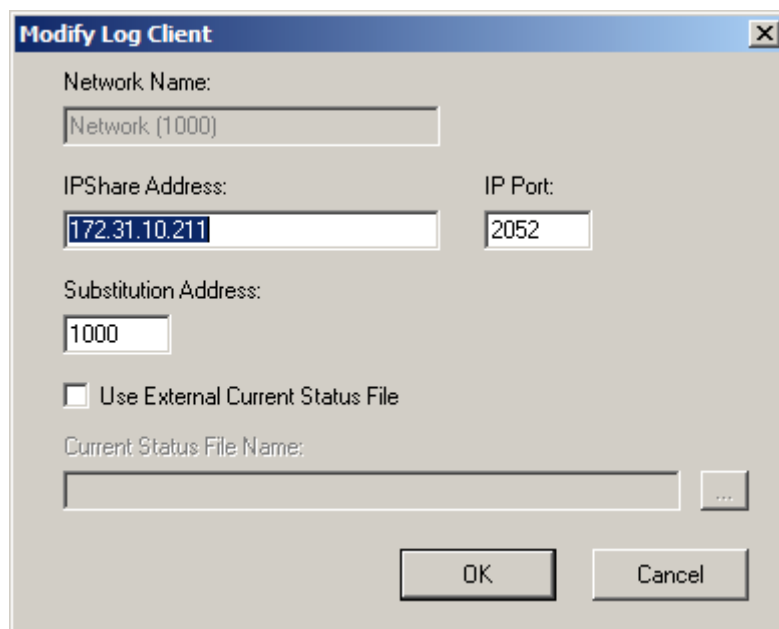


For normal systems use, please ignore the “Use External Current Status File” checkbox. This function enables RollProxy to present services based on a state file generated by a LogServer and is primarily used for offline construction of RollMap systems and diagnostic use.

Viewing Control and Logging Connections

The Fully configured RollProxy service will now be providing RollCall and RollMap with an aggregated network view of all the control and logging services in the system. This enables complete control of discrete networks and real time monitoring of multiple autonomous networks.

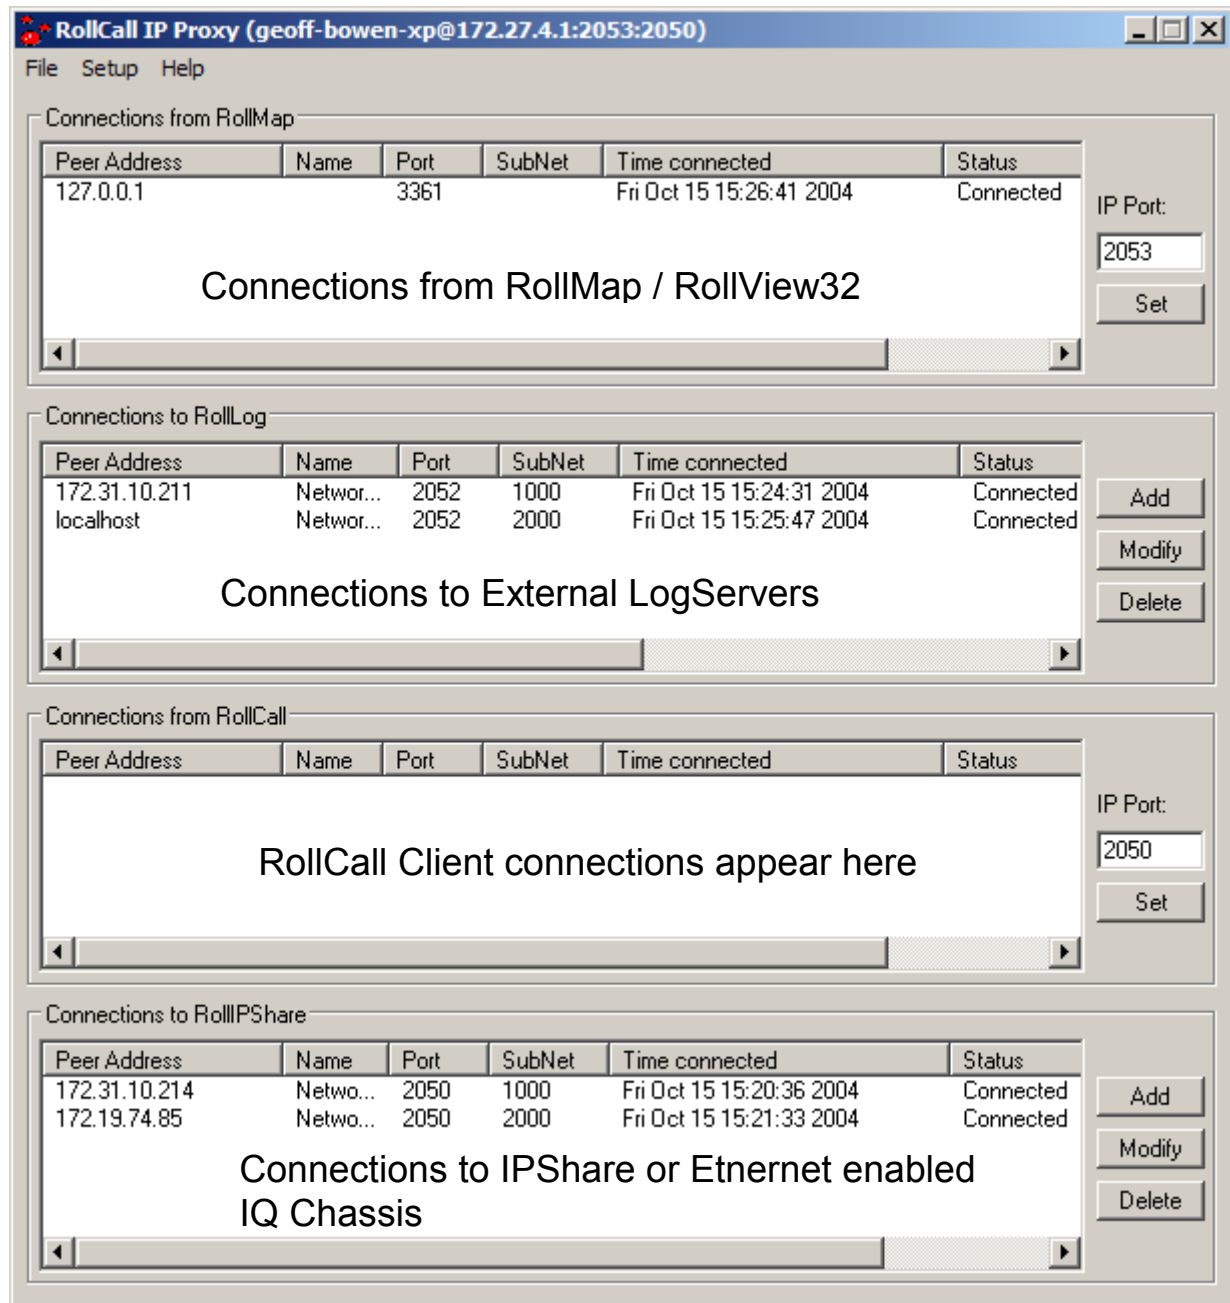


3) RS422 serial link running at 38.4 Kb/s

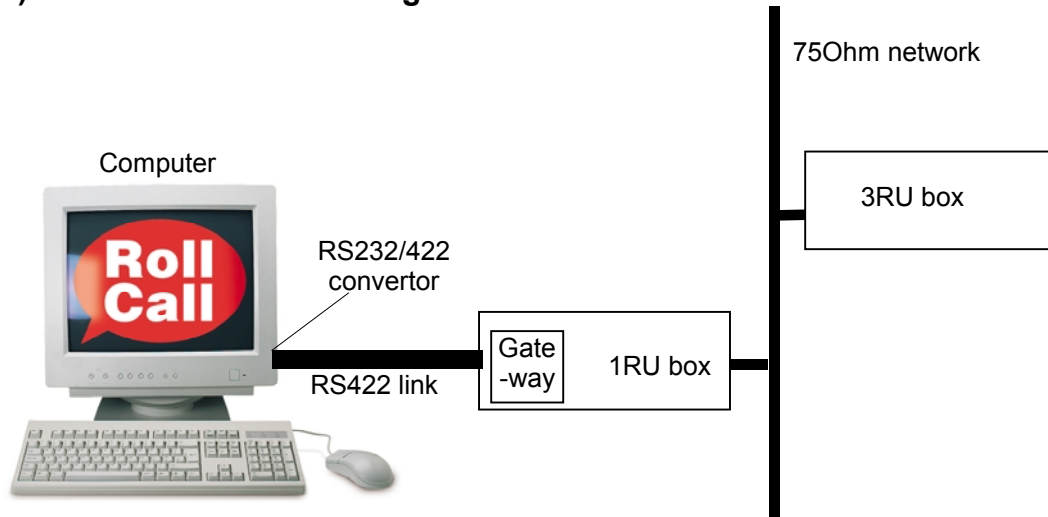

Connect the RS232/RS422 converter to a COM port on the PC and connect this via RS422 cable to the 9 pin 'D' on the IQ modular unit. This interface is designed for occasional use or for third party connections into the system. This allows PC's or any other serial device access to any of the units within the system. Every active "shoebox", 1RU, Kudos+ or 3RU box has one of these ports.

N.B. The D connector on the Gateway card should be configured as RS422. Selection of the interface format is by a switch on the card which must be DOWN, i.e. towards the PCB, for RS422 operation. [N.B. If the switch is in the UP position, the connector operates in RS485-RollNet mode. Please refer to the user guide for your equipment for more information on setting communications modes.]

4) Two or more PCs can share a single physical connection to a RollCall network over an existing TCP/IP LAN or WAN.

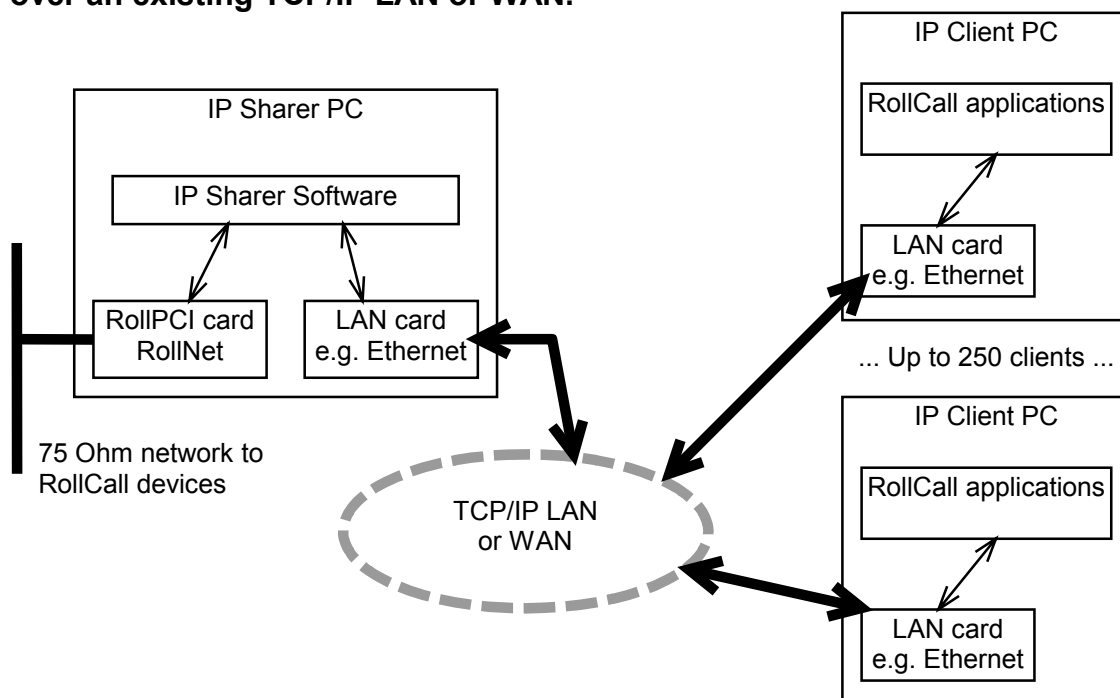

Note that the IP sharer PC must have a RollNet card installed to function properly, (e.g. RollPCI for PCI-bus PCs, RollPCM for PCMCIA laptops).

* The IP Sharer application is provided with RollCall Middleware Services only.

Summary of support for different versions of Microsoft Windows.

Snell & Wilcox warrant operation of RollCall 3.5 under Windows XP (Service pack 1 or greater) or Windows 2000 (Service pack 3 or greater) only. RollCall may operate without issue under other Microsoft Windows operating systems, however we cannot undertake support for the product on any but the above Operating System platforms.

Software Installation

RollCall Control Panel (Internet Download):

Download and run the installable executable and follow on screen instructions.

RollCall Middleware Services (CD-ROM):

Insert your CD into your drive. If Auto-Run is enabled, the launch will execute and provide installation instructions. If Auto-run is not enabled on your PC, please run the 'start.exe' application in the root folder of the CD.

- RollCall Control Panel - installs the RollCall Communications Controller, (COMMTROL.EXE), RollCall Control Panel, (ROLLCALL.EXE), runtime support for OLE apps, (ROLLOLE.EXE), RollCall IP Connection Multiplexer – Control sessions only (ROLLPROXYCONTROL.EXE) and command line RollTrack client (ROLLTRAK.EXE). The Installer also includes all necessary drivers for RollNet LAN cards on Microsoft Windows. These will be unpacked to the '\RollCall\Drivers' directory for installation of your RollNet Card.
- RollCall Middleware Services - installs everything in RollCall Control Panel plus RollCall Log Server, (ROLLLOG.EXE), Log Viewer, (ROLLVIEW.EXE), RollCall IP Connection Multiplexer – Control and Logging sessions (ROLLPROXYSERVICE.EXE) and IP connection sharer (ROLLIPSH.EXE) programs. In addition to the program suite, RollCall Middleware Services installs a complete Manual set for the IQ modular range in PDF format. These manuals can be accessed via the RollCall Control Panel GUI.

On start-up, the setup program prompts for an installation directory. The default installation directory is C:\Program Files\RollCall, or the currently installed RollCall directory if one exists. The set-up procedure will copy all the necessary files to this directory. Set-up will also create a Windows Program Group called RollCall.

Overview



ROLLCALL.EXE or ROLLLITE.EXE – The RollCall Control Panel:

This application enables control of RollCall compatible units, (e.g. IQ Modules, Golden Gate, and any other S&W units with RollCall capability). Each unit has a 'control template' window for control of that device. The user can configure the program for USER, ENGINEER or SUPERVISOR access levels with password protection. It can install 'template' files from new units automatically or by user request.



ROLLLOG.EXE - RollCall Log Server:

This application collects logging information from units on the network. It keeps a running log file of every event received, and writes a current status file for configured units that allows the LogViewer program to display the information. Additional monitoring applications such as RollMap Schematic Viewer can also access the information from RollLog.



ROLLVIEW32.EXE - RollCall Log Viewer:

This application displays the current status information collated by the RollCall Log Server in a tabulated form. Coloured conditions highlight warning and failure states. Can be configured for network access for remote monitoring using information from the Log Server program.



COMMTROL.EXE - RollCall Communications Controller:

This application is called automatically by ROLLCALL.EXE, ROLLLOG.EXE, ROLLOLE.EXE, ROLLIPSH.EXE, ROLLTRAK.EXE, or ROLLLITE.EXE and normally runs minimised. After the initial configuration, there is usually no need to run this program by itself. This program provides the basic communications with the PC card, serial comms ports or TCP/IP protocols. It also has monitoring facilities for network analysis.



ROLLIPSH.EXE - RollCall IP Sharer:

This application allows a single physical connection to a RollCall network to be shared by multiple PCs on a TCP/IP LAN or WAN. This application will only operate if a RollNet card, (RollPCI, RollPCM, or IQCPC), is installed in the PC.



ROLLOLE.EXE – RollCall COM Server:

This is a COM object that provides a Software Development Kit, (SDK), and programming interface for access of RollCall control and monitoring. It can be used from many programming languages such as Visual Basic, C/C++, PASCAL or any other language that supports the Microsoft COM Objects.



ROLLTRAK.EXE - RollCall Command Line RollTrack:

This program provides Windows command line access to sending 'RollTrack' messages to any RollCall unit. Messages are sent using unconnected sessions and hence no feedback is received from the unit apart from confirmation of the control. (I.e. subsequent changes made by other controllers will not be notified back to the RollTrack sender.) This program provides a simple and fast Software Development Kit, (SDK), for control of units from 3rd party applications.



ROLLPROXYCONTROL.EXE – IP Control Connection Multiplexor

This is a Windows Service program that enables multiple IP control connections from IQ chassis to be aggregated into a single unified view for the RollCall control panel. This version is supplied with the web version of RollCall Control Panel only.




ROLLPROXYCONTROL.EXE – IP Control & Logging Connection Multiplexor


This is a Windows Service program that enables multiple IP control & logging connections from IQ chassis, RollCall IPShares and LogServers to be aggregated into a single unified view for the RollCall control panel. This version is supplied with Rollcall Middleware Services only.

COMMUNICATION CONTROLLER (COMMTROL.EXE)

After successful installation, a program group “RollCall” has been set-up. Run up the program COMMTROL.EXE or launch the RollCall control panel which will run COMMTROL automatically. Select the COMMTROL menu “File->Configure Comms”.

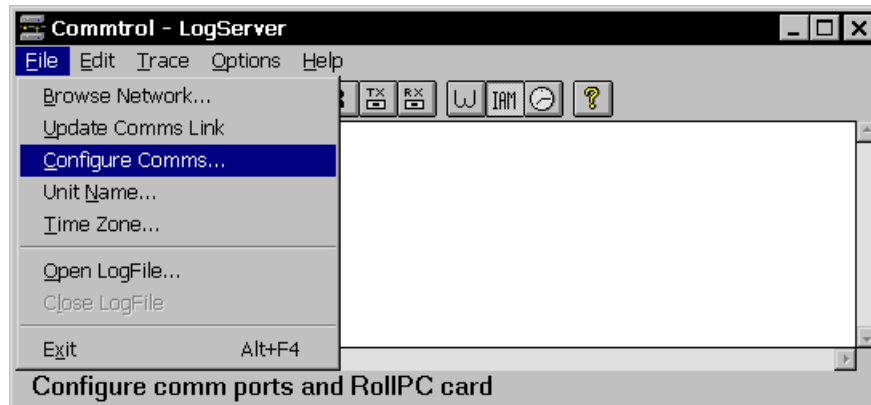


If you are operating in 75 Ohm co-axial mode then select ‘RollPC Card’.

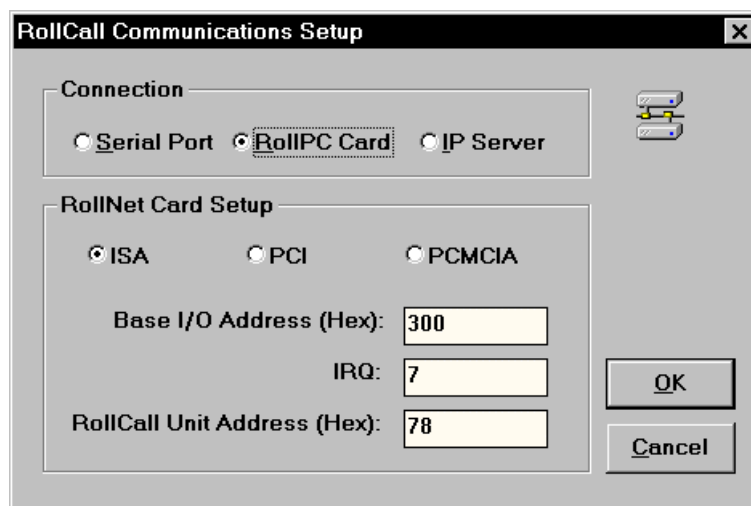


There are 3 card types supported for RollNet operation. Select the card type required.


RollCall™ ISA Card Settings

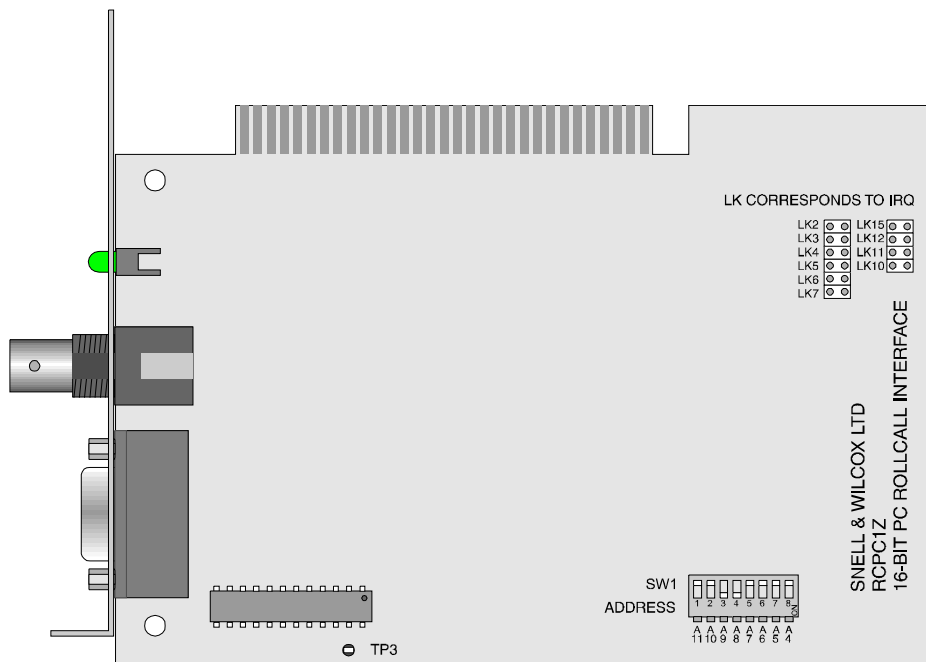

The I/O Address needs to be set to that of the card. If there are any other cards with that I/O address then the DIP switch will need to be changed. Up = 0. Down = 1. A0 to A3 always = 0. If A9 & A8 are down and A4 to A7 are up then hex address = 300. A11 and A10 should always be set in the up position.

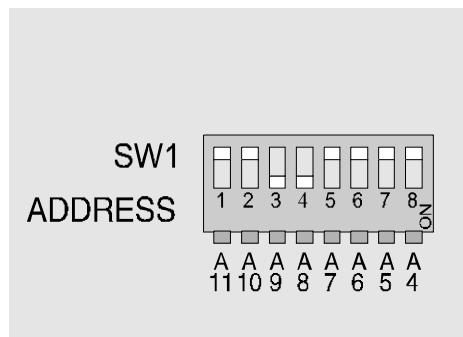

Link IRQ is normally set to 7. If there are any clashes then IRQ will have to be changed to another value.

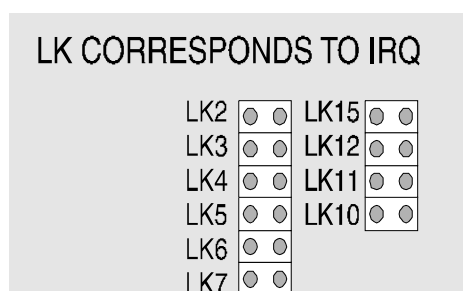


The unit address (settable via software only) should be set to a value within the range 10 to FF (hex). Each IQCPC card or unit is a RollCall node and its address must be unique within its local segment of the network.

RollCall PCI and PCMCIA Card settings

These cards do not have hardware settings. All settings are set in software by the driver software. Refer to the driver installation guide for configuring the card.

RS422 Serial mode


To operate in the RS422 serial mode, select the port that the RS232/RS422 converter is attached to and set the speed to 38400 bps. This is the default speed set on the Gateway.

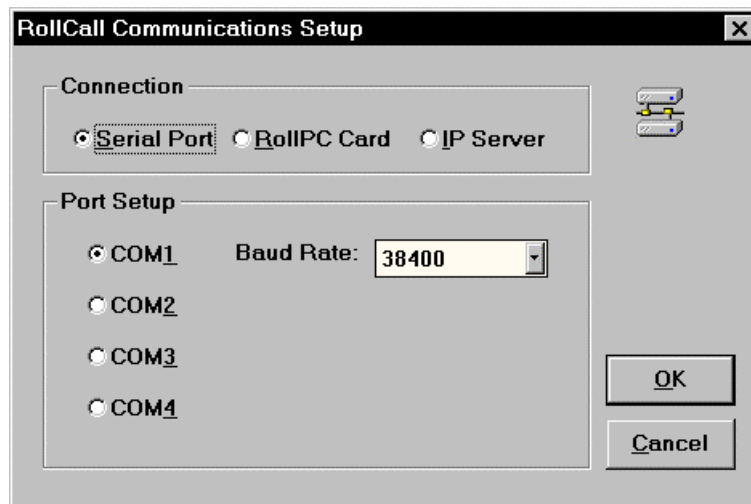

Select "OK" to save settings.


IP Connection to RollIPSh

If the PC does not have a direct connection to the RollCall network, it can access the network via an Ethernet enabled IQ Chassis or another PC that has ROLLIPSH (IP Sharer) running on it. Select 'IP Server', and enter the network name or IP address of the IQ Chassis or RollCall IP Sharer PC.

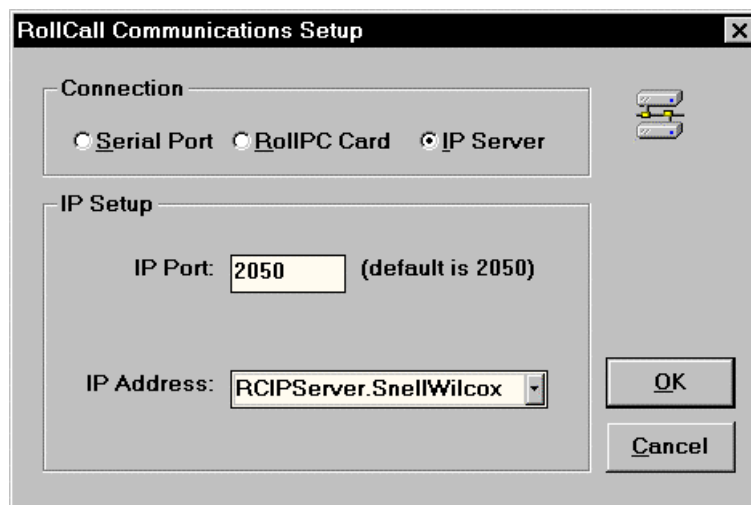


Setting the PC name

Select “File->Unit Name” from the menu.

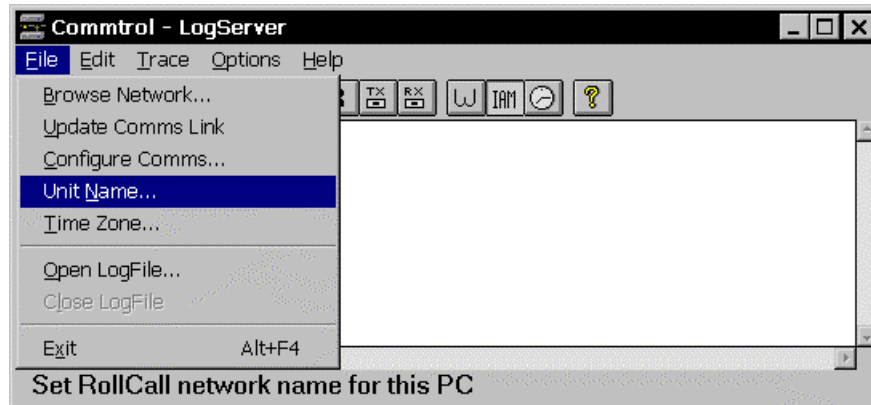


A dialog box will appear. Enter a name for this PC. This is the unique name that all other units on the network will use when logging or other services are selected. Select “OK” to save.

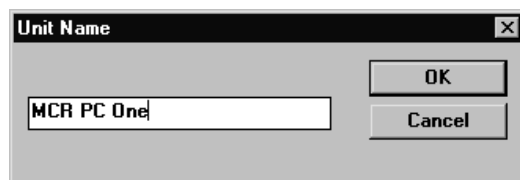

Setting the Time Zone

In order for LogServers and LogViewers to display the correct local time, the environmental variable “TZ” should be set correctly on the PC. If this variable is not set, then Commtrol can set its own time zone variable to adjust for local time. Select “File->Time Zone” from the menu.

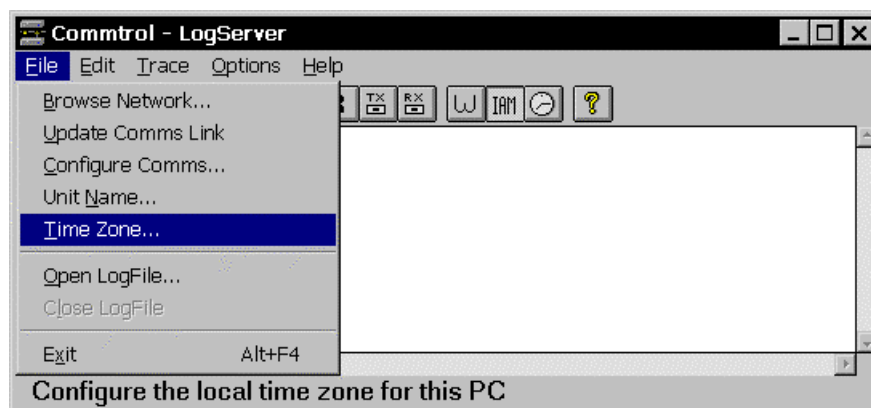

Select from the drop down list the correct time zone required. Select “OK” to save. This setting only affects time displayed by the suite of RollCall and RollMap software. Commtrol does not override the “TZ” environmental variable, which affects other programs in the operating system.



Setting toolbar buttons.

The TIME button instructs Commtrol to broadcast PC time onto the network. Logging messages are time stamped using this time. Only one PC should broadcast TIME onto the network (Normally the RollCall Log Server). If no unit broadcasts TIME messages, then log messages from units will contain their UPTIME (seconds elapsed since start-up).


The I AM button instructs Commtrol to broadcast its presence and its services to everyone on the network. This must be enabled for logging to this PC.

The WIDE area network button enables IAM broadcasts on the RS232 port of the PC, and also enables IAM broadcasts to travel through bridges on the network. This must be enabled if logging to this PC is required through RS232 or bridges.




Time Server Setup

Select Options->Time Server Setup.

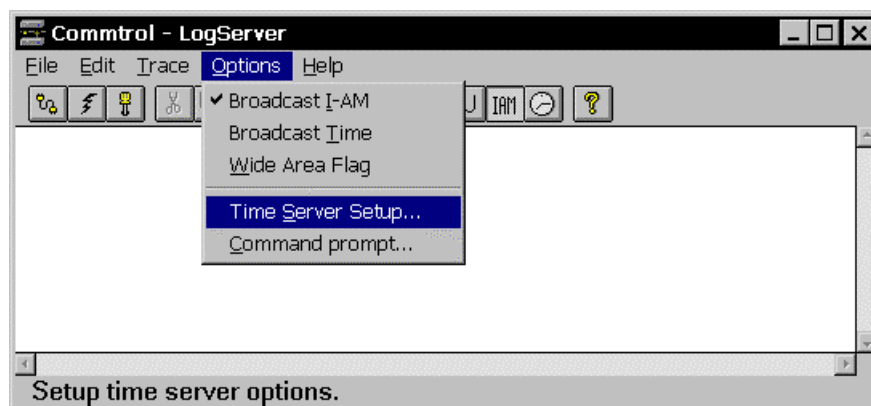

This provides options for TIME generation and reception. If “Enable message box warnings” is enabled, Commtrol will warn about other time servers that are out of synchronisation. This is particularly useful when running RollLog where packets need to be time stamped.

In order to standardise time across the TCP/IP network, it is recommended that you run an NTP time service to ensure all PC Workstations and Servers are synchronised.

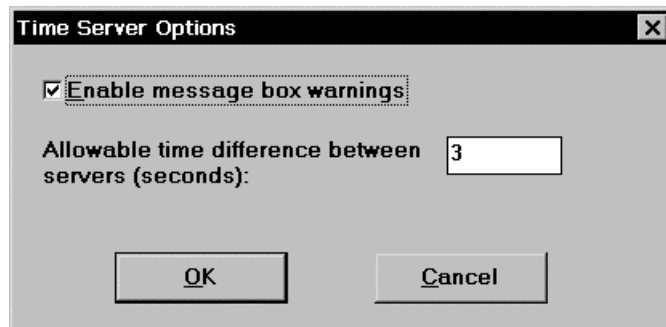

All other buttons are for monitoring use only. Do not set them in normal operation. Close the RollCall Control Panel or Commtrol to save all settings.

Commtrol Command Line Parameters

Commtrol can be started with several options from the command line.

Commtrol.exe [-f=filename.ini] [-r=filename.exe] [-resident]

Where [] are optional fields.

-f=filename.ini

This instructs Commtrol to run up using the configuration file ‘filename.ini’ instead of the default file ROLLCALL.INI. This parameter must be the first parameter on the command line if used. All COMMCONTROL INI files must be in the default Windows directory.

-r=filename.exe

This will run and execute the file ‘filename.exe’ after Commtrol has initialised. There may be more than one –r flags on the command line.

-resident

This flag instructs Commtrol to start and run in resident mode. Commtrol will not be closed when other applications such as Rollcall.exe or RollLog.exe are closed.

Example:

COMMCONTROL.EXE -f=test.ini -r=rollcall.exe -r=rolllog.exe -resident <CR>

In normal operation it will not be necessary to set any of these flags.

RollCall Network Listing

The menu item File->Browse Network, or toolbar icon , brings up the RollCall Network Listing box. This will display the current list of available units on the RollCall network.

The initial display will show the top level “nodes” on the network. Some items, such as bridges or modular chassis, have child units, (e.g. modules), which are exposed by double-clicking on the parent node.

Each unit will have one of the following icons:

-  Stand-alone unit with no sub-units.
-  Unit with sub-units, e.g. modular chassis. Double clicking this type of unit will open  or close  the list of sub-units.
-  Sub-unit, beneath a parent unit, e.g. IQ module within the parent modular chassis.
-  Bridge unit, which links to another RollCall network. This may be a physical bridge device, or a virtual bridging element such as the RollCall IP Proxy. Double clicking opens  or closes  the list of the units in the other (remote) RollCall network.

When the RollCall network listing is viewed from other RollCall applications such as the RollCall Control Panel, a red colour in the unit icon indicates that this unit does not have the required services for this application.

Additional icons will appear in the network listing next to units to indicate network status as follows:

-  This icon indicates that the unit is being controlled by a remote control panel, and is available for other control panels to connect to, (multi-session).
-  This icon indicates that the unit is being controlled by a remote control panel, but is *not* available for other control panels to connect to, (single-session).

No additional icon indicates that the unit is not being controlled by any remote control panels.

RollCall Network Listing Options

From the Settings menu of the network listing box there are three options:


Enabling the menu item “Settings->Always on Top” will leave the network listing box displayed on top of other active RollCall applications such as the RollCall Control Panel.

Enabling the menu item “Settings->Keep Select Active” will leave the network listing box displayed after browsing from other RollCall applications such as the RollCall Control Panel. This allows easy selection of multiple units from the network listing.


Enabling the menu item “Settings->Show additional information” will append the unit type of each unit, (i.e. the default network name), to the user-configured network name.

ROLLCALL CONTROL PANEL (ROLLCALL.EXE)

Starting

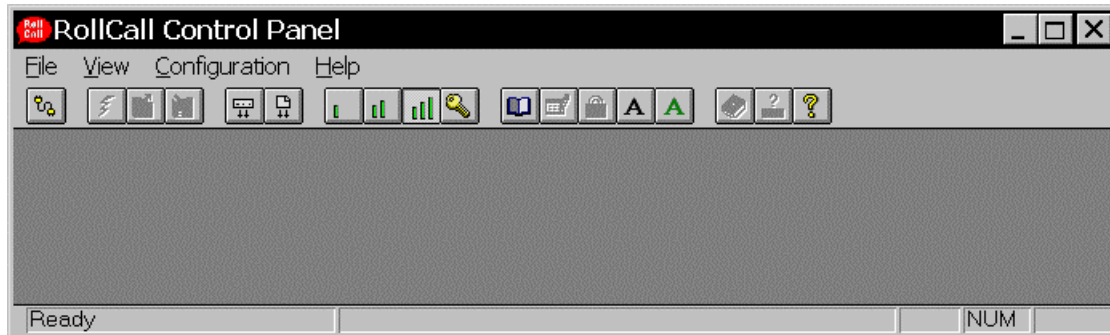

Click on the “NETWORK” icon (top left most icon ) , or choose File/New from the menu. This will display the current list of available units. The initial display will be individual boxes. Each box is a node on the network. Note that even front panels may be individual items on the network.

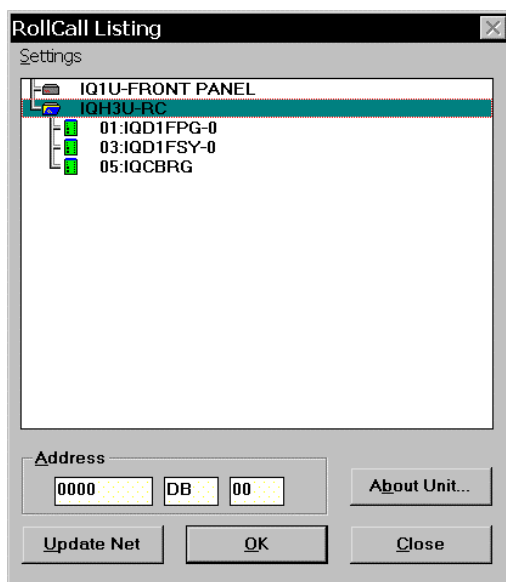


Double click on a modular rack (e.g. IQH3U-RC (Address: DB hex) as shown above) and if there are items inside it, then it will expand to show its module list. To connect, double click on the item or highlight the item and then select “OK”. To connect to the rack gateway card itself, highlight the item then select “OK”. (Gateways do not accept double clicks for connect.)

Selecting a unit will upload its menus and a control panel will be displayed. Each module will have its own control layout stored in a template file. Most units have their templates built into them so that the RollCall program can extract it when required. Some templates for older units are included in the RollCall installation. For older units that do not have templates, contact Snell & Wilcox customer support for updated template files.

Email: product.support@snellwilcox.com

If the unit is busy (i.e. another controller PC or active front panel is controlling the device) a message box appears indicating who is currently holding the unit. If the current user level is “Supervisor”, the message box offers the option of remotely disconnecting the current user.

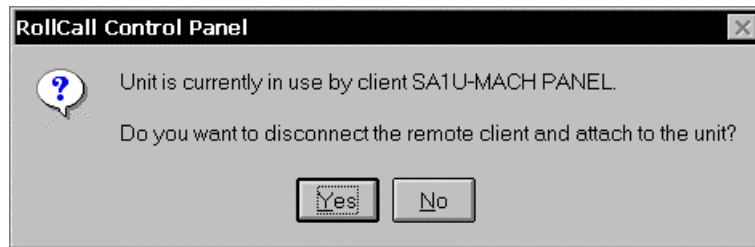

Multi-session products are capable of supporting multiple concurrent control sessions and will not display this message.


Disconnecting a remote connection manually

When a unit is in use and no other connectable sessions are available, a “lock” icon appears in the network selection box. To disconnect the remote connection, select “About Unit”.



The unit information box displays details for the selected unit. If the unit is on-line to a controller, the “Disconnect” button will be enabled. Selecting this will terminate the connection between the remote user and the unit. This option is only available at “Supervisor” access level.

General Operation

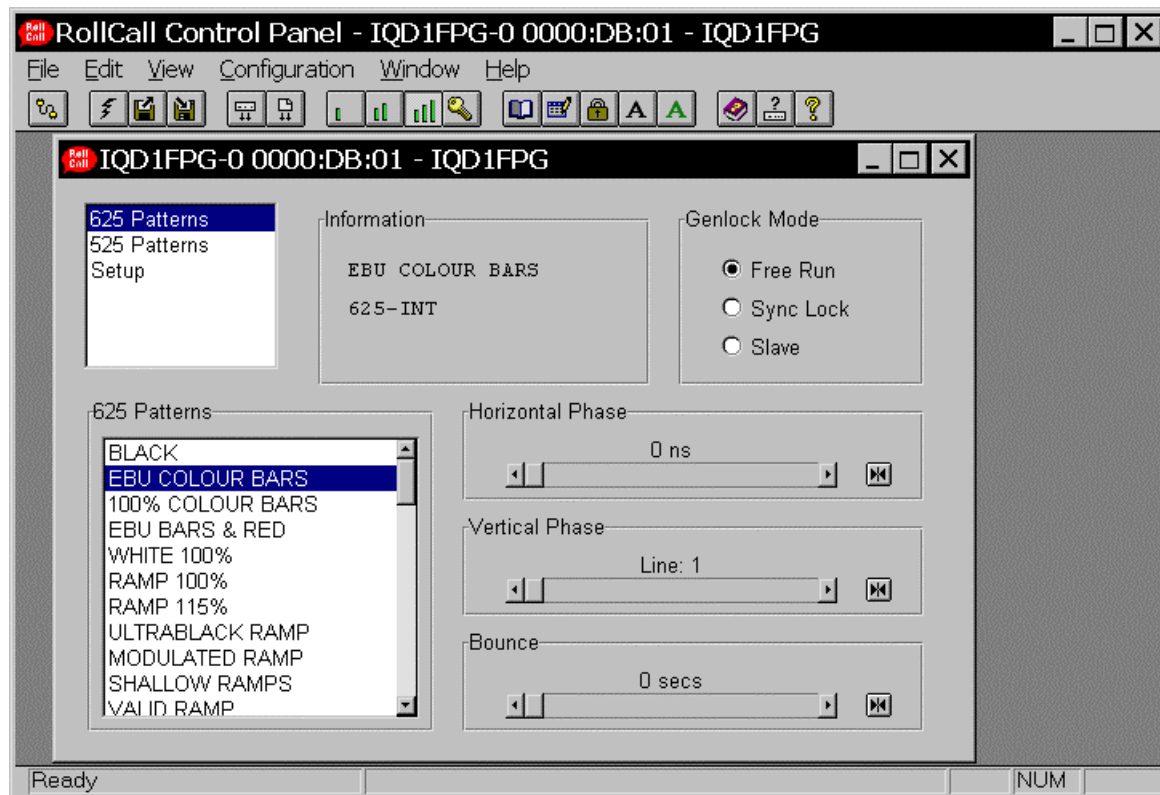


The specific controls for each unit are covered in their respective Operations Manual. Multiple units can be controlled at the same time. All controls are actioned in real-time, and any changes to the state of the unit are reflected in all control panel windows. Closing the control panel window will automatically disconnect the unit. Simultaneous viewing of different control pages for a unit can be achieved by selecting the “Window->New” menu.

The control templates for each unit are usually self explanatory. Buttons, listbox selection, check boxes, scroll bars are actioned in real time. The only exception are text edit fields. When a change is made to a text edit field, it is not actioned, (i.e. sent to the remote unit), until the “Send” button  or the return key is pressed.

The “Send” button changes to a red arrow  when the text is modified and not actioned. Selecting another control page, closing the control screen, or pressing the ESC or Escape key will lose all changes that have not been actioned.

The “Preset” button  is usually available for edit fields and number parameters. Pressing this button will restore the command to its default state.

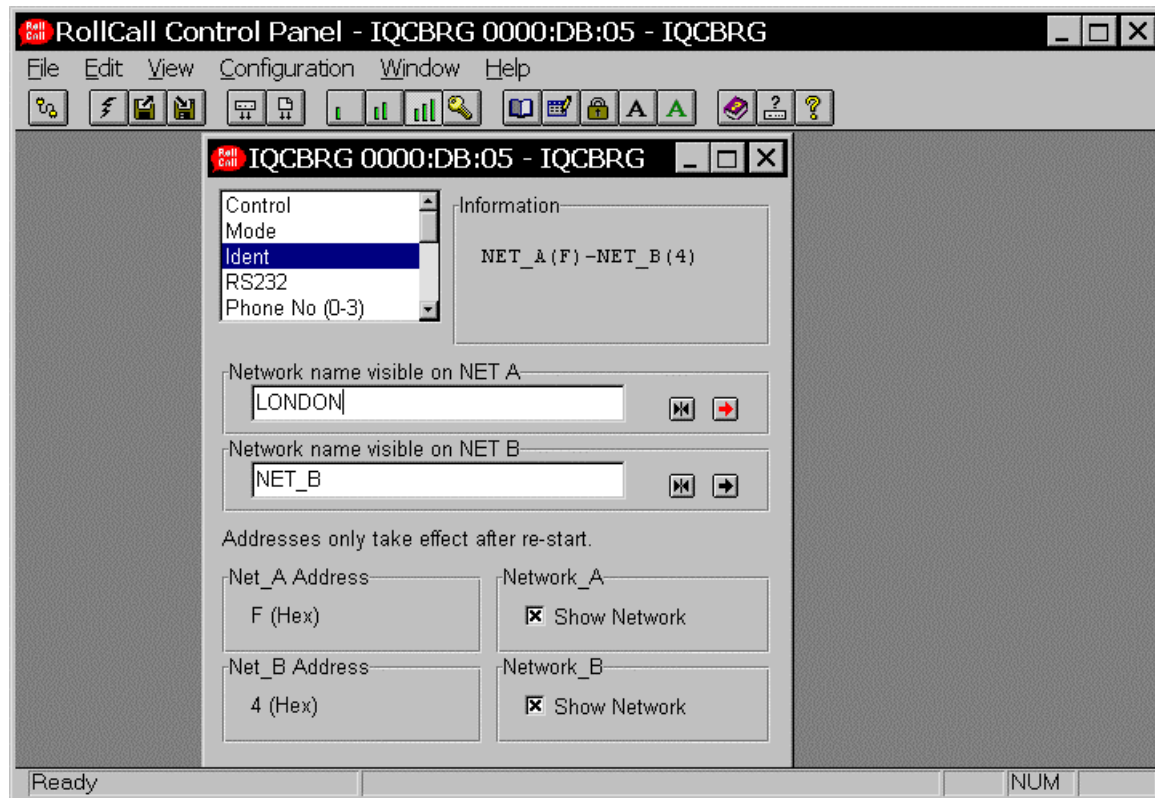


Opening multiple windows to the same unit

The menu item Window/New opens additional windows to the same unit. This allows simultaneous display of multiple pages of controls from a single unit.


Changing User Access Level

The RollCall program can be set to either “USER”, “ENGINEER” or “SUPERVISOR” access levels with the toolbar icons . Units may present a different set of controls depending on the access level on connection. The “USER” level has the least access and the “SUPERVISOR” level has the most. (The access level must be set prior to connecting to a unit. Once a connection is made to a unit and its control window is in view, changing the access level has no effect).

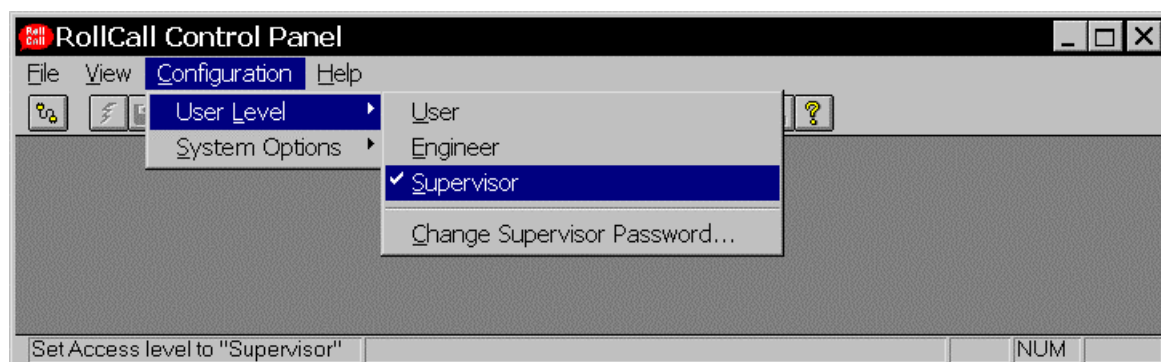

Setting a Supervisor Password


The ability to change user access levels can be password protected. By default, no password is set. To set a password or to change the current password, select “Configuration->User level->Change Supervisor Password” from the menu, or from the toolbar choose .

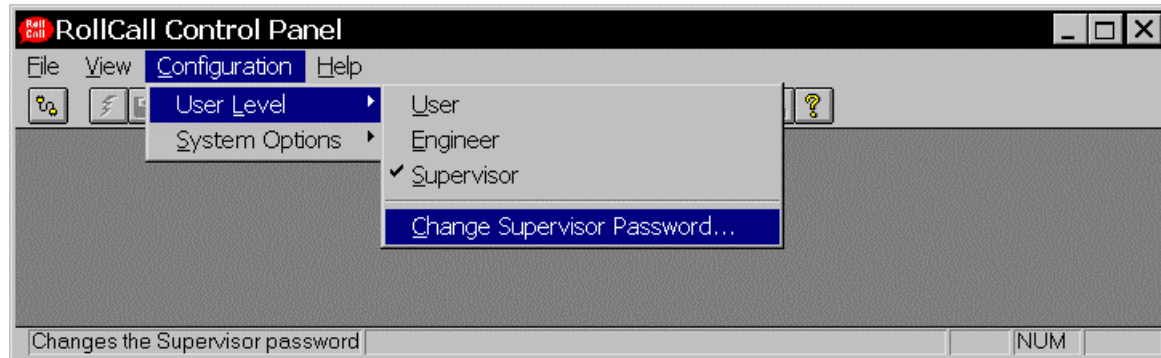

If a password is not currently set, then only a new password is requested. To disable the password protection, set both fields of the new password to blank lines (no characters). Select “OK” to save.



Auto-template extraction

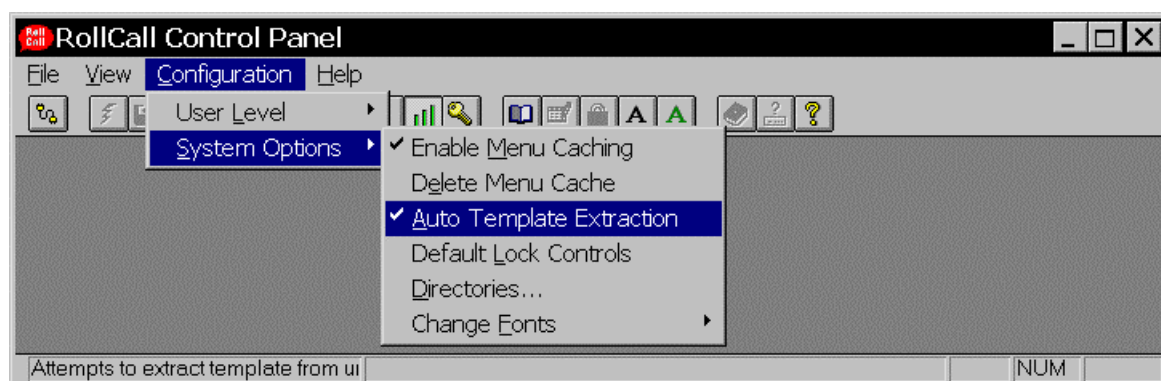


Most RollCall units contain a control template file embedded within its non-volatile storage. This template file describes how the RollCall program should present the controls to the user. Each different version or even different user level of the unit may have a different template file. The template file may even contain layouts for different versions of the unit.

When a new unit is installed and is visible on the network, the RollCall program may not have a template for the new unit. If the “Configuration->System Options->Auto Template Extraction” menu item is enabled, (the default), then when the new unit is selected for control, the RollCall program will automatically extract the template file from the unit and attempt to install the appropriate template version for that unit. For units that do not contain an embedded template file, the user is prompted for the file location of the new template file.


On successful template extraction, the user interface for the product will be displayed inside the main RollCall Control Panel Application window.

Manually installing a template from a unit

Select “File->Add template from unit” from the menu, or from the toolbar choose .

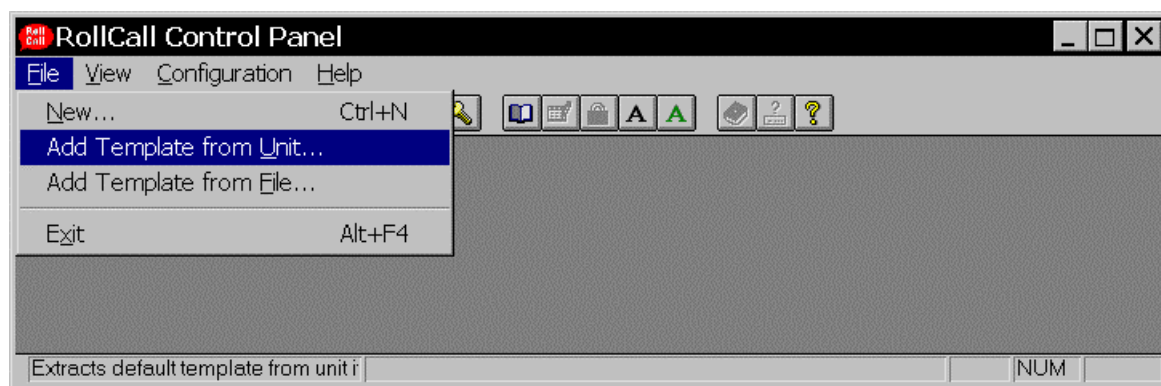


The network browse box will appear and the user can select the unit required. Red icons indicate units that do not contain file services.

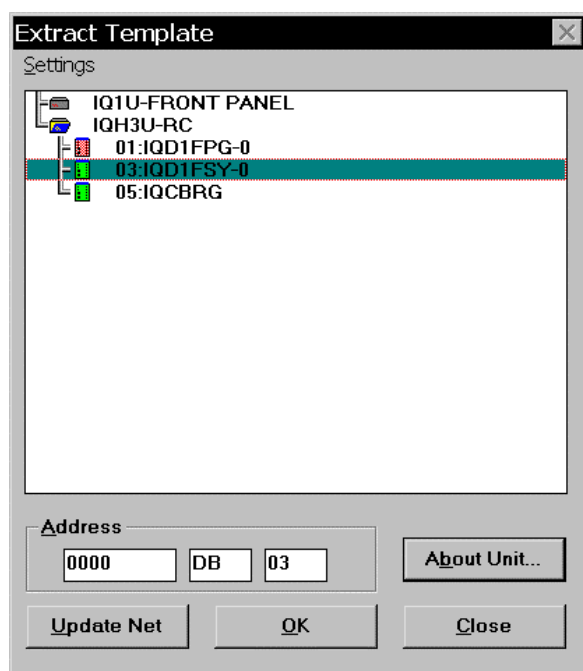

In the above example, the IQD1FPG module is shown in red indicating that it not selectable because it does not have any file services and hence does not contain an embedded template file. When a unit is selected, the program will attempt to extract the template file


from the unit. If successful, a list of available templates will be displayed. The user can select any or all of the templates for installation. By default, the extracted template file is called "TEMPLATE.TPL" and is placed in the RollCall installation directory.

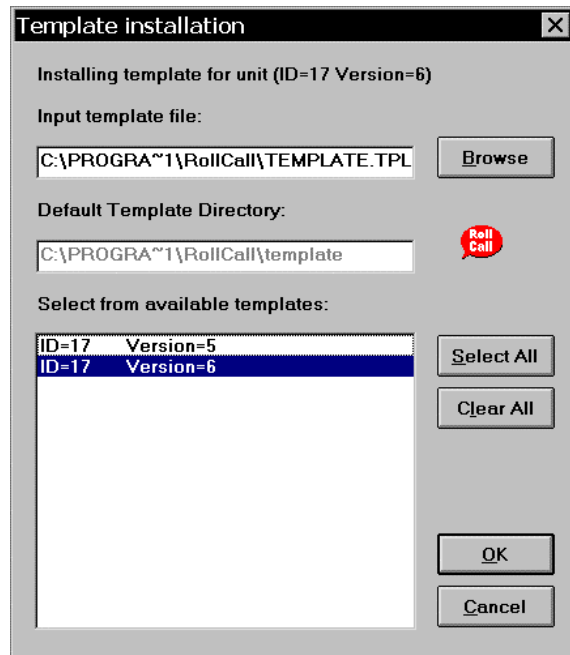


Each unit is uniquely identified by its ID and command set version number. Templates files may contain information for other units with different ID and versions. Select "OK" to install selected template(s).

Manually installing a template from a file

A unit's control template can be updated at any time from an external template file. These files can be obtained by contacting Snell & Wilcox. Select "File->Add Template from File" from the menu, or from the toolbar choose .

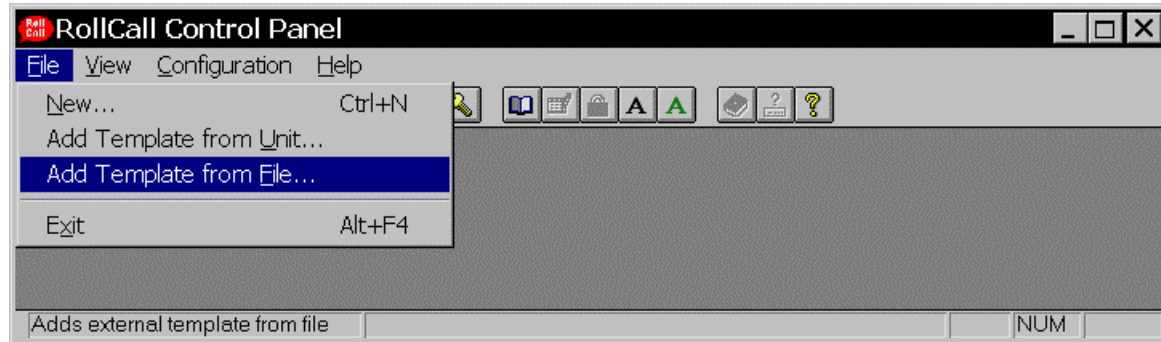


A file open browse box will appear. Select the template file to install. Select "OK" to continue.

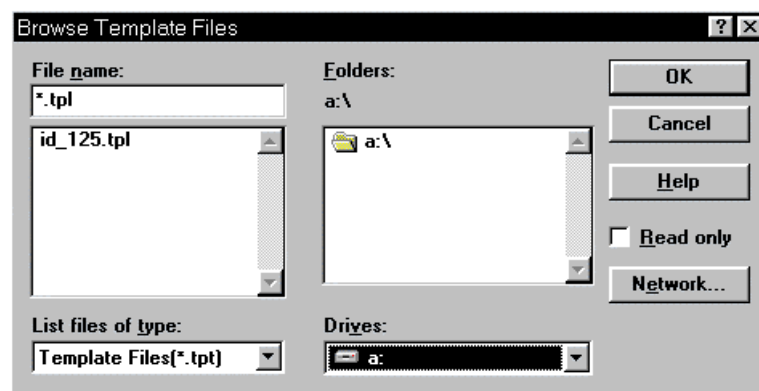

The template installation box will appear and the user is prompted to select the ID and version required. Select "OK" to install template.

Caching Menus

Information about a unit's types of controls and their parameters are uploaded as a list of "Menus" from the unit to the RollCall program on connection. Loading these menus may take several seconds every time the unit is connected. In order to speed up the connection time, some unit's menus may be cached locally on the PC's hard disk. Information about which menus to cache are sent by the unit to the RollCall program. In older versions of units, caching information ability was not available and hence their menus are uploaded on every connection irrespective of this feature. (See "Editing Menu Cache" for units without caching information).

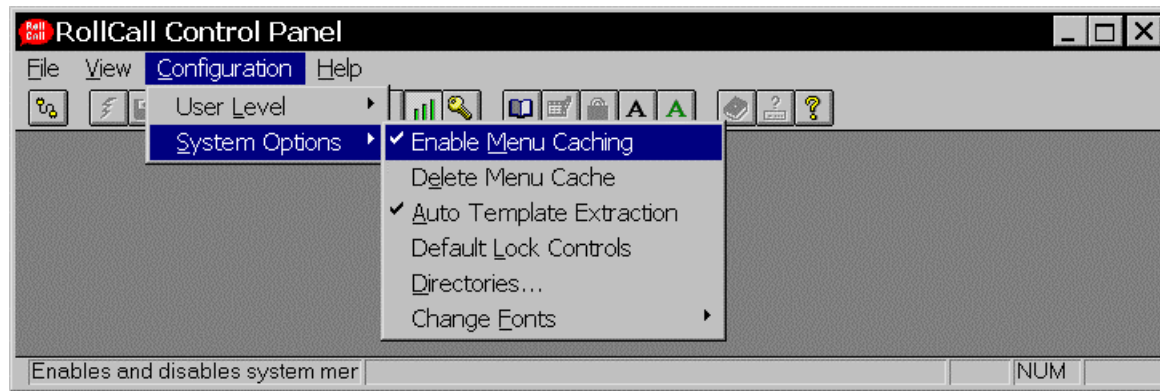


Delete Menu Cache

Occasionally it is necessary to purge the menu cache files for file management purposes. This menu item will delete all cache files from this PC.


Read-only control screens

All control screens for units can be made read-only. Select "Configuration->System Options->Default Lock Controls" from the menu. This can prevent accidental changes to units. This option is only changeable at "Supervisor" access level but its function applies to all user levels.

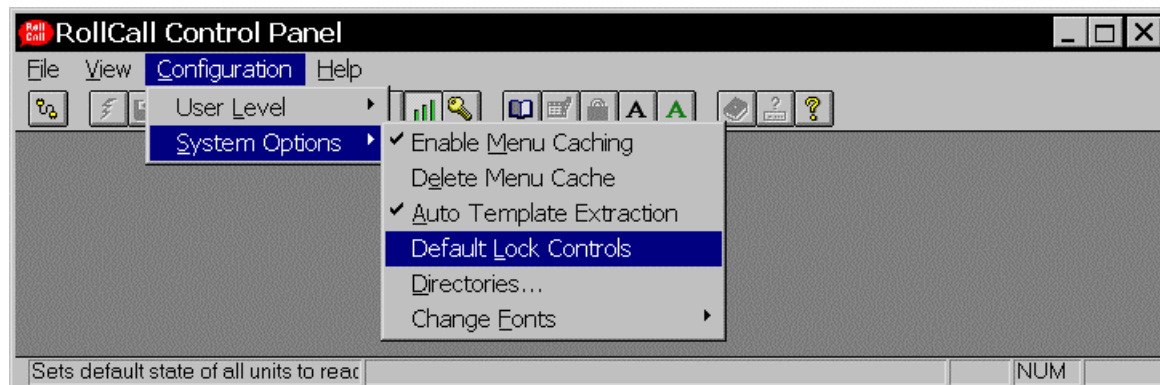


Configuration Directories

To change the default RollCall configuration files and directories, select "Configuration->System Options->Directories" from the menu, or from the toolbar choose . This option is only available at "Supervisor" access level.

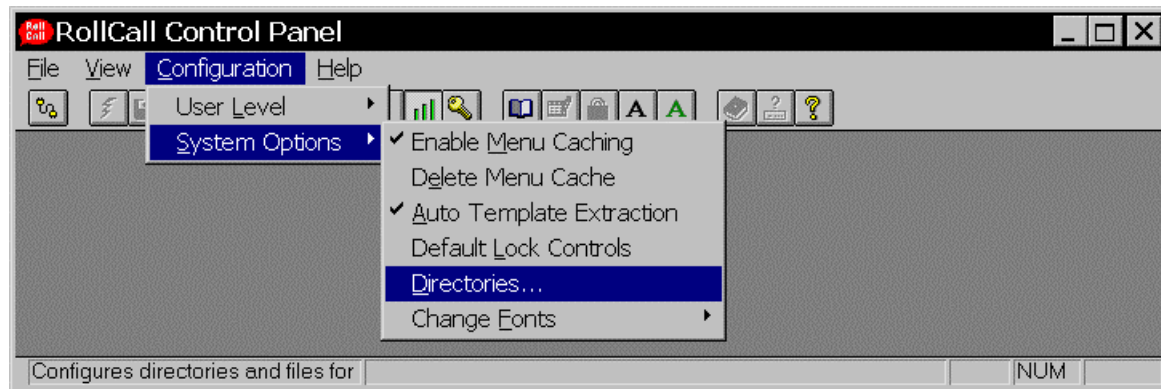


The configuration box allows the user to change paths to RollCall's files. Setting these parameters to shared network paths will allow RollCall to run on networked PCs.

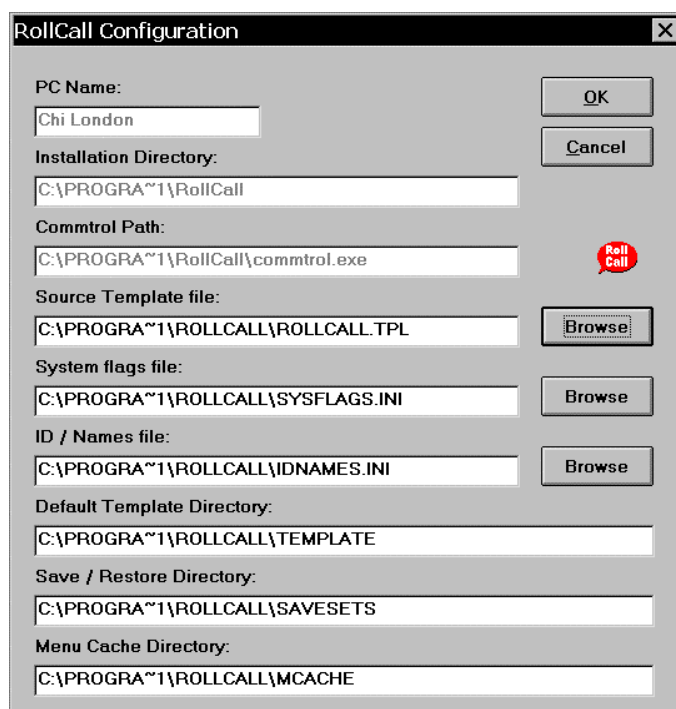


Changing Fonts


The control screens use the two fonts set up by these options. Select "Configuration->System Options->Change Fonts" from the menu, or from the toolbar choose .

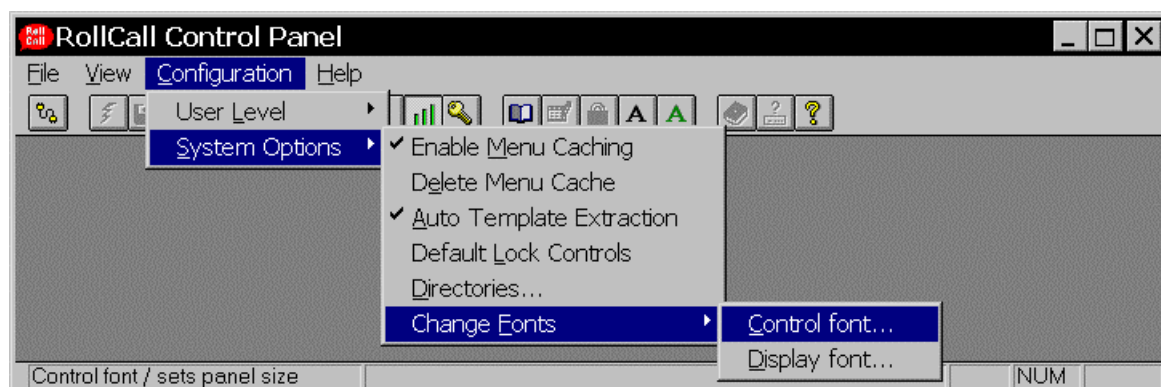

The *Display font* is used for the “Information” display in the control screen. This should always be set to a fixed-width font.

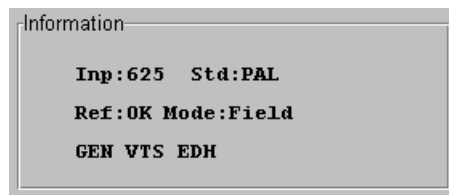


All other parts of the control screen use the *Control font*. This is also used to scale the control screens. Any font available in the system can be selected from the dialog shown below.

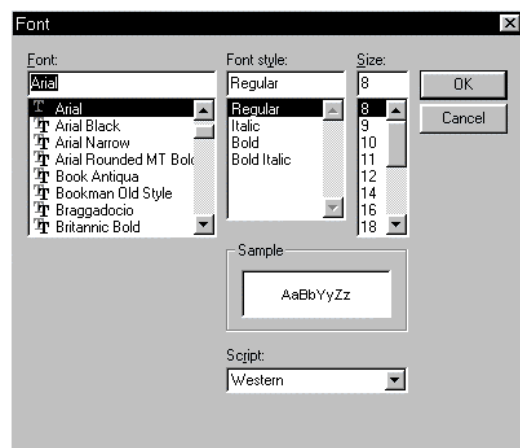


Saving the current state of a unit (manual mode).

Each unit provides save and restore information in its template file. The information describes the sequence in which the controls are to be actioned. If the “Save” and “Restore” options are disabled, then contact Snell & Wilcox for updated template files.

Select “File->Save Set-up” from the menu, or from the toolbar choose .

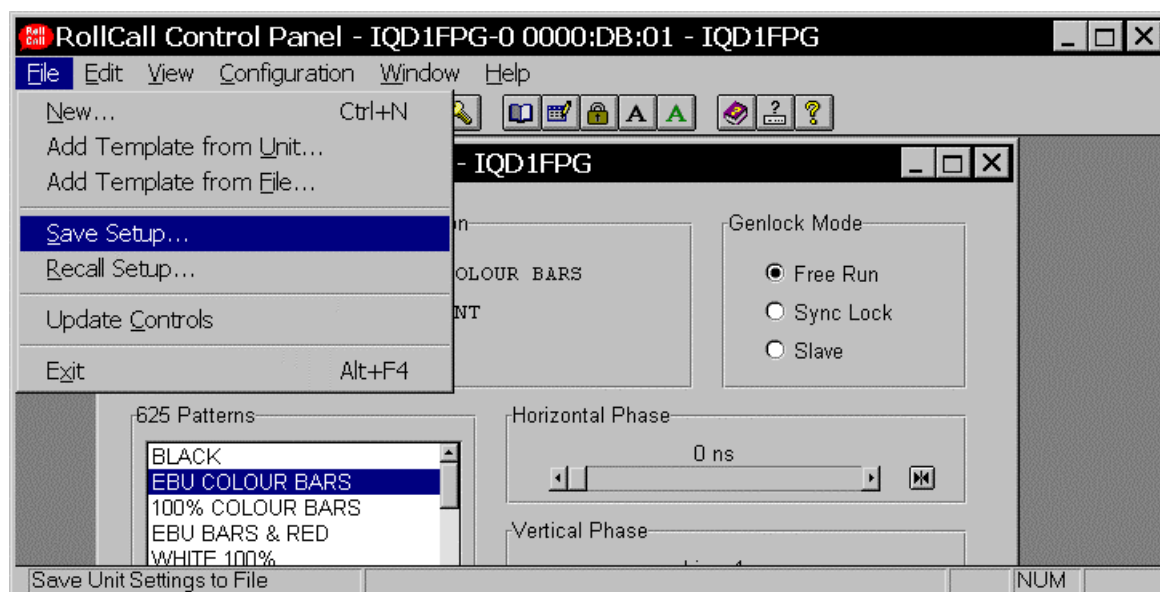

A dialog box for save set-up will appear. The default filename is the address of the unit to save. Select "OK" to save.

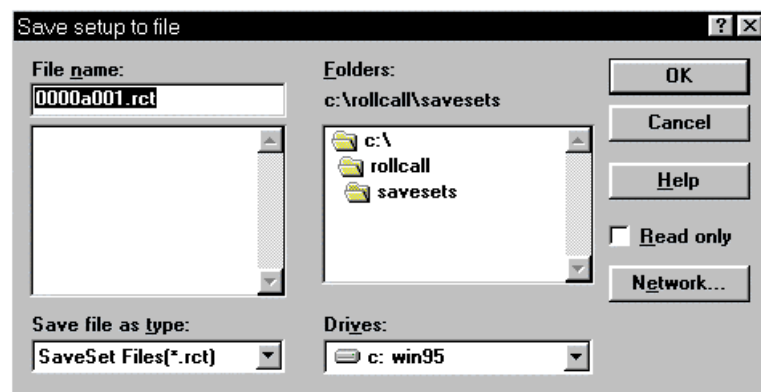

Automatic Saveset Manager

The Saveset Manager enables automated backup of the settings for different levels of the RollCall network - units, chassis, subnets and entire networks. This enables the user to make a complete automated backup of an entire system configuration if desired.

Backups are capable of being restored to older or newer versions of the same product, however they cannot be restored to a different product type than that from which the saveset was created for safety reasons.


Select "Configuration->System Options->Saveset Manager..." to access the Saveset Manager.

Backup of selected units

To backup a selected units, click in the network browse button 

Select the unit from the network list and click 'OK' followed by the 'Add' button. Repeat this process to backup multiple individual units. When the list of units is complete, press the 'Save' button. The Saveset Manager will now connect to the units in sequence and save the configurations to the '\RollCall\Savesets' folder.

On completion of the operation, the saveset Manager window will give an overview of each operation. Any units whose configuration has not been successfully saved will be flagged with the reason for the failure.

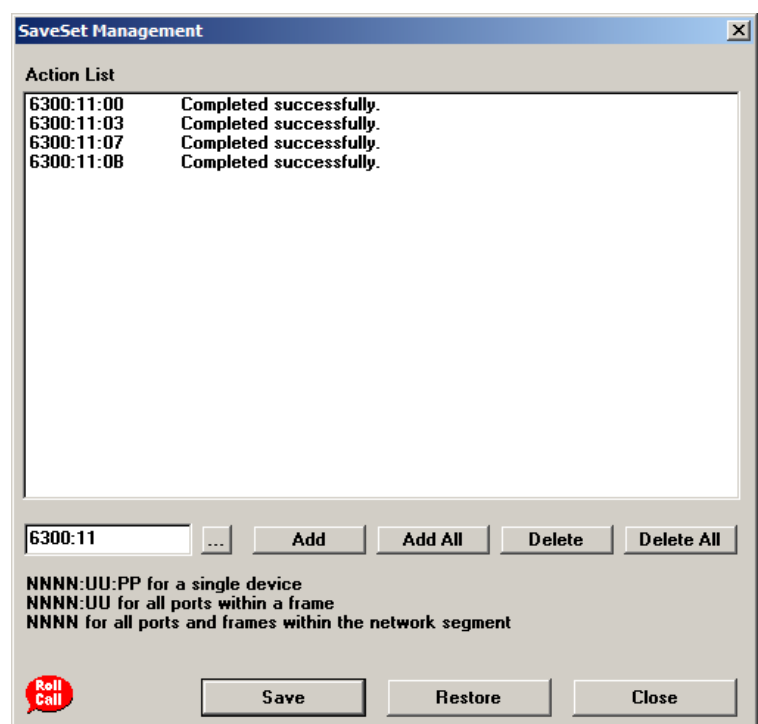


Backup a chassis and its contents

Click the network browse button and highlight the chassis in the network view.

Click 'OK', then edit the RollCall address in the Saveset Management window and remove the port part of the address as per the following screenshot.

Press the 'Add' button and RollCall will add the Chassis and all units inside the chassis to the saveset list. Repeat to add other Chassis then press the 'Save' button to backup all the units.

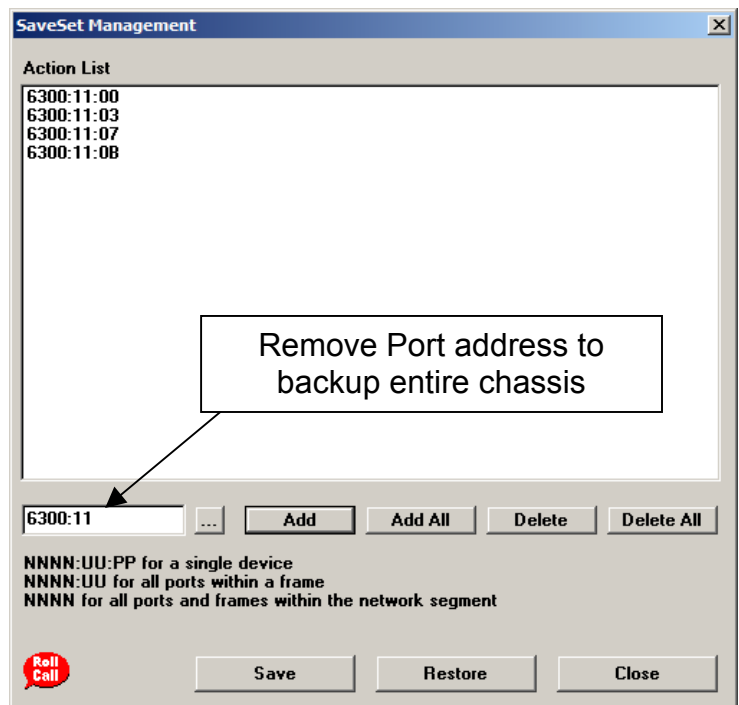

Backup an entire network segment


Enter the network address in the saveset Manager address view, E.g.: 6300 and press 'Add'. This will add all units within the RollCall subnet of 6300.

Click 'Save' to backup the entire network segment.


Note: Large networks may take a considerable amount of time to backup. The RollCall Control Panel will not be available for normal control duty during Backup operation.

Restoring a set-up from file

If enabled, select "File->Recall Set-up" from the menu, or from the toolbar choose .

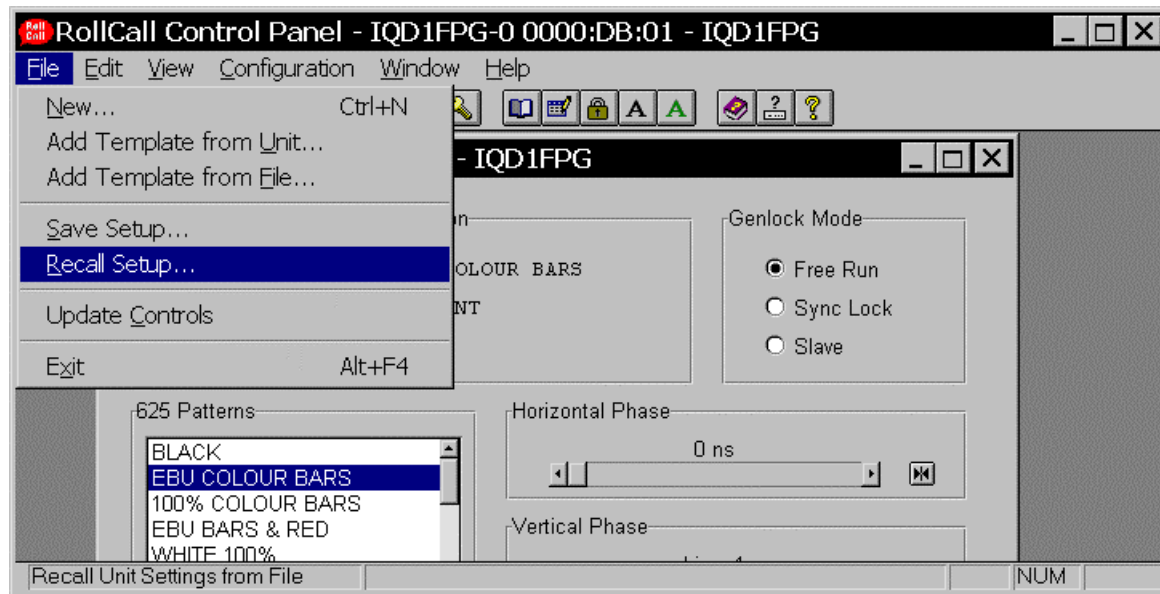


Select from the dialog box the RCT file to load. Select “OK” to restore settings. The RCT file will only load into a unit of the correct type.

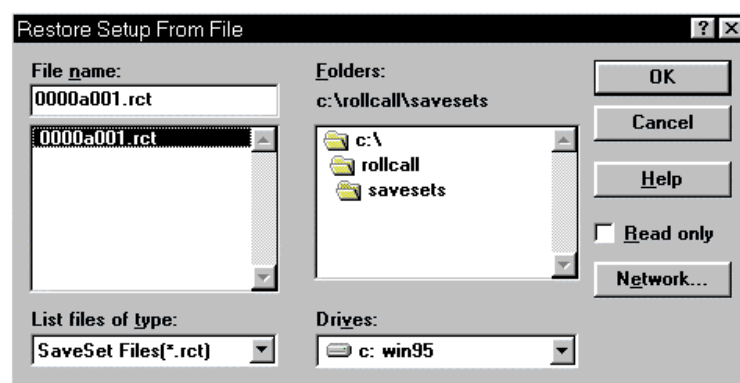


Access Control

Every unit can be set up so that depending on the user access level, the control screen may be controllable or read-only. This option is available when a unit is connected and at “Supervisor” access level. Select “Configuration->Unit Options->Access Control” from the menu, or from the toolbar choose .

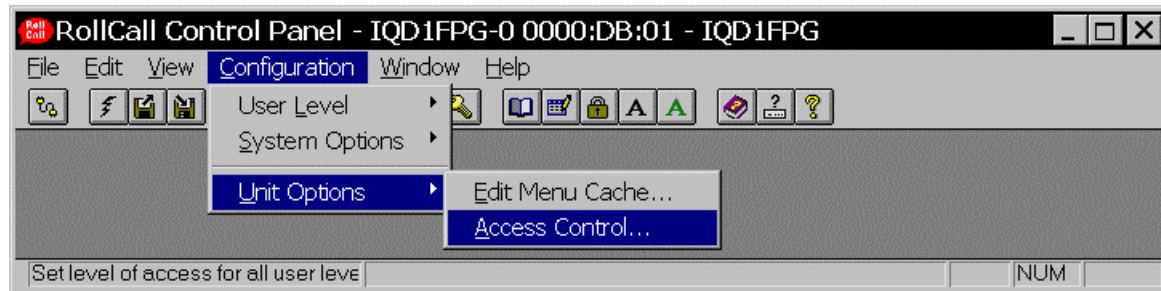

A selection box will appear allowing mode settings for each level. If the “Use default” setting is selected, then the mode is set by the “Configuration->System Options->Default Lock Controls” state.

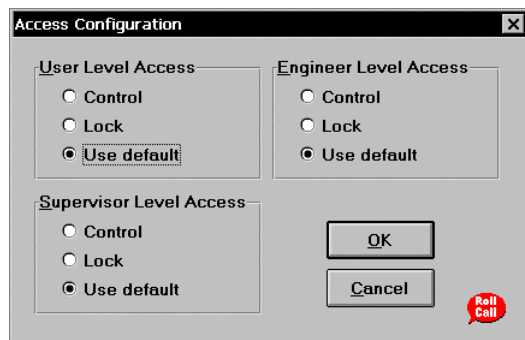


Editing Menu Cache


This is an advanced feature and is not recommended for general use. For units with caching information, there is no need to edit the menu cache manually. All cacheable items will already be set. In older units, menu-caching information is NOT available and hence the user can not take advantage of the menu-caching scheme available in RollCall. The menu cache editor enables the user to manually mark menu items as being cacheable. This requires knowledge that the items selected are indeed cacheable and will not affect the correct operation of the unit.

For example, if a unit uploads a test pattern menu item dependent on its current standard, then it may send up “EBU Bars” when in PAL and “SMPTE Bars” when in NTSC. These items usually occupy the same command number and position in the menu list, and hence CAN NOT be marked as being cacheable because the cache stored will only contain one of these items (which ever was uploaded first to create the cache), and will be used for control. If the cache was create when the unit was in PAL, and then the item marked as cacheable, the control screen will always display “EBU Bars” regardless of the actual state of the unit.

This option is only available when a unit is connected at “Supervisor” access level.

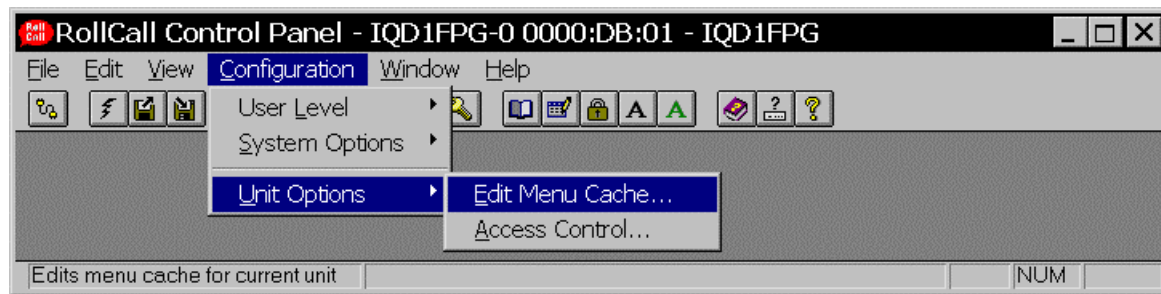


The box shows the complete menu list uploaded from the unit. Each line takes the form: {Menu/Partial} {Menu Index} {Descriptive text} {Command number} {Menu Style} {Minimum value} {Maximum value} {Step size} {Divisor} {Parameter string}

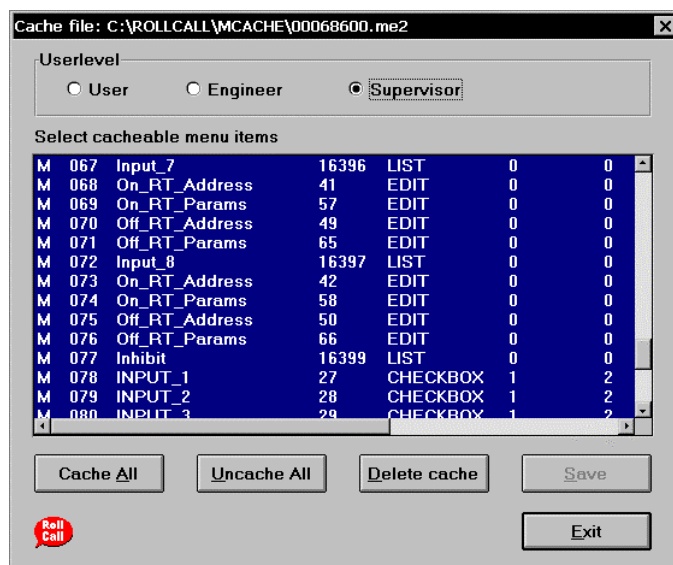

For more information about which items are cacheable, contact Snell & Wilcox.

Updating the control display


Generally the control display for a unit reflects the actual status of the machine and its state is kept in real time. A manual re-refresh option is available by selecting “File->Update Controls” from the menu, or from the toolbar choose .

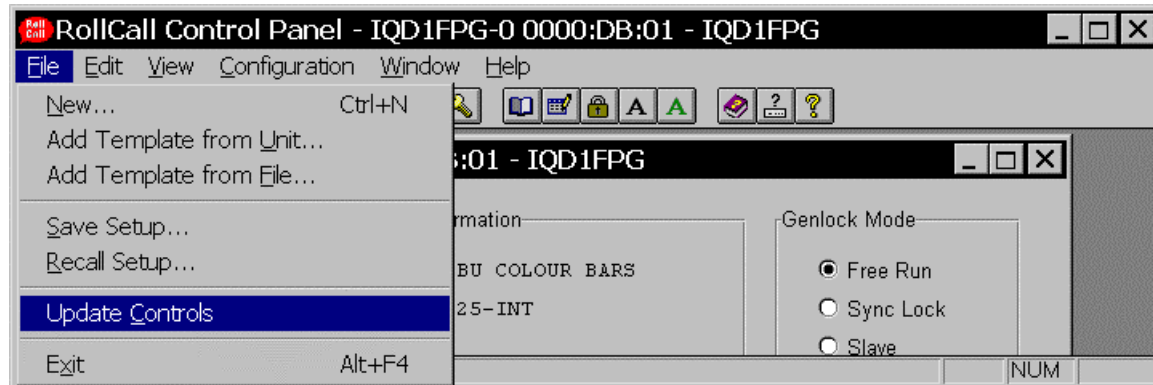

Unit Documentation



Product documentation* for a specific unit may be viewed quickly via the “Help->Unit Documentation” menu, or from the toolbar choosing . This may provide the operations manual or other documentation for the unit. An Adobe Acrobat Compatible Viewer must be installed to view this information.

* The web download version of RollCall Control Panel will download the product manuals from the Internet, therefore internet access must be available for this function to operate. RollCall Middleware Services (CD version) comes supplied with all manuals for the IQ product range. These are copied locally during installation and does not require internet access for this feature to work.

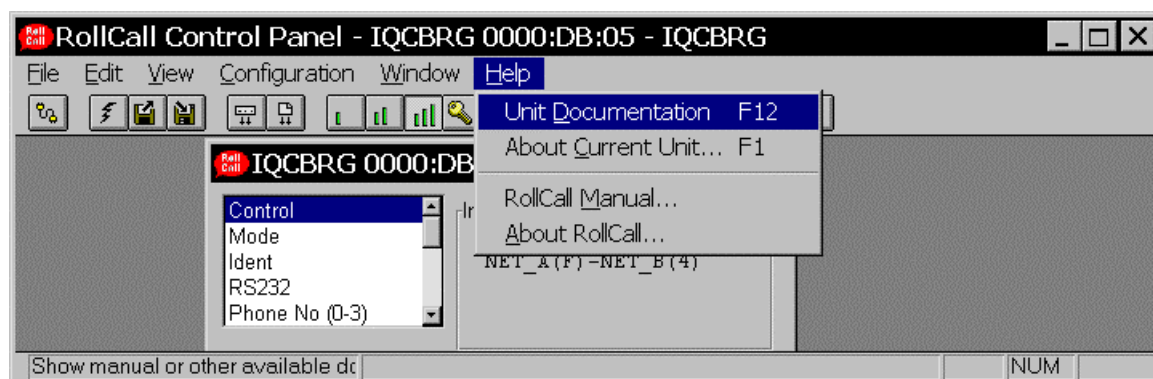


About Current Unit

Select this menu, or from the toolbar choose  to display the “About” box for the currently active unit. It displays general information about the unit.

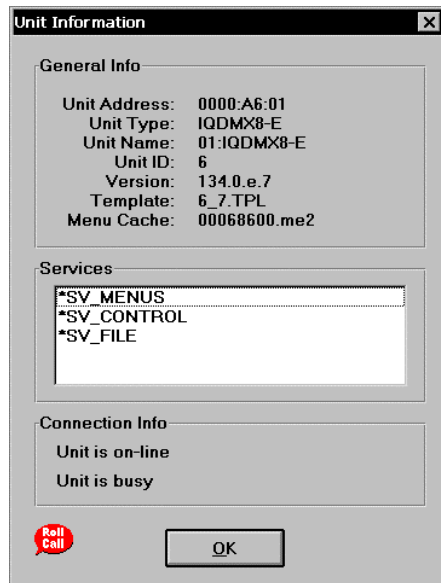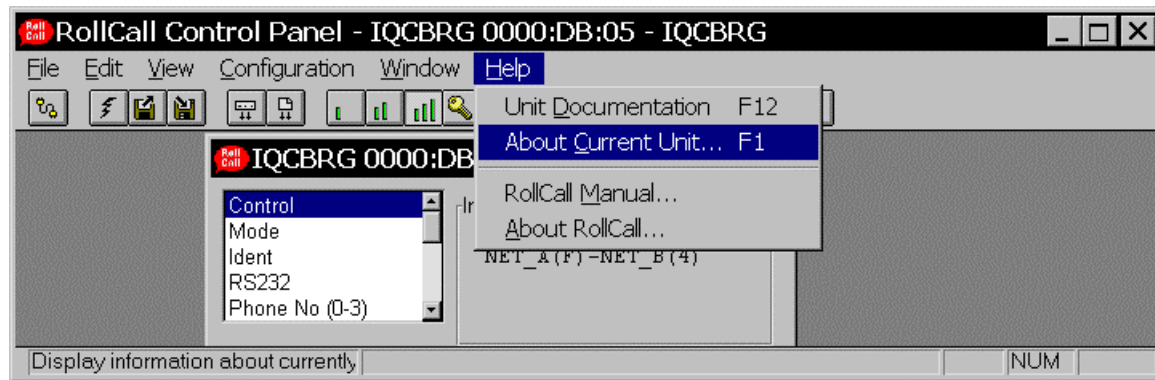


RollCall User Manual

The user manual for Rollcall (This document) can be accessed by the “Help->RollCall Manual...” menu. The manual is normally in the Acrobat PDF format and requires an Acrobat compatible viewer to be installed to view this document.

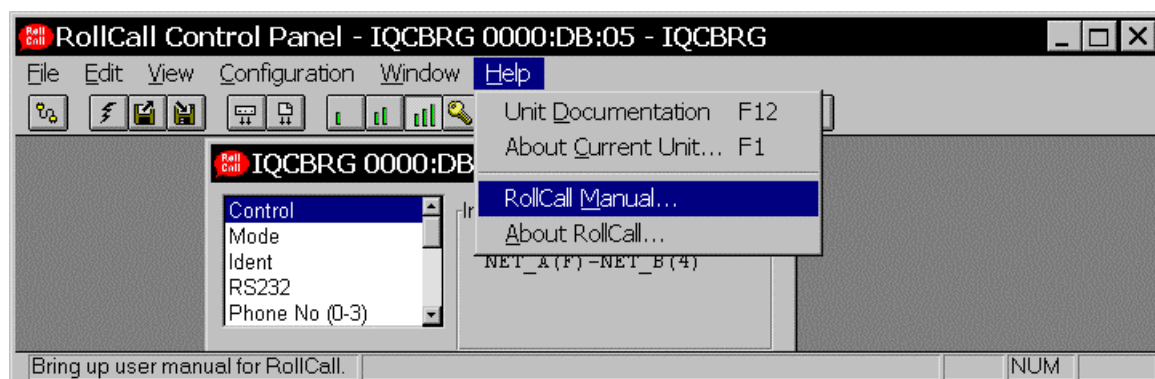


General Options


There are several menu options that are part of the standard Microsoft Windows menu layout. These include the Edit menu when editing text field controls.

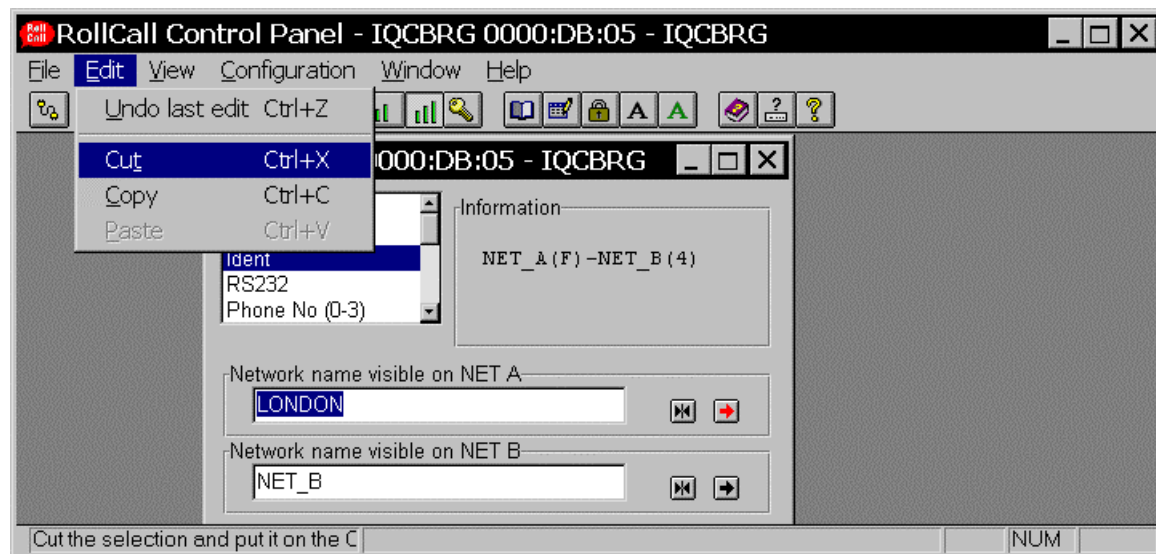


The Toolbar and Status Bar can be made visible or hidden.

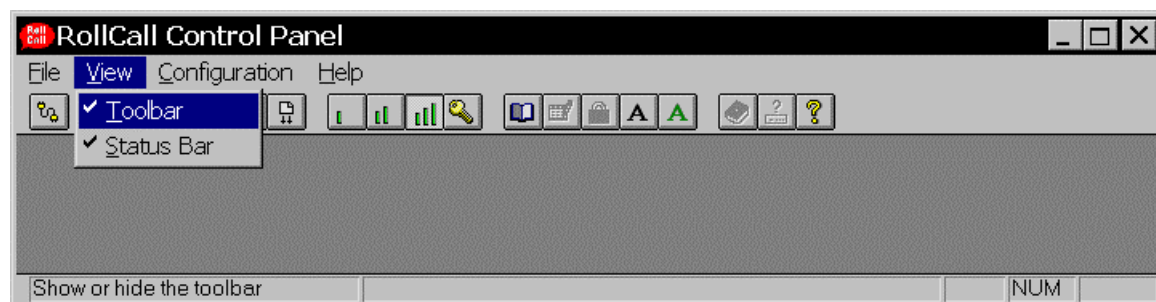

The control screens form separate windows that can be placed and moved to default positions just like any other standard Windows program.

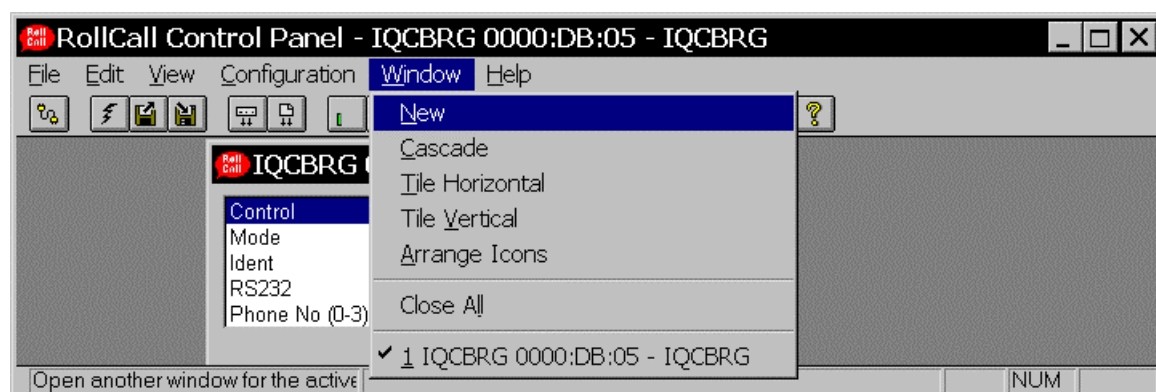

The “About RollCall” menu displays the version of the program.

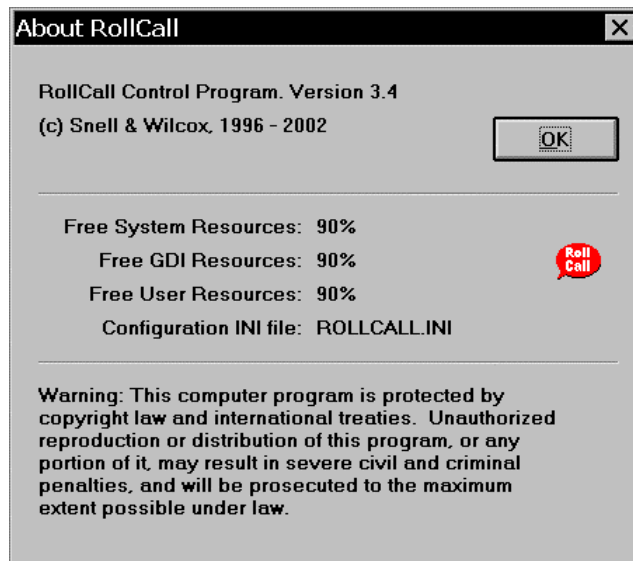

RollCall Command Line Parameters

RollCall.exe can start with several options from the command line. These command lines are very useful should access to RollCall Control be required from other vendor software programs.

ROLLCALL.EXE [-U nnnn:uu:pp] [-M nnnn:uu:pp] [-I ID:Mj:Mn:Al:Cs] [-I ID]
[-K Section_Label] [-L Userlevel] [-R Saveset_filename] [-S Value,Mask]

-U nnnn:uu:pp

Start and bring up the control panel for unit address nnnn:uu:pp. E.g. -U 0000:35:01.

-M nnnn:uu:pp

Start and bring up the documentation files for unit nnnn:uu:pp if it exists on the network.
E.g. -M 0000:35:01.

-I ID:Mj:Mn:Al:Cs

Start and bring up the documentation files for unit ID and software version
Mj(major):Mn(minor):Al(Alpha):Cs(Cmdset). This is used to uniquely identify documentation
for different versions of the same unit ID. E.g. -I 19:5:2:_:6. Please note that for units that
do not have an alpha version, the underscore ('_') character should be used.

-I ID

Start and bring up the documentation files for unit ID regardless of software version.
E.g. -I 19.

-K Section_label

The section label text is used in place of the %2 parameter in the "Application" key of the
Manuals.ini file. This allows context sensitive display of documentation if the viewer
supports a second command line parameter.

-L Userlevel

Start RollCall with the userlevel set to 0(USER), 1 (ENGINEER) or 2 (SUPERVISOR).
E.g. -L 2

-R Saveset_filename

This command is used in conjunction with the -U flag. After the unit has been connected
successfully, it will restore the unit using the file specified by Saveset_filename.
E.g. -U 0000:10:05 -R C:\Rollcall\Savesets\00001005.RCT

-S Value,Mask

This is an advanced flag. It can be used to override the default system flag settings from
SYSFLAGS.INI.

Windows shortcuts to specific units

The following steps show how to set-up a shortcut link to a specific unit.

- Find the absolute network route/address of the unit you are interested in. (This is shown in the network listing dialogue box when you select a unit.)
- Copy the RollCall Control Panel shortcut from the Start menu: Right click on the Start button and choose *Explore* or *Explore All Users*, then browse Programs/RollCall. Copy and paste the "RollCall Control Panel" icon to the desktop or desired folder.
- Add "/u " followed by the full address to the shortcut path: Right click on the new shortcut and choose *Properties*. Open the "Shortcut" tab of the dialogue box. By default, the *Target* should be set to "C:\Program Files\RollCall\RollCall.exe". Append the string "/u " followed by the full address. For example, to connect to the module in slot 3 of the IQ rack at address 20 on the local network, the target would read "C:\Program Files\RollCall\RollCall.exe /u 0000:20:03".


ROLLCALL LOG SERVER (ROLLLOG.EXE)

This program presents itself as a logging server to the rest of the network. The Log Server name is the name configured by COMMTROL under “File->Unit_Name”. RollLog performs two basic functions. The first is that it will poll configured units to establish their status (presence). Secondly, it collates all log messages from any device on the network. In order for units to generate log messages, their options must be enabled first. (See the “Additional Logging Information” section for more details).


In normal operation, RollLog can be minimised and left to run in the background. Once configured, it does not require any user interaction.

Setting the Current Status File

The current status file contains information about units that are in the polling list. The information includes whether the unit is present or not, and any other messages that the unit may have generated. To set the current status file name, select “Configuration->Current Status File” from the menu.

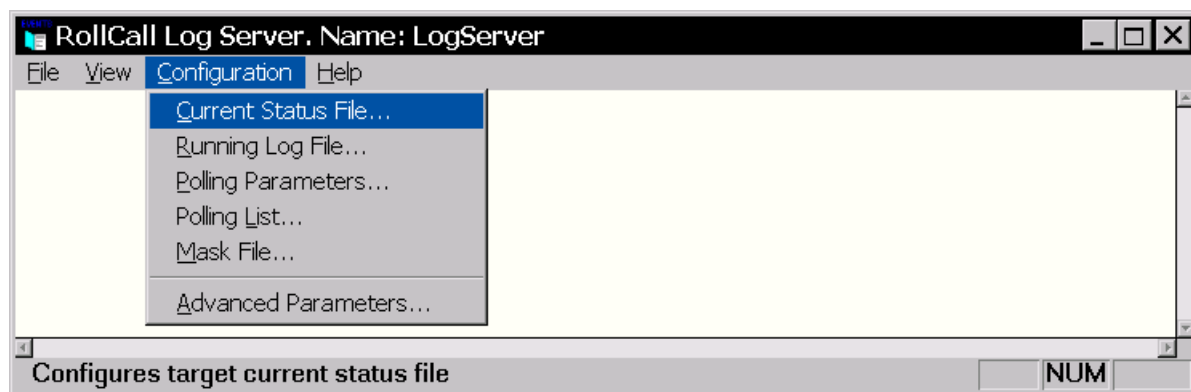

Select a filename for the status file. The default name is CURSTAT.TXT in the RollCall installation directory. The update interval defines how often the file is updated even if no changes are detected. The change of the time/date stamp on the status file indicates to the ROLLVIEW program that a log server is running. To allow viewing by multiple networked PC's, the file should be placed in a shared drive visible to all viewers. The file contains entries for each unit assigned in the polling list, and for each unit that can send up messages.

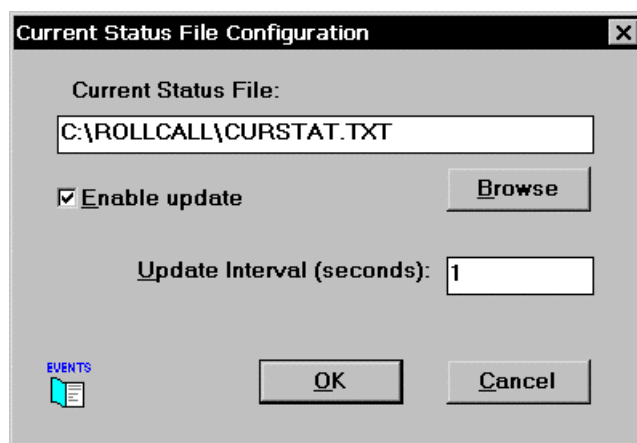

On file systems that attempt to keep deleted files, it is recommended that this option is disabled for the current status file, since it is frequently deleted and re-written. For example, if the path is N:\ROLLLOG\CURSTAT.TXT then, under NetWare 3 or later, issue the command:

```
flagdir n:\rolllog purge
```


or under Win NT with Norton UnErase, choose Properties, Norton Protection, Exclusions, and add:

```
n:\rolllog\*.txt.
```


For systems that solely use the IP interface for connection to RollLog, (e.g. RollMap), the writing of the status file is unnecessary and can be disabled for better efficiency.

Setting the Running Log File.

Select "Configuration->Running log file" from the menu.

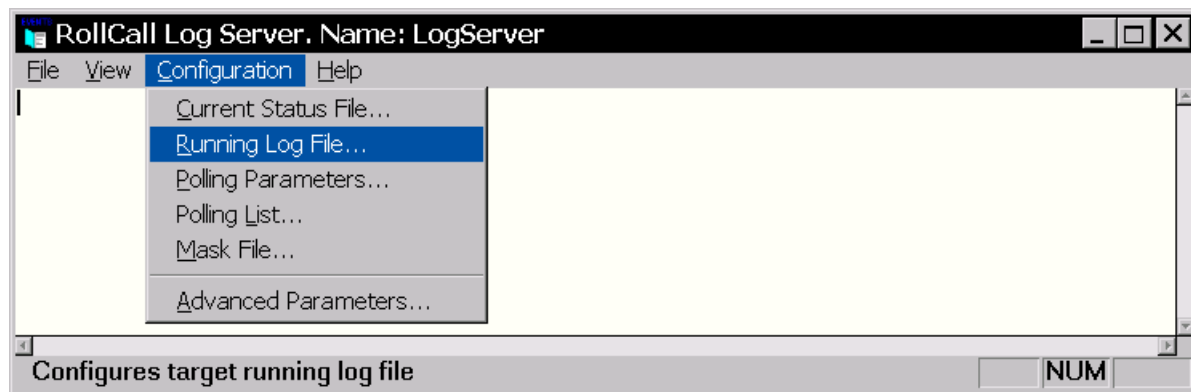

The running log file contains a history of all log messages that RollLog receives and generates. All messages are appended to this file if enabled. The log file name can be set manually or automatically generated based on PC time and date.

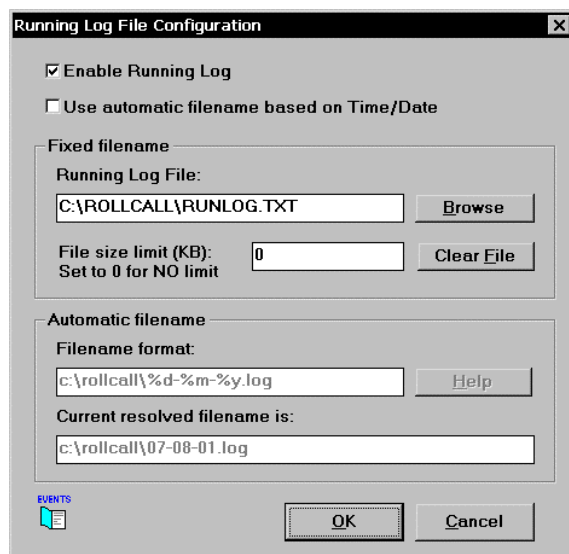

Fixed log file name

All messages are appended to this single file. The file can be deleted by pressing the "Clear File" button. Since this file increases in size as more messages are appended, a limit of the file size can be set. When the size limit is reached, the file will be renamed with the extension .BAK, (over-writing any previous file), and a new log file created.

Automatic file name based on time and date

The file name and path can be made up of PC time and date macros that are generated at run time. This is particularly useful in organising the log files into time and date structured directories or files. The user must manage these files themselves since no backup, delete, or size restriction facility is provided by RollCall.

The following are a list of the available macro substitutions. The "Help" button displays a similar list to the one below.


%a	Abbreviated weekday name (3 characters, e.g. Mon)
%b	Abbreviated month name (3 characters, e.g. Jan)
%d	Day of the month as a decimal number (01-31)
%H	Hour in 24-hour format (00-23)
%I	Hour in 12-hour format (01-12)
%j	Day of the year as a decimal number (001-366)
%m	Month as a decimal number (01-12)
%M	Minute as a decimal number (00-59)
%p	Current locale's AM/PM indicator for a 12-hour clock
%S	Second as a decimal number (00-59)
%U	Week of the year as a decimal number, with Sunday as the first day of the week (00-51)
%w	Weekday as a decimal number (0-6; Sunday is 0)
%W	Week of the year as a decimal number, with Monday as the first day of the week (00-51)
%y	Year without the century as a decimal number (00-99)
%Y	Year with the century as a decimal number
%%	As single % sign.

Please note that RollLog will only create the log file itself. It does NOT attempt to create the path (directories) if it does not exist. If the path contains macro substitutions, then the user must ensure all possible paths exist first.


NOTE: The current version of RollLog is limited to short file names and cannot use names that exceed the standard 8.3 character format.

Setting Polling parameters

Select “Configuration->Polling parameters” from the menu.

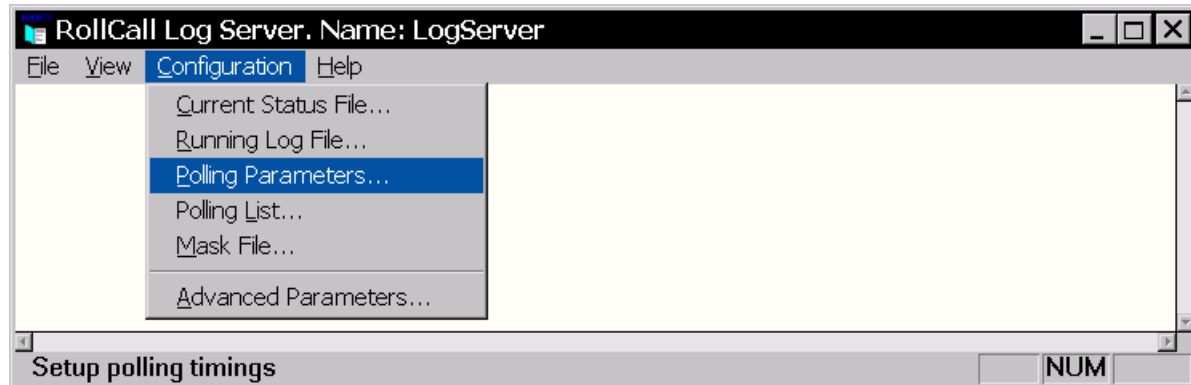


The polling of units can be optimised by setting these parameters. The “Unit life count” parameter defines the number of timeouts that have to occur before the log server flags the unit as being “Unit Lost”. The “Unit poll rate” parameter defines the minimum time interval between each polling request.

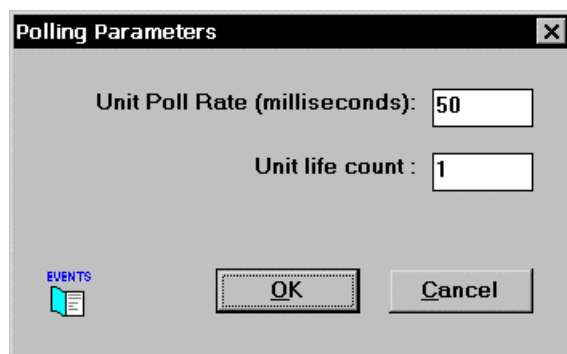


Setting the polling list


Select “Configuration->Polling List” from the menu.

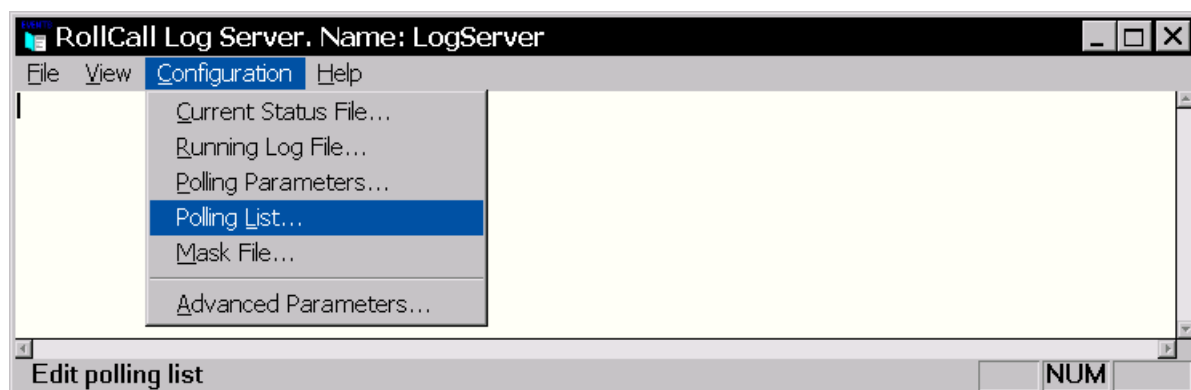

This dialog box allows the user to set up units that are to be monitored. The absolute address of the unit can be entered in the “Item Address” field. Select “Add item” to add the unit into the polling list. RollLog can be set up to poll many units and the ROLLVIEW32 & RollMap applications can be set up to view the whole or subsets of this list.

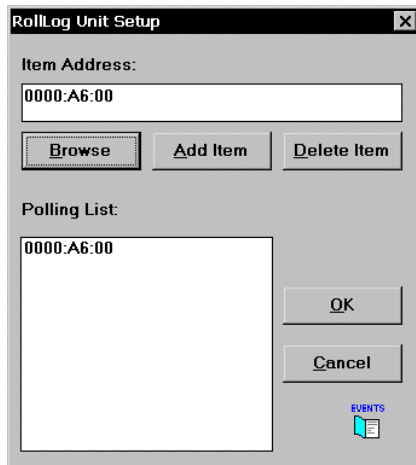

The browse button enables the user to select the address of a unit on the current network.

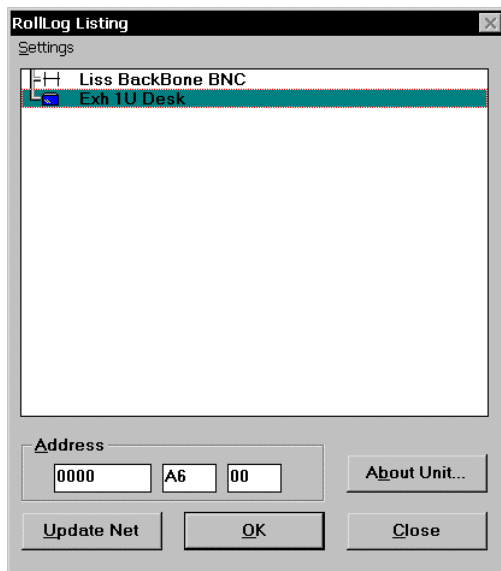


When used with IQ Module gateway software version 5.10 or later, it is recommend that the polling list contains only gateways (port 00), but *not* the IQ modules themselves. The gateway polls for presence of modules in the rack automatically.


Note: System HD Modular gateways do not poll the modules automatically and therefore the individual module addresses must be added to the polling list.

Setting the Mask file


Select “Configuration->Mask file” from the menu.

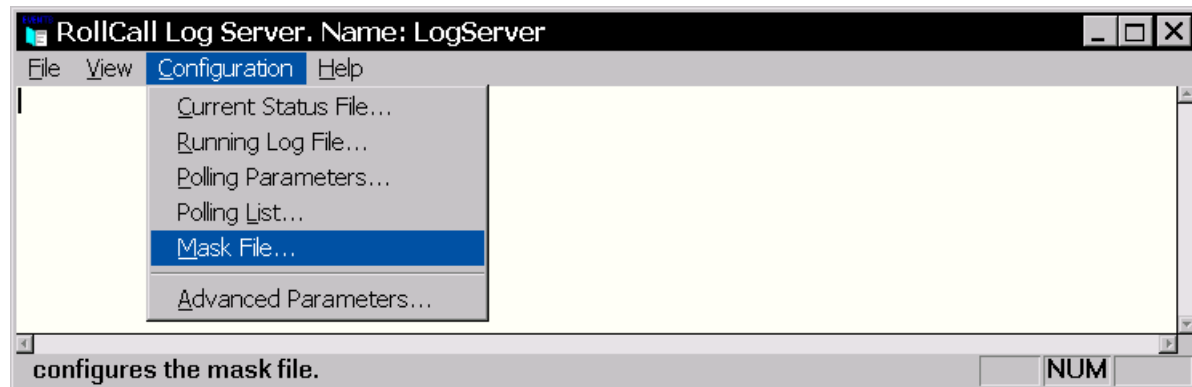

This option sets up the centralised mask file used by RollLog. Log client programs such as RollMap support this feature.

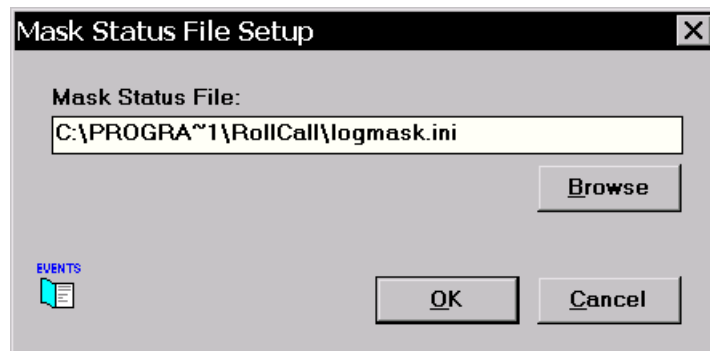

Advanced Parameters

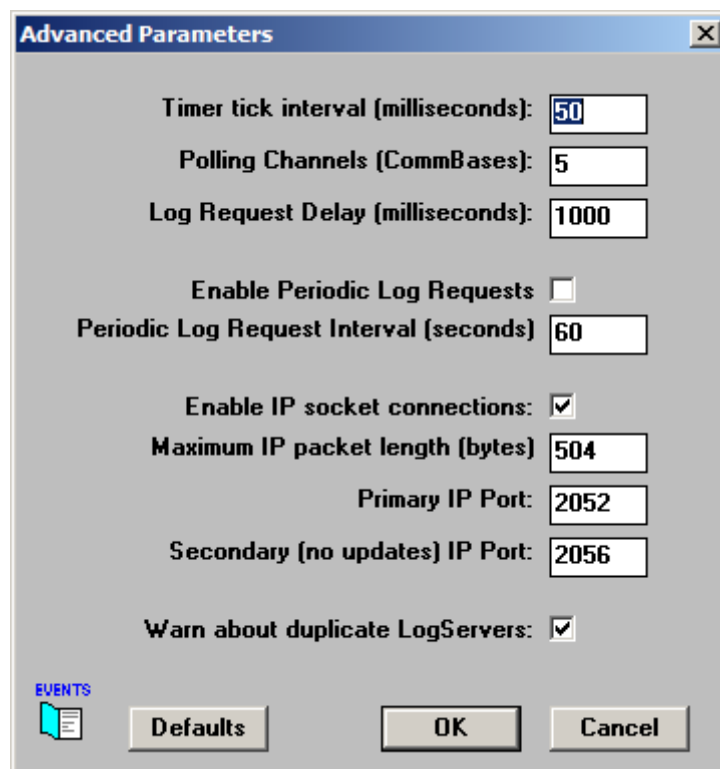

For most systems, it is recommended that these parameters are left at their default values.

The Timer Tick Interval defines how often the log server will send a polling packet.

The number of Polling Channels defines how many poll transactions can be outstanding at any time.

The Log Request Delay defines the period between sending the Log Request packets at start-up.

Periodic Log Requests guarantee reliable logging with older units in the field that do not log reliably under all conditions. Every n seconds, the log data will be refreshed from a unit in turn. Refresh will only occur to units or modules that are a) in the polling list, and b) marked in the SysFlags database as requiring refresh.

Enabling IP socket connections allow viewer applications such as RollMap to connect directly to RollLog without the need to use the current status file.

The maximum IP packet length should be set to 504 bytes.


The server IP port can be changed. The default is 2052.

The secondary IP port is used for applications that need to listen to the IP log data stream but have no need to modify the data. The port is used by RollSNMP and by other vendor applications that wish to monitor events within the RollCall Network.


If “Warn about duplicate LogServers” is enabled, RollLog will display messages about other Log server applications that are present in the system. This can be useful in diagnosing or configuring a system.

View IP Connection List

If “IP socket connections” are enabled in the “Advance Parameters” box, then the list of connected IP clients can be viewed under “View->IP Connection List” menu.

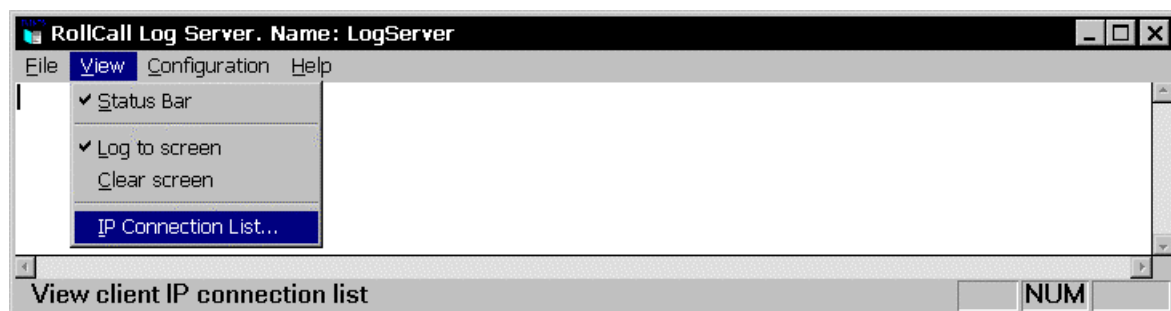


Connections in the list can be terminated if required.

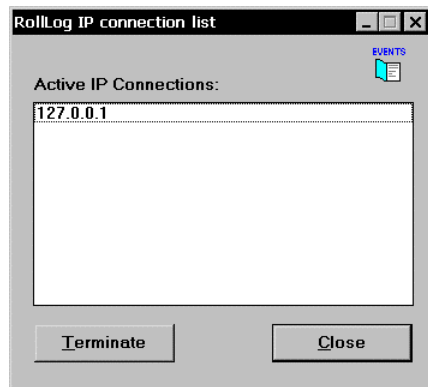

Terminating connections has no adverse effect on the client and it is free to establish a new session.

General Options

The status bar can be made visible or hidden by selecting "View->Status bar". The status bar is used for displaying hints and descriptions of options.

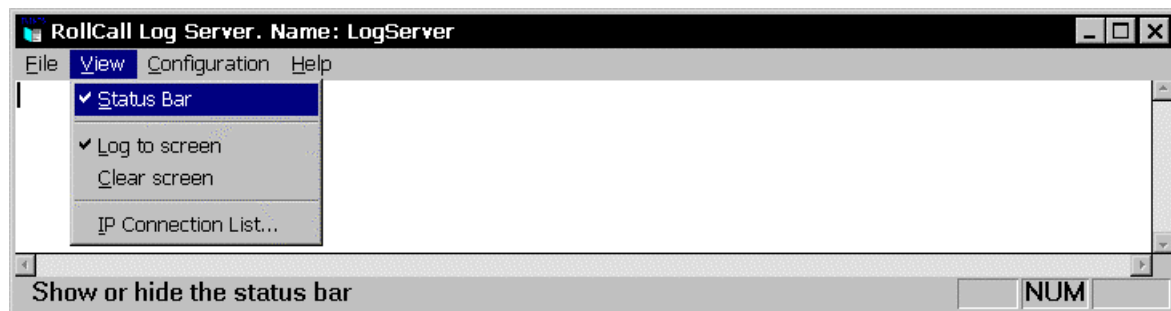

For configuration monitoring, the log server can display incoming log messages on the PC screen. ("View->Log To Screen"). However, for best performance, this item should be turned off for normal operation.

Restart Polling

If required, a total restart of the log server can be initiated by the "File->Restart Polling" menu item. This will request the status all log fields from all polled units and update all clients with the new information.

Enable Polling

This option should be enabled in normal operation to detect the presence of units in the polling list. If this option is disabled, RollLog will not detect the removal or power down of units from the network.

About RollLog

The "About RollLog" menu displays the version of the application and the copyright notice.

ROLLCALL LOG VIEWER (ROLLVIEW32.EXE)

This is the LogViewer program for displaying messages in a current status file generated by ROLLLOG.EXE. Special key words can be set up to indicate errors by changing its colour from green to yellow or red. The display list can be a subset of the units listed RollLog polling set-up. This allows the possibility of partial viewing on different PC's from a single LogServer if required.

ROLLVIEW32 is capable of generating alarms as follows:

- On screen colour change
- Audio Alarm (.WAV playback)
- Email via SMTP server
- SNMP (requires SNMP for Windows Services to be installed)
- GPI via Rolltrack to IQCGPI I/O card
- Other Windows program execution such as SMS messaging and Pager notification*

These alarms are configured globally for the three possible states:


GREEN OK
 YELLOW Minor Issue
 RED Critical Issue

Should better separation of alarm conditions be required, please purchase RollMap. This application enables alarming to be configured at an individual function level.

* These functions require third party tools capable of being driven from a command line to Operate.


Establishing connection to a LogServer

Select "Configuration->LogServer Connection" from the menu.

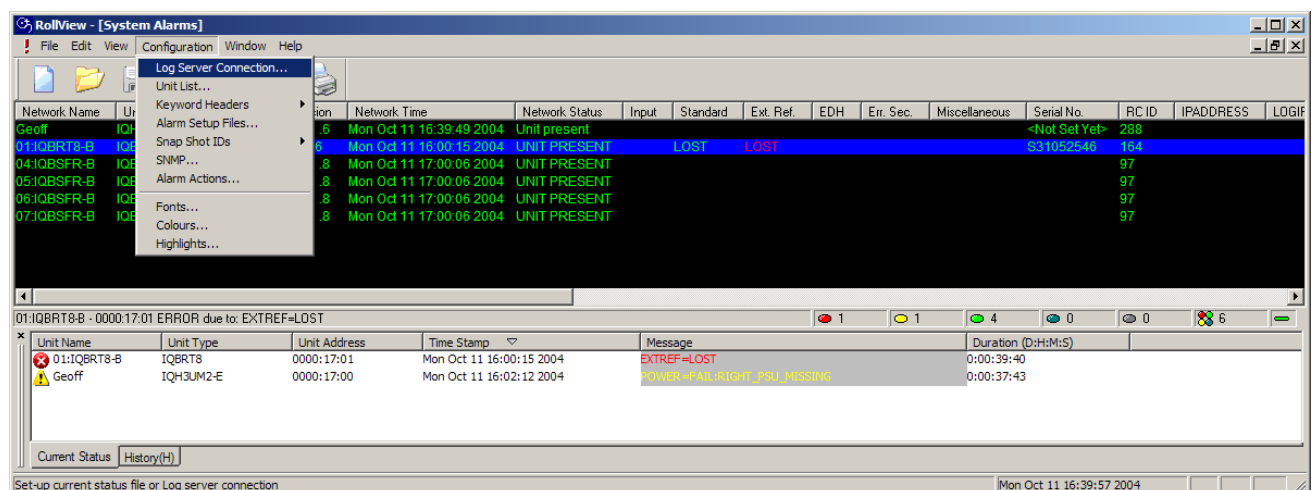

Tick the 'Use TCP/IP Log Server' checkbox and enter the IP address of the LogServer in the 'Log Server IP Address' field. If any previous addresses have been entered, these will be available in the list box.


If the the LogServer is running on the same PC as the Log Viewer, then a loopback IP Address of 127.0.0.1 or hostname of 'localhost' can be used.

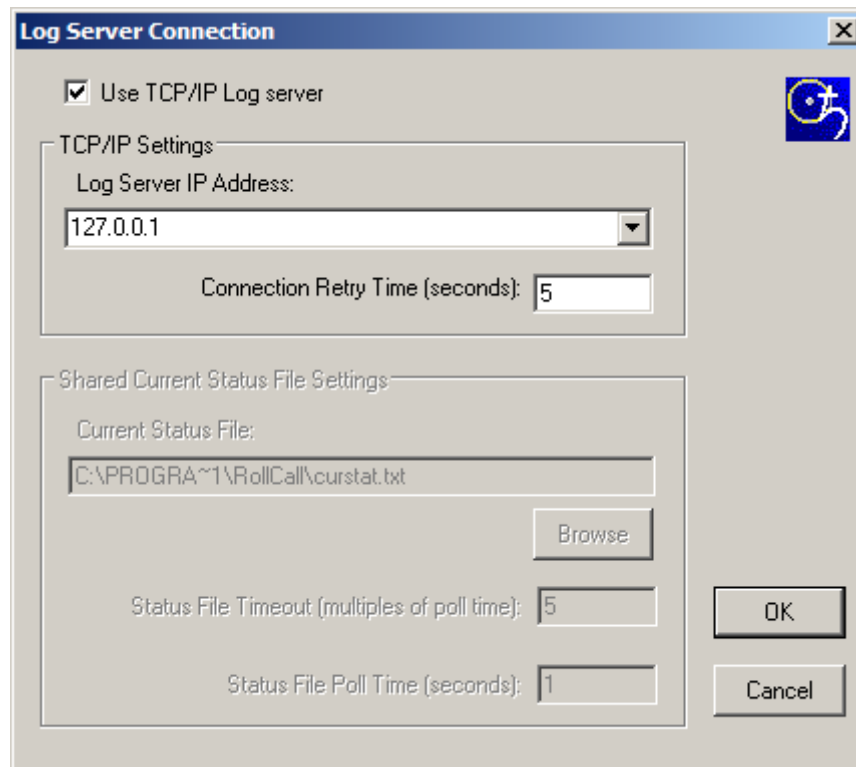

Leave the Connection retry time @ 5 seconds unless instructed to change this value by Snell & Wilcox support.

Setting the Display List

The ROLLVIEW32 program can be set up so that it displays only units that the user is interested in. Select "Configuration->Unit List" from the menu.

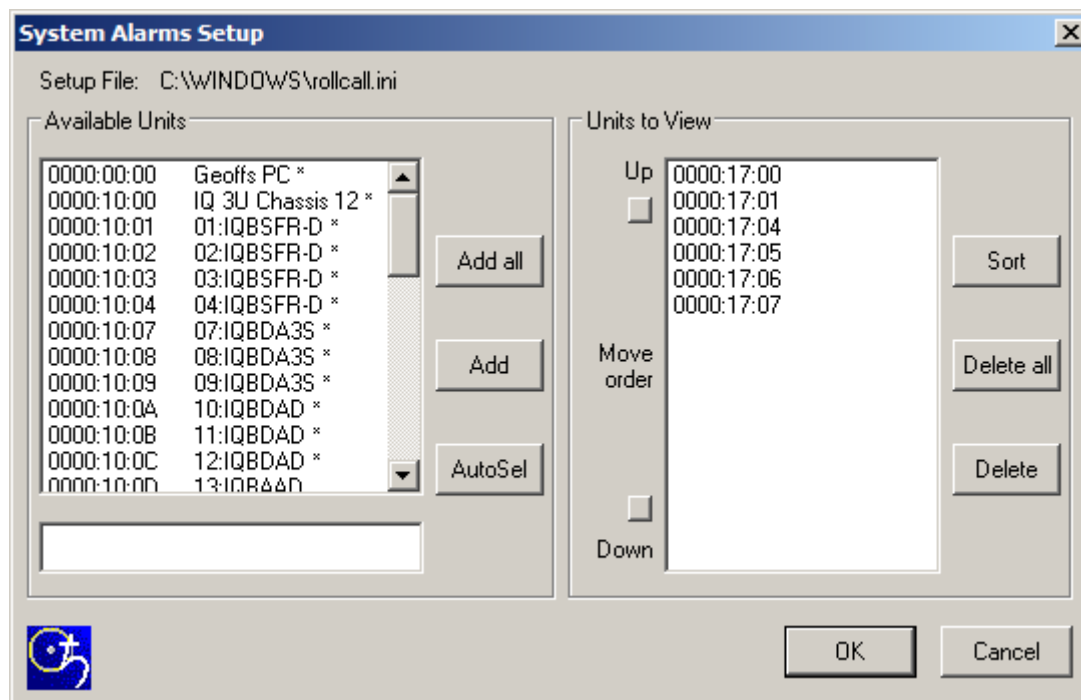


The absolute address of each unit must be added to the “Units to View” list. The addresses that appear in the current status file are displayed on the left. The user can select all or a sub-set of addresses available. The “AutoSel” button selects those items currently present on the network. The “Add” button adds all the selected items. To delete an item, select the item in the “Units to View” list and select the “Delete Item” button.

Only units that are present in the “Units to View” list are displayed by ROLLVIEW. The display order is set by the list order, which can be changed by pressing “Sort”, (sorts alphabetically by address), or by using the “Up” and “Down” buttons to move individual units.

Setting up the Column Headers

Once the units are being monitored, headers must be created to display the data. To automatically create all the headers for the information in your unit list, select the “Configuration->Keyword Headers->Create All Headers” option.

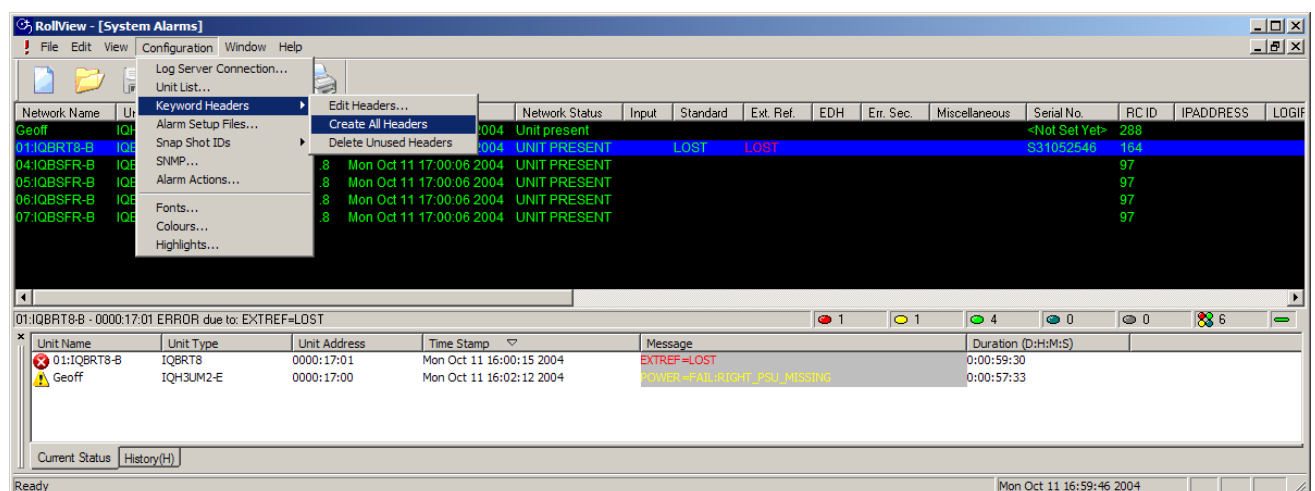

Once the headers have been created, they can then be edited to enable changes in Unit State to generate alarm conditions. The rules in these headers dictate the severity of an error in the system.

Editing Headers

To modify the rules or headers, right mouse click on the title bar for a header, e.g.: INPUT. The following dialog box is then displayed:

Headings

Setup File: rollcall.ini

Column Selection: 6

Column Number: 6

Header keyword: INPUT Browse

Display Title: Input

Good keyword(s): (Green State)

Warning keyword(s): (Yellow State)

Failure keyword(s): LOST* (Red State)

Default State: Good (Green)

Exclude keyword(s):

☒ Enable SNMP trap on change
☐ Show only on warning or failure
☐ Number range

|Error| |Warning| |Good| |Warning| |Error|

0 0 0 0 0

New Delete OK Cancel

Each column is listed by its position order. The first column from the left-hand side starts at position 0.

The display line for the unit can be made to change colour depending on the words matched in the “Warning Keyword” and “Failure Keyword” fields. The “Warnings” field generates a “Yellow” condition and the “Failure” field generates a “Red” condition. The “Exclude Keyword” field removes the assigned words from the column and hence will not appear in any state. Multiple word match can be separated with the “;” (semi-colon) character and wild card matching can be assigned using the “*” (asterisk) character.

For example, to add a second keyword of “FAIL” to the above example, the Failure keyword dialog box would be “LOST*;FAIL*”.

If no columns generate a “warning” or failure” condition, then the display line is shown in green.

If the check box “Show only on warning/failure” is selected, the column will be shown empty when in the good, (green), state.


Overriding Headers

Occasionally in a system there will be units which are in an alarm condition and they will remain that way. Unused inputs or units that are not yet in service are a usual cause. In It is desirable to remove these alarms from the system to maximise the effectiveness of the overall alarm monitoring. If the units are not yet in service, then masking the units (See section on Masking Units) order to remove these alarms from the systems.


For units that are in service but have an alarm condition that is not a true alarm in the system, it is possible to over ride the keywords which are detecting an error for individual units.

For example: a 2 way changeover switch which was no second input will create an INPUT alarm. However, the system has been designed such that the second input is currently not connected. We do not want to change the Keyword headers, as this would effect all units in the system. So we can over ride the header on the individual unit such that an alarm is no longer generated.


To override a keyword header, firstly select the individual cell on the unit that you wish to override by clicking once with the left mouse button. A selected cell displays a dotted outline as per the screenshot below.

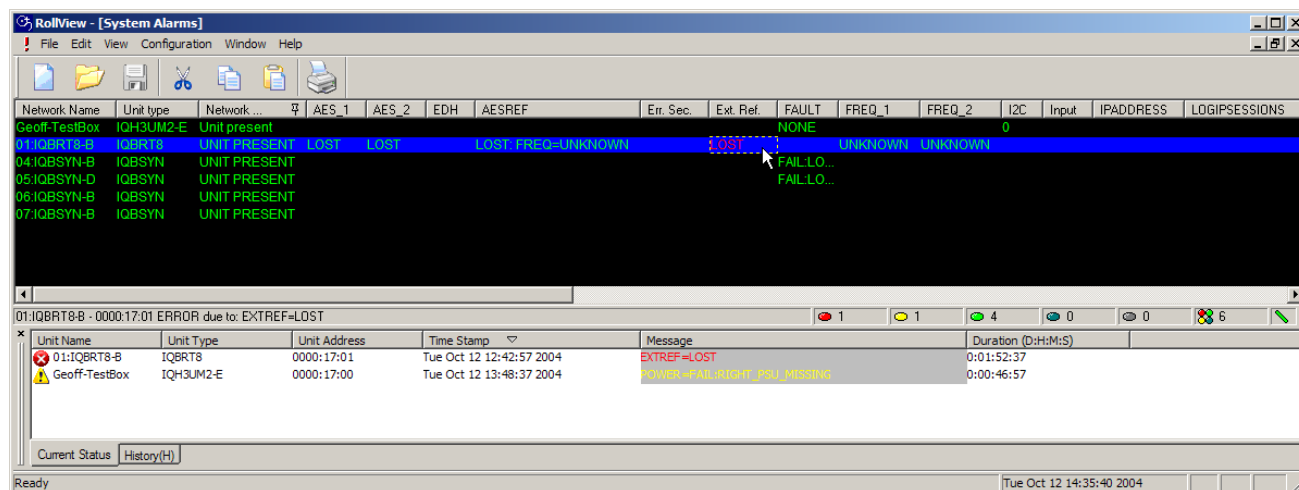


Then right mouse click on the selected cell and select the “Override Keyword Header...” menu.

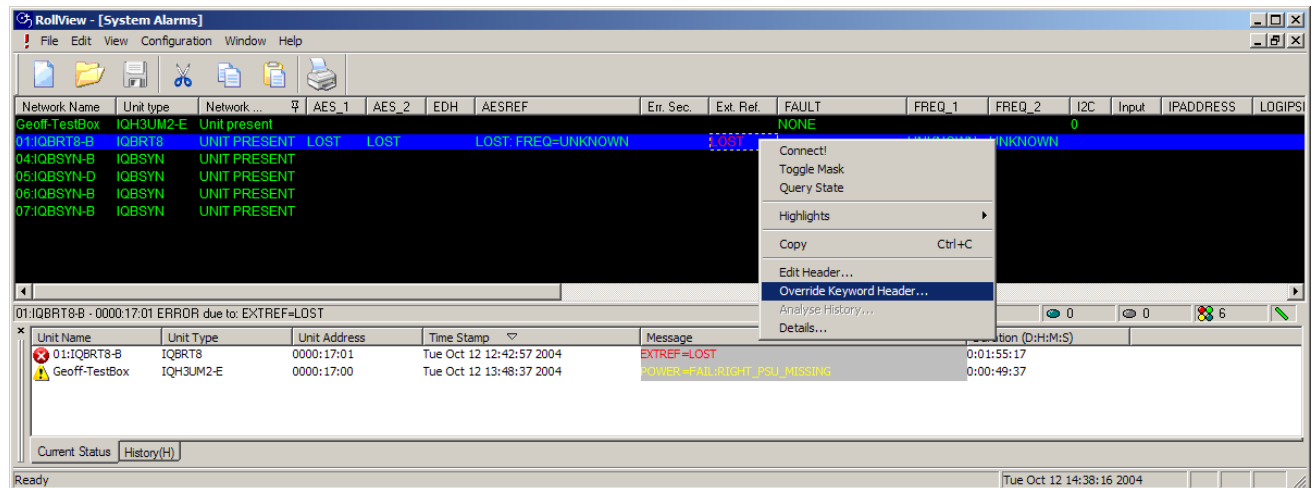

The standard keyword header edit dialog now appears. Tick the “Override default keywords” check box.

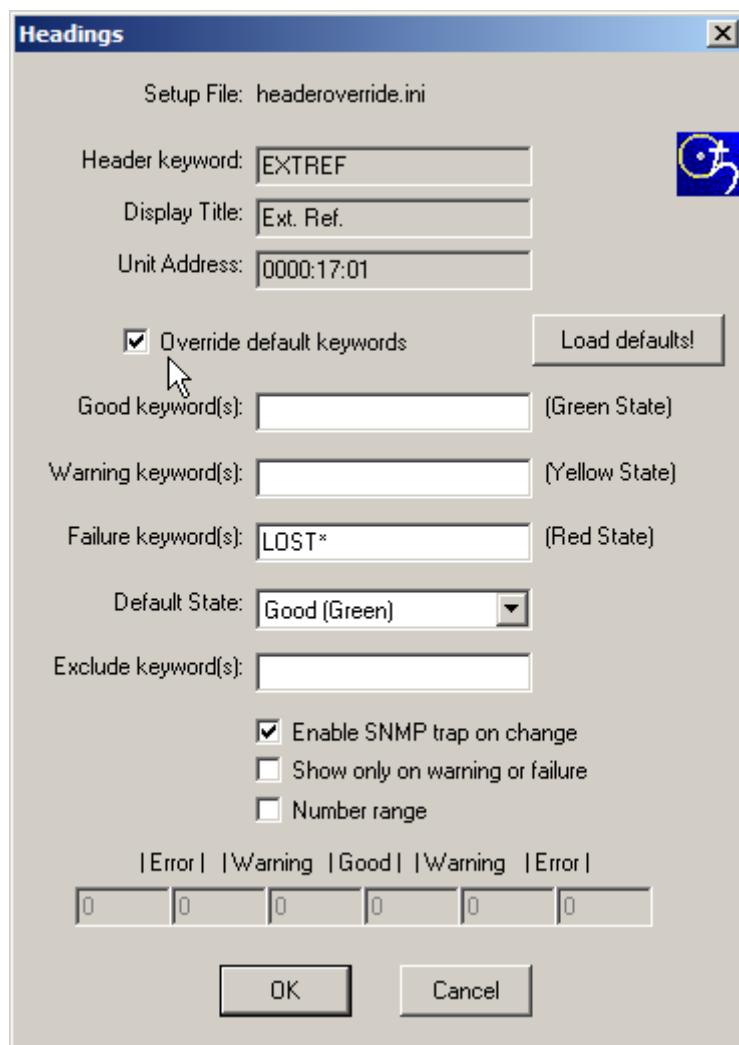

This enables the user to move the alarm text from the “Failure” or “Warning” keyword text boxes into the “Good Keywords” section.

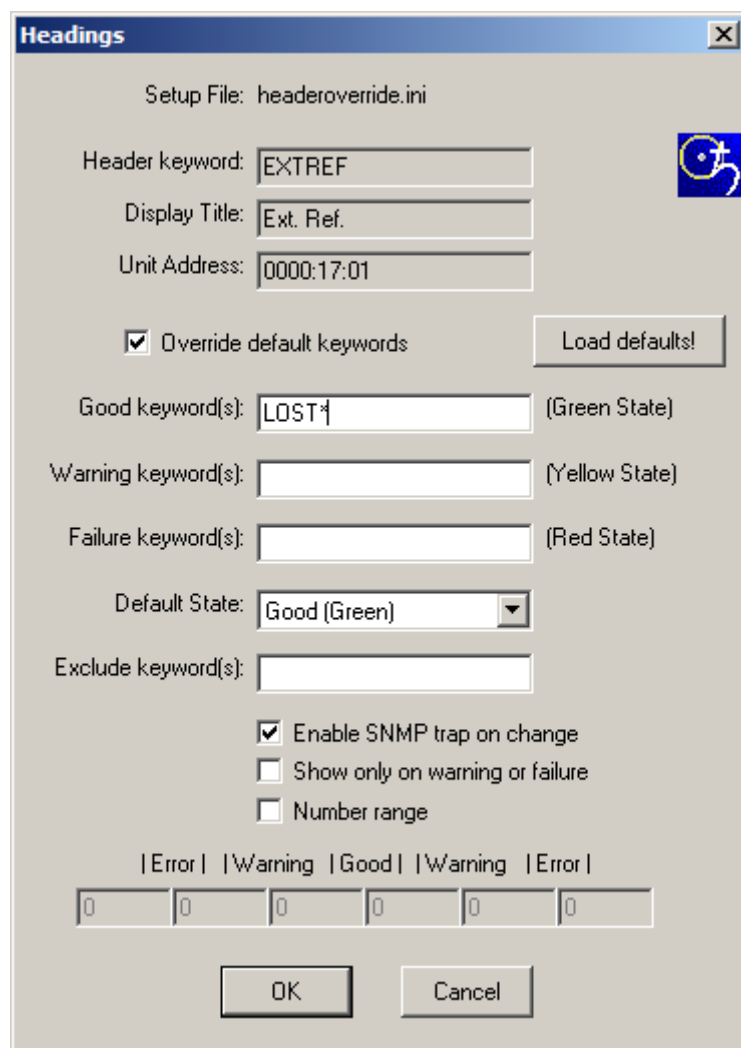

Headings

Setup File: headeroverride.ini

Header keyword:

Display Title:

Unit Address:

☒ Override default keywords

Good keyword(s): (Green State)

Warning keyword(s): (Yellow State)

Failure keyword(s): (Red State)

Default State:

Exclude keyword(s):

☒ Enable SNMP trap on change

☐ Show only on warning or failure

☐ Number range

|Error| |Warning| Good| |Warning| |Error|


Once the text has been moved, click “OK” to make the override active. Repeat this process for any other overrides that need to be performed in the system. Masked keywords are displayed in the systems alarm view with a grey background highlight.

Err. Sec.	Ext. Ref.	FREQ_1
	LOST	UNKNOWN

Setting Alarm Events

ROLLVIEW32 can be configured to generate actions when RED or YELLOW events occur within the system. There is a third alarm type which is actioned if the TCP/IP connection to the Log Server is lost.


To configure the alarm actions, select the "Configuration->Alarm Actions" menu, which display the following dialog box. From here, actions for any of the possible system alarm states can be modified.

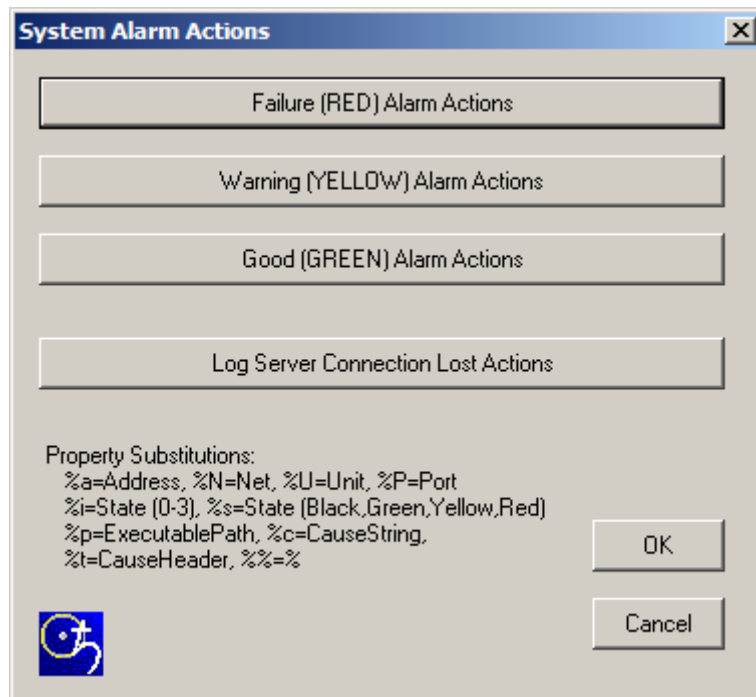

When an error occurs it is possible to execute one or more pre-defined actions from the alarm list. By default, the list does not contain alarm entries.

Creating an Alarm Entry

- Click on the relevant Alarm type in the above dialog box to enter the configuration dialog for alarm actions.

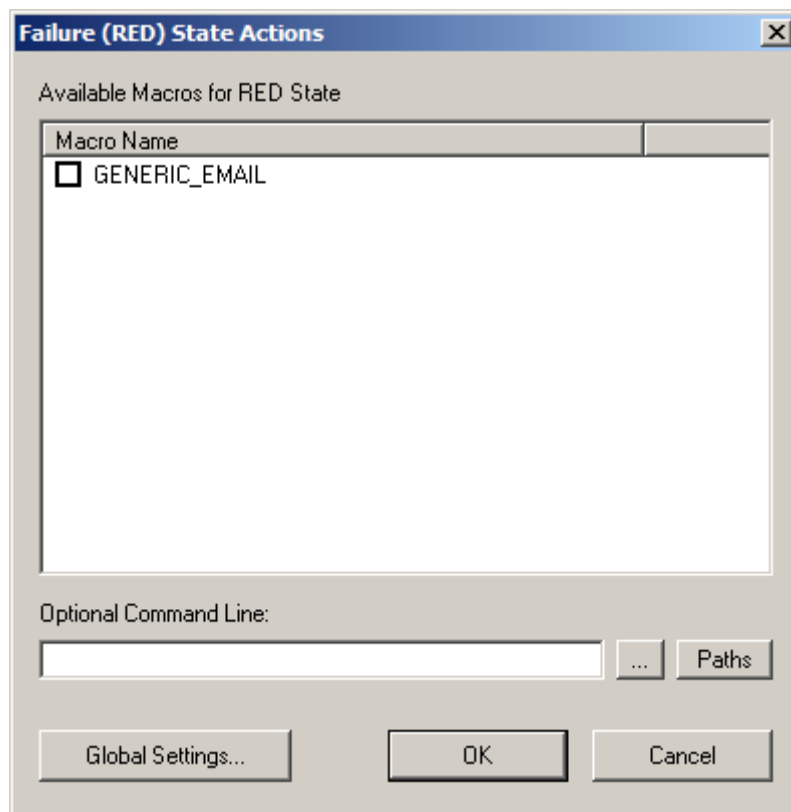


The options available are:

- Select a predefined alarm action
- Execute a command line

Creating Command Line Actions

To execute a command line, just fill in the full path to the program to be run including any command line arguments. The example below will call the Windows tool 'Notepad' and open the error log for the operator to enter comments relating to the current issue.

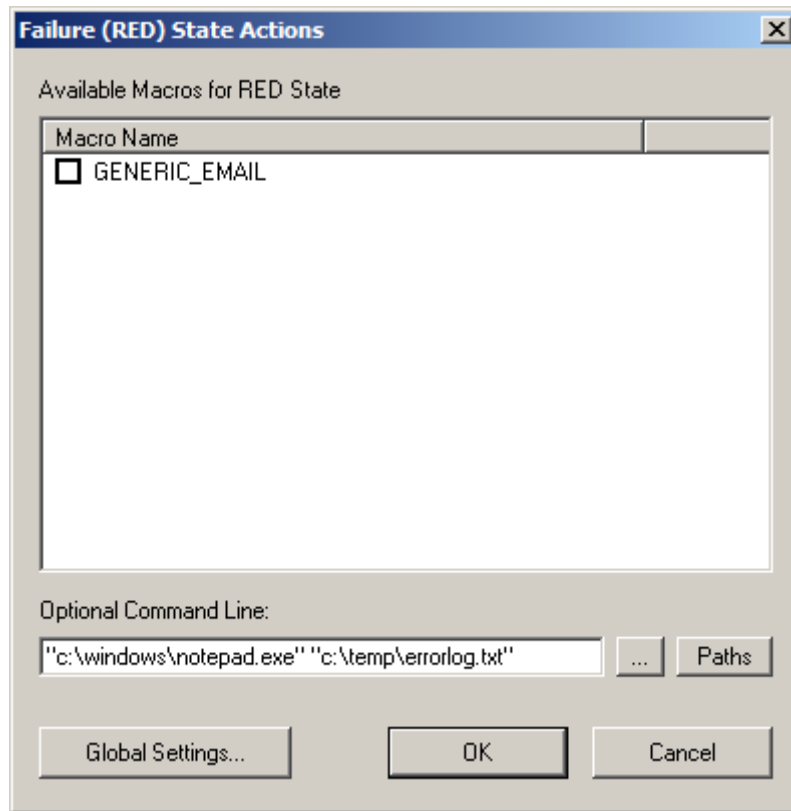


To define an alarm action such as playing an audio file when an error occurs, this can either be created as a command line or as a generic alarm action. To play back an audio file from a command line, simply call the RollView32.exe with the filename of the audio file as the command line argument:

```
ROLLVIEW32.exe "c:\audio files\red alert.wav"
```


Note the quotes around the full pathname to the target file. RollView32 supports the playback of .wav format sound files and the PC must have an installed and working sound device for this to work.

Creating Global Alarms


Rather than using the command line feature, it is possible to create global alarm types. These alarms, once created can then be simply checked to activate. An example of a configured global alarm can be seen in the above screenshot for generating an Email. To create a Global Alarm, click the "Global Settings..." button.

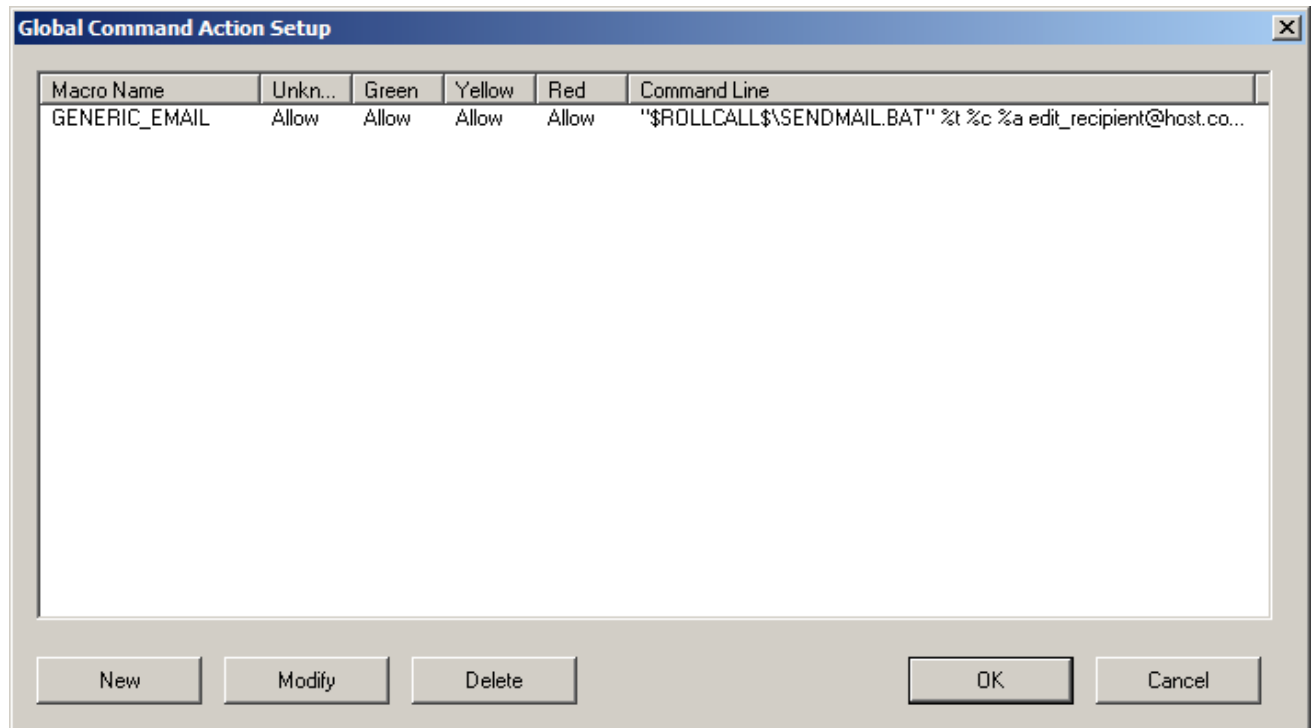

The Global alarms dialog allows new alarm types to be generated and for existing alarm definitions to be edited. To create a new alarm type, click the “New” button. The screenshot below illustrates the Audio Alarm created earlier with a command line as a generic alarm type. The checkboxes dictate for which alarm states this new alarm type will be available.

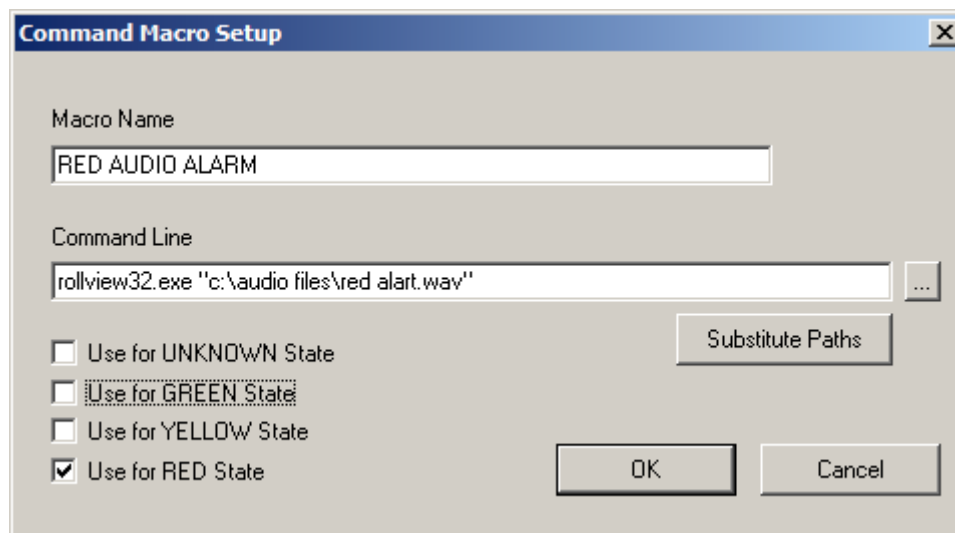

Once the alarm has been defined, click “OK” to return to the global alarm dialog and “OK” again to exit. Now in the Alarm Actions dialog, check the new alarm “RED AUDIO ALARM” to action the audio file when a red alarm condition occurs.

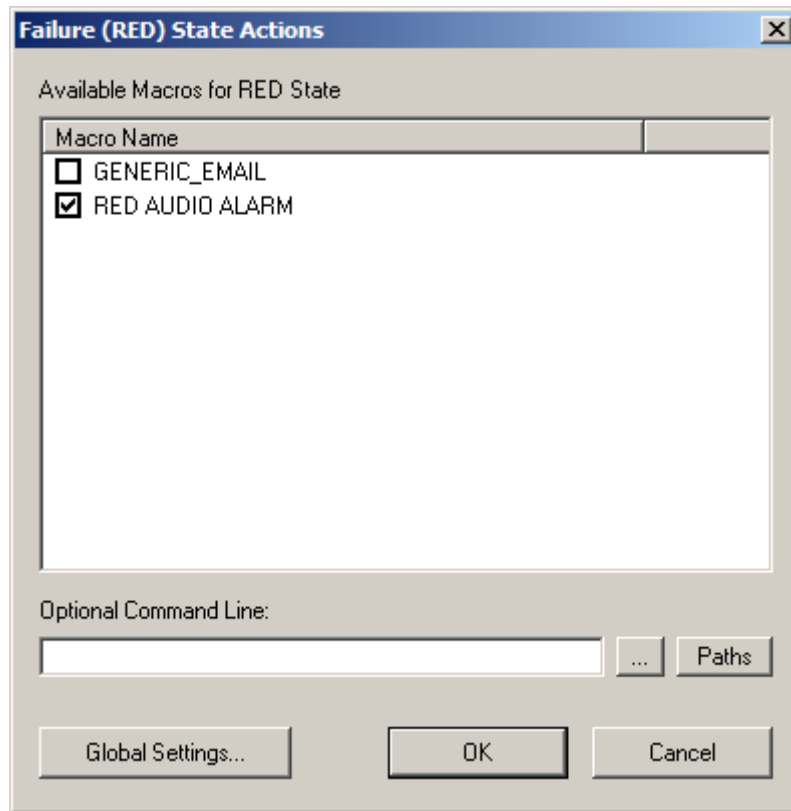

This command line configuration provides a very flexible environment for defining alarm conditions. Any program that can be executed under windows can be called when an alarm event occurs.

Generating a RollTrack Action

RollTracks are commands that can change parameters on a unit within a RollCall Network. For alarming purposes, the most useful RollTrack that can be sent would be to toggle a GPI state on an IQCGPI modular card.

The command line syntax for generating a RollTrack is:

`"C:\program files\rollcall\rolltrak.exe" -noreportsuccess <command>@<address>=value`

The RollCall control panel cache is used to discover the RollCall command number and the values that it can support.

Example: There is a GPI module in the system at RollCall address 0000:21:07. To set GPI 1 on in the event of an alarm, we would create an alarm event with the following command line parameters:

`"C:\program files\rollcall\rolltrak.exe" -noreportsuccess 5@0000:21:07=1`

Where 5 is the command number for GPI 1 and 1= ON.

Alarms via SNMP


RollView32 can also generate alarms via an SNMP trap to report conditions within the RollCall network to a higher level SNMP Manager application such as HP Openview.

To configure alarms from RollView32 the following actions are required:

1. Install & Configure SNMP Services for Windows.

Please consult your network administrator to perform this function.

2. Enable SNMP Traps within RollView32.

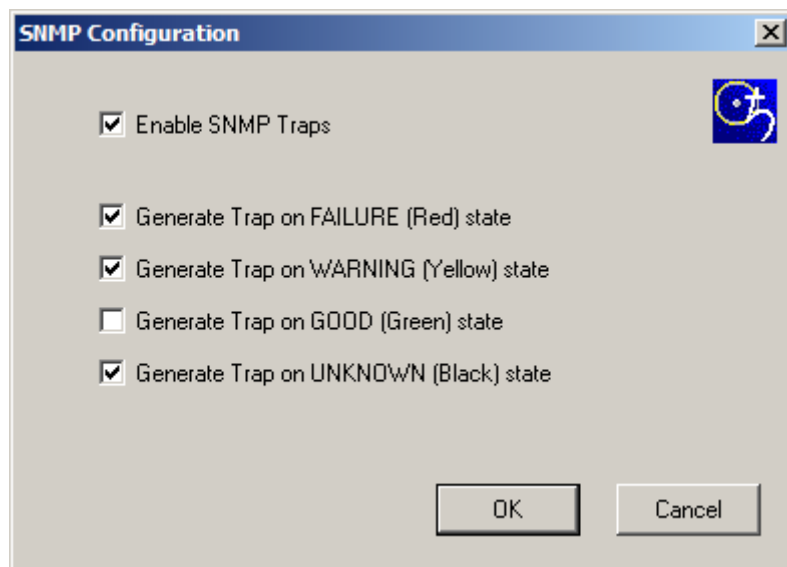


To enable traps, go to the "Configuration->SNMP..." menu. The following dialog box enables global configuration of the trap sender. The majority of SNMP managers use an alarm acknowledge mechanism so it is not necessary to send traps when an alarm event is cleared, hence the "Generate Trap on GOOD (Green) state" is not ticked.

3. Define which events will generate SNMP Traps

The keyword header dialog for each column in the ROLLVIEW32 window enables or disables SNMP traps for that particular keyword. It is not desirable to trap on all changes within a system, for instance: changes to the NETWORK TIME field are not critical messages and therefore should not be turned on.

To switch SNMP on for a particular column, right mouse click on the title bar for a header, e.g.: INPUT and tick the "Enable SNMP trap on change" checkbox. Repeat this process for all column that you wish SNMP traps to be generated for.

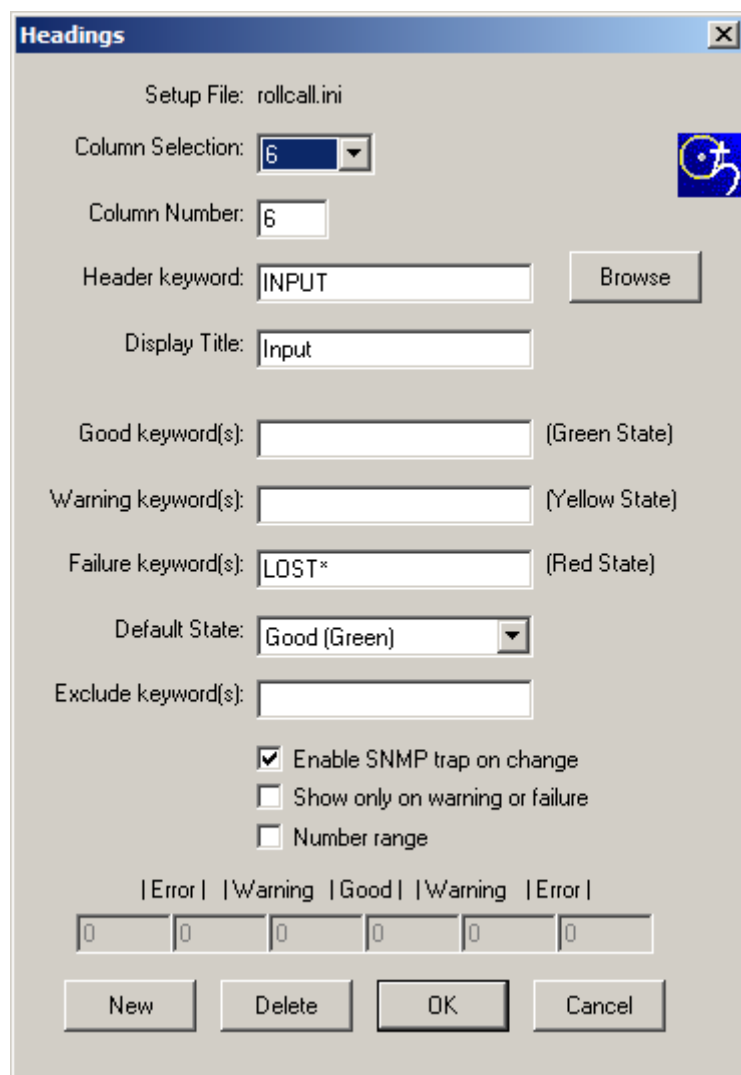

Headings

Setup File: rollcall.ini

Column Selection: 6

Column Number: 6

Header keyword: INPUT

Display Title: Input

Good keyword(s): (Green State)

Warning keyword(s): (Yellow State)

Failure keyword(s): LOST* (Red State)

Default State: Good (Green)

Exclude keyword(s):

☒ Enable SNMP trap on change

☐ Show only on warning or failure

☐ Number range

| Error | | Warning | Good | | Warning | Error |


0 0 0 0 0 0

The MIB files for the RollMap SNMP Traps can be downloaded via FTP from:


ftp.snellwilcox.com/RollCall/SNMP_MIBs/

Changing the Display Font

Select "Configuration->Font" from the menu.

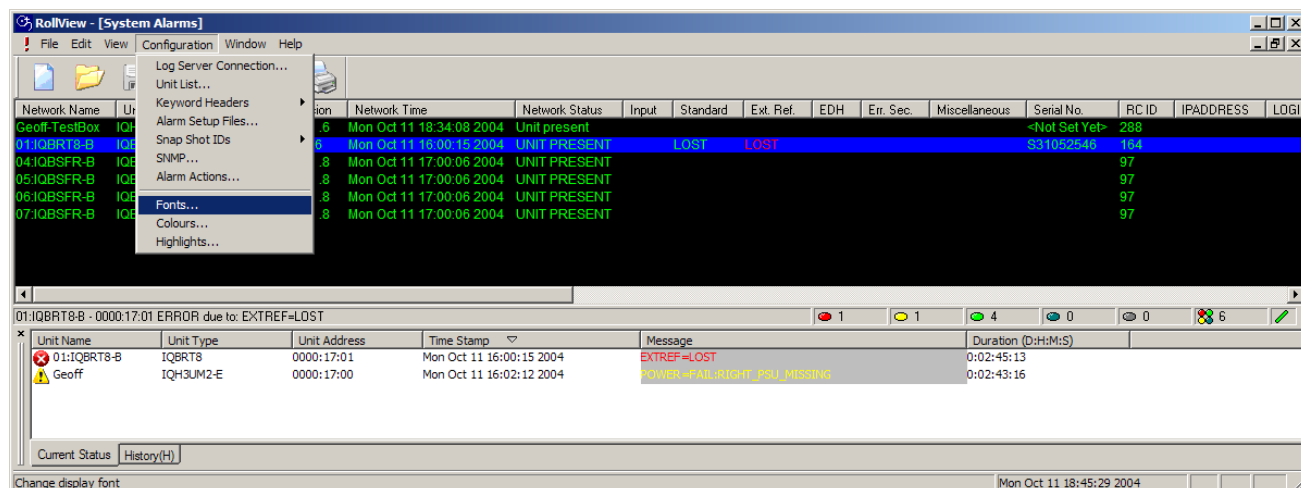


A font selection box will appear. These are the system fonts available. Note that the colour selection here has no effect, (see **Changing the Display Colours** below).

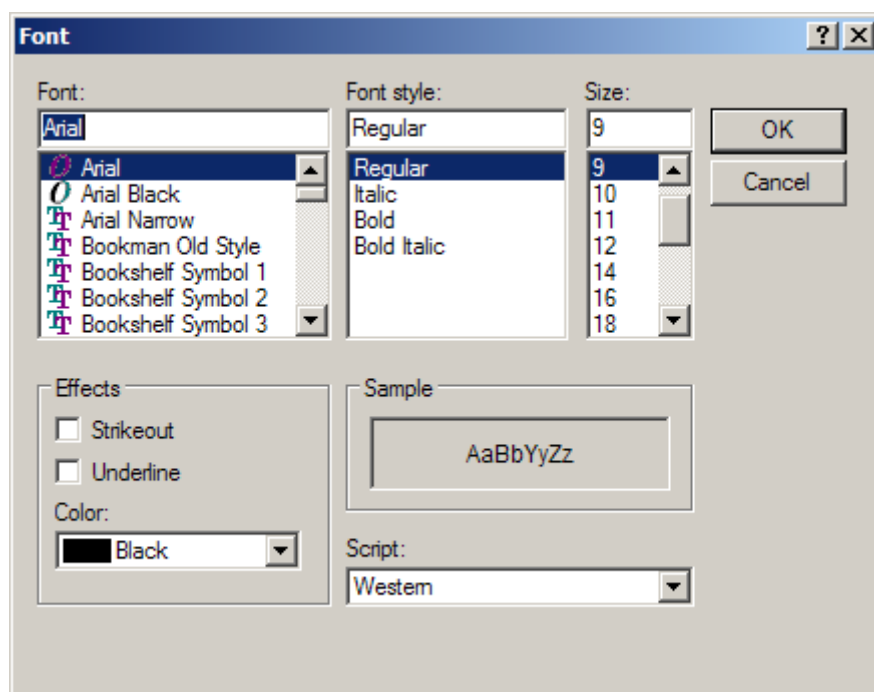


Changing the Display Colours

Select "Configuration->Colours" from the menu.

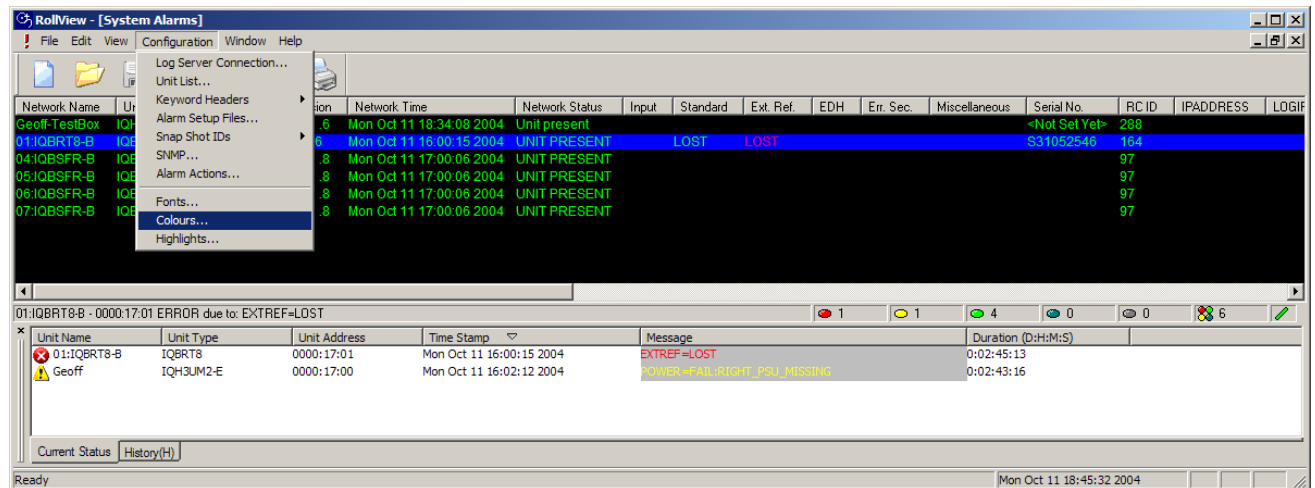

This dialog box will appear. Select a screen element to change from the list, then press “Select Colour” to choose a colour. Pressing the “Default” button will return colours of all elements to the default. Complete configuration of the active monitoring window can be achieved through this dialog.

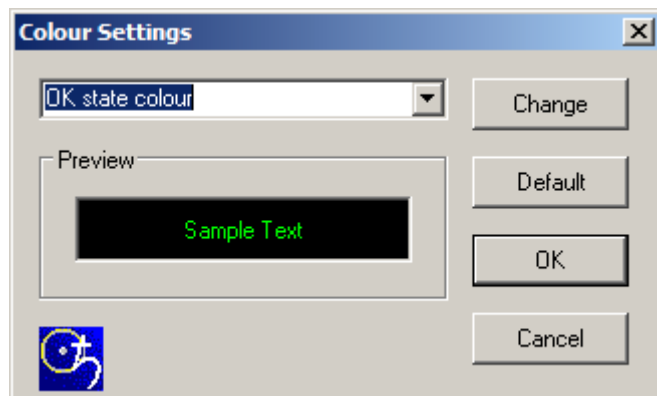

General Options


The “Status Bar” can be displayed or hidden by selecting “View->Status Bar” from the menu. The status bar displays the following information:

- Hints and descriptions of options, e.g. when navigating the menus
- Summary status of the unit last clicked with the mouse
- Total number of units in each state.
 - Units in error (red) state, (R=nnn)
 - Units in warning (yellow) state, (Y=nnn)
 - Units in good (green) state, (G=nnn)
 - Masked (blue) units, (M=nnn)
 - Unknown (grey) units, (U=nnn)
 - Total number of units, (T=nnn)

Understanding the LogViewer display


ROLLVIEW displays all the items in a column list format. Each unit has a status for each column heading. The message "Unit lost" indicates that the unit is not physically present. The units generate all other messages themselves. The individual units must enable these logging messages. (See "Additional logging information").

If any of the column warning or failure keywords are matched, either the cell that is effected changes colour, or if aggregate state is selected, the complete line for that unit will change colour, see screenshot below. If none of the warning or failure keywords match or there are no errors, then the line defaults to green.

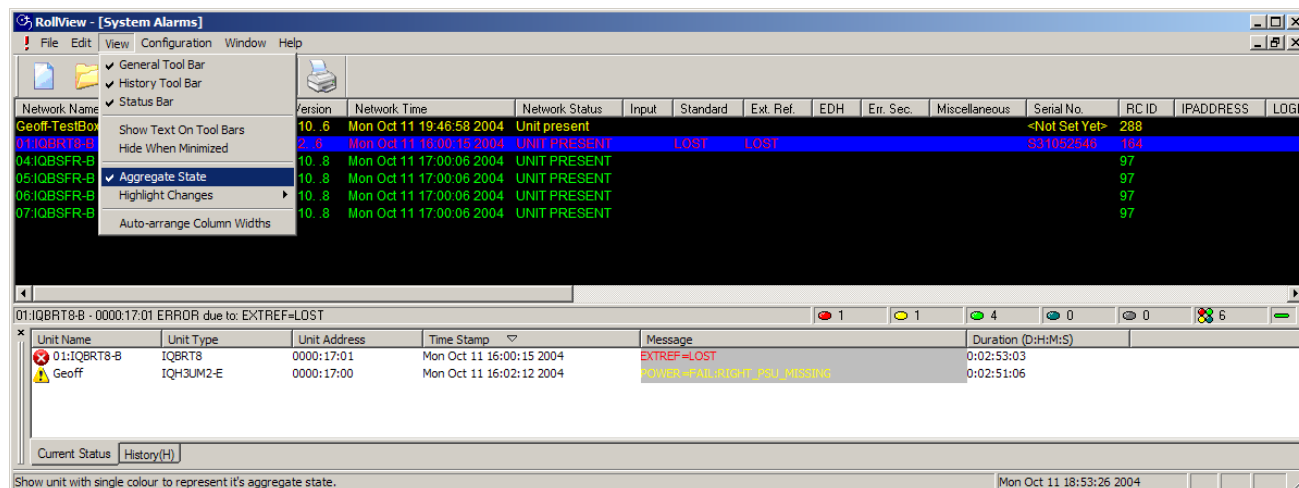

Viewing Unit Details

Sometimes RollCall units can generate large amounts of logging data. Viewing this data in a horizontal scrolling table can be difficult. To view a formatted summary of any unit, right mouse click on the line in the RollView display for that unit and select "Details"

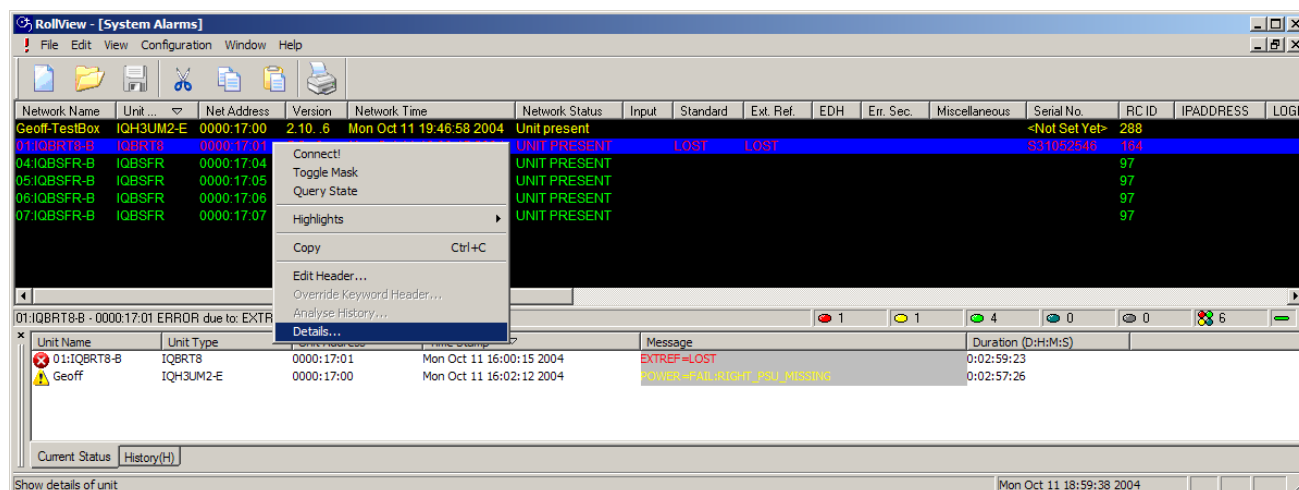

This dialog gives a complete summary of all logging information from this particular unit including any error states present and their severity as set up in the keyword headers.




Controlling a RollCall Unit

Full RollCall control can be actioned for any unit being monitored by RollView32. Double clicking on a unit will launch the RollCall Control Panel and connect directly to the unit selected. This option is also available by right mouse clicking on the unit line and selecting the “Connect” option.

Masking units

Each unit can be masked. In the masked state, logged errors can be ignored, or at least distinguished from non-masked errors. For example, a unit that is temporarily not being used may report an “Input lost” error. To distinguish this from a serious loss of input to an on-air device, the unit can be masked.

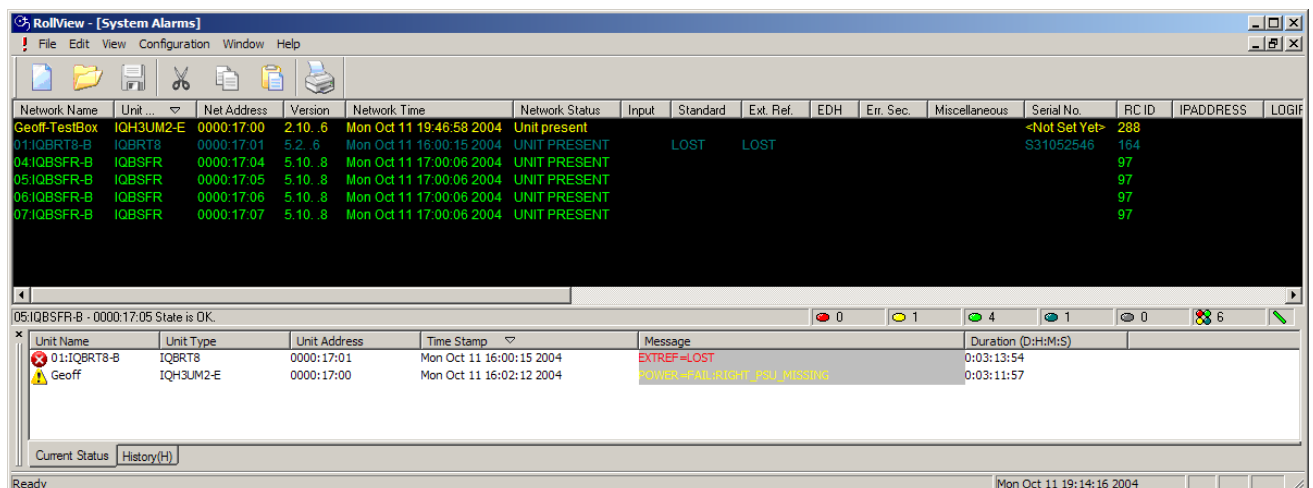


To mask or unmask, right click on the unit and select “Toggle Mask”. Masked units can be shown in a different colour, (Blue by default - see **Changing the Display Colours** above). Ranges of units can be masked using standard Windows Multiple selections with either <shift> for ranges or <ctrl> for multiple selections.

Masking a unit does not affect viewing of the units state using the details dialog function.

Configuring the columns in System Alarms View

The column layout on the screen can be sorted to present the most relevant columns to the user on the main window. These columns are draggable to re-assign their position.


To drag a column to a new position, hold down the left mouse button over a column header and drag it to its intended new position.

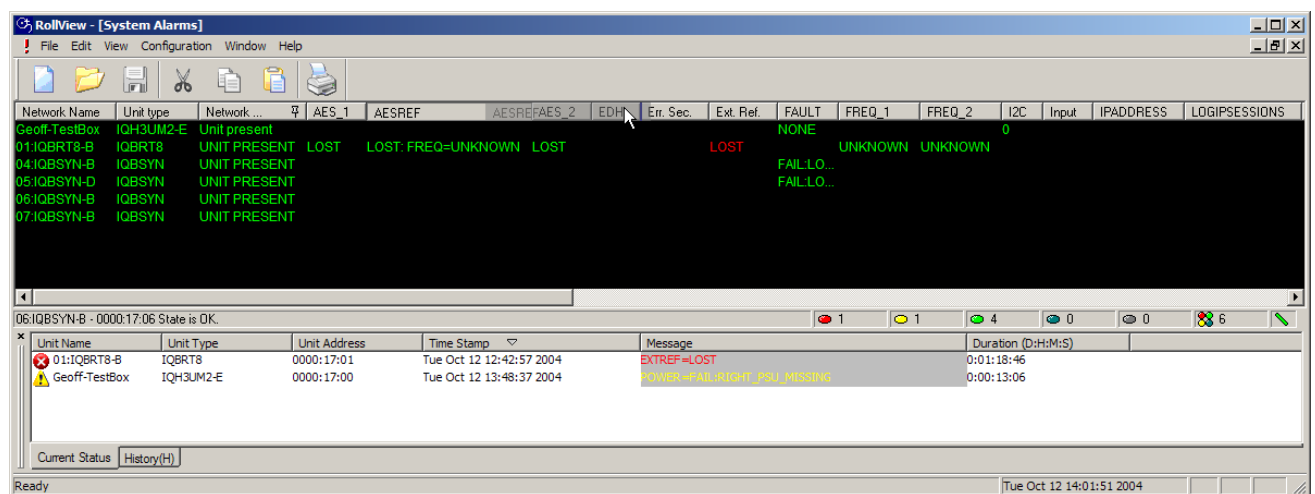

Sorting Columns

The columns can be sorted alphabetically. This is useful when finding a specific column to amend its keyword header information. When new units are added to ROLLVIEW32 new keywords are appended to the end of the logging window. An alphabetical sort should be performed after adding new units for ease of use.


To perform an alphabetical sort of column headings, right mouse click on any column heading and select the “Sort Columns By Name” menu.

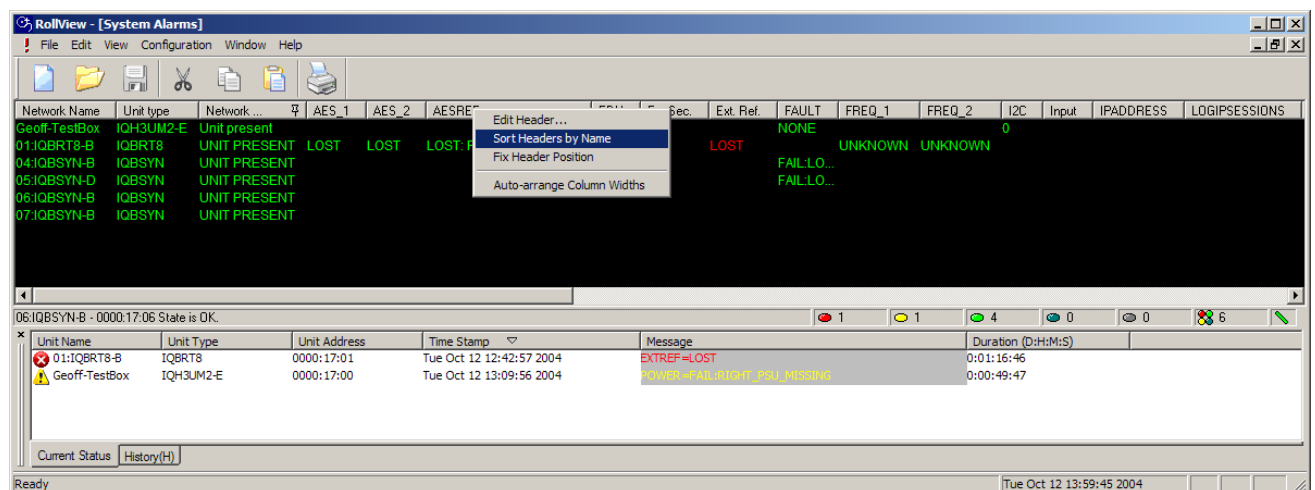

Pinned columns

There are key columns that it is always desirable to have fixed at the left-hand side of the logging window. Columns can be 'pinned' after they are dragging into their desired position. Every column to the left of the pinned column will now stay in that location. When performing an alphabetical sort, these columns will not be affected.


After arranging the columns to be fixed as desired, right mouse click on the right most column of the set and select the "Fix Header Position" menu.

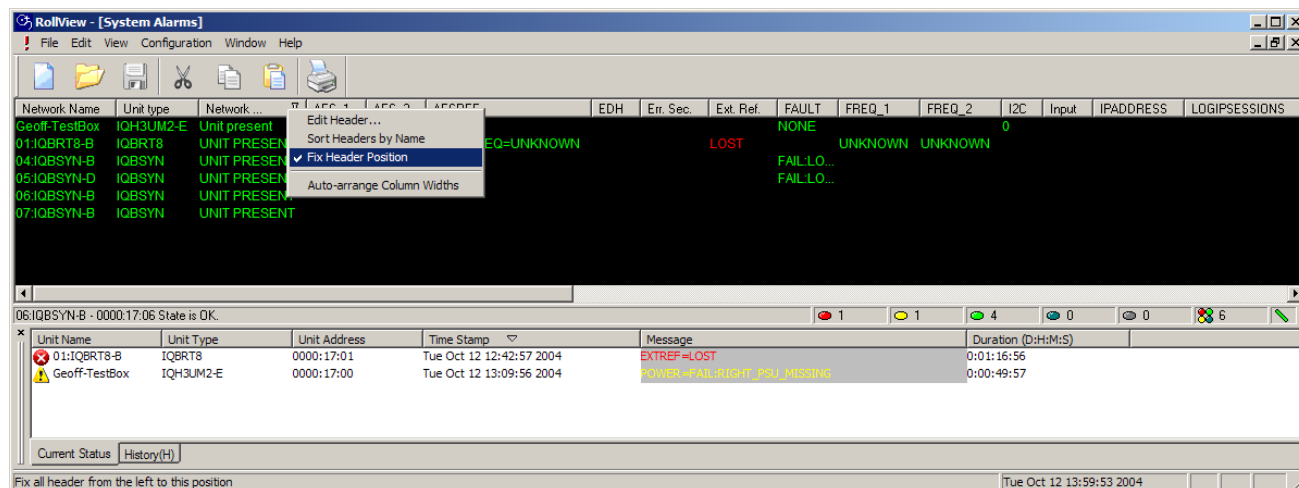

Enabling Highlights

Highlights allow the user to easily visualise changes in the system. Any state change will be highlighted by a background colour (default is orange) for a set period of time.


To enable highlights, select the "View->Highlight Changes->Enable Highlights" menu option.

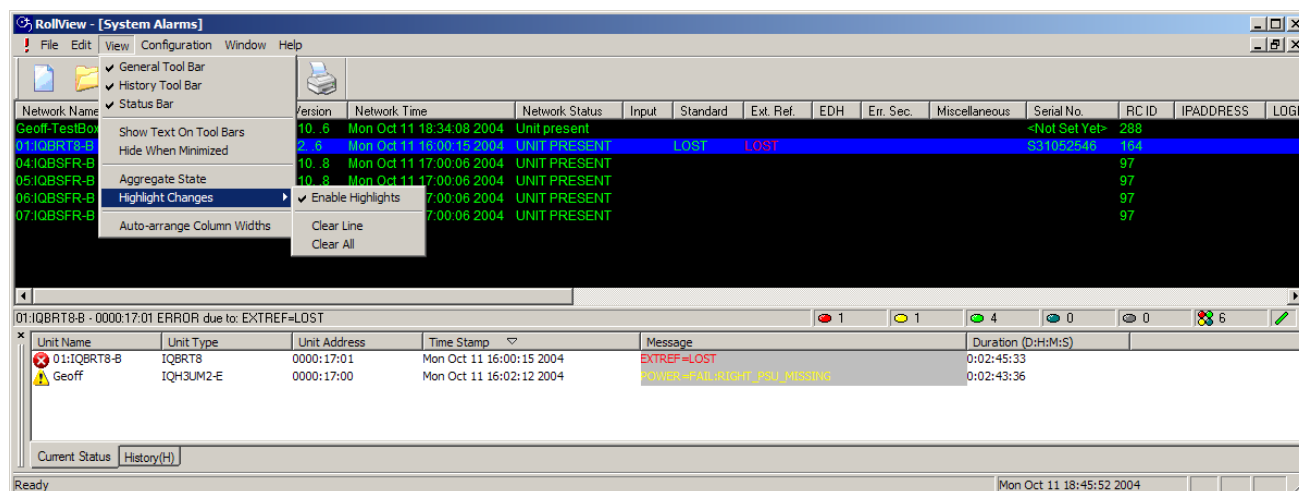

Configuring Highlights

This configuration dialog enables the user to set the colour and the duration of a highlight after a state change prior to returning to normal Display.


To access the highlights setup dialog, select the “Configuration->Highlights...” menu option.

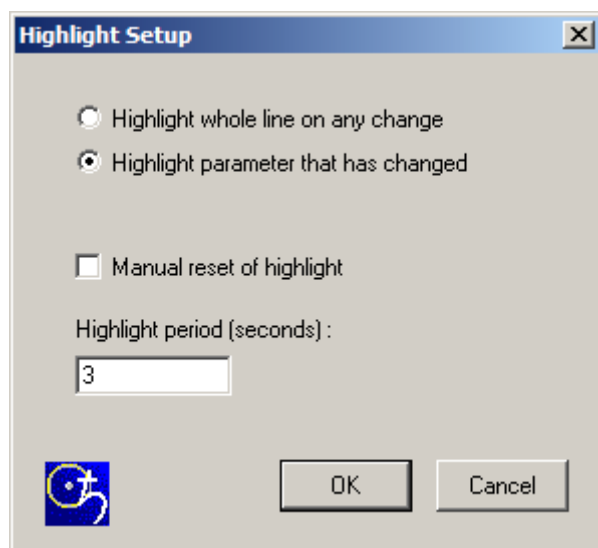

History and Current Status Toolbar

The History and current status Toolbar are present at the bottom of the ROLLVIEW32 application window. Their function is to provide an overview of any events currently occurring within the RollCall Network and also to provide a complete audit history of all events that have occurred.

When an event is cleared, it moves from the Current Status Tab to the history Tab. The contents of the History Tabs can be saved to disk as ASCII text files for offline analysis.

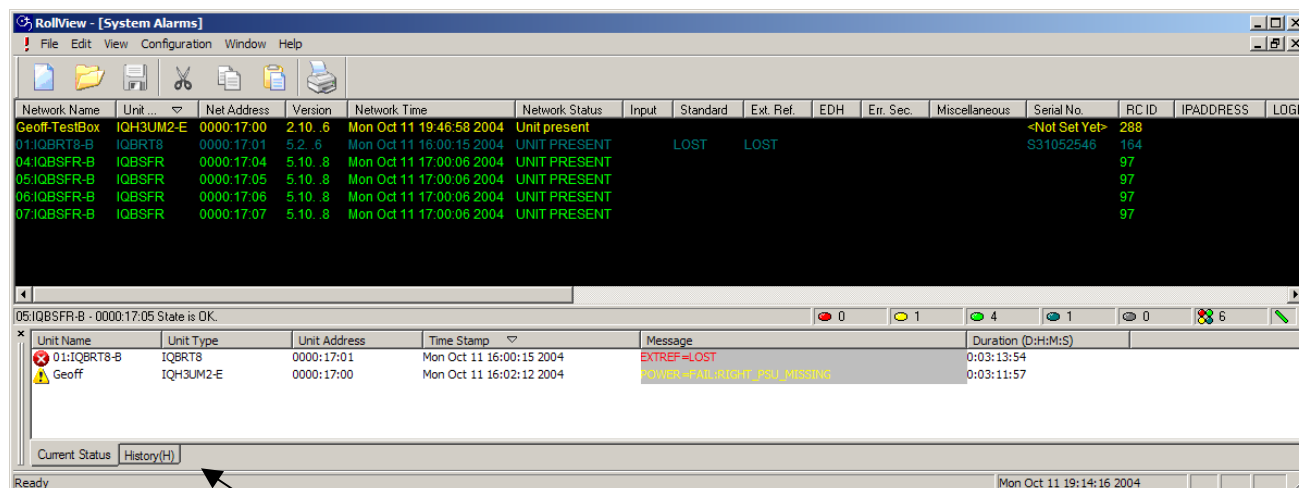

Current Status and History Tabs


The Current Status and History views area available as Tabs. Multiple tabs can be created, reflecting user configured network ranges. This enables the user to implement ‘at a glance’ views of different physical or logical segments of their infrastructure.

For example, Tabs can be created to segment kit by physical location, e.g.: By country, or rooms within a building. Alternatively by logical segmentation such as by Channel or function e.g.: Lines In, Transmission, and Fibre Mux.


To toggle the visibility of the History toolbar, select the “View->History Tool Bar” menu option.

Creating a new Tab

Right click on an existing tab within the History Toolbar and select “Tab Configuration->Create New Tab”

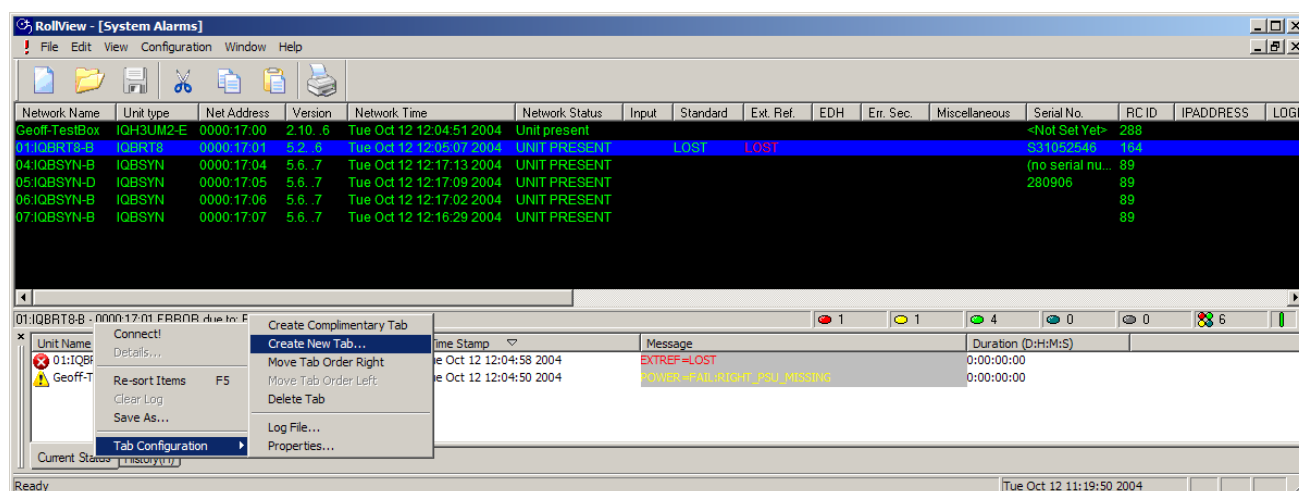

The Dialog box that appears enables configuration of the working parameters for the Tab.

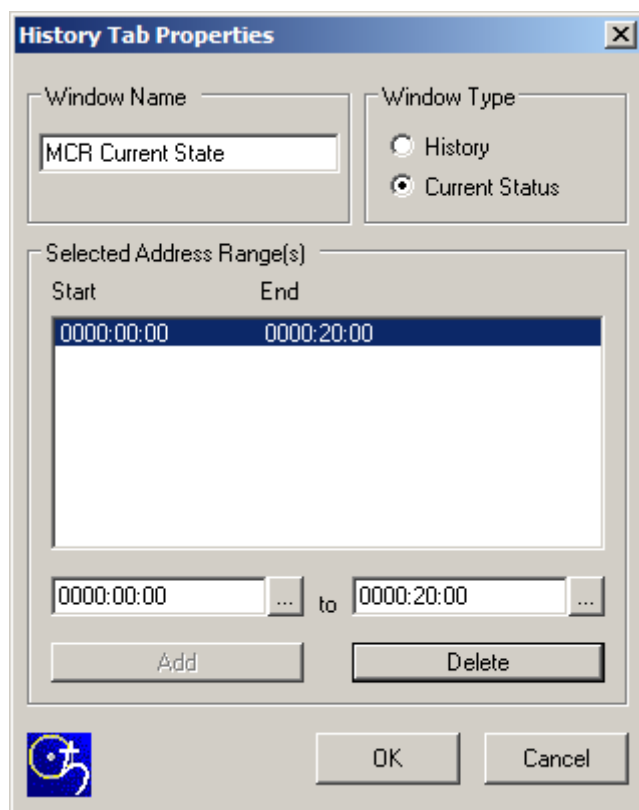

Set the following Tab properties:

- Tab Name
- Tab Type (Current State or History)
- Start RollCall Address
- End RollCall Address

If the desired operation for the tab is to monitor all elements of the system, then leave the address defaults as 0000:00:00 to FFFF:FF:FF


Once the Tab is created, it is possible to make a complimentary tab (ie: if the first tab was a Current Status Tab, then Create Complimentary Tab will create a History Tab with the same name and address parameters.

To create a complimentary tab, right mouse click on the Tab you have just created and select the “Tab Configuration->Create Complimentary Tab” option.

Note: Complimentary tabs are created with a “\$” symbol appended to the end to differentiate them from the original tab name. To amend the name or any other properties of the tab, right mouse click on the tab and select the “Tab Configuration->Properties...” menu.

Autosaving History Tab Contents

The History Tabs can be configured to automatically write their contents to disk for offline analysis. To enter the configuration dialog for Log Files, Right mouse click on the History tab and select the “Tab Configuration->Log File...” menu.

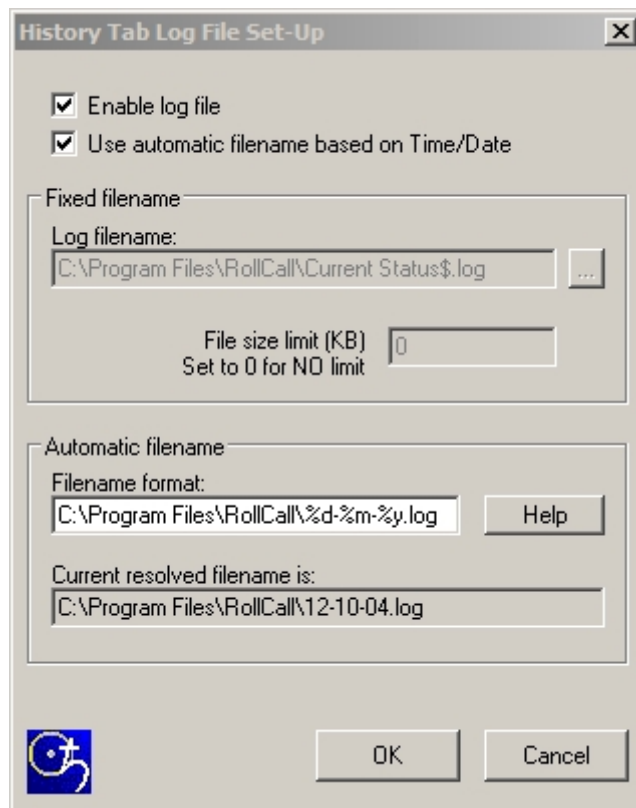

There are two possibilities for the History Log File creation.

1. Fixed Filename. All contents of the History tab will be written into this file. To specify this mode, tick the “Enable Log File” check box but do not tick the “Use automatic filename based on Date/Time” checkbox.

Then enter your desired filename and location in the “Fixed Filename” text box. Note: ROLLVIEW32

2. Automatic filename. This will create files based on date and timestamp. By default, this will create a new file based on the parameters entered in the filename string. To specify this mode, tick both the “Enable Log File” check box and the “Use automatic filename based on Date/Time” checkbox.


Click the “Help” button to the right of the “Filename Format” text box for further details.

ADDITIONAL LOGGING INFORMATION.

There are several settings that must be made in order for logging to work. Since each device can generate a log message, it is up to the setup of that device whether to enable or disable those messages. Some units may have many different logging messages. (e.g. logging of input loss, logging of EDH errors, logging of standards change). To enable the different types of logging messages, first connect to the unit using the RollCall control panel or a hardware front panel. Then usually under the “SET-UP” or “LOGGING” menu, select the logging options required.


In all units, there will also be a destination Log Server name required. For modular units, the log server name is set by the GATEWAY itself. This name should match the name specified by “File->Unit name” in the COMMTROL program on the PC or left as “Any Logserver” in systems where there is only one LogServer running.

Example GATEWAY set-up for 3RU modular box.

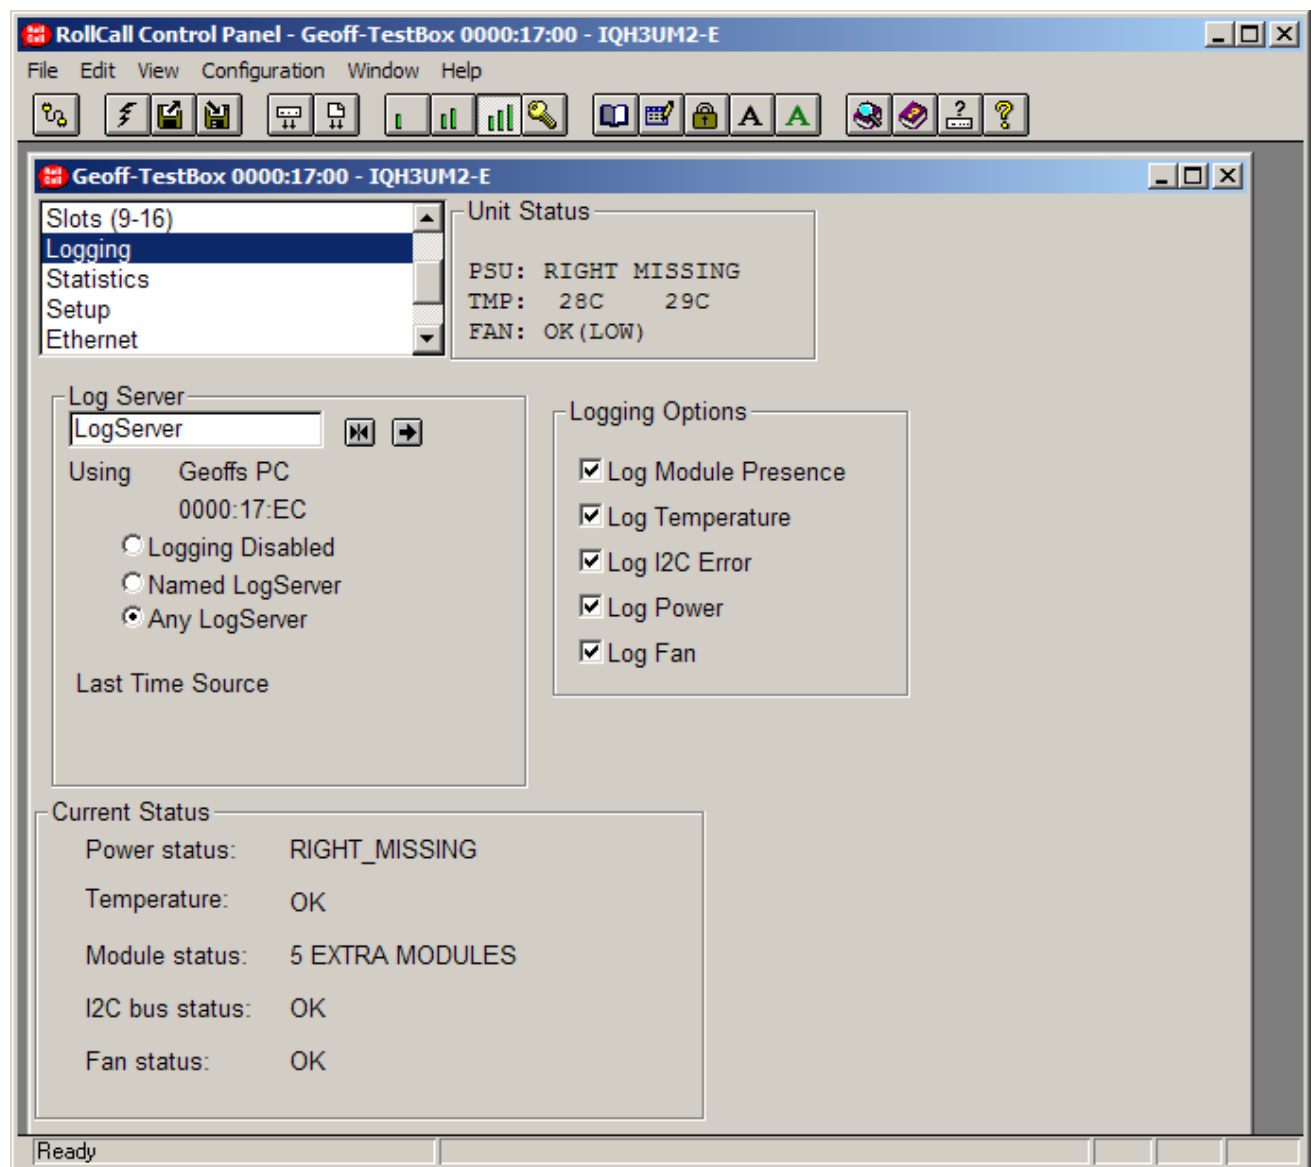

For individual units, their respective logging parameters must be enabled.

For example, IQBSYN has 4 parameters to log.

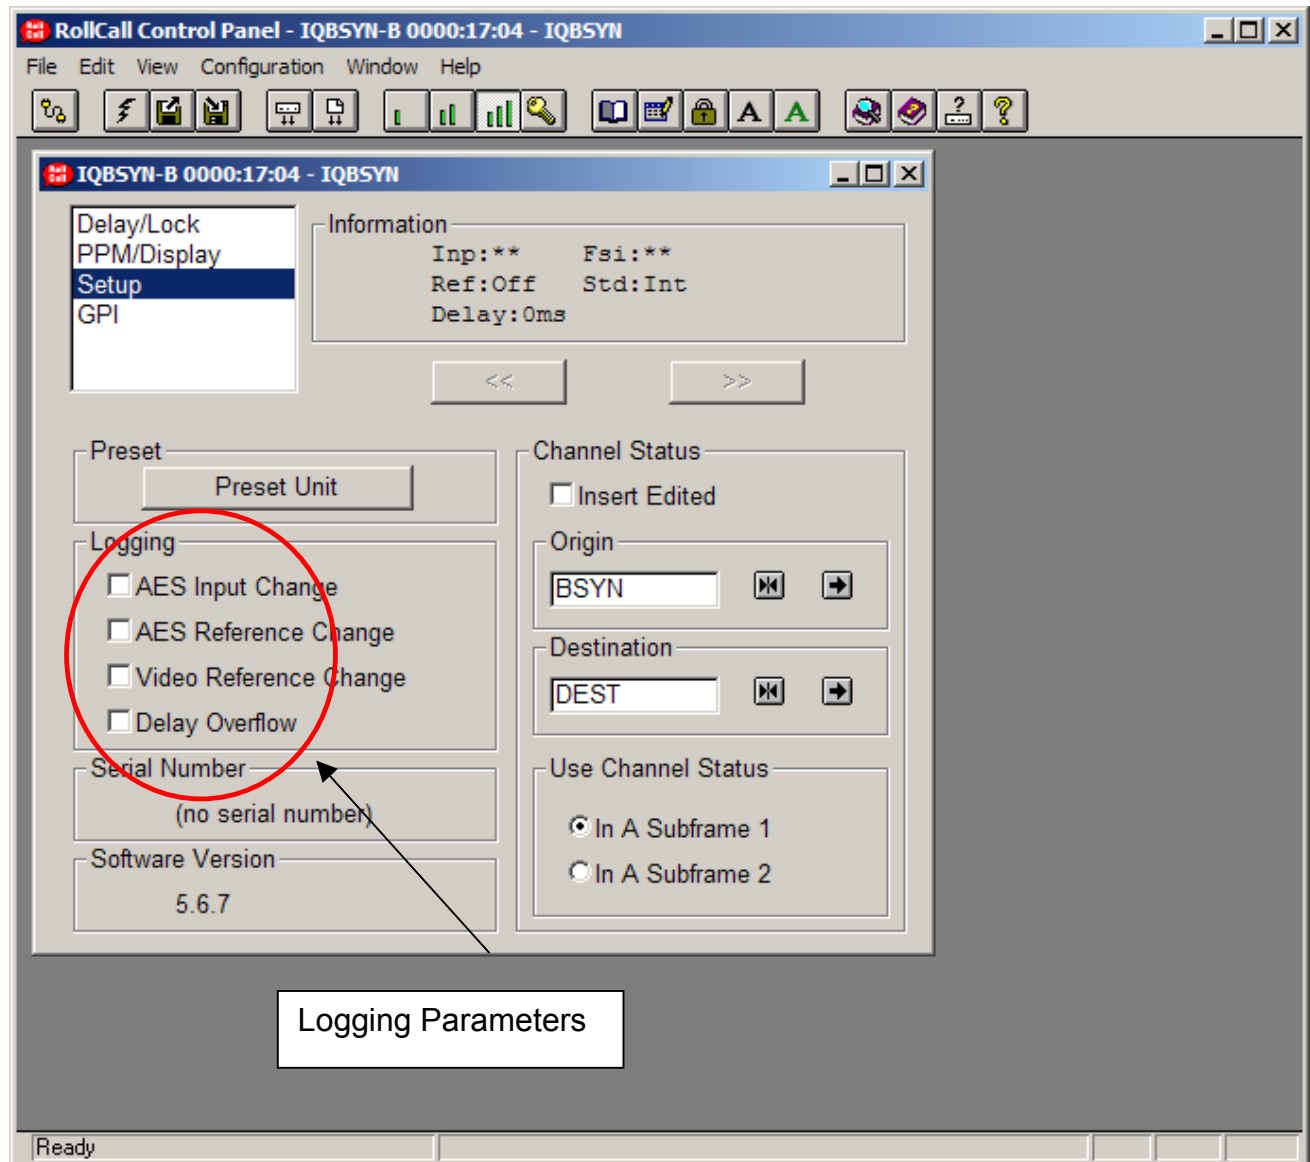

Note that these unit settings are stored in non-volatile RAM and logging will be enabled whenever the unit is powered up. If a LogServer with the configured name is not found on the network, then the unit will attempt to re-send the log message at timed intervals until the named LogServer is found.

ROLLCALL IP SHARER (ROLLIPSH.EXE)

This application allows a physical connection to a RollCall network to be shared with other PCs on the computer network. The shared computer must have a RollNet card installed, (e.g. RollPCI for PCI-bus PC workstations, RollPCM for PCMCIA laptops, or IQCPC for ISA-bus PCs). The other PCs using the shared connection need only a TCP/IP link to the sharer PC, e.g. via ethernet or other LAN/WAN connections.

Configuration

The server PC must have a full RollNet connection, (i.e. an RollPCI or equivalent card connected to the RollCall network). First ensure that this connection is functioning normally, by ensuring that units on the network are visible and controllable from the RollCall Control Panel. Please note that ROLLIPSH will only run when the communication settings in COMMTROL are set to "RollIPC card" and not IP or serial COM port options.


The server PC must also be running TCP/IP protocol drivers. Assign an IP address or IP name to this PC. See Microsoft documentation on how to install TCP/IP for your operating system.

To configure the IP clients, refer to Section 2 of this manual.


IP Server Port




This sets the IP port number that ROLLIPSH will listen on for incoming client calls. The default port number is 2050.

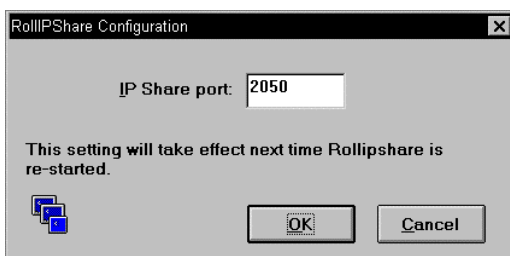

Access List

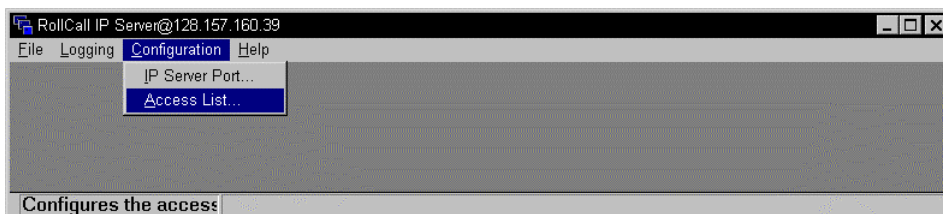

The access list controls which IP clients are allowed to connect to this IP server. It also configures which RollCall port number the clients will be given on connection.

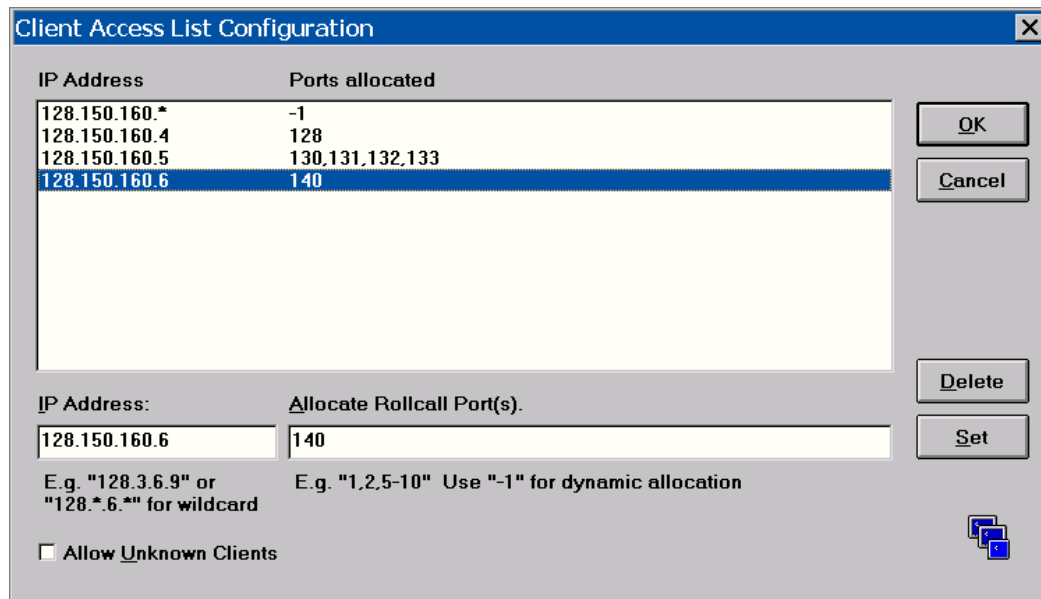

The dialog box titled "Client Access List Configuration" contains a table with two columns: "IP Address" and "Ports allocated". The table lists four entries: 128.150.160.* with -1, 128.150.160.4 with 128, 128.150.160.5 with 130,131,132,133, and 128.150.160.6 with 140. The last row is selected. To the right of the table are buttons for OK, Cancel, Delete, and Set. Below the table, there are input fields for "IP Address:" (containing 128.150.160.6) and "Allocate Rollcall Port(s):" (containing 140). Below these fields are examples: "E.g. '128.3.6.9' or '128.*.6.*' for wildcard" and "E.g. '1,2,5-10' Use '-1' for dynamic allocation". At the bottom left is a checkbox labeled "Allow Unknown Clients". At the bottom right is a small icon of a computer monitor.

IP Address	Ports allocated
128.150.160.*	-1
128.150.160.4	128
128.150.160.5	130,131,132,133
128.150.160.6	140

IP Address: 128.150.160.6 Allocate Rollcall Port(s): 140

E.g. "128.3.6.9" or "128.*.6.*" for wildcard E.g. "1,2,5-10" Use "-1" for dynamic allocation

☐ Allow Unknown Clients

There are three methods to allocate a RollCall port number for a client.

Fixed RollCall port number – Enter a single number within the range 1 to 255 into the "Allocate Rollcall Port(s)" field for the corresponding client IP address. This allows only one connection from the client. Other attempts to connect from the same client will be rejected.

Multiple RollCall port numbers – Enter a series of numbers separated by commas specifying a list of RollCall ports numbers to use. In the above example, client 128.150.160.5 will be allocated any one of the following ports 130, 131, 132 or 133 depending on the connection sequence of the client. This means the client can have up to 4 simultaneous connections to this server.

Dynamic RollCall port number – Enter -1 (or 0) for dynamic port allocation. ROLLIPSH will use the first available port number starting from 1. A limit of 254 connections from the same client is allowed.

It is recommended that user assigned port numbers start from 128 leaving dynamic port numbers to be in the range 1 to 127.


The port number is the third and last part of a RollCall address shown in hexadecimal. Allocating fixed port numbers to IP clients means that each client PC will have a fixed RollCall address. This can aid system understanding, by allowing a known lookup from RollCall address to client PC IP address. E.g. a client assigned to RollCall port 128 (0x80 in hex) will have the RollCall address nnnn:uu:80 where nnnn:uu is the address of the server PC. E.g. on a LAN without bridges, with the IP Server PC RollNet card set to RollCall address F0, the RollCall address of the IP client would be "0000:F0:80".

Wild card client addresses are also valid. Each part of the IP address can have an asterisk '*' as part of the search list. The search order is a maximum match from the right hand side first. E.g. If the calling client address was 128.150.160.4, it would match to 128.150.160.4 first, then 128.150.160.* and finally 128.150.*.*.

Allow Unknown Clients

Enabling this option allows any client not listed in the access list to connect to this server. A dynamic RollCall port number will also be assigned by default. For security, this option should be disabled for normal operation.


Connection Window

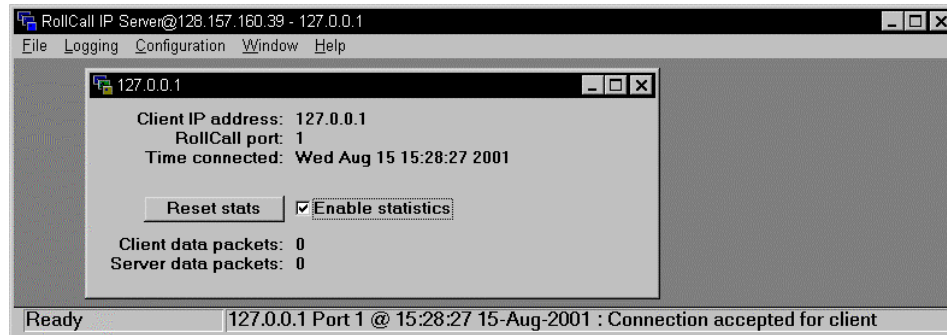

For each client connection, a display window appears to indicate the client address, the RollCall port number allocated and the time of connection. There are also statistics on the number of transmitted and received packets for the connection. Closing the window manually will terminate the connection and hence disconnect the client from the network.


Event Logging

Select from the menu "Logging->Show Log" to display a list of connection messages. ROLLIPSH keeps a log of all connection attempts, rejections and terminations. This allows the administrator to monitor client access.

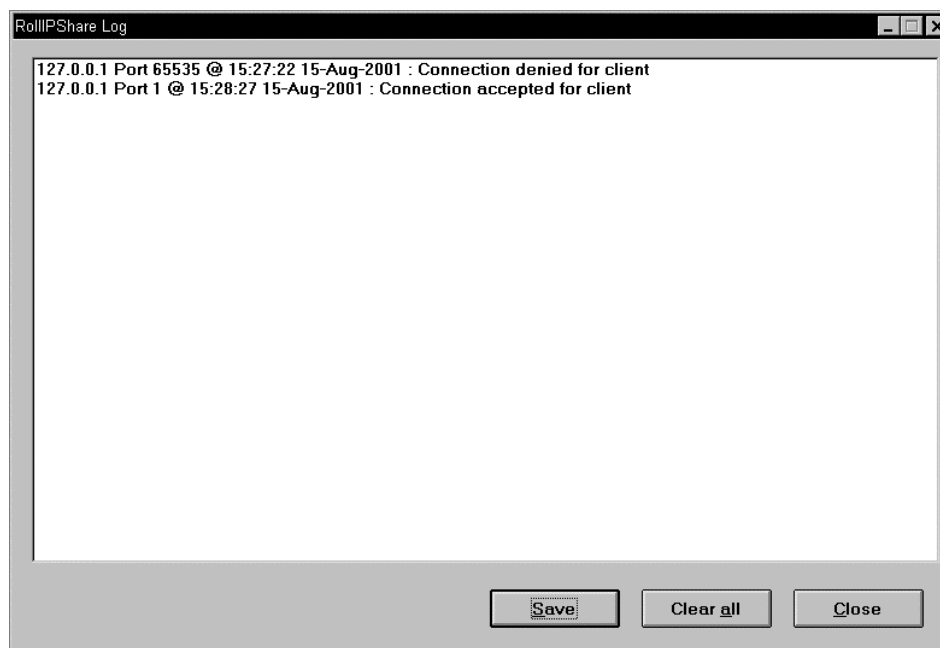

A snapshot of the log data can be saved to file by using the "Save" button.

About ROLLIPSH

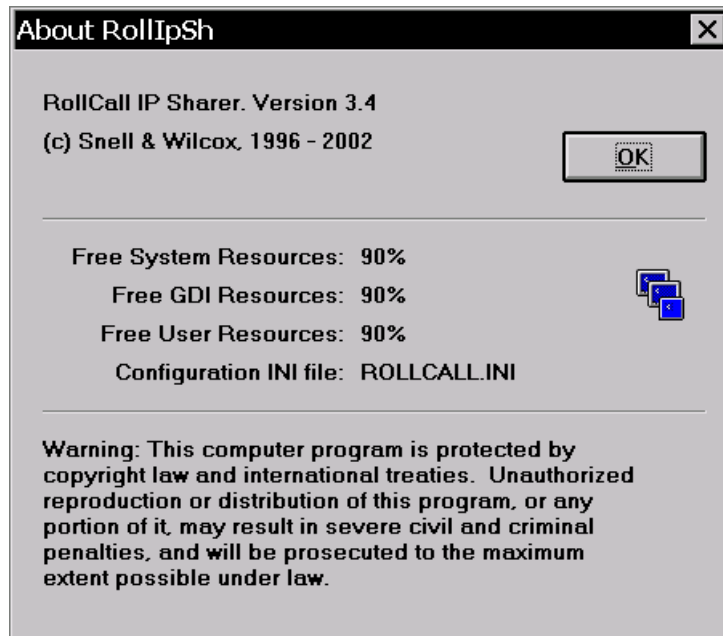

About box indicating software version and system resources.

ROLLTRACK COMMAND LINE PROGRAM (ROLLTRAK.EXE)

This application provides a simple command line interface for sending unconnected RollTrack commands to any RollCall compatible unit on the network.

Command Line Syntax

The command line takes the form:

ROLLTRAK.EXE [mode] command@address=value <CR>

Where:

“[mode]” are optional keywords for modes of operation (See below).

“command” is the unit specific command in decimal to action,

“address” is a standard RollCall address in the form NNNN:UU:PP,

“value” is the value for the command to set in decimal, or quoted string.

e.g.

ROLLTRAK.EXE REPORTFAILURE 7@0000:40:01=1

For string values, the text must be enclosed in double quotes.

e.g.

ROLLTRAK.EXE 10@0000:40:01="New Caption"

Modes

“RESIDENT”

This mode executes the command and leaves the ROLLTRAK program active. Subsequent RollTracks will be executed faster if RollTrack is already running.

“NONRESIDENT” (default)

This modes executes the command and closes the program on completion.

“QUIT”

This mode does not require any command values to be set. This closes the ROLLTRAK program if active.

“REPORTSUCCESS”

This mode causes ROLLTRAK to display a “Success” message box if the command was successfully actioned and acknowledged.

“NOREPORTSUCCESS” (default)

This mode causes ROLLTRAK not to display a message box when the command is successfully actioned and acknowledged.

“REPORTFAILURE”

This mode causes ROLLTRAK to display a “Failure” message box if the command was unsuccessfully actioned for any reason.

“NOREPORTFAILURE” (default)

This mode causes ROLLTRAK not to display a message box when the command is unsuccessfully actioned for any reason.

“MINIMIZE”

This mode will minimize the window during operation.

“MAXIMIZE”

This mode will maximize the window during operation.

“SHOW”

This makes the RollTrack window visible on the screen. Debugging information is displayed in the active window area.

“HIDE” (default)

This hides the RollTrack window and removes it from the Windows Task bar.

More than one mode group can be used on the command line. Mutually exclusive modes such as “RESIDENT” and “NONRESIDENT” are not allowed on the same command line. If RollTrack is started with no parameters, then a default of “SHOW RESIDENT” is used, whereas if any parameters are included then the defaults are as listed above.

For example:

```
ROLLTRAK.EXE SHOW RESIDENT REPORTSUCCESS REPORTFAILURE 7@0000:60:01=1 <CR>
```

Multiple Command Lines from File Input

ROLLTRAK can accept a file as input command lines. The syntax is as follows:

```
ROLLTRAK.EXE @"filename" <CR>
```

Where “filename” is a file containing a list of command lines to action. (Currently only short filenames are supported). A full path can be specified but must be enclosed by double quotes.

For example:

```
ROLLTRAK.EXE @"c:\program files\rollcall\action.txt"
```

Where “action.txt” contains the lines:

```
RESIDENT SHOW REPORTSUCCESS REPORTFAILURE 10@0000:60:01=1  
11@0000:60:01=5  
12@0000:32:05=1
```

The above script will execute the RollTracks and report on the success or failure of each command, leaving the ROLLTRAK program resident in memory and visible on the screen.