

Shuttle FDO MFD 0.7

by indy91

May 5, 2026

1 Introduction

The Shuttle FDO MFD contains tools to calculate launch windows, rendezvous plans and individual maneuvers for Space Shuttle operations. It is based on the Launch Window Processor (LWP) and the Orbital Maneuver Processor (OMP), which were the programs used for these tasks by the actual Shuttle Flight Dynamics Officers (FDO). The Deorbit Opportunities Processor (DOPS), a lookahead display to find suitable deorbit opportunities, is also available. The MFD is mainly intended for use with the Space Shuttle Vessel addon for Orbiter Space Flight Simulator 2024.

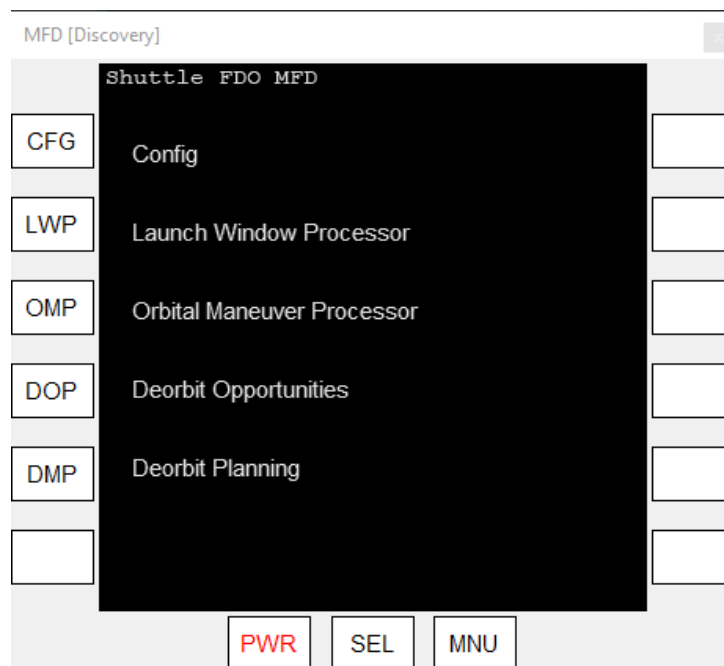


Figure 1: Main Menu

2 Configuration

The Configuration Menu is the place where several options can be selected before the function of the MFD are used. Additionally the settings and the OMP rendezvous plan can be saved or loaded in this menu.

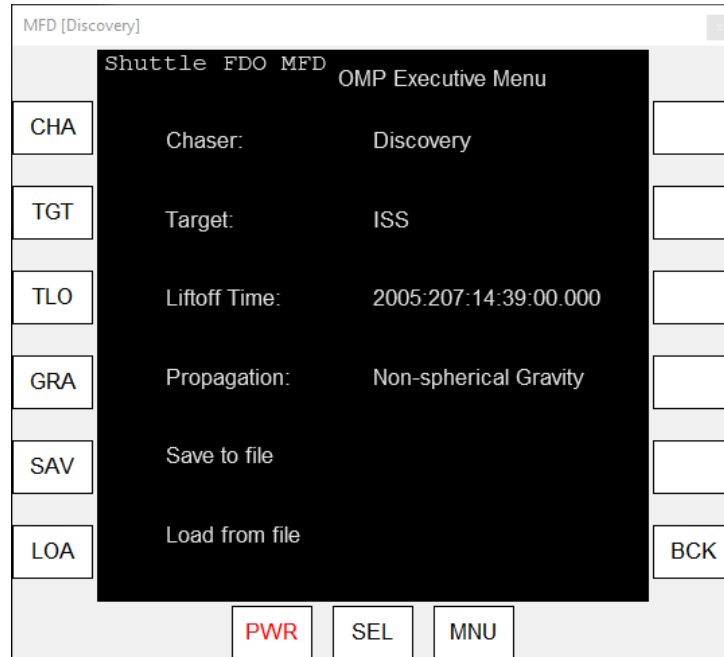


Figure 2: OMP Executive Menu

Buttons

CHA: Select the chaser vehicle.

TGT: Select the target vehicle.

DLO: Set the launch day. Format: "YYYY:DDD". Alternatively, leave the input blank and the current day will be loaded.

GRA: Cycle between the two gravity options of the MFD (Taking non-spherical gravity into account or not).

SAV: Save a constraints table to file.

LOA: Load a constraints table from file.

BCK: Go back to previous menu.

TLO: Set the time of liftoff. Format: "HH:MM:SS".

3 LWP User's Guide

The Launch Window Processor is used to determine the times that launch can be done to get into the proper orbit to accomplish the rendezvous. It allows the use of inputs to easily determine the planar window open, inplane and close times as well as the phase window open and close times using phase angle constraints (if required). Before the processor can be used, the day of launch needs to be set on the Config Page. The processor is split in two parts. The first one, the LWP, calculates the optimum liftoff time as well as the opening and closing of the launch window. The LTP, the launch targeting processor, calculates many quantities for targeting the launch at a specific time.

There are three input pages and two output pages for the LWP.

3.1 LWP Input Page 1

	Shuttle	FDO	MFD
TGT	ISS	14.400°	
LS	39A	08:39.0	
LAT	28.6084° -80.6233°	52.0 NM	
AZI	North	25818.9 fps	
YS	14.000°	0.600°	

Figure 3: LWP Input Page 1

TGT: is the target vehicle, whose state vector is used as an input to the LWP.

LS: can be used to input a specific launch pad (39A or 39B currently), so that the coordinates are automatically loaded. Default is LC-39A.

LAT: can be used to overwrite the launchpad latitude (if you want to launch to the HST you might have to bias the latitude southwards in order to get the LWP to calculate a solution) and longitude.

AZI: to calculate either a northerly launch or a southerly launch.

YS: is the maximum yaw steering the Shuttle can do for the ascent to orbit. Not really relevant for SSV right now and it should probably always stay 14°.

PFA: is the powered flight arc from launch to insertion. The value only needs to be approximately right, so fine tuning it for a specific launch shouldn't be required. This applies to most numbers on the right side of this page

PFT: is the powered flight time from liftoff to insertion.

ALT: is the insertion altitude above the Earth equator in nautical miles.

VEL: is the insertion velocity. This and FPA below will need to be adjusted for the specific mission if the LWP output state vector is to be used in the OMP, because it's very different from e.g. a mission to the ISS as compared to a mission to the HST.

FPA: is the flight path angle at insertion.

3.2 LWP Input Page 2

Parameter	Value
DTE	00:12.0
DVE	5.0 0.0 -5.0
DTM	01:54.0
DVM	9.7 0.2 -1.0
WT	251679 lbm
Direct Insertion	0

Figure 4: LWP Input Page 2

DTE: is the delta time from MECO to ET separation. Probably always 12 seconds.

DVE: is the DV vector of the ET separation maneuver. The DVX component should be either 0 ft/s (no +X translation maneuver or ET photo pitch maneuver) or 5 ft/s (to account for the +X translation maneuver). For DVZ the usual value is 5 ft/s. This is the translation maneuver that is done automatically to get the Orbiter away from the ET. The value should be +5 ft/s if the attitude is heads down or -5 ft/s if the attitude is heads up.

DTM: is the delta time from MECO to the MPS dump; just like the ET sep maneuver this assumes an impulsive burn.

DVM: is the DV of the MPS dump. The FDO Console Handbook specifies numbers that are averages from flight data:

heads down: +9.2, -2.6, -4.2

heads up: +9.7 +0.2 -1.0

OPT: is the optimal, zero yaw steering delta time from the in-plane time. This is an empirical derived number depending on time it takes to ascent to orbit etc. The FDO Console Handbook has suggests a value of -5:40, for SSV the best value from testing is -5:23. This will only be accurate for 51.6° inclination and a specific Shuttle weight and insertion conditions but it should be quite close in all cases.

DTO: is the delta time for the opening of the launch window. Launch window to the ISS is usually 10 minutes long, so DTO and DTC are -5 minutes and + 5 minutes. SSV can't do any yaw steering yet so this is only used for information purposes, for the calculation of the phase angles.

DTC: is the delta time of the launch window closing.

PHA (for phase angle) and **WRA** (for wrap) are two flags used by the LWP and currently it will only be used in the phase angle calculation. For example, this will decide if a phase angle is 30° or 390°. Here are the numbers that should be input:

Expected OMS-2 Φ	-90 to 90°	90 to 270°	270 to 450°	450 to 630°	630 to 720°
Phase Control	2	0	2	0	2
Wrap	0	0	1	1	2

3.3 LWP Input Page 3

Shuttle FDO MFD			
LNCH REF TGT SET			
OMS-1 TGTS	OMS-2 TGTS		
DTIG	000:00:01:54.000	000:00:29:12.000	DTIG
C1/2	0.0 0.0	0.0 0.0	C1/2
HT	120.0	111.0	HT
THT	133.0	315.0	THT
			NXT

PWR SEL MNU

Figure 5: LWP Input Page 3

DTIG: Time of OMS-1 time of ignition from ET separation.

C1/2: C1 and C2 of the OMS-1 maneuver. Nominally zero.

HT: Height target of the OMS-1 maneuver.

THT: Angle measured from the launch site of the target position for the OMS-1 maneuver.

DTIG: Time of OMS-2 time of ignition from ET separation.

C1/2: C1 and C2 of the OMS-2 maneuver. Nominally zero.

HT: Height target of the OMS-2 maneuver.

THT: Angle measured from the launch site of the target position for the OMS-2 maneuver.

NXT: Go to Launch Targeting Processor page.

3.4 LWP Output Page

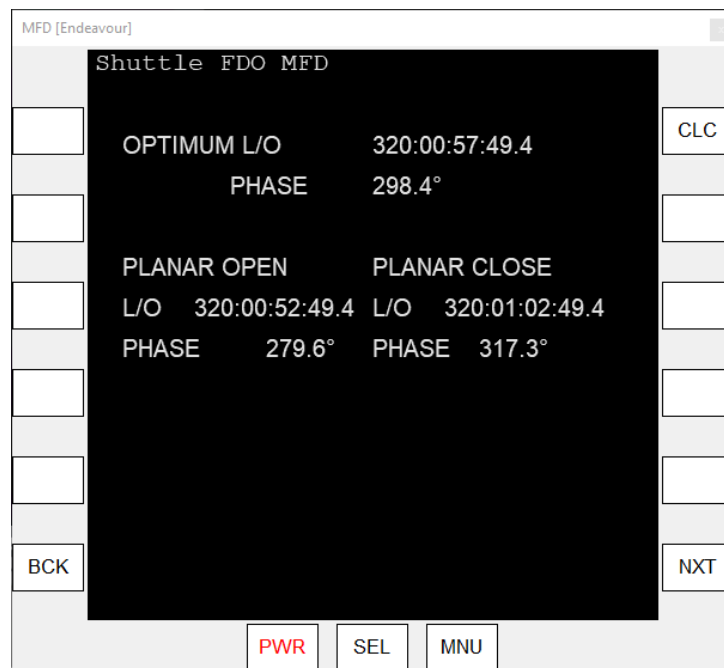


Figure 6: LWP Output Page

This page contains the CLC button to run the Launch Window Processor. It also displays the output parameters of the processor. At the top it has the optimum liftoff time and the phase angle at insertion associated with it. Below it has the same parameters, but for the planar opening and closing of the launch windows, as specified with the DTO and DTC parameters on the previous page.

3.5 LTP Output Page

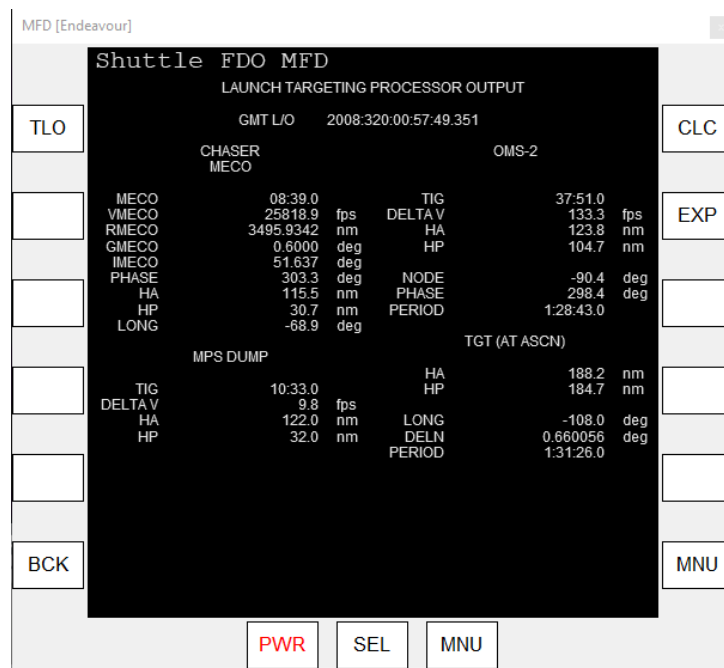


Figure 7: LTP Output Page

TLO Input actual launch time for launch targeting. The LWP automatically moves the optimum launch time here.

BCK Go back to LWP output page.

CLC Calculate launch targeting.

EXP Export launch targeting data for uplink. Not implemented yet.

4 OMP User's Guide

4.1 Maneuvers and Constraints

The OMP is capable of computing many different types of maneuvers, for example it can target a desired orbit height for a Hohmann transfer, or downtrack distance from another spacecraft after a period of time. For all maneuver types, the user must specify a *primary constraint*, for example Time of Ignition (TIG) of the burn in Mission Elapsed Time (MET), or number of revs since a previous burn. Most maneuver types also require one or more *secondary constraints*; these are normally of a lighting or geometric nature. For the height adjust (HA) burn example mentioned above, a valid secondary constraint would be APO=1 in order to force TIG to occur at the next apoapsis. In other words, the OMP would begin searching for the next apoapsis, starting at the threshold time specified as the primary constraint. Another secondary constraint could be HD=160, which tells the OMP what height to target for the burn (160 nm in this example). Some secondary constraints define desired chaser-target relative position at a future time (downrange distance, or DR, for example).

The following passage is a complete list of all maneuvers supported by the OMP in the Shuttle FDO MFD.

4.1.1 Single Vehicle Maneuvers

The following list shows the maneuvers, which are supported in OMP for use with only a single vehicle. In other words, they are target independent.

APSO (Apsidal Shift)

This is a maneuver targeted to shift the chaser's line of apsides with a purely radial maneuver done halfway between the current and desired line of apsides. This maneuver is normally used with the A or P secondary constraints (not supported yet!).

CIRC (Circularization)

This maneuver is targeted to circularize the chaser's orbit at the maneuver time.

DVPY (Delta Velocity with Pitch and Yaw)

This maneuver is a PEG 7 maneuver, similar to the EXDV maneuver, defined by a delta velocity magnitude and a LVLH pitch and yaw thrust direction. These parameters are indicated by the DV, YAW and PIT secondary constraints.

DVYP (Delta Velocity with Yaw and Pitch)

Same as above.

EXDV (External Delta Velocity)

This is a PEG 7 targeted maneuver defined by LVLH velocity components as specified with DVLV secondary constraints in X, Y and Z order.

HA (Height Adjust)

This is a horizontally executed maneuver targeted to achieve a desired orbital altitude 180° from the maneuver point. Thus, this maneuver is targeted as a Hohmann transfer. The desired orbital altitude is indicated by the HD "height desired" secondary constraint.

HASH (Height Adjust and Apsidal Shift)

This is a maneuver targeted to achieve a desired orbital altitude 180° from the maneuver point and to simultaneously move the line of apsides to the maneuver point. The desired altitude is indicated by the HD secondary constraint.

LSDV (Line of Sight Delta Velocity)

This maneuver is a PEG 7 targeted maneuver, similar to the EXDV maneuver, defined by velocity components in the line of sight coordinate system. The X axis is along the line of sight vector, the Y axis perpendicular to the line of sight vector in the direction of the negative angular momentum vector, and the Z axis completes the right handed system. The velocity components are indicated using the DVLS secondary constraints.

NOSH (Node Shift)

This maneuver is targeted to shift the ascending or descending node location. The angle to be shifted is indicated using the DNOD secondary constraint. This maneuver has no unique rendezvous constraints.

PC (Plane Change)

This maneuver is targeted to change the orbital plane of the chaser. The amount of plane change is indicated by the DPC secondary constraint. When this maneuver is located at an ascending or descending node using the ASC or DSC secondary constraints, the plane change will be only in orbital inclination. This maneuver has no unique rendezvous constraints.

4.1.2 Dual Vehicle Maneuvers

The follow list shows the maneuvers which are supported in OMP using two vehicles, a chaser and a target.

NC (n^{th} Closing Maneuver)

This is a horizontally executed maneuver targeted to obtain the desired offset position from the target (phase angle) at a future time. This maneuver controls the X axis curvilinear distance. The offset position is indicated using the DR secondary constraint.

NCC (nth Corrective Combination)

This is a Lambert targeted maneuver correcting the chaser's trajectory to achieve the desired offset position relative to the target. The desired curvilinear LVLH offset position is indicated by CXYZ secondary constraints in X, Y, Z order. Alternative, DR, WEDG and DH constraints can be used. The maneuver controls all curvilinear axes. It is a combination of three maneuvers: NC, NH and NPC. Typically, Y-offset is set to zero, creating a common node at the subsequent maneuver.

NH (nth Height Adjust)

This is a horizontally executed maneuver targeted to a differential height from the target at some future time. It controls the Z curvilinear distance. The differential height is indicated using the DG secondary constraint.

NHRD (Height Adjust with Radial Component)

This maneuver is similar to the NH maneuver except it contains a radial component to null the radial velocity at the time of the maneuver. The differential height is indicated using the DH secondary constraint.

NPC (nth Plane Change)

This is an out-of-plane maneuver placing the chaser in the target's phantom plane. The phantom plane is the target's actual plane offset by the amount of differential nodal regression calculated to occur between the NPC maneuver and the desired in-plane time (function of height difference). The in-plane time is indicated by the WEDG=0 secondary constraint, placed on a future maneuver. In addition, the maneuver should be placed at a common node between the chaser and phantom target planes which is indicated by the CN=1 secondary constraint. If this is not done, the chaser and target will remain in separate planes. The NPC maneuver controls the Y axis curvilinear distance.

If the WEDG secondary constraint is not used, the maneuver will place the chaser in the target's actual plane at the time of the maneuver.

NS (Node Shift)

This maneuver is targeted to place a common node approximately 90 degrees from the maneuver point.

NSR (nth Slow Rate Maneuver)

This maneuver is targeted to put the chaser in an orbit coelliptic to the target. Coelliptic is defined as a condition where there are coincident lines of apsides. This maneuver is often executed alone, allowing the next maneuver to set up lighting for intercept.

SOI (Stable Orbit Initiation)

This is a Lambert targeted maneuver correcting the chaser's trajectory to achieve the desired offset position relative to the target at the subsequent SOR maneuver. The offset

position is indicated with the CXYZ secondary constraints. The SOI maneuver must be followed by a SOR maneuver.

SOR (Stable Orbit Rendezvous)

This is the second maneuver of the Lambert pair SOI/SOR. This maneuver is Lambert targeted to re-intercept the SOR offset position after 270° of orbital travel, essentially stabilizing the chaser in the same orbit as the target, assuming offsets are small.

SOR can also be a stand-alone maneuver. The maneuver computed will be the same as an NCC maneuver in a NCC/NSR combination when the primary constraint for the NSR is $WT=270$ ($M=0.75$) and the secondary constraint offsets are the same as the SOR maneuver.

TPI (Terminal Phase Initiation)

This is a Lambert targeted maneuver placing the chaser on an intercept trajectory with the target (zero offsets). This maneuver must be followed by a TPF.

TPF (Terminal Phase Final)

This is the second maneuver of the Lambert pair TPI/TPF. It is designed to null the relative rates between the target and chaser at the intercept point, i.e. zero position offset, as opposed to SOR which has uses variable offsets defined by CXYZ.

TPF is also a stand-alone maneuver. When used as such, the relative rates between the chaser and target will be instantaneously nulled. This is the same as the T2 compute (Item 29 Exec) of Orbit Targeting in the Orbiter software.

4.1.3 Threshold (Primary) Constraints

The following descriptions reference the threshold constraints (referred to as "primary constraints") supported by OMP. These constraints are used to define the Time of Ignition (TIG) of the maneuver if no secondary constraint is specified. If a geometric or lighting secondary constraint exists for the maneuver, the threshold constraint defines the threshold, or the time at which the OMP starts to search for the geometric or lighting constraint's value.

APS (Delta Apsides)

This specifies the number of chaser half orbits from the previous maneuver. For example, $APS=2.0$ would yield the same result as $M=1.0$.

CAN (Central Travel Angle)

This specifies that the maneuver will occur when the chaser has flown through the central travel angle specified in degrees.

DLT (Delta Time)

This specifies the delta time from the previous maneuver's impulsive ignition time to the current maneuver's impulsive ignition time. The OMP expects this delta time in a DD:HH:MM:SS.SS format.

DT (Delta Time)

This specifies the delta time from the previous maneuver's impulsive ignition time to the current maneuver's impulsive ignition time. The OMP expects this delta time in a DDD:HH:MM:SS.SSS format.

DTL (Delta Time)

This specifies the delta time from the previous maneuver's impulsive ignition time to the current maneuver's impulsive ignition time. The OMP expects this delta time in a DDD:HH:MM:SS.SSS format.

M (Delta Orbits)

This specifies the number of chaser orbits from the previous maneuver. The value may be a decimal fraction.

N (Delta Apsides)

This specifies the number of chaser half orbits from the previous maneuver.

REV (Delta Revolutions)

This specifies the number of chaser orbits from the previous maneuver in orbits. This value may be a decimal fraction.

T (Time)

The maneuver's impulsive ignition time will occur at the specified time. The OMP expects MET in DDD:HH:MM:SS.SSS format.

WT (Central Travel Angle)

This specifies that the maneuver will occur when the chaser has flown through the central travel angle specified in degrees.

4.1.4 Geometric (Secondary) Constraints

The following documentation reference geometric (secondary) constraints supported by OMP. These constraints are used to alter the maneuver's TIG to meet the geometric constraint in relation to the Earth, inertial space, the chaser or target orbit, or the target.

A (Angle from Apogee)

The maneuver is executed at a desired central travel angle from the chaser's apogee. The angle is input in degrees.

ALT (Altitude)

The maneuver is executed at a desired altitude above the surface of the Earth. The altitude is input in nautical miles.

APO (n^{th} Apogee)

The maneuver is executed at the n^{th} apogee of the chaser's orbit after the threshold constraint, where N is the constraint's value.

APS (n^{th} Apsidal Crossing)

The maneuver is executed at the n^{th} chaser apsidal crossing after the threshold constraint. To insure convergence, minimum delta-height between the chaser's apogee and perigee must be >10 nm.

ARG (Argument of Latitude)

The maneuver is executed when the specified argument of latitude is first encountered following the primary constraint's threshold epoch. Argument of latitude is the angle, measured in the plane of the chaser's orbit, from the ascending node to the chaser position. This angle is specified in degrees.

ASC (n^{th} Ascending Node)

The maneuver is executed at the n^{th} ascending node of the chaser's orbit after the threshold time where N is the constraint's value.

CN (Common Node)

The maneuver is executed at a common nodal crossing of the target and chaser orbit planes. When used in conjunction with the WEDG secondary constraint, the chaser maneuver will be executed at a phantom common nodal crossing such that the two vehicles will be coplanar at the WEDG specified time.

DEC (Declination)

The maneuver is executed at the specified latitude of the chaser's orbit. The angle is input in degrees.

DSC (n^{th} Descending Node)

The maneuver is executed at the n^{th} descending node of the chaser's orbit after the threshold time, where n is the constraint's value.

LAT (Latitude)

The maneuver is executed at the specified latitude of the chaser's orbit. The angle is input in degrees.

LON (Longitude)

The maneuver is executed at the specified longitude of the chaser's orbit. The angle is input in degrees.

OPT (Optimum Node Shift)

The maneuver is executed at the optimum node shift point. This secondary constraint has no particular numeric value.

P (Angle from Perigee)

The maneuver is executed at a desired central travel angle from the chaser's perigee. The angle is input in degrees.

PER (nth Perigee)

The maneuver is executed at the nth perigee of the chaser's orbit after the threshold constraint, where n is the constraint's value.

U (Argument of Latitude)

The maneuver is executed at the specified argument of latitude from the chaser's next ascending node. The angle is input in degrees.

4.1.5 Lighting (Secondary) Constraints

The following descriptions reference lighting (secondary) constraints supported by OMP. These constraints allow maneuver times to be based on lighting events. All constraint values are input in minutes from the event, where positive values are after the event.

LITI (Time from Sunrise)

The maneuver is executed at a time relative to orbital sunrise. This is similar to the NITO lighting constraint.

LITM (Time from Noon)

The maneuver is executed at a time relative to orbital noon.

LITO (Time from Sunset)

The maneuver is executed at a time relative to orbital sunset. This is similar to the NITI lighting constraint.

NITI (Time from Sunset)

The maneuver is executed at a time relative to orbital sunset. This is similar to the LITO lighting constraint.

NITM (Time from Midnight)

The maneuver is executed at a time relative to orbital midnight.

NITO (Time from Sunrise)

The maneuver is executed at a time relative to orbital sunrise. This is similar to the LITI lighting constraint.

4.1.6 Other Secondary Constraints

The following descriptions reference remaining secondary constraints supported by OMP. These constraints are used to modify maneuver solutions or to provide the OMP with desired relative state information.

CXYZ (Curvilinear Offsets)

This specifies the chaser relative X, Y and Z position in the target centered local vertical curvilinear coordinate system. The distances are input in nm. Positive distances are when the chaser is leading, below and to the right of the target. OMP expects these to be input in an X, Y, Z ordered triplet (e.g. CXYZ= -8.0, CXYZ=0.0, CXYZ=0.2 for Ti position when targeting an NCC maneuver).

DH (Delta Altitude)

This specifies a desired differential height at the chaser maneuver time with the target propagated along its actual orbit to a condition of phase match. The distance is input in nautical miles. Positive distances are when the chaser is below the target.

DNOD (Delta Node)

This specifies the amount of node shift desired when the NOSH maneuver is executed. The angle is input in degrees.

DPC (Delta Plane Change)

This specifies the amount of plane change desired when the PC maneuver is executed. The angle is input in degrees.

DR (Down Range Offset)

This specifies the downrange position that is desired at the maneuver's TIG in nautical miles. Positive distances are when the chaser is leading the target.

DV (First Guess Delta Velocity)

This supplies an initial guess of a minimum DV magnitude for the chaser maneuver's NC and NH, in fps. This secondary constraint gives orbital wrap around capability for phasing. DV is used for NC maneuvers to insure convergence since OMP uses 0 fps for the default initial guess.

When used in conjunction with either the DVPY or DVYP maneuvers, this secondary constraint defines the total DV magnitude of the maneuver.

DVLS (Line of sight Delta Velocity)

This specifies the external delta velocity component in the line of sight X, Y and Z direction, in fps. OMP expects these to be input in an X, Y, Z ordered triplet.

DVLV (Local Vertical Delta Velocity)

This specifies the external delta velocity component in the LVLH X, Y and Z direction for the EXDV maneuver, in fps. OMP expects these to be input in an X, Y, Z ordered triplet (e.g. DVLV=3.0, DVLV=0.0, DVLV=0.0 for a posigrade 3 fps maneuver).

HD (Height Desired)

This specifies the desired chaser altitude to be achieved after 180 degrees of orbital travel from a HA or HASH maneuver, in nautical miles. Positive altitudes are when the chaser is above the surface of the Earth.

NULL (Null Y-dot)

This specifies that the out-of-plane relative velocity between the chaser and target be nulled at the time of the chaser's maneuver. This secondary constraint has no particular numeric value.

PIT (Pitch)

This specifies the pitch value for the DVPY or DVYP maneuvers in degrees.

WEDG (Wedge Angle)

This specifies wedge angle for the NPC maneuver to target at some future maneuver. This secondary constraint should be placed on the maneuver for which the desired wedge angle is to be achieved. For example, in order to target an NPC maneuver to put the chaser in the target's plane at T_i , a secondary constraint of WEDG=0.0 should be placed on the SOI maneuver in the plan.

YAW (Yaw)

This specifies the yaw value for the DVPY or DVYP maneuvers, in degrees.

4.2 OMP Displays

There are several displays that OMP uses for data input, execution, and viewing. There is a section for each of the displays. A copy of the display along with a parameter definition will be given in each of these sections. The format for the parameter definitions will give the parameter on the left side of the page and the description on the right. After each description, the units of the parameter will be given in parenthesis, if applicable.

4.2.1 Maneuver Constraints Table (MCT)

The MCT is used to input maneuver constraints for the OMP to process when generating a rendezvous plan. Three columns are provided to allow the user to specify maneuver type, primary constraint, and secondary constraints for each maneuver.

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER CONSTRAINTS TABLE STS-126

MNVRS: 9 / 40

MANEUVER	THRESHOLD	SECONDARIES
1 HA OMS-2	T 000:00:30:00.000	APO =1.0 HD =85.0
2 NC NC-1	M 2.0	DV =100.0
3 EXDV NC-2	M 9.0	DVLV =8.0 DVLV =0.0 DVLV =0.0
4 NPC NPC	DT 000:00:00:01.000	CN =1.0
5 EXDV NC-3	M 6.0	DVLV =3.0 DVLV =0.0 DVLV =0.0
6 NH NH	M 9.5	
7 NC NC-4	M 0.5	DR =-40.0

PWR SEL MNU

Figure 8: Maneuver Constraints Table

<u>Parameter</u>	<u>Description</u>	<u>Units</u>
MCT Plan Name	Name associated with OMP plan	10 characters max.
MANEUVER	Maneuver ID	4 characters max.
THRESHOLD	Threshold constraint and associated value	4 characters max.
SECONDARIES	Secondary constraint and associated values	4 characters max.

Buttons:

UP: Move up to the next maneuver (marked yellow).

DOWN: Move down to the next maneuver (marked yellow).

ADD: Add a maneuver to the MCT. The input format is: "Maneuver-Type Maneuver-Name".

THR: Add/modify threshold (primary) constraints. Input format: "Threshold-Type Threshold-Value".

SEC: Add secondary constraint. Input format: "Constraint-Type Constraint-Value".

DEL: Delete maneuver from table. Input format: "Maneuver-ID".

MOD: Modify maneuver in the table. Input format: "Maneuver-Type Maneuver-Name".

DES: Delete secondary constraint from table. Input format: "Secondary-ID".

INS: Insert maneuver into table before currently selected maneuver. Input format: "Maneuver-Type Maneuver-Name".

MOS: Modify secondary constraint in the table. Format: "Secondary-ID Constraint-Type Constraint-Value".

CLC: Calculate rendezvous plan.

BCK: Go back to previous menu.

4.2.2 Maneuver Evaluation Table (MET)

After a plan is run, the output may be viewed on the Maneuver Evaluation Table (MET). The table contains numbers associated with each maneuver of the mission plan.

MFD [Endeavour]		Shuttle FDO MFD						TRA	
UP		MANEUVER EVALUATION TABLE STS-126							
		GMTR : 2008:320:00:55:39.000							
		Chaser DVtot = 386.77 DVx = 383.64 DVy = 46.17 DVz = 12.41							
		Target DVtot = 0.00 DVx = 0.00 DVy = 0.00 DVz = 0.00							
DN		Mnvr Name Comment DVMag	GMTIG IMP METIG DT	DVX DVY DVZ	HA HP DH	RANGE PHASE Noon/Mid -	Y Ydot SR/SS -		
		1 HA OMS-2 89.1	320:01:35:56.698 000:00:40:17.698 000:02:56:49.309	89.09 0.00 -0.00	126.50 85.00 54.77	4099.7578 -69.4652 N-00:21:28	38416.6 -9.5 SS-00:47:06		
		2 NC NC-1 11.5	320:04:32:46.007 000:03:37:07.007 000:13:16:45.959	11.48 0.00 0.00	126.50 91.35 54.77	5196.8128 -92.4663 N-00:21:31	38416.6 -9.6 SS-00:47:20		
		3 EXDV NC-2 8.0	320:17:49:31.966 000:16:53:52.966 000:00:19:19.335	8.00 0.00 0.00	126.50 95.78 54.77	7163.0901 108.3814 N-00:21:41	38416.6 -9.6 SS-00:47:37		
		4 NPC NPC 46.2	320:18:08:51.302 000:17:13:12.302 000:08:32:22.138	-0.04 46.17 0.00	126.50 95.78 70.38	7134.8979 166.4939 N-00:02:20	-0.0 -0.0 SS-00:28:17		
		5 EXDV NC-3 3.0	321:02:41:13.440 001:01:45:34.440 000:14:02:06.803	3.00 0.00 0.00	126.50 97.44 54.78	5685.8169 104.3127 N-00:21:45	-0.0 -0.0 SS-00:47:45		
		6 NH NH 96.6	321:16:43:20.243 001:15:47:41.243 000:00:44:49.991	96.61 0.00 0.00	181.08 97.44 87.93	252.4785 3.7839 M-00:21:43	0.0 0.0 SS-00:03:35	BCK	
		PWR SEL MNU							

Figure 9: Maneuver Evaluation Table

<u>Parameter</u>	<u>Description</u>	<u>Units</u>
MANEUVER EVALUATION TABLE	OMP output filename	
GMTR	GMTLO of source vectors	
DVtot	Total plan DV magnitude	fps
DVx, y, z	Sum of the LVLH DVx, y, z magnitudes	fps
MNVR NAME	Maneuver type	
COMMENT	Maneuver comment/name	
DVMAG	Total DV of maneuver	fps
GMTIG	Impulsive GMT of ignition	DDD:HH:MM:SS.SSS
METIG	Impulsive MET of ignition	DDD:HH:MM:SS.SSS
DT	Time until next maneuver	DDD:HH:MM:SS.SSS
DVX,Y,Z	Cartesian components of DV in Orbiter-centered LVLH coordinates	fps
HA, HP	Chaser apsis altitude above a spherical Earth at the maneuver's burnout	NM
DH	Chaser altitude minus target altitude at phase match with the chaser at the maneuver's TIG	NM
RANGE	Distance between the chaser and target at the maneuver's TIG	NM
PHASE	Phase angle between the chaser and target at the maneuver's TIG. + if chaser is trailing the target	deg
NOON/MID	Time from TIG until next orbital noon or midnight	HH:MM:SS
Y	Distance of the chaser from the target's orbital plane at the maneuver's TIG	feet
YDOT	Chaser's out-of-plane velocity at the maneuver's burnout	fps
SR/SS	Time from TIG until next orbital sun- rise or sunset	HH:MM:SS

Buttons

TRA: Transfer maneuver plan to Maneuver Transfer Table.

BCK: Go back to previous menu.

4.2.3 Maneuver Transfer Table (MTT)

A rendezvous plan may be transferred to the Detailed Maneuver Table after it has been generated. The OMP computes an impulsive TIG and LVLH DV components, but the DMT needs more information about the burn. It requires the chaser vehicle's thruster selection and thrust vector roll angle (TVR) in order to compute burn attitude, plus guidance mode. The Maneuver Transfer Table (MTT) is used to define this information before a plan is transferred to the DMT - it essentially allows the burn to be converted from impulsive to finite.

At the bottom of the MTT are ten slots where different configurations may be defined. A standard configuration is provided when the display is first called, one for each potential maneuver in the plan. The user may choose from any of the ten slots to define the configuration for a burn. Manual editing of the options is not supported in the MFD at this time.

MFD [Endeavour]

SLO

Shuttle FDO MFD

MNVR	NAME	COMMENT	SLOT	THR	GUID	ITER	IMP	RREF	ROLL
1	HA	OMS-2	1	OBP	P7	NO	OPT	TVR	0
2	NC	NC-1	1	OBP	P7	NO	OPT	TVR	0
3	EXDV	NC-2	1	OBP	P7	NO	OPT	TVR	0
4	NPC	NPC	1	OBP	P7	NO	OPT	TVR	0
5	EXDV	NC-3	1	OBP	P7	NO	OPT	TVR	0
6	NH	NH	1	OBP	P7	NO	OPT	TVR	0
7	NC	NC-4	1	OBP	P7	NO	OPT	TVR	0
8	SOI	TI	1	OBP	P7	NO	OPT	TVR	0
9	SOR	MC-4	1	OBP	P7	NO	OPT	TVR	0

SLOT	1	2	3	4	5	6	7	8	9	10
THRUSTER	OBP	OBP	OL	OL	OR	OR	PX2	PX2	PX2	OL
GUIDANCE MODE	P7	P7	P7	P7	P7	P7	P7	P7	P7	P7
ITERATE FLAG	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
IMPULSIVE FLAG	OPT	OPT	OPT	OPT	OPT	OPT	OPT	OPT	IMP	IMP
LOCAL ROLL REF	TVR	TVR	TVR	TVR	TVR	TVR	TVR	TVR	TVR	TVR
LOCAL ROLL	0	180	0	180	0	180	0	180	0	0

EXE

PWR

SEL

MNU

Figure 10: Maneuver Transfer Table

<u>Parameter</u>	<u>Description</u>	<u>Units</u>
MNVR	Maneuver number	1-9
NAME	Maneuver type	4 characters
COMMENT	Comment associated with maneuver	10 characters max.
SLOT	Slot number to reference characteristics from table below	
THRUSTERS	Thruster selection for the maneuver	PX2, OL, OR, OBP
GUID	Guidance mode for the maneuver	PEG7
ITER	Iteration flag	YES, NO
IMP	Impulsive/Optimize flag	IMP, OPT
RREF	Local roll reference for the maneuver	TVR
ROLL	Local roll angle for the maneuver	deg

Buttons

SLO: Choose which of the slots with maneuver options is applied to the maneuver. Input format: "Maneuver-ID Slot-ID"

MOD: Modify the maneuver options individually. Input format: "Maneuver-ID Parameter-Type Value"

EXE: Calculate maneuver parameters based on the thruster and attitude selection and transfer them to the Detailed Maneuver Table.

BCK: Go back to previous menu.

The currently available thruster options are two +X thrusters (PX2), both OMS engines (OBP), left OMS engine (OL) and right OMS engine (OR).

The impulsive flag may be set to either IMPulsive (IMP) or OPTimize (OPT) to control TIG selection during the transfer to the DMT. If OPT is chosen, the maneuver's burn arc is taken into account by "splitting the TIG". That is, the transferred TIG is set equal to the OMP TIG minus one-half of the length of the burn. The OMP's impulsive delta velocities, converted to the inertial frame, are then applied to the burn. When IMP is chosen, the transferred TIG is the same as the OMP-computed TIG. In normal practice, the impulsive flag is set to OPT for any non-Lambert burns in order to center the burn arc about the impulsive TIG. This is extremely important for big burns (>50 fps) that have a significant burn arc. On day of rendezvous, NCC, Ti, and all mid-course burns are transferred as IMP so that the same TIG is used consistently between ground and onboard, to assure that the timeline in the Rendezvous Checklist is adhered to.

4.3 Default Plans

A number of default rendezvous plans have been provided with the MFD. These cover various phase angles at insertion. They can be loaded like full save file on the config page, but they will not overwrite any other parameters like the vehicle name.

Plan Name	Rendezvous on	Phase angle
PlanA	Flight Day 2	39 to 93 DEG
PlanB	Flight Day 3	60 to 175 DEG
PlanC	Flight Day 3	175 to 327 DEG
PlanD	Flight Day 3	327 to 407 DEG

5 Detailed Maneuver Table

Any maneuver residing in the Maneuver Transfer Table may be placed in a DMT for display purposes. As such, DMTs function as the primary means of gaining insight into a maneuver's specifications. The central portion of the DMT is associated with Pre-Advisory Data (PAD) parameters. This segment is used to generate a PAD Flight note. The other parts of the DMT, which contain additional data about each maneuver, are currently not supported in the MFD.

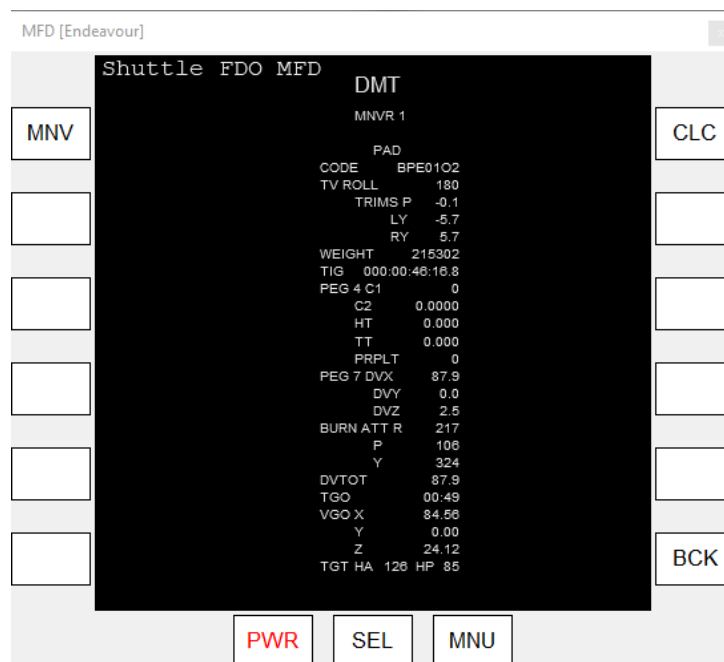


Figure 11: Detailed Maneuver Table

Buttons

MNV: Choose which of the maneuvers in the list transferred from the MTT should be displayed.

CLC: Calculate maneuver parameters for the chose burn.

BCK: Go back to previous menu.

6 DOPS User's Guide

The Deorbit Opportunities Processor computes landing opportunities to landing sites based on an orbital crossrange constraint. It is a lookahead study to select the right orbit and landing site at some point in the future. The actual deorbit burn would be targeted with the Deorbit Maneuver Processor. The time of ignition and landing time are derived as a simple curve fits from the time of closest approach to the site.

Shuttle FDO MFD						
DEORBIT OPPORTUNITIES TABLE (DOT)						
REV	GETS	001:15:00:00.0	GETF	002:15:00:00.0	XRNG	800
TIG ORB	SITE	TIG MET	LANDING MET	LANDING GMT	LIGHT	XRNG
32	KSC	01/21:42	01/23:00	142:09:11	1:17BR	358AL
33	NOR	01/23:14	02/00:32	142:10:43	1:20BR	634AL
33	KSC	01/23:17	02/00:35	142:10:46	0:17AR	517AR
34	EDW	02/00:47	02/02:05	142:12:16	0:28BR	282AL
34	NOR	02/00:49	02/02:06	142:12:17	0:14AR	220AR
35	EDW	02/02:22	02/03:40	142:13:51	1:06AR	469AR
37	KSC	02/05:43	02/07:00	142:17:11	6:41AR	558DR
38	EDW	02/07:10	02/08:28	142:18:39	5:53AR	629DR
38	NOR	02/07:13	02/08:30	142:18:41	6:37AR	432DR
38	KSC	02/07:18	02/08:35	142:18:46	5:22BS	307DL
39	EDW	02/08:45	02/10:03	142:20:14	6:38BS	33DL
39	NOR	02/08:47	02/10:05	142:20:16	5:46BS	366DL

Figure 12: Deorbit Opportunities Table

<u>Parameter</u>	<u>Description</u>	<u>Units</u>
TIG ORB	Revolution number at landing	
SITE	Name of landing site	
TIG MET	MET of ignition	DD/HH:MM
LANDING MET	MET of landing	DD/HH:MM
LANDING GMT	GMT of landing	DD/HH:MM
LANDING LIGHT	Light condition at the time of landing	H:MM
XRNG	Crossrange at closest approach	Nautical miles

The light condition at landing is written in a coded format where a stands for after, b for before, r for sunrise, s for sunset. So e.g. 3:02ar would mean the landing time is 3 hours and 2 minutes after sunrise. For the crossrange, A stands for ascending node, D for descending node. L for landing site left of groundtrack, R for right of ground. So e.g. 102DR means at closest approach the landing site is 102 NM to the right of the

groundtrack, during the descending pass.

The landing sites are defined in a config file which can be modified. It can be found under "\Config\MFD\ShuttleFDOMFD\DOPSLandingSites.txt". The required entries are name, latitude, longitude, radius and time zone relative to GMT. The table is pre-filled with the three main landing sites used for the Shuttle, which are the Kennedy Space Center (KSC), Edwards Air Force Base (EDW) and Northrup Strip at White Sands (NOR), as well as many possible emergency landing sites.

Buttons

REV: Choose the revolution number associated with the starting time.

STA: Specify the MET to start searching for deorbit opportunities.

END: Specify the MET to end searching for deorbit opportunities.

XR: Specify the maximum crossrange in nautical miles.

SIT: Choose whether the deorbit opportunities are only calculated for the main landing sites in the continental US or for all landing sites in the DOPS table.

BCK: Go back to previous menu.

CLC: Calculate the DOPS solution.

PAG: Cycle between the pages of available solutions.

7 DMP User's Guide

The Deorbit Maneuver Processor (DMP) calculates guidance targets for a deorbit maneuver and verifies the maneuver to EI. The DMP processor then stores information associated with the deorbit maneuver, the burnout vector, the EI vector, the PEG 4/PEG 7 targets, the fuel usage/ ΔV for the selected engine configuration, the Entry Target Generator (ETG) V/γ /range from entry interface (REI), and post maneuver weight, crossrange and perigee.

The DMP processor calls the ETG subroutine to calculate PEG 4D targets that satisfy the EI conditions for VEI, γ EI, and REI. The DMP will generate a solution which conforms to the following guidelines:

1. The guidance targets calculated by the DMP processor are compatible with the on-board powered flight guidance.
2. The planned deorbit maneuver results in the achievement of a correlated V , γ , and range set at EI. This target set is calculated by ETG after being called by the DMP processor.
3. The deorbit maneuver is targeted to burn a specified amount of propellant, allowing achievement of landing weight or CG constraint.
4. The targeting is such that if the primary propulsion system fails to ignite, then a pre-designated backup propulsion system can perform the maneuver with no change in input guidance targets (including time of ignition (TIG)) and achieve nominal entry conditions.
5. In the TIG-free mode, the TIG is selected so that the same amount of Orbital Maneuvering System (OMS) propellant will be required for either prime or backup propulsion system with or without propellant wasting. A positive or zero propellant margin will result if the prime system fails during the burn.
6. The targeting ensures that minimal guidance and control transients will occur for a switchover from prime to backup thrusters anytime during the burn. Consequently, body attitude changes for fuel wasting must be small when reverting to the backup propulsion system.
7. If it is not desired to find the guidance targets that are biased for both prime and backup propulsion systems, a solution can be found for any single designated propulsion system by setting the backup equal to the primary.
8. Entry crossrange will be computed, and in the event that excess fuel is burned out-of-plane (OOP), it will be burned in a direction that will decrease crossrange.
9. The deorbit solution for any future orbit may be computed by inputting the appropriate TIG threshold time.
10. A TIG-free or TIG-fixed mode can be designated.
11. A minimum Time of Free Fall (TFF) (time from burnout to EI) constraint will be enforced by relaxing the requirement for equal OOP thrust angles until the TFF exceeds or equals the minimum TFF.

7.1 Targeting Options

The following table shows the targeting options which are available in the DMP. These options allow a range of TIG modes, propellant usage, and thruster combinations to be made to accommodate operational situations.

Level I <u>TIG Mode</u>	Level II <u>Propellant Usage</u>	Level III <u>Thruster Selection</u>
1. TIG free	1. Propellant wasting	1. Solution biased for prime and backup thruster (not available in TIG-fixed)
2. TIG fixed	2. In plane	2. Solution for any designated thruster

The following comments are provided to help explain the various combinations of levels I and II.

- a. 1,1 - A specified amount of OMS propellant will be expended. Solution will be such that the OOP thrust angle is the same for primary and backup systems.
- b. 1,2 - Computes a solution such that the amount of OMS propellant expended is the same for both primary and backup systems.
- c. 2,1 - Solution expends a specified amount of propellant to attain a specific CG or weight at EI.
- d. 2,2 - Computes a solution to a nominal EI target that lies in the trajectory plane.

After selecting the proper combination of levels I and II, you must also specify a level III option. The allowable thruster combination for prime and backup are limited for TIG-free solutions since the difference in engine initial specific impulse (Isp) for OMS and RCS do not allow for equal propellant solutions. Any allowed thruster configuration may be designated for a TIG-fixed solution. The primary/backup combinations for each TIG mode are shown in the table below.

Primary <u>thruster</u>	Backup <u>thruster</u>	Allowed for <u>TIG-free</u>	Allowed for <u>TIG-fixed</u>
2 OMS	1 OMS	Yes	Yes
2 OMS	2 OMS	Yes	Yes
1 OMS	1 OMS	Yes	Yes
RCS	RCS	Yes	Yes
2 OMS	RCS	No (no optimum solution exists for these combinations)	Yes
1 OMS	RCS	No (no optimum solution exists for these combinations)	Yes

7.2 Input page

Buttons

ITI: Maneuver with fixed or free TIG.

TIG: Enter time of ignition (fixed) or threshold time (free).

WAS: Propellant to be wasted or zero for in-plane solution.

TPR: Select primary thruster.

TBU: Select backup thruster.

SIT: Select the landing site with runway. The valid sites and their coordinates are listed in the LandingSites.txt file under Config/MFD/ShuttleFDOMFD.

DTS: Go to output display.

BCK: Go back to previous menu.

7.3 Output page

The following values are displayed on the output page of the DMP:

<u>Parameter</u>	<u>Description</u>	<u>Units</u>
SITE	The selected landing site with runway	
TIGMET	Time of ignition in mission elapsed time	DD:HH:MM:SS
C1	C1 for PEG-4D targeting	fps
C2	C2 for PEG-4D targeting	
HT	Height for PEG-4D targeting	nautical miles.
THETA	Angle from TIG position to entry interface	degrees
PL	Propellant to be wasted for PEG-4D targeting	pounds
DVPR	Delta V of the maneuver with the primary thruster	fps
VEI	Velocity at entry interface	fps
cEI	Flight path angle at entry interface	degrees
REI	Range from EI to landing site	nautical miles
XR	Crossrange to landing site	nautical miles
OOP	Out of plane angle for the burn	degrees
TFF	Time of free fall, from cutoff to entry interface	MM:SS
HP	Height of perigee	nautical miles
DW	Propellant expended during the burn	pounds
DVX	Delta V in X-direction for PEG-7 targeting	fps
DVY	Delta V in Y-direction for PEG-7 targeting	fps
DVZ	Delta V in Z-direction for PEG-7 targeting	fps

7.4 Error conditions

Errors are displayed at the bottom of the DMP display. Some are real errors, that instantly stop the calculation, and some are just warnings, where the processing is finished with some constraint potentially being violated. The possible messages are:

1. LANDING SITE NOT IN TABLE

Enter a landing site (including runway) that is in the landing site table under Config/MFD/ShuttleFDOMFD/LandingSites.txt.

2. MAX ITERATIONS EXCEEDED - MITER = N

In one of the DMP iteration loops the maximum iterations were used. The value of MITER printed out identifies the logic area in which the maximum was exceeded. Processing terminated.

3. FREE FALL TIME FORCED TO TFFMIN CONSTRAINT

An acceptable solution was found but the freefall time minimum was encountered. Thus, equal yaw angles were not achieved. Normal termination.

4. FREE FALL TIME CONSTRAINT VIOLATED

A solution was found but freefall time less than the input minimum was required. Normal termination.

5. FREE FALL TIME FORCED TO TFFMIN CONSTRAINT - SOLUTION UN-ACCEPTABLE IN DV

An unacceptable DV resulted even after reaching the minimum freefall time. Processing terminated.

6. PEG: NO PHYSICAL SOLUTION FOUND

No solution was possible from the LTVCON process. Processing terminated.

7. PEG: VGO EQUAL ZERO

A zero Delta V solution found. Processing terminated.

8. PEG: NO CONVERGENCE - MAX ITERATIONS EXCEEDED

No PEG solution was found within the maximum allowed PEG iterations. Processing terminated.

8 MCC Displays

This section contains additional displays that were used in supporting Shuttle missions.

8.1 Supersighter

8.1.1 Purpose

The Supersighter Program will provide instrument pointing angles and the spacecraft attitude required to point at targets of interest. The Supersighter Program operates in seven different modes. An explanation of each mode and what is required to be input is discussed in the following sections.

8.1.2 Display Description

The generic output format (fig. 4-1) for the Supersighter Program is output after each run. The display parameters and their descriptions are

Input Matrix - The source reference matrix for the input attitude.

Output Matrix - The desired reference matrix for the output A and B inertial attitudes.

ATT source - This will always be "MED" for this version of the program. It is hard coded to always appear on the format.

EPH - The ephemeris file being used for the Orbiter state vectors. In the FDO MFD instead the vessel name is used.

VID - The vector identification (ID) of the desired state vector to be used from the specified ephemeris file. Not used in the FDO MFD.

I/P LVLH Bias - The source bias matrix used with the source Relative Matrix (REL-MAT) for local vertical local horizontal (LVLH) offset attitude reference. This matrix ID will define whether the input LVLH attitude is offset and either a P, Y, R or Y, P, R Euler angle sequence. Not used in the FDO MFD yet.

O/P LVLH Bias - The desired bias matrix used with the desired reference matrix for LVLH offset attitude reference. This matrix ID will define whether the output A & B LVLH attitudes are either a P, Y, R or Y, P, R Euler angle sequence. Not used in the FDO MFD yet.

Mode - The desired supersighter mode.

Eigen vector - The eigen axis is defined by a pitch and yaw (P, Y) to bring the Orbiter +X axis along the single axis of rotation. The eigen angle (eigen ang) is the rotation

about that axis.

ELV - Elevation angle for ground targets is the angle between the target local horizontal and the line-of-sight (LOS) from the Orbiter to the target. For celestial targets, the elevation angle is the angle between the line-of-sight from the Orbiter to the Earth horizon and the line-of-sight from the Orbiter to the target.

Input ATT sense - The sense direction for input attitude direction indicator (ADI) or LVLH attitudes. For inertial measurement unit (IMU) input attitudes, the input matrix defines which IMU is to be used.

VEH range - The slant range to target 1 when target 1 is another vehicle.

Mode 2 Lat&Lon - In mode 2, the latitude and longitude is output if the instrument LOS intersects the Earth.

R, P, Y - The input desired attitude angles roll (R) , pitch (P), and yaw (Y) WRT the input matrix reference frame.

MGA - The input middle gimbal angle (second angle of attitude Euler sequence).

Target 1 - The target 1 identification.

Target 2 - The target 2 identification.

Target 1&2 RA, DEC - The right ascension (RA) and declination (DEC) of target 1 or 2.

Target 1 Lat, Lon, Alt - When a ground site ID is input, the latitude, longitude, and altitude of the ground site.

Target 1 RNG - The slant range to target 1 when target 1 is a ground target .

Output A attitude - The computed angles via modes 3, 4, 5, 6, and 7 or the attitude which is input by modes 1, 2 (input via attitude source). The computed angles are for acquisition of signal (AOS) time. LVLH A attitudes are also computed at AOS time. For ADI and LVLH attitudes, the +X, -X, and -Z sense attitudes are output. For IMU attitudes, only the +X sense inertial and LVLH attitudes are output.

Output B attitude - The second solution for mode 5 at AOS time (same attitude sense and start time definition as solution A). LVLH B attitudes are also computed at AOS time.

IA1, IA2, IB1, IB2 - Supersighter temporary instrument ID. The instrument ID indicators

signify

I = Instrument

A = Solution computed for this instrument when vehicle assumes output A attitudes.

B = Solution computed for this instrument when vehicle assumes output B attitudes.

1 = Solution computed for this instrument corresponding to position of target 1 (for A or B).

2 = Solution computed for this instrument corresponding to position of target 2 (for A or B).

For each instrument, the occultation of the target by the Earth, Moon, Sun, and Earth airglow (400,000 feet) will be tested for all modes, and an E, M, S, A symbol will be output to the right of the instrument ID if occultation occurs.

A1 & A2 - Instrument pointing angles A1 and A2 corresponding to a given instrument (IA1, IA2, IB1, IB2) and its associated attitudes (A or B) and target ID (1 or 2) such that the target is seen at the instrument angles through the instrument at the given attitudes at AOS. An * will be output to the right of the instrument angle if the angle is outside the instruments minimum or maximum angle limits.

A3 - Omicron, the angle between the plane formed by the target vector and the negative orbital angular momentum vector and the plane formed by the target vector and the body -Y axis when the pointing vector is aligned with the target vector.

ST - The mission elapsed time (MET) or Greenwich mean time (GMT) input for start time. If the input MET or GMT is during a viewing period or mode 2 is selected, then the input start time will be used for solutions. Otherwise, the next AOS time will be used for the solutions.

AOS - The MET and GMT of acquisition of target.

TCA - The MET and GMT of time of closest approach to the target by the Orbiter.

LOS - The MET and GMT of loss of target.

+X, -Z RA/DEC - The right ascension and declination of the +X and -Z axes of the Orbiter for output A attitude at AOS.

P, Y and T, P - The look angles in a pitch, yaw sequence (P, Y) and phi, theta sequence (T, P) that would place the vehicle body X axis along the LOS to the Earth, Moon and Sun. The angles are computed for all modes at AOS for the output A attitude.

SUPERSIGHTER									
INPUT MATRIX	SSSSSS	ATT SOURCE	SSSS	1/P LVLH BIAS	SSSSSS				
OUTPUT MATRIX	SSSSSS	EPH S	VID SSS	0/P LVLH BIAS	SSSSSS				
MODE SSSS									
INPUT ATT SENSE SSSS					EIGEN VECTOR				
ELV +XXX.XX					P XXX.XX				
VEH					Y XXX.XX				
RANGE XXXXX.X		R XXX.XX	MGA XXX.XX		EIGEN ANG XXX.XX				
MODE 2		P XXX.XX							
LAT XXX.XXS		Y XXX.XX							
LON XX.XXS									
TARGET 1 SSSS	!	OUTPUT A			!	IA1 SSS SSSS			
RA XXX.XX	!	+X	-X	-Z	!	A1 +XXX.XX S			
DEC XX.XXS	!	R XXX.XX	R XXX.XX	R XXX.XX	SSS !	A2 +XXX.XX S			
LAT XX.XXS	!	P XXX.XX	P XXX.XX	P XXX.XX		A3 +XXX.XX S			
LON XXX.XXS	!	Y XXX.XX	Y XXX.XX	Y XXX.XX		IA2 SSS SSSS			
ALT XXXXXX	!	R XXX.XX	R XXX.XX	R XXX.XX		A1 +XXX.XX S			
RNG XXXXX.X	!	P XXX.XX	P XXX.XX	P XXX.XX	LVLH!	A2 +XXX.XX S			
	!	Y XXX.XX	Y XXX.XX	Y XXX.XX	(SSS)!				
	!	OUTPUT B			!	IB1 SSS SSSS			
TARGET 2 SSSS	!	+X	-X	-Z	!	A1 +XXX.XX S			
RA XXX.XX	!	R XXX.XX	R XXX.XX	R XXX.XX	SSS !	A2 +XXX.XX S			
DEC XX.XXS	!	P XXX.XX	P XXX.XX	P XXX.XX					
	!	Y XXX.XX	Y XXX.XX	Y XXX.XX		IB2 SSS SSSS			
	!	R XXX.XX	R XXX.XX	R XXX.XX		A1 +XXX.XX S			
	!	P XXX.XX	P XXX.XX	P XXX.XX	LVLH!	A2 +XXX.XX S			
	!	Y XXX.XX	Y XXX.XX	Y XXX.XX	(SSS)!				
MET GMT E M S									
ST XXX:XX:XX:XX		XXX:XX:XX:XX	+X RA XXX.XX	P XXX	XXX	XXX	XXX		
AOS XXX:XX:XX:XX		XXX:XX:XX:XX	DEC XX.XXS	Y XXX	XXX	XXX	XXX		
TCA XXX:XX:XX:XX		XXX:XX:XX:XX	-Z RA XXX.XX	T XXX	XXX	XXX	XXX		
LOS XXX:XX:XX:XX		XXX:XX:XX:XX	DEC XX.XXS	P XXX	XXX	XXX	XXX		

Figure 13: Supersighter

Note: For modes 1, 4, 5, 6, and 7 if the target is not AOS at input time, the ST will be automatically changed to target AOS time. As a result, the LVLH attitude will be referenced to that target AOS time, not the input time.

8.1.3 Manual Inputs

The following is a list of inputs and, where required, what the valid inputs are.

Mode - The desired Supersighter mode. Valid modes are 1 thru 7.

INMAT - The input matrix ID. Valid inputs are

RLMT01 = ADI reference matrix (RELMAT). In the FDO MFD hardcoded to the star-ball RELMAT

RFMT01 = IMU reference matrix (REFSMMAT). In the FDO MFD always the identity matrix, meaning IMU = M50 coordinates

LPYR = Input ATT is LVLH with a P, Y, R Euler sequence.

LYPR = Input ATT is LVLH with a Y, P, R Euler sequence.

OUTMAT - The output matrix ID. Valid inputs are

RLMT01 = ADI reference matrix (RELMAT)

RFMT01 = IMU reference matrix (REFSMMAT)

EPHxxx - Ephemeris ID. In the FDO MFD this is the vessel selection.

VID - Vector ID. Not implemented in the FDO MFD yet.

ELV - Elevation angle.

TGT1 - Target 1 ID. Valid inputs are

Cxxx = Celestial targets 001-400 (star tracker stars are 11 to 60)

Gxxx = Ground targets 001-100

Ex = Orbital target ephemeris (EPHxxx) (A target ephemeris cannot be the same as the Orbiter ephemeris.). In the FDO MFD the target vessel selected in the config menu is used as long as the first character of the target ID is an E.

COE = Center of Earth

COM = Center of Moon

SUN = Center of Sun

TGT2 - Target 2 ID. Valid inputs are the same as those valid for target 1 with the one exception of ground targets. Ground targets cannot be input as a target 2 ID.

IA1 - Instrument ID for output A attitude and target 1. Valid inputs are S01 thru S25.

IA2 - Instrument ID for output A attitude and target 2. Valid inputs same as for IA1.

IB1 - Instrument ID for output B attitude and target 1. Valid inputs same as for IA1.

IB2 - Instrument ID for output B attitude and target 2. Valid inputs same as for IA1.

ATT Sense - The sense direction of the input ADI or LVLH attitudes. For IMU input attitudes, the input matrix defines which IMU is to be used. Valid inputs are +X, -X, and -Z.

Input/Angle -The input angles can be for input attitude (ATT); instrument angles A1, A2 (IA1, IA2, IB1, IB2); middle gimbal angle for mode 5 (MGA); Omicron angle for mode 7 (OMI); Eigen axis and eigen angle (EIG).

Start Time - The start time for the computations in MET. Days, hours, minutes, and second are input.

8.1.4 Modes of Operation

Mode 1 - Moveable Line-of-Sight Mode

Mode 1 computes the instrument pointing angles to a target for a given attitude and instrument ID for AOS of target 1.

Inputs for this mode are

MODE ID
EPH ID & VID # (Not implemented)
INMAT ID
OUTMAT ID
I/P LVLH BIAS ID (Not implemented)
O/P LVLH BIAS ID (Not implemented)
ST
ELV
INPUT ATT SENSE
INPUT ATT (R, P, Y)
TGT 1 ID
IA1 ID
TGT 2 ID (optional)
IA2 ID (optional)

Outputs for this mode are

AOS/TCA/LOS for TGT 1 for the input ELV angle
OUTPUT A ATTITUDES (input for this mode)
IA1 - A1, A2 instrument pointing angles
A3 - Omicron
IA2 - A1, A2 instrument pointing angles (if this option is exercised)
TGT 1 LAT, LON & ALT (if ground target input)
RA/DEC - of TGT 1 and TGT 2 (if this option is exercised)
RNG or VEH RANGE - if appropriate per definition of times
PHI, THETA & PITCH, YAW - to the Earth, Moon, and Sun
RA/DEC - of the body axes (+X, -Z)

Mode 2 - Fixed Attitude/Fixed Line-of-Sight Mode

Mode 2 computes the RA/DEC of a given instrument LOS and Orbiter attitude for input start time (ST).

Inputs for this mode are

MODE ID
EPH ID & VID # (Not implemented)
INMAT ID
OUTMAT ID
I/P LVLH BIAS ID (Not implemented)
O/P LVLH BIAS ID (Not implemented)
ST
ELV
INPUT ATT SENSE
INPUT ATT (R, P, Y)
IA1 ID
IA1 instrument pointing angles A1, A2

Outputs for this mode are

OUTPUT A ATTITUDE (input for this mode)
PHI, THETA & PITCH, YAW - for the Earth, Moon, and Sun
RA/DEC - of the body axes (+X, -Z)
RA/DEC - of instrument LOS
MODE 2 LAT, LON - output if instrument LOS intercepts the Earth's surface

Mode 3 - Fixed Line-of-Sight Rotation Mode

Mode 3 - Computes a new Orbiter attitude given a source OrInter attitude, rotation vector (eigen axis), and rotation angle (eigen angle) for input start time (ST). This mode will also compute instrument pointing angles if target and instrument ID's are input.

Inputs for this mode are

MODE ID
EPH ID & VID # (Not implemented)
INMAT ID
OUTMAT ID
I/P LVLH BIAS ID (Not implemented)
O/P LVLH BIAS ID (Not implemented)
ST
INPUT ATT SENSE
INPUT ATT (R, P, Y)
EIGEN AXIS (P, Y) and EIGEN ANGLE
TGT 1 ID (optional)

IA1 ID (optional)
TGT2 ID (optional)
IA2 ID (optional)

Outputs for this mode are

OUTPUT A ATTITUDE

IA1 - instrument pointing angles A1 A2 (optional)
A3 - Omicron
IA2 - instrument pointing angles A1, A2 (optional)
PHI, THETA & PITCH, YAW - to the Earth, Moon, and Sun
RA/DEC - of the body axes (+X, -Z)
RA/DEC - of TGT 1 and TGT 2 (if this option exercised)
TGT 1 LAT, LON & ALT (if ground target input)
RNG or VEH RANGE - if appropriate per definition of terms

Mode 4 - Minimum Maneuver Mode

Mode 4 computes a new Orbiter attitude which is a minimum maneuver (least amount of rotation) from a given initial attitude to a final attitude that points an instrument (IA1) specified LOS at target 1 for AOS of target 1. This mode will optionally compute instrument IA2 pointing angles to a second input target.

Inputs for this mode are

MODE ID
EPH ID & VID # (Not implemented)
INMAT ID
OUTMAT ID
I/P LVLH BIAS ID (Not implemented)
O/P LVLH BIAS ID (Not implemented)
ST
INPUT ATT SENSE
INPUT ATT (R, P, Y)
ELV
TGT1 ID
IA1 ID
IA1 - A1, A2 instrument pointing angles
TGT 2 ID (optional)
IA2 ID (optional)

Outputs for this mode are

AOS/TCA/LOS for TGT 1 for the input ELV angle
 OUTPUT A ATTITUDES (computed final attitudes)
 EIGEN AXIS
 EIGEN ANGLE
 IA1 - A1, A2 instrument pointing angles (optional)
 A3 - Omicron
 TGT 1 LAT, LON, ALT (if ground target input)
 RA/DEC - of TGT 1 ANG TGT 2 (optional)
 RNG or VEH RANGE - if appropriate per definition of terms
 PHI, THETA & PITCH, YAW - to the Earth, Moon and Sun
 RA/DEC - of the body axis (+X, -Z)

Mode 5 - Fixed Line-of-Sight Mode

Mode 5 computes two sets of Orbiter attitudes (A and B solutions) given a specific middle gimbal angle (MGA) and instrument IA1 ID and instrument angles to point at target 1 for AOS of target 1. Optionally, instrument pointing angles may be requested for up to three other instrument indicators (IA2, IB1, IB2). A target 2 will also be input corresponding to IA2 and IB2.

Inputs for this mode are

MODE ID
 EPH ID & VID # (Not implemented)
 INMAT ID
 OUTMAT ID
 I/P LVLH BIAS ID (Not implemented)
 O/P LVLH BIAS ID (Not implemented)
 ST
 ELV
 MGA
 INPUT ATT SENSE
 TGT 1 ID - corresponding to instrument IA1 and, optionally, IB1 indicators
 IA1 ID
 IA1 - A1, A2 instrument pointing angles
 IB1 ID (optional)
 TGT 2 ID - corresponding to instrument IA2 and IB2 (optional)
 IA2 ID (optional)
 IB2 ID (optional)

Outputs for this mode are

AOS/TCA/LOS for TGT 1 for the Input ELV Angle
OUTPUT A ATTITUDES
OUTPUT B ATTITUDES
IA2 - A1, A2 instrument pointing angles (optional)
IB1 - A1, A2 instrument pointing angles (optional)
IB2 - A1, A2 instrument pointing angles (optional)
TGT 1 LAT, LON, ALT (if ground target input)
RA/DEC - of TGT 1 and TGT 2 (optional)
RNG or VEH RANGE - if appropriate per definition of terms
PHI, THETA & PITCH, YAW - to the Earth, Moon, and Sun
RA/DEC - of the body axis (+X, -Z)

Mode 6 - Optimum Second Line-of-Sight Mode

Mode 6 computes an Orbiter attitude that points a given LOS at target 1 and also minimizes the angle between a second LOS for target 2, for AOS of target 1.

The inputs for this mode are

MODE ID
EPH ID & VID # (Not implemented)
INMAT ID
OUTMAT ID
I/P LVLH BIAS ID (Not implemented)
O/P LVLH BIAS ID (Not implemented)
ST
ELV
TGT 1 ID corresponding to instrument IA1
IA1 ID
IA1 - A1, A2 instrument pointing angles
TGT 2 ID corresponding to instrument IA2
IA2 ID
IA2 desired instrument pointing angles

The outputs are

AOS/TCA/LOS - for TGT 1 for the input ELV angle
OUTPUT A ATTITUDES
IA2 - A1, A2 actual Instrument pointing angles
OMICRON
TGT 1 LAT, LON, ALT (if ground target input)

RA/DEC - of TGT 1 and TGT 2
RNG or VEH RANGE - if appropriate per definition of terms
PHI, THETA & PITCH, YAW - to the Earth, Moon, and Sun
RA/DEC - of the body axis (+X, -Z)

Mode 7 - Fixed Line-of-Sight Omicron Mode

Mode 7 computes an Orbiter attitude (output A) given a specific Omicron angle and instrument IA1 ID and instrument angles to point at target 1 for AOS of target 1. Optionally, instrument pointing angles may be requested for the IA2 instrument ID. A target 2 will also be input corresponding to IA2.

Inputs for this mode are

MODE ID
EPH ID & VID # (Not implemented)
INMAT ID
OUTMAT ID
I/P LVLH BIAS ID (Not implemented)
O/P LVLH BIAS ID (Not implemented)
ST
ELV
OMICRON
TGT 1 ID - corresponding to instrument IA1
IA1 - instrument ID
IA1- A1, A2 instrument pointing angles
TGT 2 ID - corresponding to instrument IA2 (optional)
IA2 - instrument ID (optional)

Outputs for this mode are

AOS/TCA/LOS for TGT 1 for the input ELV angle
OUTPUT A ATTITUDES
IA2 - A1, A2 instrument pointing angles (optional)
TGT 1 LAT, LON, ALT (if ground target input)
RA/DEC - of TGT 1 and TGT 2 (optional)
RNG or VEH RANGE - if appropriate per definition of terms
PHI, THETA & PITCH, YAW - to the Earth, Moon, and Sun
RA/DEC - of the body axis (+X, -Z)

8.2 Instrument Definition Table

8.2.1 Purpose

The IDT is an information storage table which provides instrument data for use by a number of the Mission Control Center (MCC) ground software processor, especially the Supersight display. For the purpose of the IDT, the following items are classified as instruments:

1. Antennae
2. Scientific experiment instruments which have pointing/field-of-view capability
3. Spacecraft optical system which can be used for pointing
4. Spacecraft windows
5. Spacecraft ports which may be used as windows
6. Any other instrument for which data for instrument angle calculations or field-of-view (FOV) or field-of-coverage (FOC) information are required
7. Body pointing vectors for which instrument angle calculations are required to permit additional attitude and pointing analyses

8.2.2 Inputs

INSTR TYPE - A three digit number ABC that defines the rotation sequence of the instrument and the null axis of the instrument.

A - axis for 1st rotation

B - axis for 2nd rotation

C - null axis of the instrument

The number code for each axis is

1 = +X axis

2 = +Y axis

3 = +Z axis

4 = -X axis

5 = -Y axis

6 = -Z axis

Phi 1 - Euler angle of rotation about X mount axis to the X', Y', Z' coordinate system.

Theta - Euler angle of rotation about Y' axis to the X'', Y'', Z'' coordinate system.

Phi 2 - Euler angle of rotation about X'' axis to the instrument coordinate system.

A1 MIN - The minimum angle limit for the first instrument rotation angle.

A1 MAX - The maximum angle limit for the first instrument rotation angle.

A2 MIN - The minimum angle limit for the second instrument rotation angle.

A2 MAX - The maximum angle limit for the second instrument rotation angle.

RET ID - Identifies whether a special reticle is to be used or not. 0 = No Reticle, 1 = Reticle (Hor, Vert)

8.3 Instrument Mount Matrix Table

This display shows a list of mount matrices used for the instrument definitions. Currently there are three matrices hardcoded, the identity matrix for most instruments and the two star tracker mounts.

8.4 Ground Target Display

The ground target display contains the targets that can be used by the Supersighter display.

8.5 Checkout Monitor

8.5.1 Purpose

The Checkout Monitor provides numbers describing the trajectory of a vehicle at a given time.

8.5.2 Display Description

GMT - GMT of state vector.

MET - MET of state vector.

POSITION (FT) - Position vector in M50 coordinates, feet

VELOCITY (FPS) - Velocity vector in M50 coordinates, feet per second

POSITION (M) - Position vector in M50 coordinates, meters

VELOCITY (MPS) - Velocity vector in M50 coordinates, meters per second

HA - Height of apogee, nautical miles

HP - Height of perigee, nautical miles

V_i - Inertial velocity, feet per second

V_{rel} - Earth relative velocity, feet per second

FPA_i - Flight path angle, degrees

AZ_r - Earth relative azimuth, degrees

AZ_i - Inertial azimuth, degrees

LAT_c - Geocentric latitude, degrees

LAT_d - Geodetic latitude, degrees

LONG - Geographic longitude, degrees

H_s - Height above a spherical Earth, nautical miles

Ho - Height above an oblate Earth, nautical miles

R - Radius of position, nautical miles

BETA ANG - Beta angle of the Sun relative to the Shuttle orbital plane, degrees

PERIOD - Orbital period, hhh:mm:ss

RAm50 - Right ascension in M50 coordinates, degrees

DECM50 - Declination in M50 coordinates, degrees

REFDAY - Launch day, dd:mm:yyyy

LO - Liftoff day of year and time, ddd:hh:mm:ss.sss

A - Semi-major axis, nautical miles

E - Eccentricity, non-dimensional

Im50 - Inclination in M50 coordinates, degrees

Iteg - Inclination in TEG coordinates, degrees

WPM50 - argument of perigee in M50 coordinates, degrees

WPteg - argument of perigee in TEG coordinates, degrees

RAANm50 - Right ascension of the ascending node in M50 coordinates, degrees

N - True anomaly, degrees

M - Mean anomaly, degrees

9 OMP Walkthrough

The following text is a walkthrough of a full rendezvous with the FDO MFD. It is intended to be used with the "STS-126 launch" scenario which can be found in the SSV/Historic missions folder. The scenario is starting at L-9 minutes, but any planning with the MFD can not be done before orbital insertion, best after OMS-1 and/or the MPS dump, so that no trajectory changes are done during the planning phase. The mission should be flown with non-spherical gravity enabled.

9.1 Pre OMS-2 Planning

The first step is to load the STS-126 config file for the MFD. Open the OMP Executive Page by pressing EXE in the main menu of the MFD. Then load the file by pressing LOA and typing "STS-126". This should load several parameters to the page.

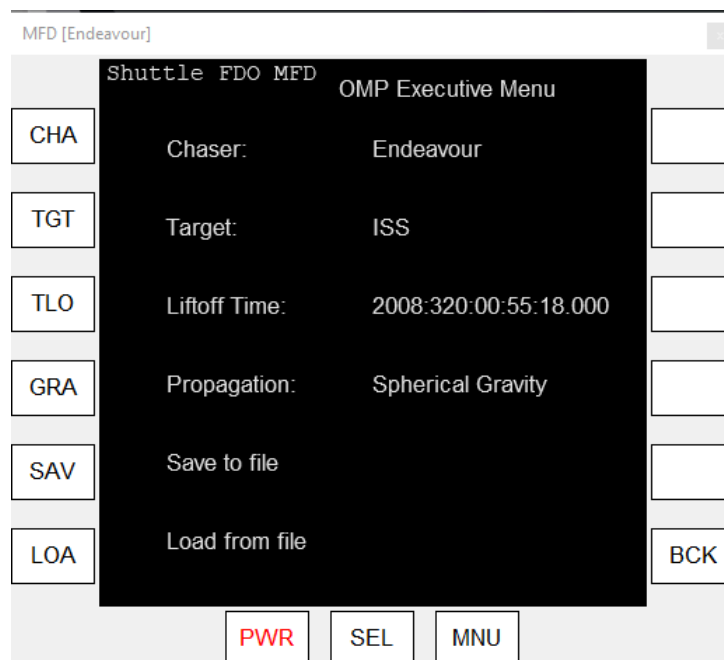


Figure 14: STS-126 Executive Page

Next go back (press BCK) to the main menu and open the Orbital Maneuver Processor (press OMP) and then the Maneuver Constraints Table (press MCT). You should now see the initial, TIG-less plan for the rendezvous. TIG-less means that it is kept as generic as possible, so that it will work for any insertion conditions, and no time of ignition of a maneuver has been fixed in time yet. Run this initial plan by pressing CLC. It is useful to have two instances of the MFD open at all times, the External MFD is quite useful for this. At this stage it is best to have the maneuver constraints table and the maneuver

evaluation table (in the OMP menu press MET) open. When the initial plan was run the MET should be populated with numbers for each maneuver:

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER CONSTRAINTS TABLE STS-126

MNVRS: 9 / 40

MANEUVER	THRESHOLD	SECONDARIES			
1 HA OMS-2	T 000:00:30:00.000	APO =1.0	HD =85.0		
2 NC NC-1	M 2.0	DV =100.0			
3 EXDV NC-2	M 9.0	DVLV =8.0	DVLV =0.0	DVLV =0.0	
4 NPC NPC	DT 000:00:00:01.000	CN =1.0			
5 EXDV NC-3	M 0.0	DVLV =3.0	DVLV =0.0	DVLV =0.0	
6 NH NH	M 9.5				
7 NC NC-4	M 0.5	DR =40.0			

Calculation successful!

CLC

MOD

DES

INS

MOS

BCK

PWR

SEL

MNU

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER EVALUATION TABLE STS-126

GMT: 2008:320:00:55:29.000

Chaser DVtot = 367.93 DVx = 364.76 DVy = 46.53 DVz = 12.40

Target DVtot = 0.00 DVx = 0.00 DVy = 0.00 DVz = 0.00

Mnvr Name	GMTIG	IMP	DVX	HA	RANGE	Y
Comment	METIG	DT	DVY	HP	PHASE	Ydet
DVMag			DVZ	Ch	NeonMid	SR/SS
1 HA OMS-2	320:01:38:02.121		89.24	126.96	4100.0467	38758.6
	000:00:40:13.121		-0.00	89.30	-49.4787	-9.3
	000:02:56:48.082		-0.00	55.31	N-00:21:32	SS-00:47:10
2 NC NC-1	320:04:32:40.204	12.54	126.96	5200.4227	38758.6	
	000:03:37:01.204	0.00	91.93	-82.5582	-9.3	
	000:13:10:40.340	0.00	55.31	N-00:21:35	SS-00:47:25	
3 EXDV NC-2	320:17:49:26.548	8.00	126.96	7162.1350	38758.6	
	000:16:53:47.548	0.00	56.37	109.3167	-9.3	
	000:00:15:24.587	0.00	55.31	N-00:21:44	SS-00:47:42	
4 NPC NPC	320:18:08:51.116	-0.04	126.96	7134.0221	0.0	
	000:17:13:12.116	46.83	96.37	166.4006	0.0	
	000:08:32:17.168	0.00	70.57	N-00:02:19	SS-00:28:17	
5 EXDV NC-3	321:02:41:08.284	3.00	126.96	5683.6122	0.0	
	001:01:45:29.284	0.00	96.03	104.2643	0.0	
	000:14:52:37.222	0.00	55.31	N-00:21:48	SS-00:47:50	
6 NH NH	321:16:43:15.505	97.57	181.07	251.0727	0.0	
	001:16:47:26.505	0.00	86.03	1.7650	0.0	
	000:00:44:50.318	0.00	87.35	M-00:21:48	SS-00:03:40	

PWR

SEL

MNU

Figure 15: First iteration

9.1.1 Iteration to Correct Ti Lighting and Radial DV

After the TIG-free plan has been run and verified to be a good "ballpark" estimate of the actual rendezvous, the next step is to "freeze" TIGs and perform fine-tuning of the profile. This includes: fixing Ti lighting and eliminating radial DV. The first step is to re-save the TIG-free plan to another name in order to begin working with a new plan name. This can be done on the OMP Executive page by pressing SAV and giving the modified plan a new name. This might be something like "STS-126A". Next, use the TIG-free MET to determine Ti lighting under the "SR/SS" column. The desired TIG is generally near orbit noon and conforms to a mission-specific offset from sunset. For an ISS rendezvous the desired Ti TIG will generally be SS -36 min.

Now using the Maneuver Evaluation Table and desired time of Ti, you can compute how many minutes the lighting is off, and then move the TIG of the final NC burn as necessary to nail Ti lighting. The best way to change Ti TIG is to switch the TIG of the first burn on Day-of-Rendezvous (DOR) to a primary constraint of T (time). That time will be equal to its TIG-free MET output plus Ti error computed above. In this example case the relevant numbers for the Ti burn from the evaluation table were:

-METIG: 001:18:03:38.636
 -SR/SS: SS-00:50:58

So the TIG is in error by 14:58 minutes for the desired lighting conditions. As described above it is best to change the first burn on DOR by those 15 minutes. This is an easier technique than fixing Ti first and then working backwards to determine fixed TIGs for

NH and NC-4. In this case the first burn on the DOR is NH, a NH type burn and the 6th burn in the table with a TIG of currently 001:15:47:36.505. Now change its TIG to 14:58 minutes later by selecting NH using the UP and DN buttons and then pressing THR and typing: T 1:16:2:34. This will give the NH maneuver a fixed TIG of the specified time. Calculate the plan again by pressing CLC and check the Ti lighting condition. In my case it is now "SS-00:35:44", which should be close enough to the desired lighting.

When the plan is re-generated, it likely that Ti will have a non-zero radial component. In fact, in the example case, Ti DVZ is -102 fps! This is because Ti is not located on the line of apsides. This is the "maneuver line" connecting apogee and perigee. (For the case of rendezvous with a target in a non-circular orbit we are actually referring to *relative* apsides, where the chaser-target height differences are minimum and maximum. In this case, the chaser-target "line of *relative* apsides" maybe not necessarily coincide with the geocentric line of apsides.) In order for TIG to be purely horizontal/prop efficient, it must be performed very close to the line of apsides, and it must be located at the correct relative height, which is assured by a NH maneuver. If either of these are not met, a radial component will be added to SOI in order to simultaneously satisfy downtrack, height, and time-of-flight constraints for SOR.

The preferred technique to place Ti on the line of apsides (and thus eliminate DVZ) is to move the TIG of one of the prior large phasing burns. This rotates the line of apsides so that Ti falls on the line. To do this, locate a prior NC or NH maneuver in the profile that starts from as nearly a circular orbit as possible. It must be a large burn (DV >about 20 fps) in order to have enough "muscle" to move the line of apsides. There may be one or two candidate burns that can be used. In this case we would normally use the NC-1 burn for this purpose, but with 13 fps we can figure out (by trial and error) that it doesn't have enough muscle to get the Ti DVZ to 0. So instead we will fix the TIGs of NH and NC-4. The NC-4 TIG will now assure the Ti lighting and by modifying the NC-3 TIG, the orientation of the line of apsides is moved without significant DV penalty to the plan. In the OMP, this is done by changing the primary constraints to T and fixing the time based on previous MET output. Add a small bias to the TIG in order to see if it improves Ti DVZ. Continue tweaking until Ti DVZ is less than 1 fps. This is very much a trial and error process. In the example case the NC-4 TIG to get the Ti lighting right was 1:16:47:25, the NH TIG to get the Ti DVZ component to close to zero is 1:16:08:35. This concludes the pre OMS-2 planning, so it is best to save the current plan under a new name. This is also the best time to give NC-1 a fixed TIG. The first maneuver in the constraints table always needs a "T" as the primary threshold and soon OMS-2 will be deleted from the table. So select NC-1 with UP/DN, press THR and type: "T XXX:XX:XX:XX.XXX" and use the exact time of NC-1 from the previous run, on the evaluation page.

Figure 17: MTT for OMS-2

53

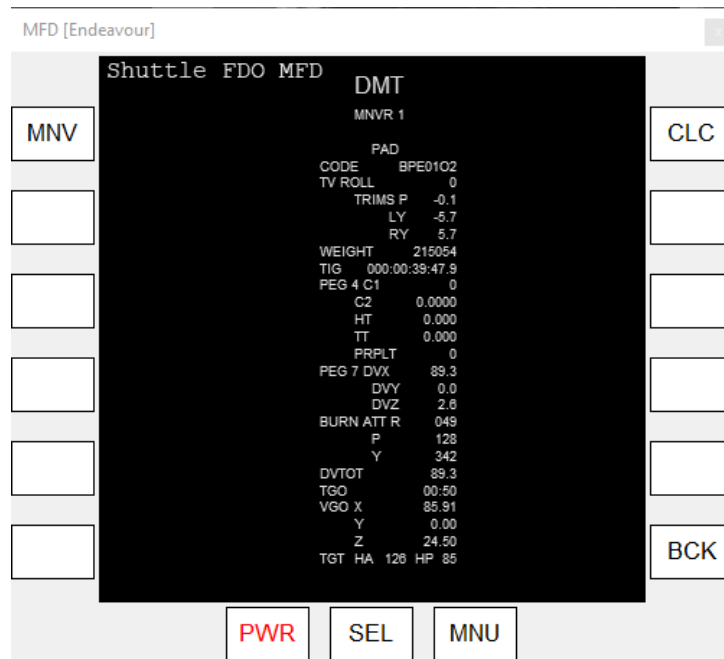


Figure 18: DMT for OMS-2

9.2 Pre NC-1 Planning

After OMS-2 has been executed the maneuver should be deleted from the constraints table. Press DEL and type 1 to delete the 1st maneuver in the list. Then re-save the plan under a new name. You can re-calculate the maneuver plan right now, or wait until shortly before NC-1. The Shuttle flight plans usually have an update to the crew scheduled at 30 minutes before the planned TIG.

All the major planning was done before OMS-2, so there is not much to do before NC-1. One thing that can be done at this stage is to move the NC-1 TIG a little bit, to re-optimize the Ti DVZ. As before, it is desirable to get that value below 1 fps. If OMS-2 went very well this shouldn't be necessary and the NC-1 TIG can stay as it is. At this point the NC-2 TIG should be fixed at its current value, again by using the current TIG from the evaluation table as a primary threshold (THR button) on the constraints page.

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER CONSTRAINTS TABLE STS-126B

MNVRS: 8 / 40

MANEUVER	THRESHOLD	SECONDARIES
1 NC NC-1	T 000.03:37.01.000	DV = 100.0
2 EXDV NC-2	M 9.0	DVLV = 8.0 DVLV = 0.0 DVLV = 0.0
3 NPC NPC	DT 000.00:00:01.000	CN = 1.0
4 EXDV NC-3	M 6.0	DVLV = 3.0 DVLV = 0.0 DVLV = 0.0
5 NH NH	T 001.16:08:35.000	
6 NC NC-4	T 001.16:47:25.000	DR = 40.0
7 SOI TI	M 1.0	DR = 8.0 DH = 0.2 WEDG = 0.0

Calculation successful!

CLC

MOD

DES

INS

MOS

BCK

PWR

SEL

MNU

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER EVALUATION TABLE STS-126B

GMT: 2008-320:00:55:39.000

Chaser Dvict = 278.53 Dvx = 278.54 Dvy = 48.45 DVz = 1.54
 Target Dvict = 0.00 Dvx = 0.00 Dvy = 0.00 DVz = 0.00

Mnvr Name Comment DVMag	GMTIG METIS DT	IMP DVT DVTZ	HP HP DH	RANGE PHASE Noon/Mid	Y Ydot SR/SS
2 EXDV NC-2 6.0	320.17:49:35.467 000.16:53:56.467 000.00:19:24.192	8.00 0.00 0.00	125.92 97.31 55.35	7165.7589 168.9056 N-00:21:40	38889.5 -9.3 SS-00:47:44
3 NPC NPC 46.4	320.18:08:59.658 000.17:13:28.658 000.08:32:23.637	-0.04 48.45 0.00	125.92 97.31 70.21	7138.6445 168.9917 N-00:02:19	0.0 0.0 SS-00:28:19
4 EXDV NC-3 3.0	321.02:41:23.296 001.01:45:44.296 000.14:22:50.704	3.00 0.00 0.00	125.92 98.97 55.35	5721.4718 105.2544 N-00:21:49	-0.0 0.0 SS-00:47:51
5 NH NH 119.2	321.17:04:14.000 001.16:08:35.000 000.30:36:50.000	119.24 0.00 0.00	183.67 108.50 70.79	172.6882 2.5147 M-00:01:12	-0.0 -0.0 SR-00:18:34
6 NC NC-4 119.6	321.17:43:04.000 001.16:47:25.000 000.01:31:11.806	119.60 0.00 0.00	154.34 175.53 0.20	39.9992 0.5317 N-00:07:34	0.0 0.0 SS-00:35:53
7 SOI TI 9.0	321.19:14:15.806 001.18:18:36.806 000.01:16:54.000	8.95 0.00 0.06	185.18 179.82 0.20	8.0024 0.1264 N-00:07:35	0.0 0.0 SS-00:36:00

TRA

BCK

PWR

SEL

MNU

Figure 19: Final state before NC-1

9.2.1 Executing NC-1

Executing NC-1 is very similar to OMS-2 and most other burns, so it will not be talked about in that much detail again. When you are happy with the constraints and evaluation tables press TRA to transfer the maneuvers in the list to the MTT. On the MTT choose again slot 2 for maneuver 1 (NC-1 this time). The general technique for the Shuttle seems to have been to use 180 degrees roll for most burns prior to day-of-rendezvous. In this attitude usually the horizon can be monitored during the burn. The maneuvers on the day-of-rendezvous (NH and NC) will use 0 degrees roll angle because of attitude timeline constraints. Press EXE to export the data to the DMT, then on the DMT press MNV and type 1. Then press CLC to calculate the numbers on the DMT, just like for OMS-2.

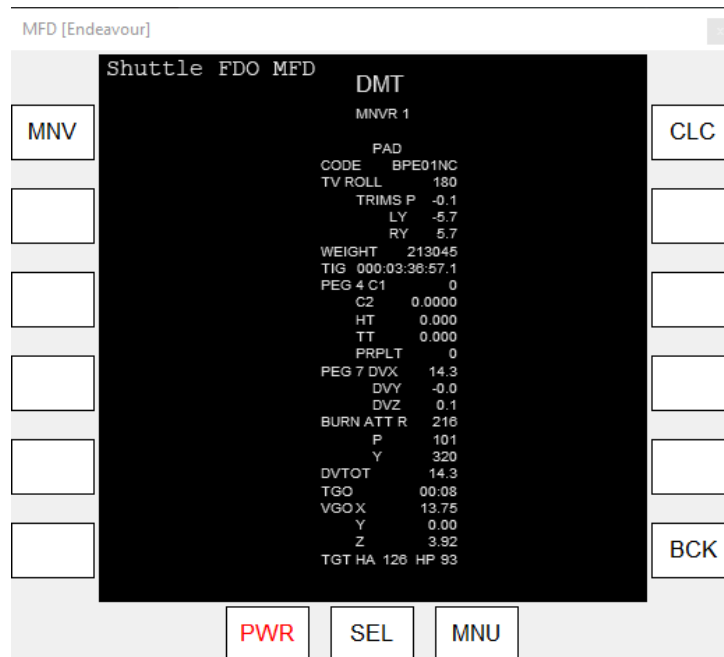


Figure 20: DMT for NC-1

9.3 Pre NC-2 Planning

Planning NC-2 involves a little bit more work than for NC-1. NC-1 was the phasing maneuver (NC type) that tried to achieve a specific phasing (-40NM) at the time the Shuttle reaches the NC-4 maneuver point. Only one maneuver can ever target a specific phasing constraint, so before NC-1 was executed NC-2 was in the plan as fixed DV maneuver of the type EXDV, with a positive bias of 8 fps. The bias is used to avoid any maneuver that will have to lower the orbit. NC-2 will now be switched to the type NC and even if NC-1 went a bit bad so that NC-2 needs to correct the phasing, in all likelihood the NC-2 DVX will not be so different from before that it becomes a retrograde (DVX becoming negative) burn. If NC-1 hasn't been deleted from the plan yet press DEL and type "1". To change NC-2 go to the constraints page, select NC-2 and press MOD, to modify the maneuver. Then type "NC NC-2". This changes the NC-2 maneuver in the list to the type NC, with the new and old name NC-2. Then, delete the now useless secondary constraints on NC-2 of the type DVLV. These only apply to a EXDV type maneuver. For this press the DES button and type "1" to delete the first secondary constraint of the maneuver. Do this three times and the secondary constraints will be gone.

Now re-save the plan under a new name and press CLC on the constraints page. As before NC-1 you should check if the Ti DVZ component now has a DVZ of larger than 1 fps. If yes vary the NC-2 TIG a little bit to get it below 1 fps again. When this is done, fix the maneuver following NC-2 in time, this is the NPC maneuver which will be done

shortly after NC-2. There is a "CN = 1.0" constraint on the NPC maneuver which would modify the TIG, so this should now be deleted by selecting the NPC burn, pressing DES and typing "1". The TIG of the maneuver after NPC, the NC-3 maneuver, should also be set to a fixed time now. With NPC maneuvers there is special logic for the threshold time. "M=6.0" on the NC-3 maneuver does not happen 6 orbits after NPC, but the logic will skip the NPC burn and look at the maneuver before NPC, which is NC-2. This is done to have the phasing and height maneuvers happen on a maneuver line (apogees and perigees), while the NPC burn has a TIG that depends on very different criteria, the intersection of the two orbital planes, Shuttle and the target vehicle. When all these TIGs have been fixed save the plan again. It should now look similar to below:

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER CONSTRAINTS TABLE STS-126C

MNVRs: 7 / 40

MANEUVER	THRESHOLD	SECONDARIES
1 NC NC-2	T 000:19:53:56.000	
2 NPC NPC	T 000:17:13:20.000	
3 EXDV NC-3	T 001:01:45:43.800	DVLV +0.0 DVLV +0.0 DVLV +0.0
4 NH NH	T 001:16:08:33.000	
5 NC NC-4	T 001:18:47:24.000	DR =-40.0
6 SOI TI	M 1.0	DR =-8.0 DH +0.2 WEDG =0.0
7 SOR MC-4	DT 000:01:16:54.000	CXYZ =-0.1481 CXYZ =0.0000 CXYZ =-0.2902

Calculation successful!

PWR SEL MNU

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER EVALUATION TABLE STS-126C

GMT: 2008:329:09:55:39.000

Chaser DVtot = 265.49 DVx = 281.37 DVy = 46.53 DVz = 1.58

Target DVtot = 0.00 DVx = 0.00 DVy = 0.00 DVz = 0.00

Mnvr Name Comment DVI/Mag	GMTIG METIG DT	IMP DVX DVY DVZ	HA HP DH	RANGE PHASE Non/Mid	Y Ydot SR/SS
1 NC NC-2 8.0	320:17:49:35.000 000:16:53:56.000 000:00:19:24.000	8.03 0.00 0.00	125.90 57.31 55.37	7185.8715 188.8370 N-00:21:45	38751.1 -3.4 SS-00:47:44
2 NPC NPC 40.5	320:18:06:58.000 000:17:13:20.000 000:08:32:23.800	-0.04 46.52 0.00	125.90 57.31 70.20	7138.5682 166.8835 N-00:02:20	0.9 0.0 SS-00:28:19
3 EXDV NC-3 3.0	321:02:41:22.800 001:01:45:43.800 000:14:22:49.200	3.00 0.00 0.90	125.90 56.98 55.37	5721.2110 105.2481 N-00:21:49	0.2 0.0 SS-00:47:51
4 NH NH 119.2	321:17:04:12.000 001:16:08:33.000 000:00:38:51.000	119.22 0.00 0.00	183.65 108.47 70.81	172.7660 2.5159 M-00:01:14	-0.9 0.0 SR-00:18:35
5 NC NC-4 119.6	321:17:43:03.000 001:16:47:24.000 000:01:31:11.781	119.61 0.00 0.00	184.32 175.52 0.00	39.9992 0.6318 N-00:07:35	0.9 0.0 SS-00:35:54
6 SOI TI 9.0	321:19:14:14.781 001:18:18:35.781 000:01:16:54.000	8.95 0.80 -0.10	155.17 173.51 0.20	8.0024 0.1264 N-00:07:38	0.9 0.0 SS-00:36:00

PWR SEL MNU

Figure 21: Final state before NC-2

9.3.1 Executing NC-2

NC-2 is a smaller burn than the ones before, so it's not necessary to use both OMS engines for it. For practice we are going to use the left OMS engine for this burn. Press TRA on the evaluation page as usual and go to the maneuver transfer table. Here we need to find the right predefined burn profile for a maneuver with the left OMS engine (code OL), 180 degrees roll and optimized TIG (code OPT). Slot 4 is the one which has these parameters, so press SLO and type "1 4". Then export the maneuvers to the DMT by pressing EXE. On the DMT select the first maneuver as usual and calculate the Maneuver PAD values for NC-2. Make sure to use all the right options from the PAD on the ORBIT MNVR EXEC (engine selection, TV ROLL, TRIM LOAD etc.)

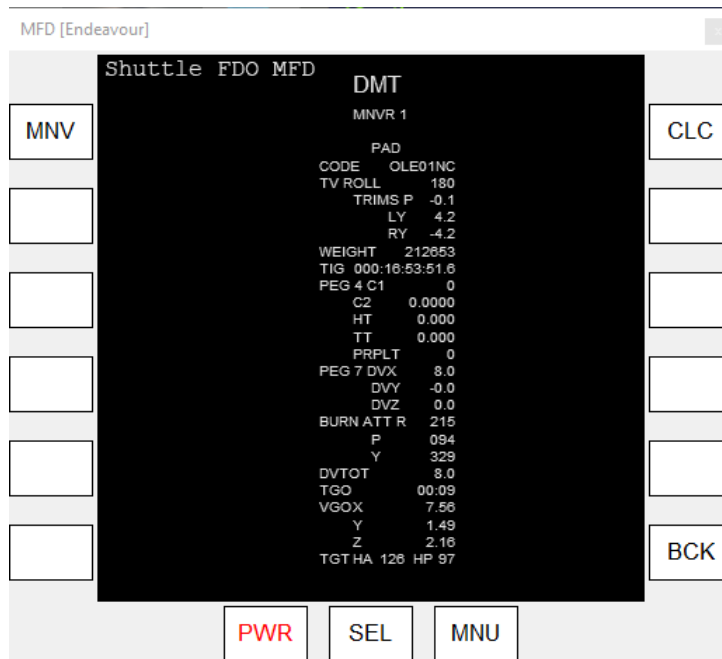


Figure 22: DMT for NC-2

9.4 Pre NPC Planning

We have already done most of the planning required for the NPC maneuver, which will align the planes of the Shuttle and the ISS. And that is a good thing, because the NPC burn will happen shortly after the NC-2 burn. In case it is too close to NC-2 to be feasible, try to let the MFD find a later common node by using a later primary threshold (T) and re-add the "CN = 1.0" secondary constraint to the maneuver. Alternatively, delete the NPC maneuver completely and just null the out of plane error as much as possible with the NC-2 maneuver by adding a "NULL = 0" secondary constraint to it.

Delete the NC-2 maneuver from the plan by pressing DEL and typing "1". As was done with the NC-2 maneuver, the NC-3 maneuver should now be changed to become the phasing maneuver (type NC) and the DVLV secondary constraints can be deleted. The resulting tables will look like below:

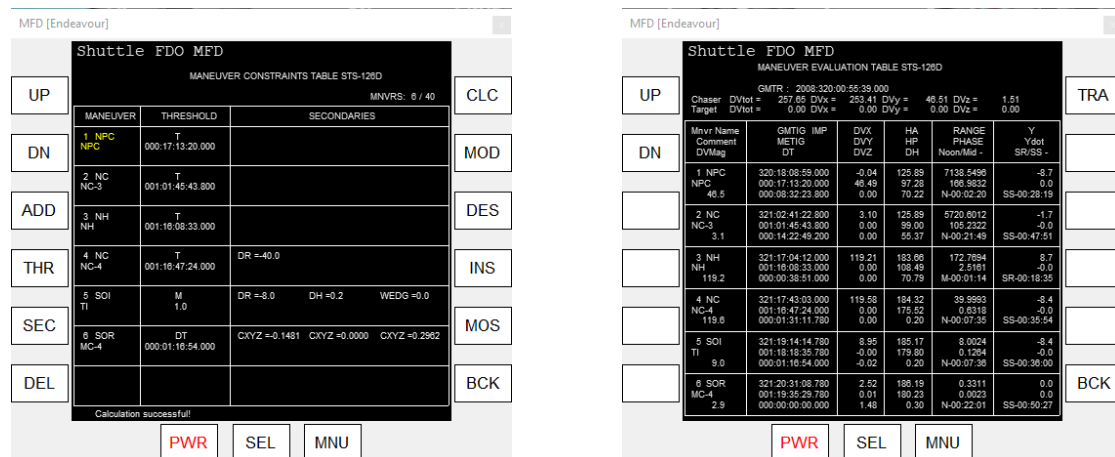


Figure 23: Final state before NPC

9.4.1 Executing NPC

As the burn is fairly small, it should be done with one OMS engine. Transfer the maneuver plan as usual to the MTT and there choose the 4th profile, like for NC-2. For that press SLO and then type "1 4". Then press EXE and go to the DMT, where you press MNV and type "1" and then press CLC to get the Maneuver PAD numbers.

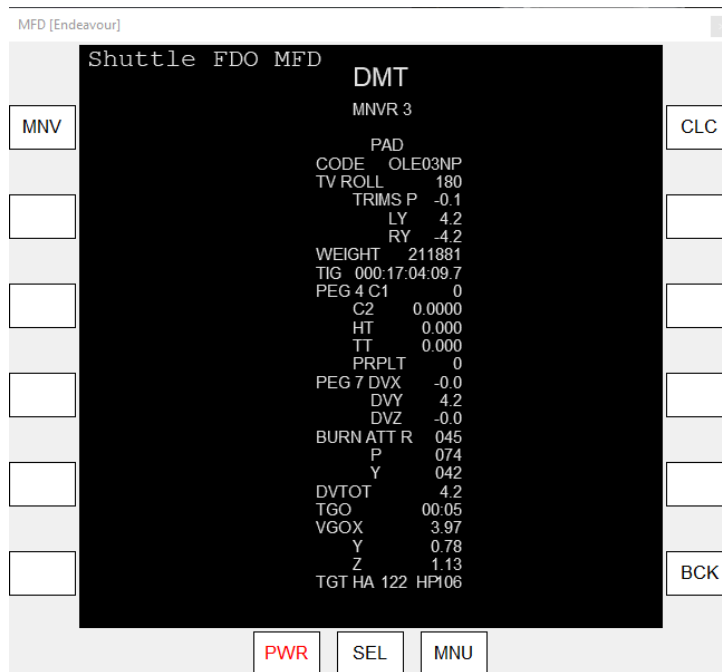


Figure 24: DMT for NPC

9.5 Pre NC-3 Planning

The planning for NC-3 is nearly identical to NC-2. First delete the NPC maneuver. The secondary constraint "WEDG=0.0" on the Ti burn now has no function, so it can be deleted. After calculating the plan, check as before if the Ti DVZ component or the Ti lighting is too far off nominal, which would be 1 fps or 30 seconds respectively. Ti lighting is changed by moving the NC-4 time, Ti DVZ would be changed by moving the NH time of ignition. On the actual STS-126 mission the NC-3 was skipped, as the Delta V was negligible. In this tutorial we will always perform it. When the process of tweaking the TIGs is done the two tables should look like this:

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER CONSTRAINTS TABLE STS-126E

MINVRS: 5 / 40

MANEUVER	THRESHOLD	SECONDARIES
1 NC NC-3	T 001:01:45:43.800	
2 NH NH	T 001:16:08:33.000	
3 NC NC-4	T 001:16:47:24.000	DR =40.0
4 SOI TI	M 1.0	DR =8.0 DH =0.2 WEDG =0.0
5 SOR MC-4	DT 000:01:16:54.000	CXYZ =-0.1481 CXYZ =0.0000 CXYZ =0.2962

Calculation successful

PWR

SEL

MNU

UP

DN

ADD

THR

SEC

DEL

CLC

MOD

DES

INS

MOS

BCK

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER EVALUATION TABLE STS-126E

GMTR : 2008:320:06:55:38.000

Chaser DVtot = 253.38 DVx = 0.00 DVy = 0.02 DVz = 1.60

Target DVtot = 0.00 DVx = 0.00 DVy = 0.00 DVz = 0.00 5 Mvrs

Movr Name Comment DVMag	GMTG METG DT	IMP	DVK DVX DVZ	H/A HP DH	RANGE PHASE Noon/Mid -	Y Ydot SR/SS -
1 NC NC-3 3.1	321:02:41:22.800 001:01:45:43.800 000:14:22:49.200	3.12 0.00 0.00	125.81 98.99 55.36	5720 4224 105 2273 N-00:21:49	-6.1 -0.0 SS-00:47:51	
2 NH NH 119.2	321:17:04:12.000 001:16:08:33.000 000:00:36:51.000	119.21 0.00 0.00	183.66 198.49 70.78	172 7113 2 5151 M-00:01:13	4.6 -0.0 SR-00:18:35	
3 NC NC-4 119.6	321:17:43:03.000 001:16:47:24.000 000:01:31:11.769	119.57 0.00 0.00	184.32 175.52 0.20	38 9993 0 6318 N-00:07:35	-6.6 0.0 SS-00:35:54	
4 SOI TI 9.0	321:19:14:14.769 001:18:18:35.769 000:01:16:54.000	8.95 -0.01 -0.12	185.16 179.80 0.20	8 0024 0 1264 N-00:07:36	-6.6 -0.0 SS-00:36:00	
5 SOR MC-4 2.9	321:20:31:08.769 001:19:35:29.769 000:00:00:00.000	2.52 0.01 1.46	186.19 180.22 0.30	0 3311 0 0023 N-00:22:30	0.0 0.0 SS-00:58:27	

PWR

SEL

MNU

UP

DN

TRA

BCK

Figure 25: Final state before NC-3

9.5.1 Executing NC-3

This maneuver nominally has a Delta V of 3 feet per second. The actual solution should be very close to that number, so the maneuver can be performed using the RCS. On the maneuver transfer page choose slot 8 so use the SLO button and type "1 8". The resulting Maneuver PAD is:

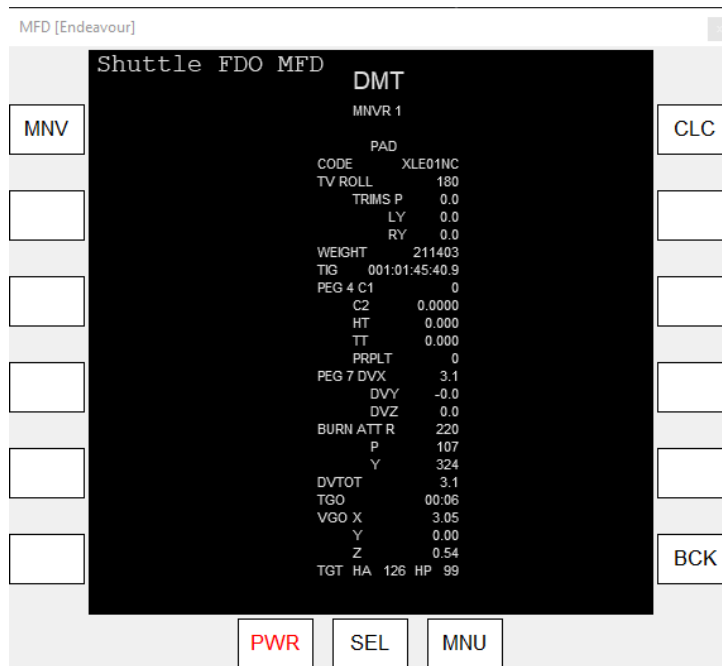


Figure 26: DMT for NPC

9.6 Pre NH Planning

Some time before crew wakeup on the day of rendezvous the preliminary plan for the final few rendezvous maneuvers should be defined. As the first step we need to check the phasing at NC-4. The last maneuver that was targeting the nominal -40 NM distance at NC-4 was the NC-3 maneuver. There is no phasing maneuver left to correct any errors, but the same can be achieved by moving the TIG of the NH burn to an earlier or later time. This is a trial and error process. Once it is close enough to 40 NM again (+/- 1NM should be sufficient) the NC-4 TIG needs to be adjusted by the same amount, because a Ti DVZ component will have been re-introduced. Moving the NH and NC-4 TIGs more than a few seconds is of course undesirable, because it will change the Ti lighting that was so carefully adjusted before. Next, the Ti TIG should be fixed in time by giving it a T primary constraint, rounded to a full second. It is used as a baseline time for the whole terminal rendezvous and it will simplify procedures to have it at a full second. Re-calculate and save the plan.

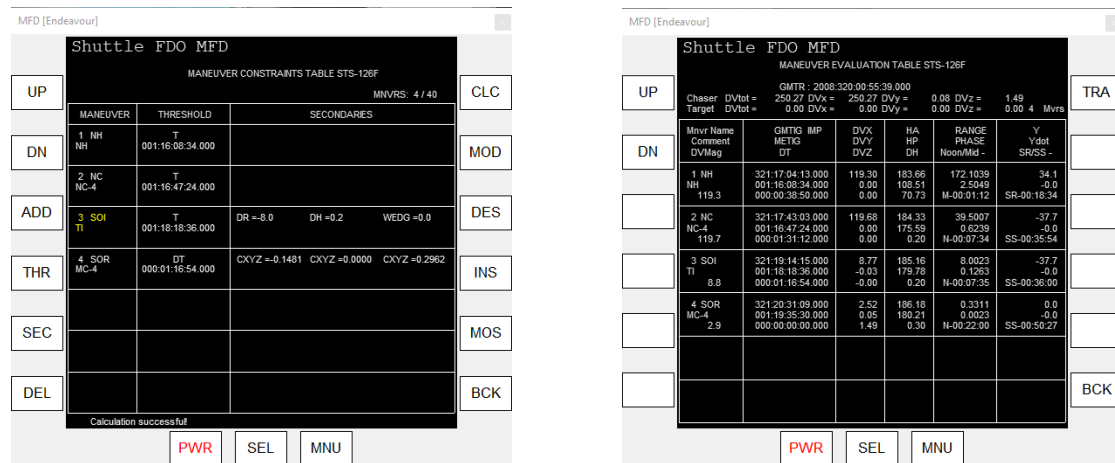


Figure 27: Final state before NH

At this point a whole FD3 Rendezvous Package could be created, which is given to the crew at the beginning of FD3 as part of an Execute Package. This contains a full list of maneuvers on the day of rendezvous, relative motion plots (can't be generated by the FDO MFD) and preliminary Maneuver PADs for the NH, NC-4 and Ti maneuvers. The relative timing of the rendezvous maneuvers can be found in the Reference Data section of the rendezvous checklist, for a target altitude of 210 NM. As explained in the description of the impulsive flag on the MTT page the onboard targeted maneuvers will not be modified in their TIG to account for the finite burntime, so they can now be generated:

NCC: 001:17:20:54.000
 Ti: 001:18:18:36.000
 MC1: 001:18:38:46.000
 MC2: 001:19:08:30.000
 MC3: 001:19:25:30.000
 MC4: 001:19:35:30.000

On the MTT page we can now generate burn profiles for NH, NC-4 and Ti. So this time we not only choose a burn profile for the first maneuver in the list, but the other ones as well. NH and NC-4 will use both OMS engines (OBP), the optimal ignition time (OPT) and a roll angle of 0 degrees. Ti usually uses the left OMS engine (OL) and the impulsive (IMP) ignition time. We could also generate a PAD for MC4, which will use the RCS for the burn. The desired burn profiles are therefore: profile 1 for NH and NH-4, profile 10 for Ti and profile 9 for MC4.

MFD [Endeavour]

Shuttle FDO MFD

MINVR	NAME	COMMIT	SLOT	THR	GUID	ITER	IMP	RREF	ROLL
1	NH	NC-3	1	OBP	P7	NO	OPT	TVR	0
2	NC	NC-4	1	OBP	P7	NO	OPT	TVR	0
3	SOI	TI	10	OL	P7	NO	IMP	TVR	0
4	SOR	MC-4	9	PX2	P7	NO	IMP	TVR	0

SLO

EXE

THRUSTER

GUIDANCE MODE

ITERATE FLAG

IMPULSIVE FLAG

LOCAL ROLL REF

LOCAL ROLL

SLOT	1	2	3	4	5	6	7	8	9	10
THRUSTER	OBP	OBP	OL	OL	OR	OR	PX2	PX2	PX2	OL
GUIDANCE MODE	P7	P7	P7	P7	P7	P7	P7	P7	P7	P7
ITERATE FLAG	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
IMPULSIVE FLAG	OPT	OPT	OPT	OPT	OPT	OPT	OPT	OPT	IMP	IMP
LOCAL ROLL REF	TVR	TVR	TVR	TVR	TVR	TVR	TVR	TVR	TVR	TVR
LOCAL ROLL	0	180	0	180	0	180	0	180	0	0

BCK

PWR

SEL

MNU

Figure 28: MTT for DOR maneuvers

Optionally you can now generate Maneuver PADs for all four maneuvers.

9.6.1 Executing NH

When we get closer to the NH TIG we can run the plan again and generate the final Maneuver PAD for the NH maneuver.

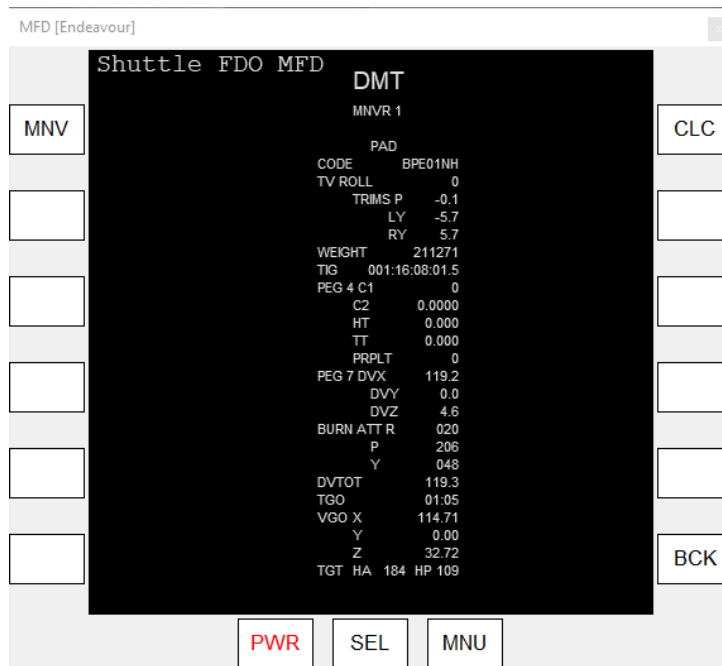


Figure 29: DMT for NH

9.7 Pre NC-4 Planning

As before, delete the maneuver that was last executed (the NH maneuver in this case) and remove any constraints associated with that burn. That is the DH constraint on NC-4 in this case. The NC-4 TIG should be slightly varied to minimize the Ti DVZ component, anything below 1 fps is good enough. Save the plan under a new name.

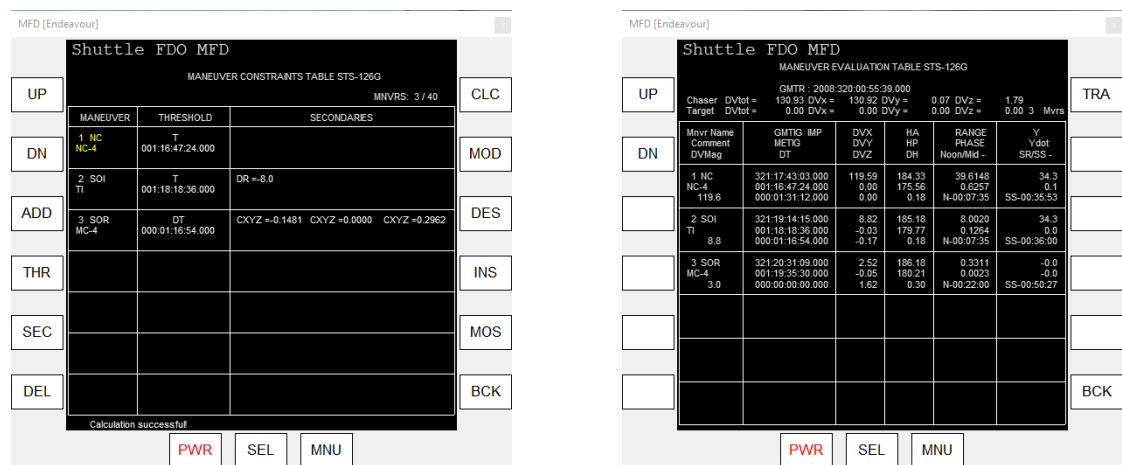


Figure 30: Final state before NC-4

9.7.1 Executing NC-4

Nothing special about this burn.

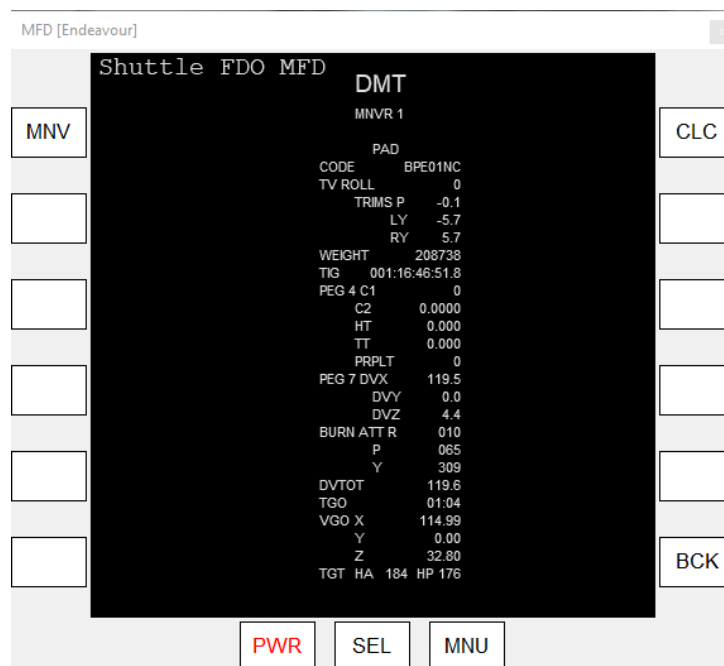


Figure 31: DMT for NC-4

9.8 Pre NCC Planning

The remaining part of the rendezvous could be flow with just the onboard tools, especially SPEC 34. But the "ground solutions" can also be calculated with the FDO MFD. For the NCC maneuver we first delete NC-4, then we insert the NCC maneuver at the previously calculated time. For that select the TI maneuver, press INS on the constraints page and type "NCC NCC" to add a NCC type maneuver with the name NCC in the first position of the table. Then add a threshold of type T to the NCC maneuver with the time of, in my case, 001:17:20:54. The NCC type maneuver targets all three axes (downtrack, delta height, out-of-plane), so we can re-introduce the DH and WEDG secondary constraints that we already had before on the Ti maneuver.

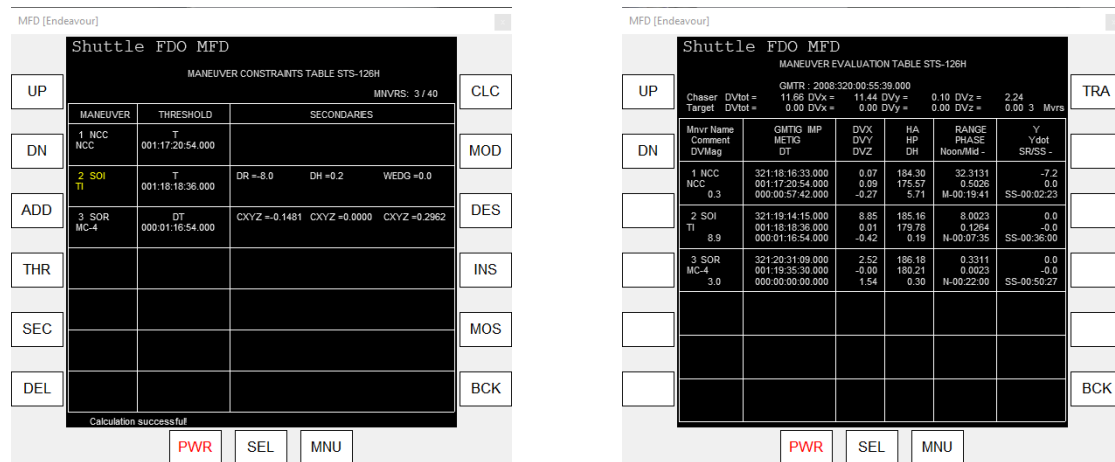


Figure 32: MCT and MET before NCC

9.8.1 Executing NCC

In all likelihood NCC will be a very small burn, so a multi-axis RCS burn is more than sufficient to execute it. None of the remaining burns should be slipped in time for crew procedure reasons, so the IMP option should be used on the MTT. That means burn profile 9 is the right choice on that page.

MFD [Endeavour]

Shuttle FDO MFD

DMT

MNVR 1

PAD

CODE XLE01NC

TV ROLL 0

TRIMS P 0.0

LY 0.0

RY 0.0

WEIGHT 206173

TIG 001:17:20:54.0

PEG 4 C1 0

C2 0.0000

HT 0.000

TT 0.000

PRPLT 0

PEG 7 DVX 0.1

DVY 0.1

DVZ -0.3

BURN ATT R 314

P 357

Y 348

DVTOT 0.3

TGO 00:01

VGO X 0.33

Y 0.00

Z 0.06

TGT HA 184 HP 176

MNV

CLC

PWR

SEL

MNU

BCK

Figure 33: DMT for NCC

9.9 Pre Ti Planning

For Ti only the previous maneuver and the associated secondary constraints need the be removed, the rest of the rendezvous plan should stay as it is.

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER CONSTRAINTS TABLE STS-128i

MNVRs: 2 / 40

CLC

MOD

DES

INS

MOS

BCK

UP

DN

ADD

THR

SEC

DEL

MANEUVER	THRESHOLD	SECONDARIES
1 SOI TI	T 001:18:18:36.000	
2 SOR MC-4	DT 000:01:16:54.000	CKYZ =-0.1481 CKYZ =0.0000 CKYZ =0.2962

Calculation successful

PWR

SEL

MNU

MFD [Endeavour]

Shuttle FDO MFD

MANEUVER EVALUATION TABLE STS-128i

GMTR : 2008:320:00:55:39.000

Chaser DVtot = 11.53 DVx = 11.37 DVy = 0.02 DVz = 1.88

Target DVtot = 0.00 DVx = 0.00 DVy = 0.00 DVz = 0.00 2 Mvrs

TRA

BCK

UP

DN

PWR

SEL

MNU

Mnvr Name	Comment	GMTR	MP	DVX	DVY	DVZ	RA	HP	DR	RANGE	PHASE	Y
			DT							NormMid		SR/SS
1 SOI		321:19:14:15.000		8.86	185.17		7.9842					0.8
TI		001:18:18:36.000		0.02	179.78		0.1261					0.0
	8.9	000:01:16:54.000		-0.35	0.19		N-00:07:35					SS-00:36:00
2 SOR		321:20:31:09.000		2.51	186.18		0.3311					-0.0
MC-4		001:19:35:30.000		-0.00	180.21		0.0023					0.0
	3.0	000:00:00:00.000		1.55	0.30		N-00:22:30					SS-00:58:27

Figure 34: MCT and MET before Ti

9.9.1 Executing Ti

The desired burn profile for Ti is using the left OMS engine, so that the Ku-Band antenna can stay locked onto the target vehicle even in the burn attitude. So profile 10 should be chosen on the MTT.

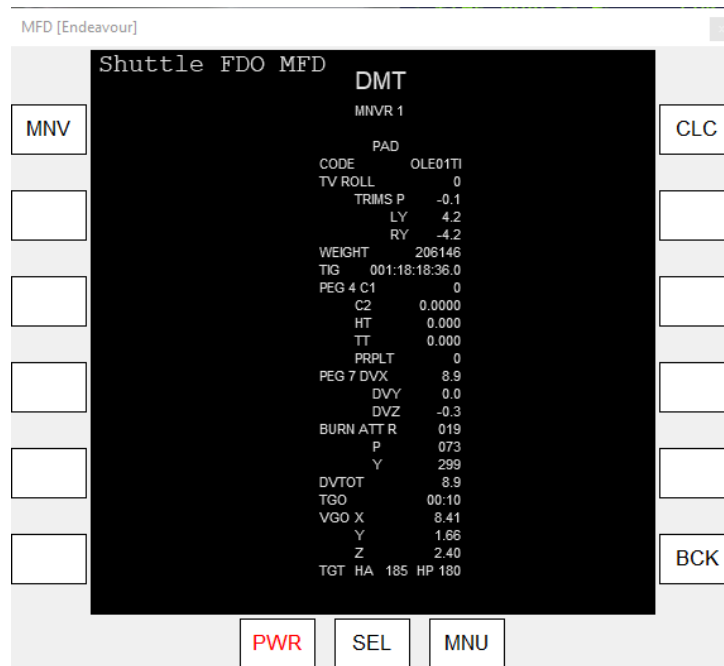


Figure 35: DMT for Ti

9.10 MC Maneuvers

The MC maneuvers can be targeted with the FDO MFD by adding them as the SOI maneuver in the plan. Just modify the previous plan by changing the name of the SOI maneuver from Ti to MC1 (or 2 etc.) and then changing the primary threshold to the previously calculated MC TIG.

This concludes the walkthrough of a full rendezvous with the ISS. While the general principle of this rendezvous profile will apply to most other Shuttle rendezvous scenarios, the details will always be different. Flight Day 4 rendezvous have more phasing correction maneuvers, some missions even included a coelliptic profile. Some of these variations and additional procedures will be added to this manual as special focus chapters.

10 Example: IUS Deployment

The following section contains procedures to calculate times and attitudes in support of deploying an IUS. It is assumed that the IUS is performing its first burn at the ascending node of the sixth orbit (6A opportunity).

a) The first task is to find the equator crossing time for the deployment opportunity. At this equator crossing time the IUS will perform its first burn. The time is approximately 1 hour after the flight plan IUS deployment time. To find the time, the Checkout Monitor display can be used. At the moment this display cannot automatically find the time, but with trial and error the time can be found when the latitude becomes zero. Note this time.

b) The actual IUS time of ignition can be found by subtracting 85 seconds from the equator crossing time. This is roughly half of the burn time and ensures that the resulting apogee is placed at an equator as well. Note this time.

c) The IUS deployment time is scheduled to be one hour before IUS time of ignition. There is an inhibit in the IUS that does not allow the burn to start until this one hour has passed. Using this time as the IUS deployment time will cause this inhibit to run out right when time of ignition should be commanded. Note this time.

d) Get the beta angle of the orbit, which is the angle between the Sun and the orbital plane of the Shuttle. For this enter the IUS deploy time on the Checkout Monitor display and read the BETA ANG output. This angle is used for attitude calculations in the next few steps.

e) The IUS deploy attitude is done in a Sun relative attitude which a constraint for the orbital plane. To calculate the pitch angle input for Universal Pointing (or the equivalent Supersighter calculation) perform the following calculation:

$$P = 360 - (75 + |\beta|)$$

The Omicron angle also depends on the Beta angle:

$$OM = 090 (\beta > 0) \text{ or } 270 (\beta < 0)$$

Note both of these angles.

The Universal Pointing inputs for the deploy attitude are now complete. They consist of TGT ID = 4, BV = 5, the calculated pitch, Y = 0.0 and the calculated OM. To calculate the same attitude with Supersighter the following inputs are required:

- Mode = 7

- Target 1 ID = SUN
- Instrument IA1: S04
- IA1 Angles: Pitch (calculated) and Yaw (0.0)
- OMI: Calculated Omicron angle
- Start time: Calculated IUS deployment time

The calculated Output A attitude can then be used to deploy the IUS. This should complete the IUS Deploy PAD. The window protect attitude can currently not be calculated, because the OMS separation burn can not be taken into account for the trajectory in Supersighter.

The separation burn is using External DV with a TIG of 15 minutes after IUS deployment and fixed Delta V components of $DVX = 29.9$, $DVY = 0.0$, $DVZ = 8.0$

11 Landing Sites

The landing sites in the table below are the ones available for the deorbit opportunities and deorbit maneuver processor displays. They are defined in two separate config files, LandingSites.txt and DOPSLandingSites.txt, in the Config/MFD/ShuttleFDOMFD/ folder. The runways IDs are the names to be input to the deorbit maneuver processor. The SPEC 50 codes are typically values, but don't apply to all missions.

Code	Name	Runways	SPEC 50 Code
KSC	Kennedy Space Center	KSC15, KSC33	1
BEN	Ben Guerir	BEN18, BEN36	2
MRN	Moron AB	MRN02, MRN20	3
ZZA	Zaragoza	ZZA12R, ZZA30L	4
MYR	Myrtle Beach	MYR18, MYR36	5
ILM	Wilmington	ILM06, ILM24	6
NKT	Cherry Point	NKT32L, NKT23R	7
NTU	Oceana NAS	NTU32R, NTU23L	8
WAL	Wallops	WAL04, WAL28	9
DOV	Dover AFB	DOV19, DOV32	10
ACY	Atlantic City	ACY13, ACY31	11
FOK	Gabreski	FOK06, FOK24	15
FMH	Cape Cod CGAS	FMH23, FMH32	16
PSM	Pease International	PSM16, PSM34	17
YHZ	Halifax International	YHZ23, YHZ32	18
YJT	Stephenville	YJT09, YJT27	19
YYT	St Johns International	YYT11, YYT29	20
YQX	Gander International	YQX21, YQX31	21
YYR	Goose Bay	YYR26, YYR34	22
LAJ	Lajes AB	LAJ15, LAJ33	23
BEJ	Beja AB	BEJ01L, BEJ19R	24
IKF	Keflavik International	IKF20, IKF29	25
INN	Shannon	INN06, INN24	26
FFA	Fairford	FFA09, FFA27	27
KBO	Köln-Bonn	KBO14L, KBO32R	28
FMI	Istres AB	FMI15, FMI33	29
ESN	Esenboga	ESN03R, ESN21L	30
KKI	King Khaled	KKI15R, KKI33L	31
JDG	Diego Garcia	JDG13, JDG31	32
AMB	Amberley RAAF	AMB15, AMB33	33
PTN	Tindal RAAF	PTN14, PTN32	33
JTY	Yokota AB	JTY18, JTY36	34

Code	Name	Runways	SPEC 50 Code
GUA	Andersen AFB	GUA06L, GUA24R	35
WAK	Wake Island	WAK10, WAK28	36
HNL	Honolulu	HNL08R, HNL26L	37
EDF	Elmendorf	EDF06, EDF24	38
HAO	Hao Atoll	HAO12, HAO30	39
EDT	Edwards Temp	EDT04L, EDT22R	40
HAW	Ascension	HAW13, HAW31	41
NOR	Northrup	NOR17, NOR23	42
NOR	Northrup	NOR05, NOR35	43
EDW	Edwards AFB	EDW15, EDW18L	44
EDW	Edwards AFB	EDW04, EDW22	45
AAT	Tamanrasset	AAT02, AAT20	-
AHS	Hoedspruit AFB	AHS18, AHS36	-
AML	Sal International	AML01, AML19	-
ARL	Stockholm Arlanda	ARL01, ARL19	-
AWG	Rio Gallegos	AWG07, AWG25	-
BDA	Bermuda	BDA12, BDA30	-
BYD	Banjul International	BYD14, BYD32	-
CBA	Casablanca	CBA17, CBA35	-
CEF	Westover	CEF05, CEF23	-
DDN	Darwin International	DDN11, DDN29	-
DNA	Kadena AB	DNA05L, DNA23R	-
DOV	Dover AFB	DOV01, DOV14	-
DYS	Dyess AFB	DYS16, DYS34	-
EIP	Easter Island	EIP10, EIP28	-
EST	Nuevo Pudahuel Airport	EST17, EST35	-
FFO	Wright-Patterson AFB	FFO05L, FFO23R	-
GDV	Gran Canaria	GDV03L, GDV21R	-
GSA	Chania International	GSA11, GSA29	-
GUS	Grissom AFB	GUS05, GUS23	-
JDG	NSF Diego Garcia	JDG13, JDG31	-
KIN	Kinshasa	KIN06, KIN24	-
LIN	Lincoln	LNK18, LNK36	-
LRB	Roberts International	LRB04, LRB22	-
MCF	MacDill AFB	MCF04, MCF22	-
MCO	Orlando International	MCO18R, MCO36L	-
MUO	Mountain Home AFB	MUO12, MUO30	-
MHW	Grant County	MHW14L, MHW32R	-
NID	China Lake	NID03, NID21	-
NKX	MCAS Miramar	NKX06L, NKX24R	-
NZC	Cecil Airport	NZC18L, NZC36R	-

Code	Name	Runways	SPEC 50 Code
OOY	Dakar	OOY18, OOO36	-
PBG	Plattsburgh International	PBG17, PBG35	-
PEA	RAAF Base Pearce	PEA18L, PEA36R	-
PMR	Cape Canaveral AFS	PMR13, PMR31	-
RCA	Ellsworth AFB	RCA13, RCA31	-
ROZ	Naval Station Rota	ROZ10, ROZ28	-
VBG	Vandenberg AFB	VBG12, VBG30	-
YNN	Nassau International	YNN14, YNN32	-

12 Changelog

Version 0.7:

- Add Supersighter and supporting displays.
- Add Checkout Monitor display.
- OMP: Improved NSR maneuver calculation.

Version 0.6.1:

- Fix bug in NPC maneuver common node search.
- Add LSDV type maneuver, DLT and DTL thresholds and A and P type secondary constraints.

Version 0.6:

- Extensive internal reorganization of the Orbital Maneuver Processor.
- More user friendly inputs and displays of the OMP.
- Updated manual and small bug fixes.

Version 0.5.1:

- Fix bugs related to changed gravity model in Orbiter 2024.

Version 0.5.0:

- Switch to Orbiter 2024.

Version 0.4.2:

- Deorbit Opportunities for all possible landing sites.
- Minor DOPS bug fix.

Version 0.4.1:

- Updated landing site table for deorbit maneuver targeting.
- Minor DMP bug fix.

Version 0.4.0:

- Add Deorbit Maneuver Processor.