ENGLISH

USER MANUAL

Read this manual completely before installation, operation, cleaning or servicing.

CONTENTS

01	Safety and intended use	03
02	Product overview	05
03	Main unit components	06
04	Control panel	07
05	Power on / off	08
06	Basic operation	09
07	OKEY / 101 mode	10
08	Service diagnostics	11
09	Fault codes	12
10	Maintenance schedule	13
11	Surface and tile care	15
12	Interior maintenance	17
13	Warranty and service terms	18

01

SAFETY AND INTENDED USE

EN

For safe, reliable operation, observe all instructions below and the product rating label.

- Use only compatible tiles, accessories and replacement parts approved for this model.
- Do not dismantle, modify or repair the machine yourself. Internal work is for qualified service personnel only.
- Connect to a grounded outlet that complies with local electrical rules and the voltage/frequency shown on the product rating label.
- If the mains supply is unstable, use suitable voltage-protection equipment. Do not operate outside the product rating.
- Transport the machine upright and stable. Do not invert, drop or subject it to impact.
- Do not wash the tabletop or interior with water. Keep liquids away from electrical parts.

SAFETY AND INTENDED USE

CONTINUED

- Prevent lighters, cigarette ends, coins and other small objects from entering the machine.
- Do not scratch the playing surface or tiles with sharp objects.
- For long storage, disconnect power and avoid direct sunlight, excessive heat and high humidity.
- If a fault occurs, stop use and disconnect power before inspection by qualified personnel.
- A damaged power cord must be replaced by qualified personnel using a suitable cord.


IMPORTANT


Use the tile set specified for the machine. Incorrect tile size, weight or magnetic properties may cause jams, sorting errors or damage. Appearance and controls may vary by model; the actual product takes precedence.

PRODUCT OVERVIEW

EN

The product consists of the main table unit, an outer frame and a supporting base. Depending on the model, the base may use four legs or a mobile pedestal. Two compatible OKEY tile sets may be supplied.

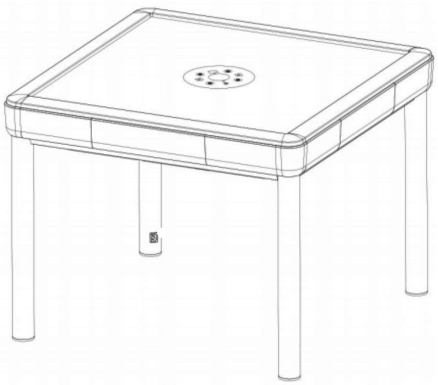


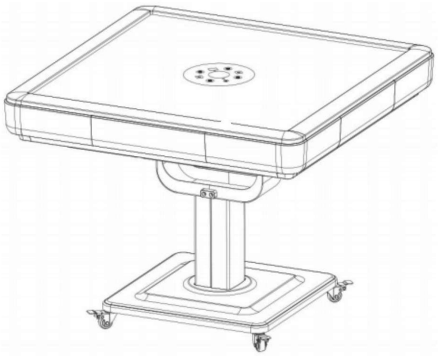

Illustrations show typical configurations. Shape, finish and structure may differ by model.

MAIN UNIT COMPONENTS


The main unit combines electronic control and mechanical handling systems. The numbered diagram identifies the principal assemblies.

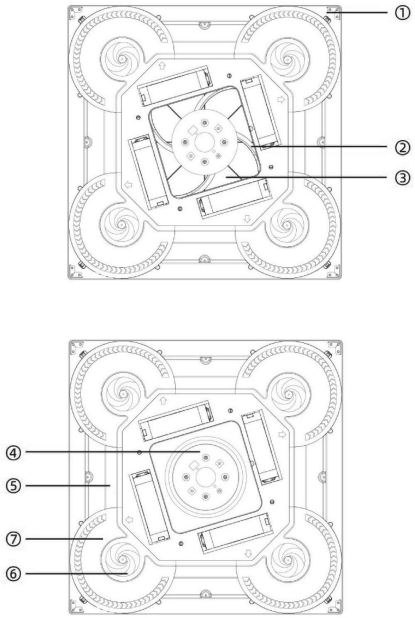

1. Outer frame
2. Sorting guide
3. Shuffle tray
4. Dice-tray assembly
5. Conveyor assembly
6. Rotating tray
7. Sorting assembly

CONTROL PANEL


Button layout may differ by model. Confirm the symbols on the installed panel before use.

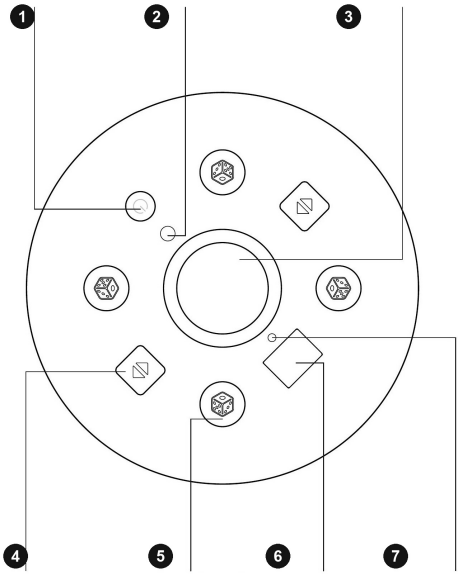


1. Power button
2. Mode button
3. Dice tray
4. Panel up/down buttons
5. Dice-roll buttons
6. Status display
7. Position indicators

POWER ON / OFF

- Press and hold the power button for 5 seconds to switch the machine on or off.
- To restart from a reset, shuffling or alarm state: hold for 5 seconds to switch off, then hold again for 5 seconds to switch on.

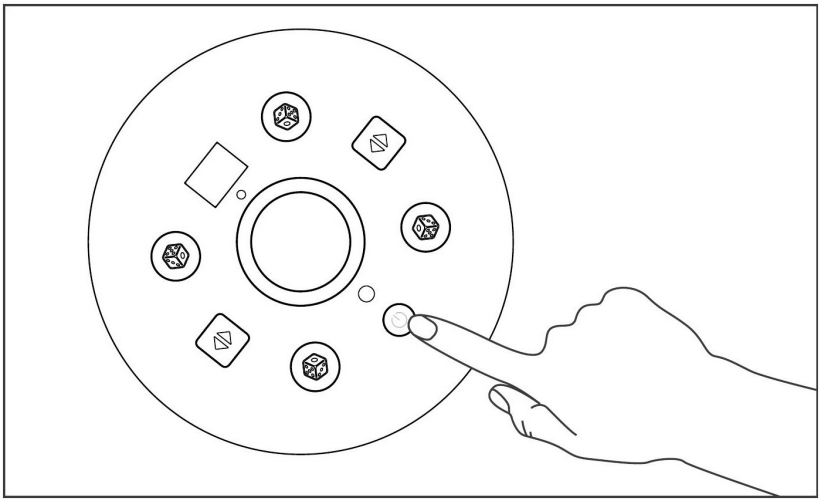

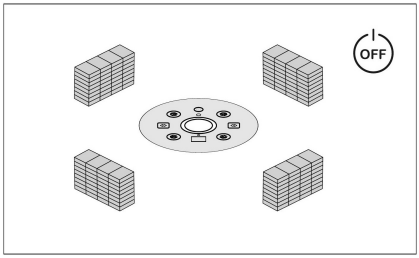


When the machine remains in the reset state with no operation for 30 minutes, it switches off automatically.

BASIC OPERATION

01 Raise / lower the panel

In the reset state, press an up/down button once to raise the centre panel; press it again to lower the panel. During shuffling, press two opposite up/down buttons together to raise the panel and pause. Press one up/down button again to lower the panel and resume.

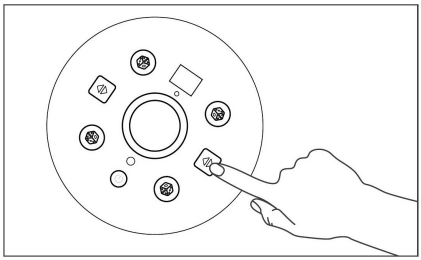


02 Roll the dice

Press the dice-roll button at the required player position. Its position indicator lights and the dice motor runs.


03 Return to reset


Press and hold two diagonally opposite dice-roll buttons together for 3 seconds.

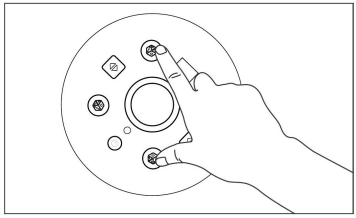

OKEY / 101 MODE

1. Place the machine in the reset state.
2. Press and hold the Mode button for 5 seconds.
3. A beep sounds and the display changes between OKEY and 101.
4. Repeat the 5-second press to switch back.

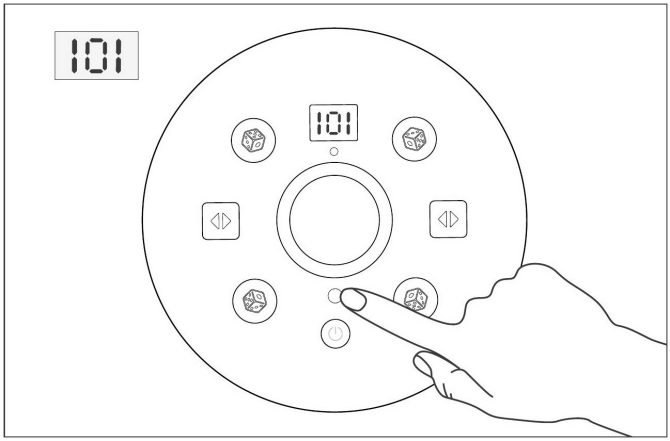


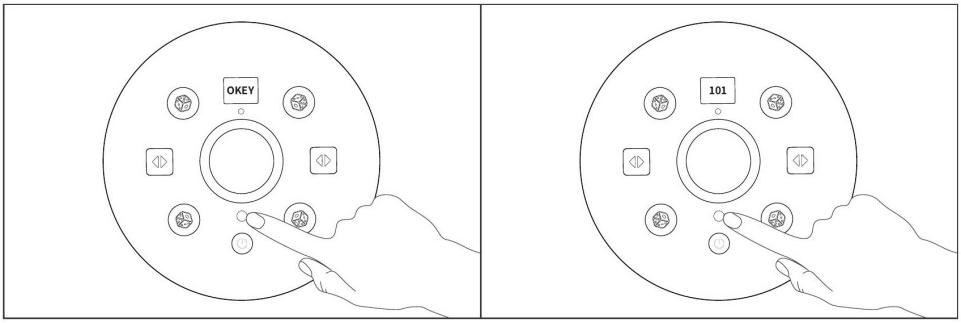


SERVICE DIAGNOSTICS

IMPORTANT: Diagnostic mode operates internal mechanisms. Use it only for trained inspection with the playing area clear.

In the reset state, hold all four dice-roll buttons together for 3 seconds to enter the test. To exit, hold all four buttons together again; the machine returns to shuffling.

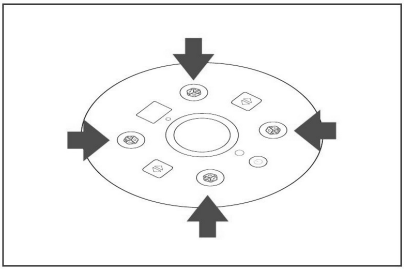

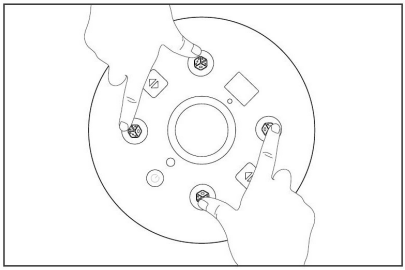

0 - centre-panel lift

1 - main turntable

2 - transport units on all four sides

3 - stacking and pushing units on all four sides

4 - tile-lift units on all four sides

5 - rotary-base / tile-pushing units on all four sides

6 - dice motor and buzzer

7 - automatic endurance test

FAULT CODES

A fault code identifies the function area to inspect; it does not by itself prove that a component has failed. In code groups 21-54, the last digit identifies the side. The corresponding position indicator flashes. Stop operation if the fault repeats after a restart.

For groups 21-54: 1 East · 2 South · 3 West · 4 North

CODE	FAULT AREA
00	Centre-panel lift
01	Main turntable
21	East transport unit
22	South transport unit
23	West transport unit
24	North transport unit
31	East stacking and pushing unit
32	South stacking and pushing unit
33	West stacking and pushing unit
34	North stacking and pushing unit
41	East tile-lift unit
42	South tile-lift unit
43	West tile-lift unit
44	North tile-lift unit
51	East rotary-base unit
52	South rotary-base unit
53	West rotary-base unit
54	North rotary-base unit

MAINTENANCE SCHEDULE

1

After installation / during the first 3 months
Inspect regularly. Keep the tabletop and compatible tiles clean and dry.

2

Every 3 months
Carry out a complete cleaning of the frame, surface fabric and shuffle area.
Increase frequency in dusty or high-use locations.


3

At least 3 times per year
Arrange comprehensive inspection and maintenance appropriate to usage and local conditions.


SURFACE FABRIC

CONTINUED

Disconnect power. Remove the removable border only if the model permits. With a clean, soft-bristled brush, brush the fabric gently in one direction until dust is removed. Do not soak, scrape or use a stiff brush.

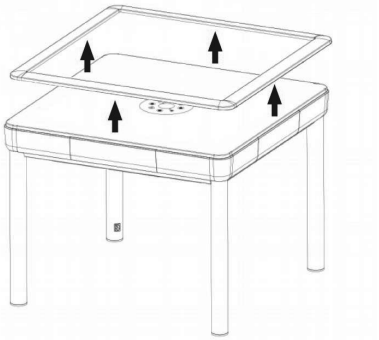

①

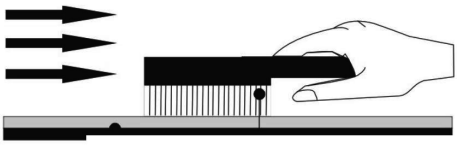


②

Illustrations show typical configurations. Shape, finish and structure may differ by model.


SURFACE AND TILE CARE

EN

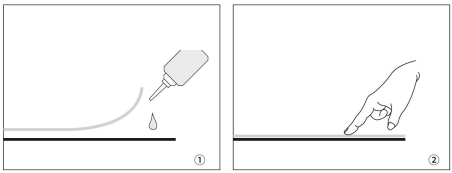

01

If a fabric edge or corner lifts, stop use. Apply only a small amount of adhesive that is compatible with the fabric and substrate, then press flat until secure. If suitability is uncertain, use qualified service.

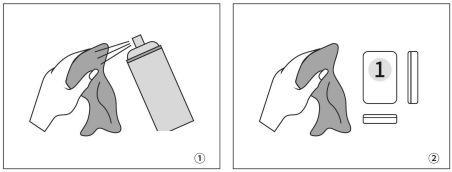


02

Arrange the tiles on a clean, flat surface. Lightly dampen a clean cloth with a manufacturer-approved, non-corrosive surface cleaner and wipe all six faces. Never spray cleaner directly into the machine.

SURFACE AND TILE CARE

CONTINUED

03 For engraved faces, use a slightly damp, soft-bristled brush with light pressure. Do not scrub hard enough to remove paint. Dry fully with a soft cloth or cool airflow before loading.

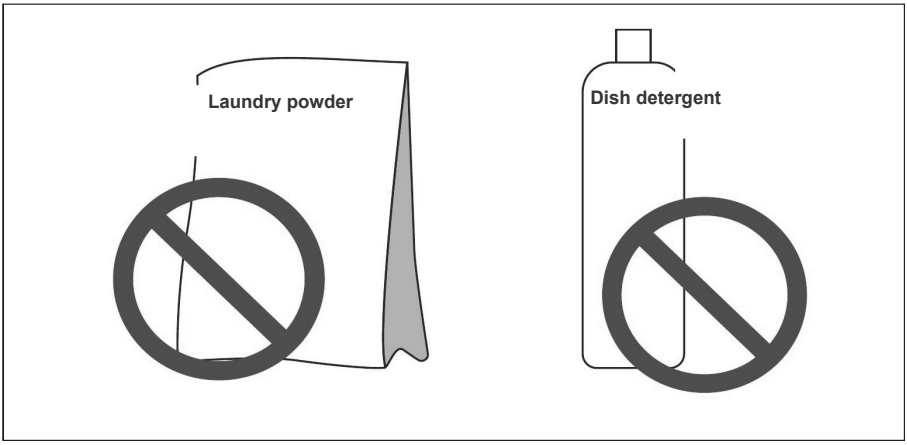

IMPORTANT

Do not use laundry powder, dishwashing liquid, abrasive cleaners, solvents or aggressive chemicals. These may damage printing, surface finish or magnetic properties.

INTERIOR MAINTENANCE

1. Disconnect the power plug before opening any service-access area.

2. Remove loose dust from the shuffle area with a low-suction vacuum or a soft brush.

3. Do not move, bend or force electrical or mechanical components while cleaning.

4. Keep tile-contact and sliding areas clean. Use only the lubricant type and quantity specified for the model.

5. Do not apply surface cleaner to internal parts. If debris cannot be removed safely, arrange qualified service.

13

WARRANTY AND SERVICE TERMS

EN

Warranty duration and service coverage are defined by the sales contract, invoice or warranty document supplied with the product. Mandatory rights under local law remain unaffected.

- Keep proof of purchase, the warranty document and the product serial number.
- Defects caused by manufacturing or material faults are handled according to the applicable warranty document.
- Service outside the warranty may include labour, travel and replacement-part charges.
- Tiles, outer trim and playing-surface fabric are wear items unless the applicable warranty states otherwise.

Typical exclusions

- Warranty period expired or proof of coverage unavailable.
- Serial number or warranty information altered, removed or mismatched.
- Damage caused by incorrect transport, installation, use, cleaning, maintenance or storage.
- Damage caused by unauthorised dismantling, repair or modification.
- Damage caused by unsuitable power, temperature, humidity, liquid ingress or events outside reasonable control.