


INEAN PLAY OTOKEY

Automatic OKEY Table - User Manual

frame, and the base. In addition, two sets of OKEY cards are attached, as shown in the following figure.

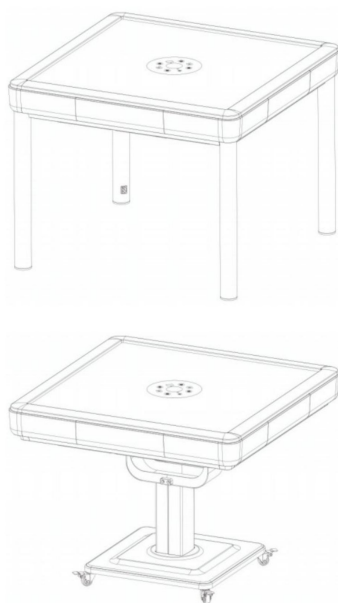

The appearance may vary depending on different series and models. please refer to the actual product for

Representative product configurations

Read this manual before installation, operation, cleaning, or servicing.

Edition - July 2026

Contents

1. Safety information
2. Product overview
3. Control panel
4. Basic operation
5. Mode selection
6. Service diagnostics
7. Fault codes
8. Maintenance
9. Limited warranty
10. Support

service@ineanplay.com | <https://ineanplay.com>

1. Important safety information

Use the table only as described in this manual. Keep this manual with the product and provide it to the next owner or operator.

- Use only accessories and magnetic OKEY tiles approved for the specific model. Incorrect tiles may jam or damage the mechanism.
- Do not disassemble, modify, or repair the table unless you are an authorized service technician.
- Connect the table only to a properly grounded outlet that matches the voltage and frequency on the product nameplate.
- For 220 V models, operation outside 175-235 V requires an approved voltage stabilizer. The nameplate and local electrical rules take precedence.
- Keep the table upright and stable during transport. Do not turn it upside down, drop it, or move it while tiles are inside the mechanism.
- Disconnect power before cleaning. Do not pour or spray water or cleaner into openings, motors, sensors, or electronic parts.
- Remove coins, lighters, cigarette ends, and other small objects before operation. Stop immediately if a foreign object enters the table.
- Keep sharp objects away from the playing cloth and tile surfaces.
- Store the table away from direct sunlight, excessive heat, and high humidity.
- If the power cord is damaged, stop using the table and contact INEAN PLAY or an authorized service provider.

Safety and legal notice

Failure to follow these instructions may cause injury or product damage and may affect warranty coverage to the extent permitted by law. This manual does not limit mandatory consumer rights.


2. Product overview

The automatic OKEY table consists of the main unit, outer frame, and base or legs. Model appearance and base design may vary. The main unit combines an electronic control system with mechanical tile collection, shuffling, sorting, and delivery systems.

Main components

- Outer frame
- Sorting guide
- Shuffle panel
- Dice-tray assembly
- Conveyor assembly
- Tumbler
- Sorter assembly


hanical system (as shown in the top view of the main unit).

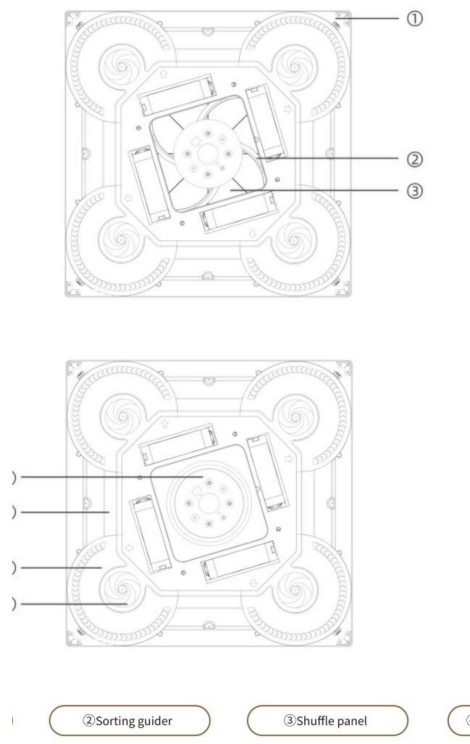

Representative product configurations

Illustrations are representative. Use the controls and labels on the product you purchased.

3. Control panel

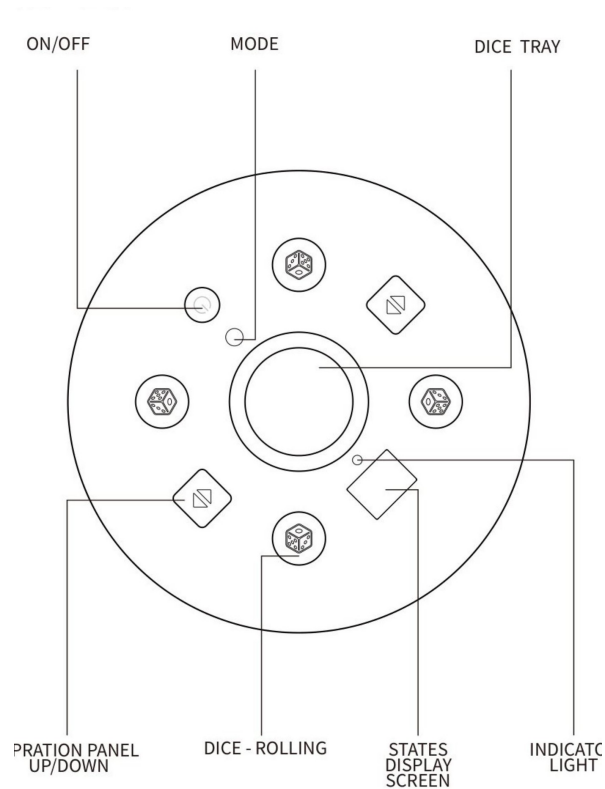

Representative control panel

- Power button: press and hold to turn the controller on or off.
- Mode button: displays and changes the configured game mode while the table is in the reset state.
- Panel up/down buttons: raise or lower the center panel. Both buttons together pause shuffling and raise the panel on supported models.
- Dice buttons: roll the dice and indicate the dealer position. Two diagonally opposite dice buttons enter the reset state.
- Status display: shows the active mode or a fault code.
- Position indicators: identify the active dealer position or the side associated with a fault.


Illustrations are representative. Use the controls and labels on the product you purchased.

4. Basic operation

Power on and off

1. Make sure the table is stable, the center panel is closed, and no foreign objects are present.
2. Connect the power cable to the correct grounded outlet.
3. Press and hold the Power button for about 5 seconds to turn the controller on. Press and hold it again for about 5 seconds to turn it off.
4. If the table remains in the reset state without operation for more than 30 minutes, supported models switch off automatically.

automatically power off.

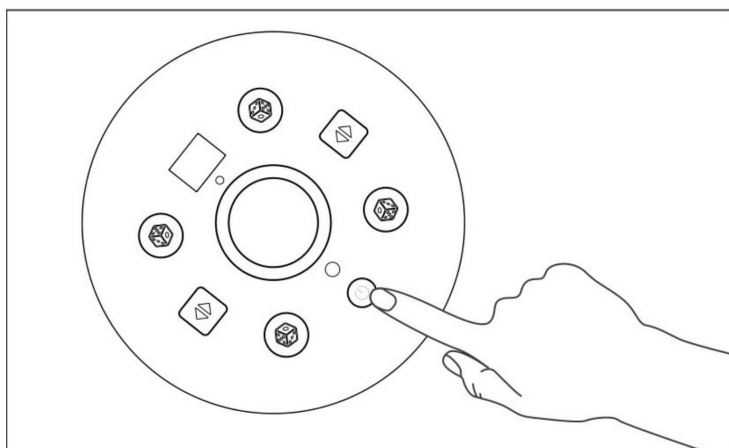

Press and hold the power/off key for 5 seconds to power on/off.


Press and hold the Power button for about 5 seconds

Playing and resetting


1. In the reset state, press either Panel Up/Down button once to raise the center panel. Press either button again to lower it.
2. Place only the approved tile set into the opening. Keep hands, clothing, and other objects away from the opening while it closes.
3. During shuffling, press both Panel Up/Down buttons together to pause and raise the panel on supported models. Press one Panel Up/Down button to lower the panel and resume.
4. Press the Dice button facing the dealer position to roll the dice and illuminate that position.
5. To return to the reset state, press and hold two diagonally opposite Dice buttons for about 3 seconds.

5. Selecting OKEY or 101 mode

1. Put the table in the reset state.
2. Press and hold the Mode button for about 5 seconds. A beep sounds and the current mode appears on the status display.
3. Press and hold the Mode button again for about 5 seconds to switch between OKEY and 101 on supported models.
4. Confirm the displayed mode before loading tiles. Do not assume every model or tile set supports both modes.

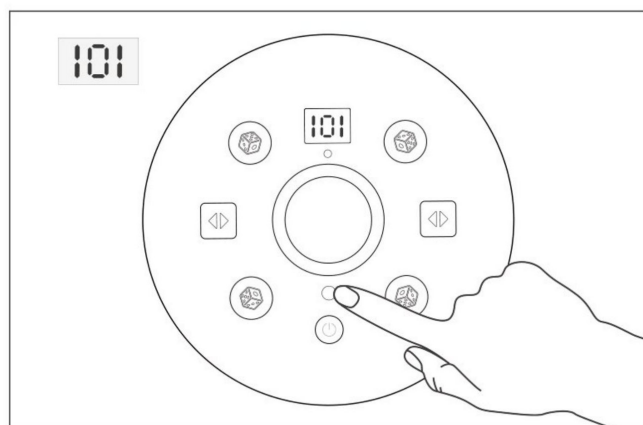

To switch to 101 mode automatically, press and hold the mode button for 5 seconds.

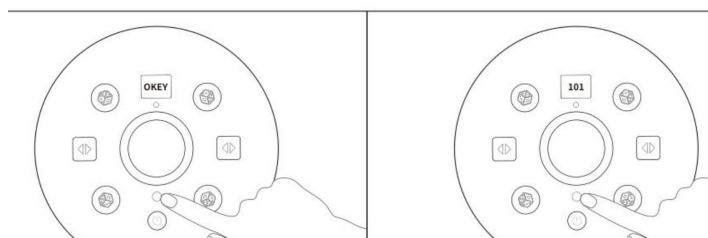

Mode display and mode-selection control

Illustrations are representative. Use the controls and labels on the product you purchased.

6. Service diagnostic mode

For trained service personnel only. Keep users, loose clothing, and objects away from moving parts during testing.

In the reset state, press and hold all four Dice buttons for about 3 seconds to enter single-step diagnostics. Repeat the action to exit after testing.

- Mode 0 - center-panel lifting mechanism
- Mode 1 - shuffle-panel mechanism
- Mode 2 - conveyor assemblies
- Mode 3 - sorter assemblies
- Mode 4 - approach bridges
- Mode 5 - tumbler assemblies
- Mode 6 - dice-tray motor and buzzer
- Mode 7 - component endurance/aging test; authorized factory service only

7. Fault codes

The tens digit identifies the component group and the units digit identifies the side. The corresponding position indicator also flashes. Example: code 21 indicates the conveyor on side 1.

The east/south/west/north labels use the service reference orientation and may not match the user's seating direction. Use the flashing indicator to identify the affected side.

Component	Code
Center-panel lifting mechanism	00
Shuffle panel	01
East conveyor	21
South conveyor	22
West conveyor	23
North conveyor	24
East sorter	31
South sorter	32
West sorter	33
North sorter	34
East approach bridge	41
South approach bridge	42
West approach bridge	43
North approach bridge	44
East tumbler	51
South tumbler	52
West tumbler	53
North tumbler	54


8. Maintenance

Recommended schedule

- After use: remove foreign objects and wipe visible dust with a dry, soft cloth.
- As needed: clean the playing cloth and tile surfaces using the procedures below.
- Every three months: inspect the cloth, frame, cable, moving covers, and tile path. Increase frequency for commercial use.
- Professional service: arrange according to operating hours, repeated fault codes, unusual noise, or local support guidance.

Playing-cloth care

Disconnect power. Remove the detachable border only if the model permits it. Brush the cloth gently in one direction with a clean, soft brush. Do not soak the cloth. If an edge lifts or wrinkles, stop using the table and contact support unless INEAN PLAY has supplied an approved adhesive and repair procedure.

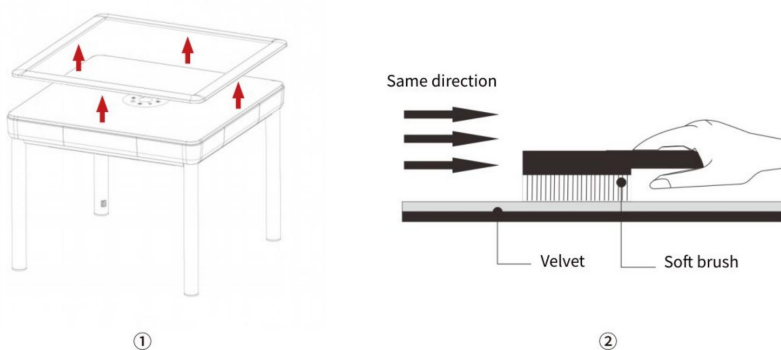


Brush the playing cloth gently in one direction

Tile cleaning

Arrange the tiles on a clean, flat surface. Apply a small amount of manufacturer-approved, residue-free cleaner to a soft cloth - never directly to the tiles or machine. Wipe every face, then dry completely at room temperature. Use a soft toothbrush on engraved areas without scrubbing away the printed finish. Do not use laundry detergent, dishwashing liquid, abrasive cleaner, solvent, furniture polish, or heat from a hair dryer.

2、 Maintenance Methods for OKEY tiles

Take out the OKEY tiles and neatly arranged them on a flat surface of a desk. Take a clean towel, spray it with detergent for example the "Pledge", and carefully wipe all six surfaces of the tiles. Before cleaning, arrange all tiles neatly and cleaning them together will save a lot of time and cost.

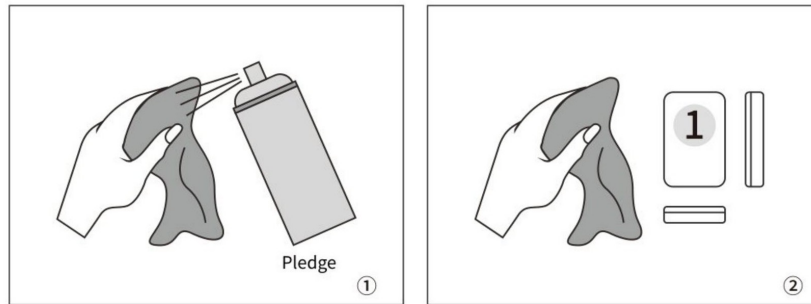

Tile cleaning

Interior cleaning

Users may clean only accessible areas after disconnecting power. Use a soft brush or low-suction vacuum without touching wiring, sensors, belts, or moving assemblies. Internal cleaning, lubrication, adjustment, and disassembly must be performed by trained service personnel using approved products. Never use furniture polish as a lubricant.

9. Limited warranty

This manual describes a one-year limited warranty from the date of sale. The applicable sales contract, regional warranty policy, and mandatory consumer law take precedence.

1. Keep the purchase receipt, serial number, and any warranty certificate supplied with the product.
2. During the applicable warranty period, confirmed manufacturing defects are handled through the seller or an authorized service provider under the regional policy.
3. Services outside warranty may include labor, travel, and replacement-part charges.
4. Tiles, outer trim, and playing cloth are wear items unless a defect existed at delivery or local law provides otherwise.

Common exclusions, subject to local law

- Damage after the applicable warranty period.
- Serial-number removal or unauthorized alteration of product records.
- Damage caused by incorrect transport, installation, voltage, use, cleaning, maintenance, or storage.
- Damage caused by unauthorized disassembly, modification, or repair.
- Damage caused by external events such as unstable power, abnormal temperature or humidity, liquid ingress, or force majeure.

10. Support

For model confirmation, parts, fault-code assistance, warranty service, or approved cleaning products, contact INEAN PLAY.

Email: service@ineanplay.com

Website: <https://ineanplay.com>

When requesting service, provide the model, serial number, purchase date, displayed fault code, and a clear photo or video.