

3.3V Supply

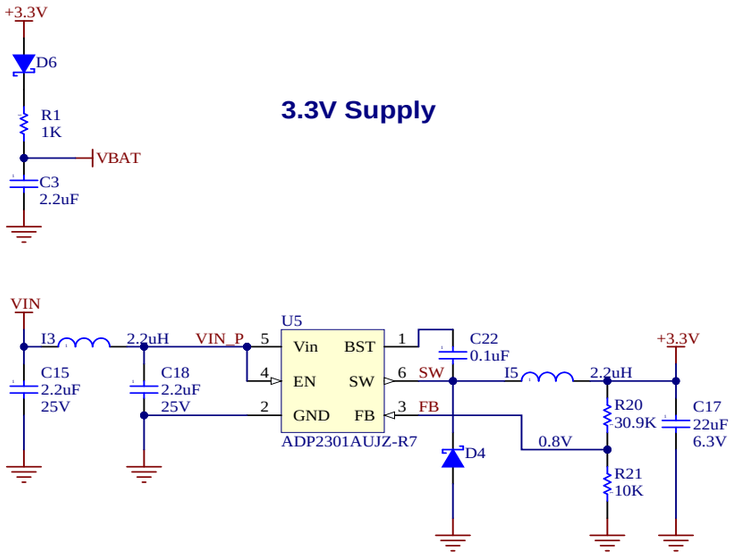

IG LGA Pads

Pins 1-14 assignments must match on U4 and H1

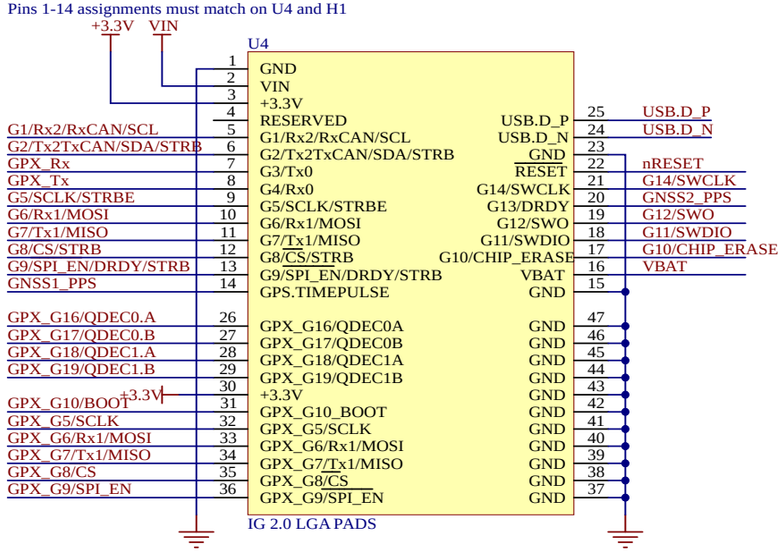

Host Connections

GNSS1_PPS
nRESET

Optional Interface: USB


USB.D_P
USB.D_N

Optional Interface: UART or SPI

G6/Rx1/MOSI
G7/Tx1/MISO
G5/SCLK/STRBE
G8/CS/STRB
G9/SPI_EN/DRDY/STRB


SPI interface is enabled by holding G9 low during boot up.

IMX-6 INS Module

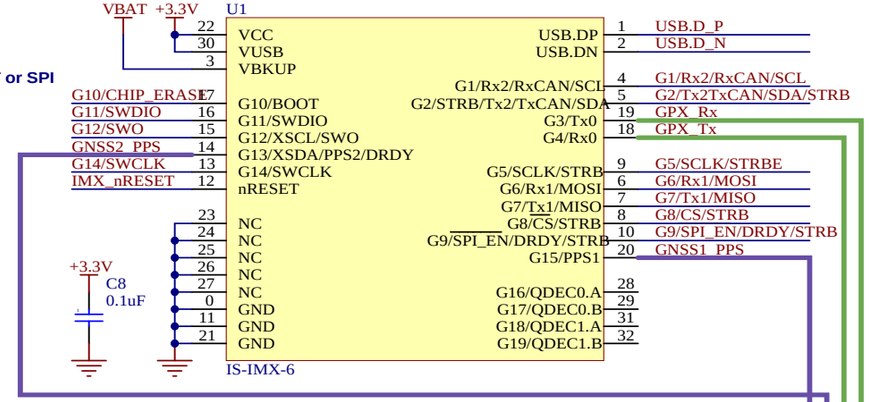


Antenna Connections


GPX-1 GNSS Module

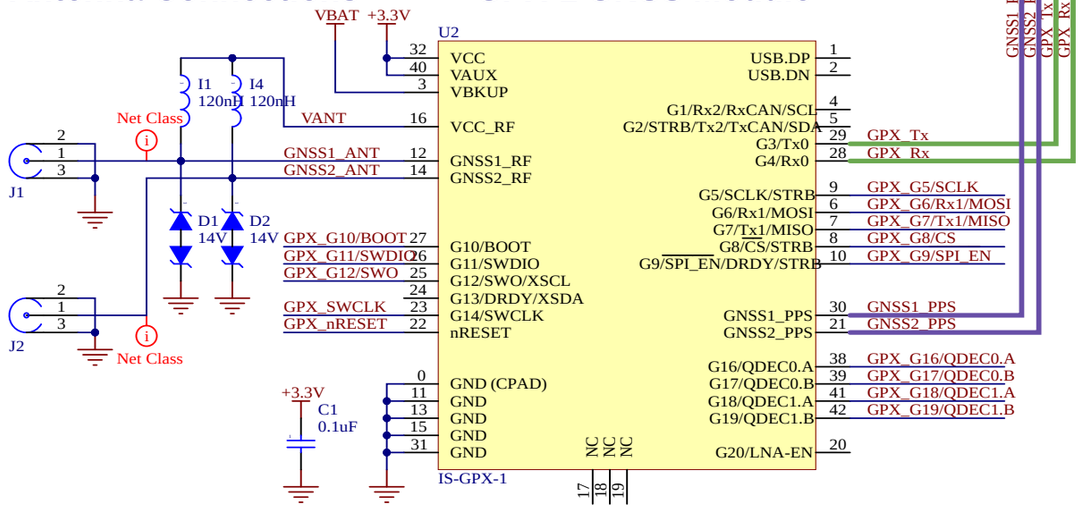


IMX-5 SWD IDC

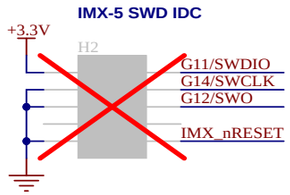



GPX SWD IDC

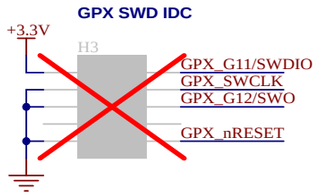

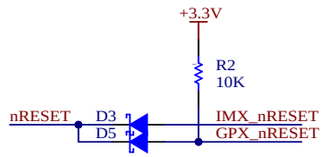


USB-C (2.0 Only)

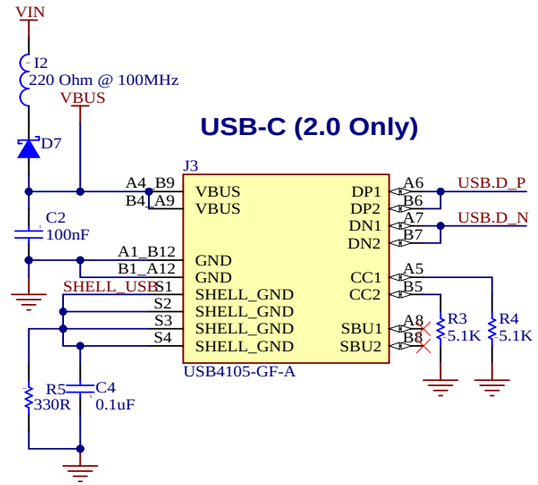

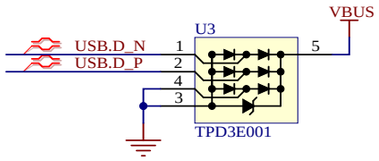

IMX-6 I/O Header

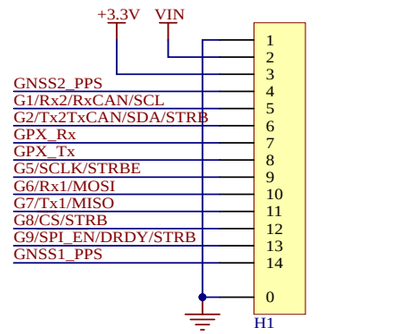

CONFIDENTIAL/PROPRIETARY

Project *IMX w/ GPX Module*	PCB IS-IG-r3.0_G	InertialSense 3000 S. Sierra Vista Way Provo, UT 84606 info@interialsense.com	
Sheet **Connectors**	Assy IS-IG-r3.0.0_G		
Date 10/8/2026 Time 11:19:30 AM	Sheet 1 of 1	Size B	
File C:\Users\tmcd2\HardwareRepo\IS-hdw\Products\IG-2\IG-3-0-G\Altium\Source Files\Main.SchDoc			