Play House Dois Andares

ref. 0994.3

ASSEMBLY INSTRUCTIONS

Assembly video on YouTube:
youtu.be/KphqoJBppeQ



Product size: **15 ft 3 in × 5 ft 1 in × 6 ft 5 in (4.66 × 1.54 × 1.95 m)**
Two-level playhouse with a door, windows, sink with tap, slide and climber
Several children can play at the same time: one on the upper level and the others in the playhouse, on the slide and on the climber
To be assembled by an adult, with a 10 mm wrench; a second person makes it easier to fit the walls and the roof.
8 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Follow this order: the **front wall** and the **back wall** on one **side wall**, the **sink**, the **floor**, the other **side wall**, the **roof**, the **slide** and the **climber**.
- At each corner the hooks go into the small windows with the wall about 5 cm (2 in) off the ground and then slide down: if the wall does not go down straight, lift it and fit it again.
- Assemble on level ground: on uneven ground the parts will not line up.


Tools

- **10 mm open-end or combination wrench**: M6×45 screws (7 pcs, steps 3 and 6)

There are no specific tightening torques for the fasteners. The rivet nuts come already fitted in the parts.

Screws in this playground

Each type has its own color. The same card appears in each step and in the assembly video.

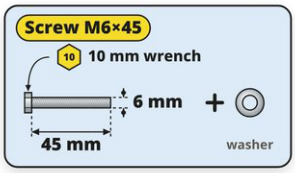


7× Screw M6×45 · steps 3 and 6

PARTS LIST

Play House Dois Andares parts



FRONT WALL (A) 1×
No. 1 · ref. 994302



SIDE WALL (B) 2×
No. 2 · ref. 994304



BACK WALL (C) 1×
No. 3 · ref. 994303




SINK WITH TAP (D) 1×
No. 4 · ref. 994308



FLOOR (E) 1×
No. 5 · ref. 994306



ROOF (F) 1×
No. 6 · ref. 994305



SLIDE (G) 1×
No. 7 · ref. 957606



CLIMBER (H) 1×
No. 8 · ref. 957605



SCREW M6×45 7×
No. 9 · ref. 2090194




WASHER M8 7×
No. 10 ·
ref. 2090185

PRODUCT ASSEMBLY

Step by step


In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

1 STEP 1 OF 8
Front wall on the side wall

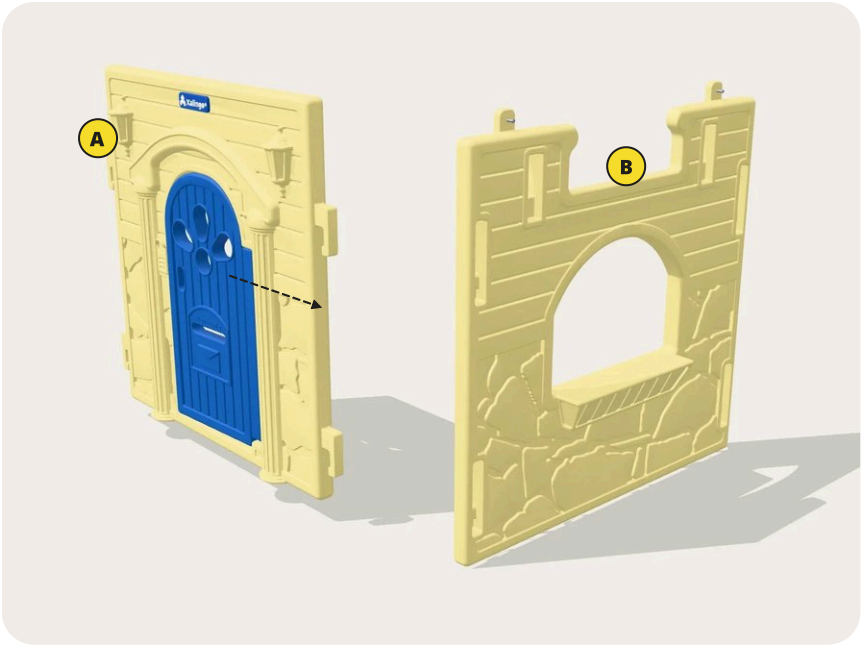

B Side wall (B)

A Front wall (A)

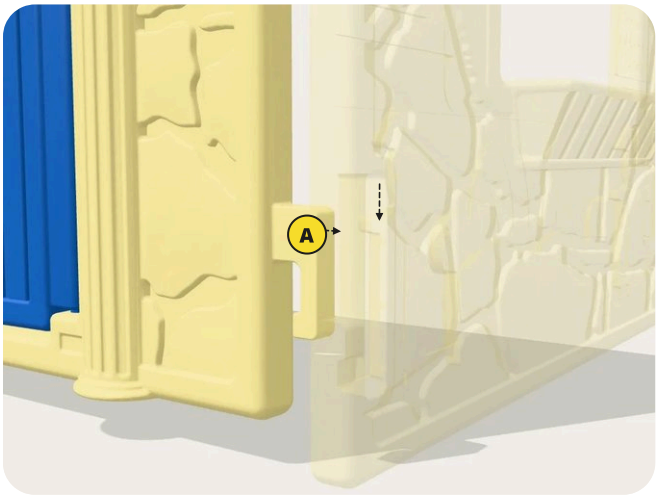

The hooks of the front wall go into the small windows of the side wall and slide down

A Front wall hook

Lay out the parts: the **front wall (A)**, with the door, the 2 **side walls (B)**, the **back wall (C)**, with the window, the **sink with tap (D)**, the **floor (E)**, the **roof (F)**, the **slide (G)**, the **climber (H)** and the 7 screws with washers. The door and the bars of the roof windows come already fitted.

Stand one **side wall (B)** upright. Hold the front wall about 5 cm (2 in) off the ground, with the hooks at its end level with the small windows of the side wall.

Push the front wall against the side wall until the hooks go into the small windows, then lower the front wall to the ground.

CAUTION
The walls are large: with a second person holding them, fitting is easier and the wall will not tip over.

PARTS FOR THIS STEP



1× Front wall (A)
ref. 994302




1× Side wall (B)
ref. 994304



How it looks at the end of step 1

STEP 2 OF 8

2 Back wall on the side wall

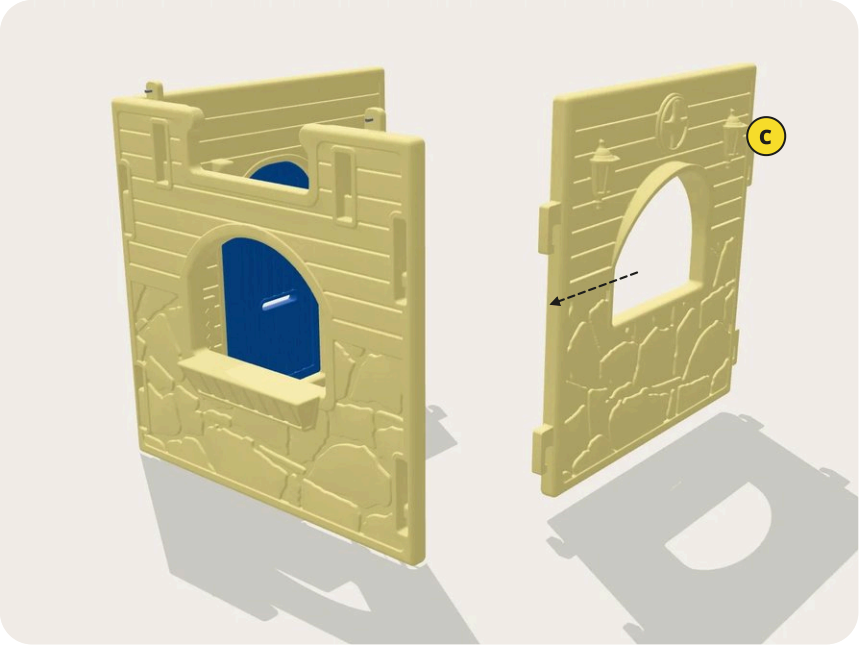

C Back wall (C)

Fit the **back wall (C)** on the other end of the same side wall, the same way: about 5 cm off the ground, push the hooks into the small windows and lower it.

PARTS FOR THIS STEP




1× Back wall (C)
ref. 994303




How it looks at the end of step 2

STEP 3 OF 8

3 Sink

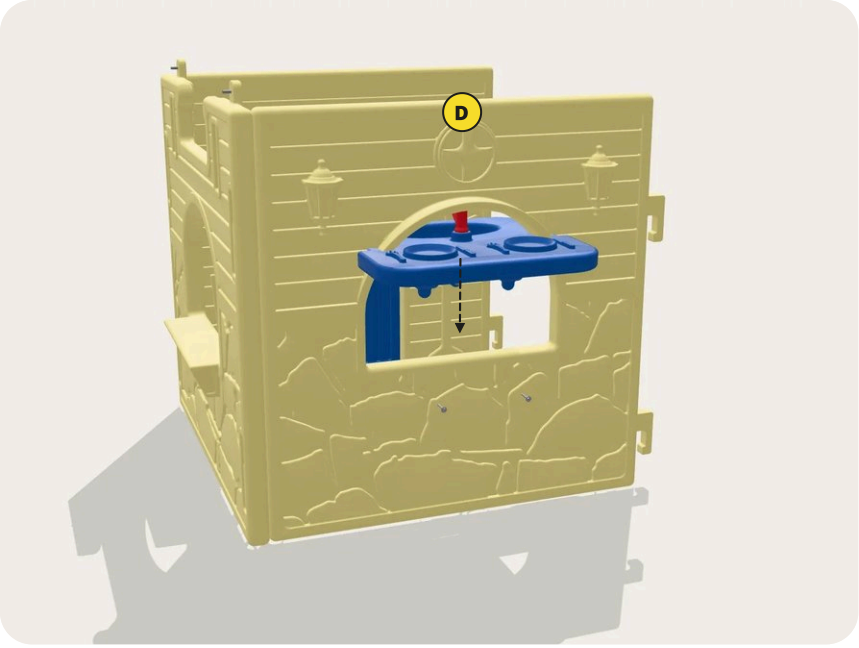

D Sink with tap (D)

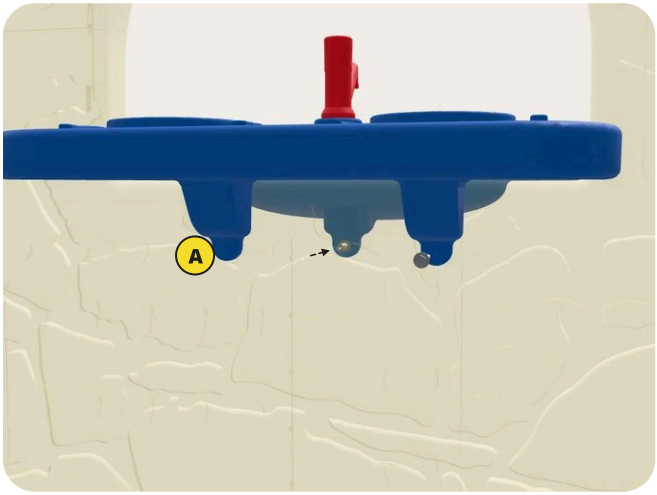

Sink screws, from outside the back wall

A Screw M6×45 + washer, from outside

Fit the **sink with tap (D)** into the window of the back wall, from above: part of the sink stays inside and part outside the playhouse.

Fix the sink with 3 M6×45 screws with washers: 2 from outside the back wall and 1 from inside. Use the 10 mm wrench.

PARTS FOR THIS STEP



1× Sink with tap (D)
ref. 994308




3× Screw M6×45
ref. 2090194




3× Washer
one on each screw

SCREW AND TOOL

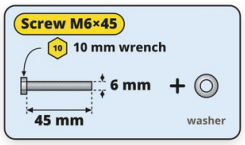


Tool: **10 mm wrench.**

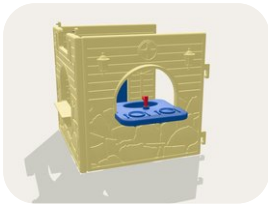

How it looks at the end of step 3

4 STEP 4 OF 8
Platform

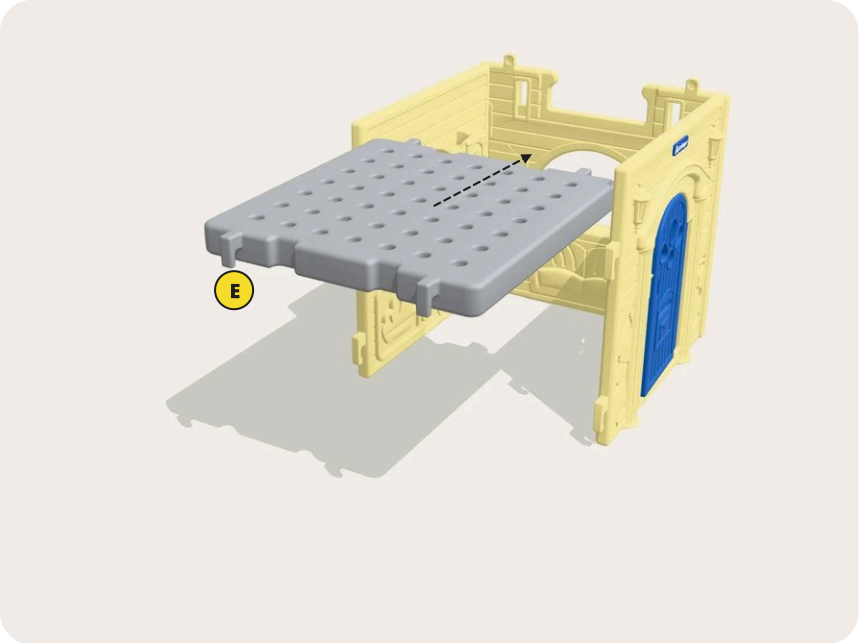


E Floor (E)

From the side that is still open, fit the **floor (E)** into the slots of the walls, at the height of the upper level, and push it all the way in.

PARTS FOR THIS STEP




1× Floor (E)
ref. 994306

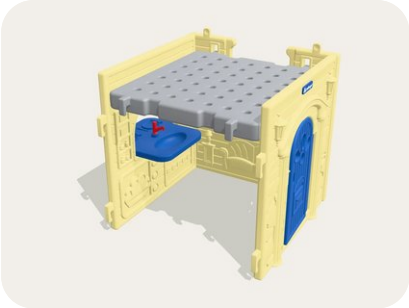

How it looks at the end of step 4

5 STEP 5 OF 8
Other side wall

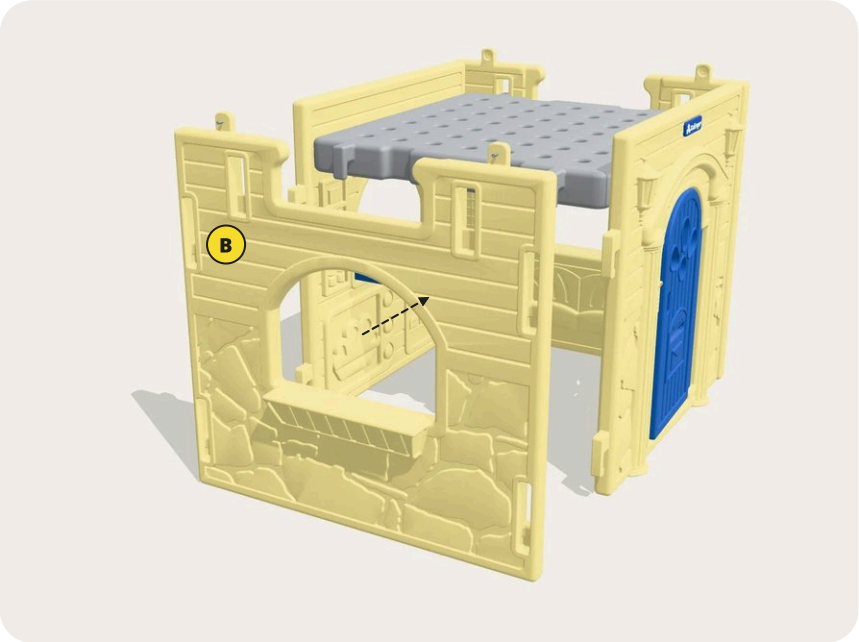

B Side wall (B)

Close the open side with the other **side wall (B)**: its small windows take the hooks of the front and back walls, and the end of the floor goes into its slot.

Check that all four walls are fully fitted and resting on the ground.

PARTS FOR THIS STEP




1× Side wall (B)
ref. 994304




How it looks at the end of step 5

STEP 6 OF 8

6 Roof

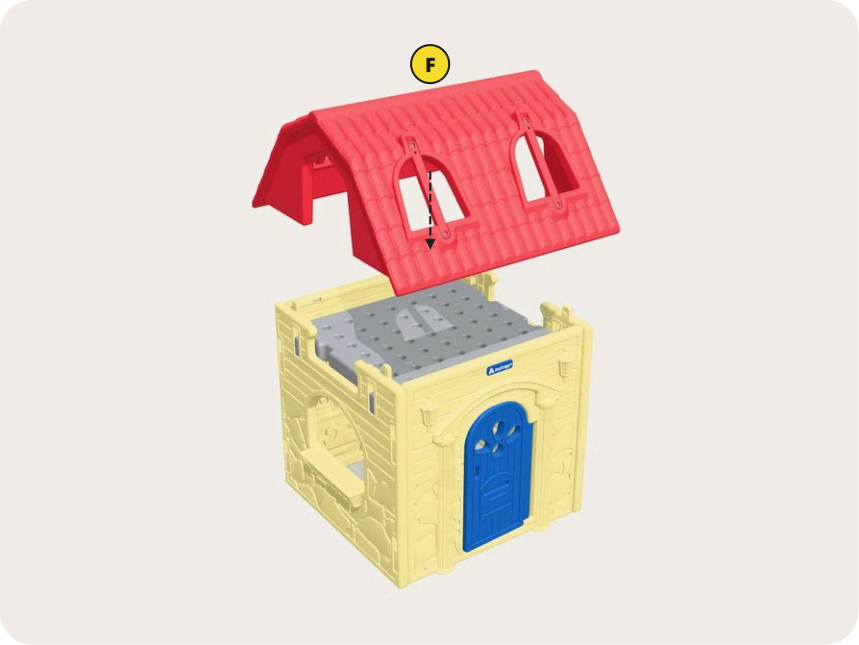

F Roof (F)

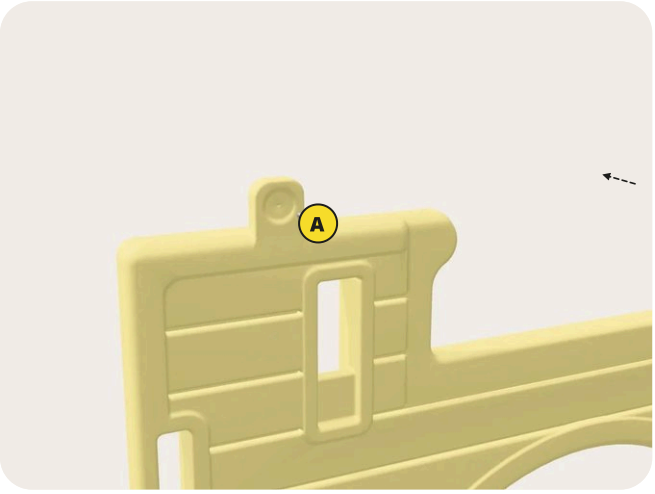

Roof screw, from inside, at the top of the side wall

A Screw M6×45 + washer, from inside

Place the **roof (F)** on the playhouse, with its windows facing the front and the back walls, and lower it straight until it sits on the walls.

Fix the roof with 4 M6×45 screws with washers, one in each corner, from inside, at the top of the side walls.

CAUTION
The roof is large: put it on with the help of a second person.

PARTS FOR THIS STEP



1× Roof (F)
ref. 994305




4× Screw M6×45
ref. 2090194



4× Washer
one on each screw

SCREW AND TOOL

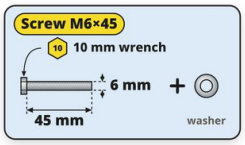


Tool: **10 mm wrench.**



How it looks at the end of step 6

7 STEP 7 OF 8
Slide

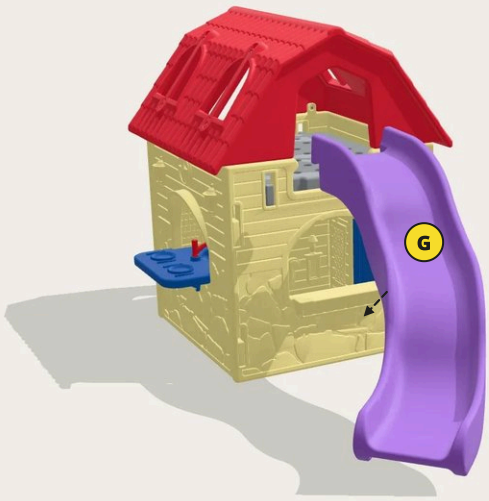

G Slide (G)

Fit one side of the top of the **slide (G)** into the slot of a side wall, then the other side, with the bottom end on the ground.

PARTS FOR THIS STEP



1× Slide (G)
ref. 957606



How it looks at the end of step 7

8 STEP 8 OF 8
Climber



H Climber (H)

Fit the **climber (H)** on the other side wall the same way: first one side of the top, then the other.

PARTS FOR THIS STEP




1× Climber (H)
ref. 957605



How it looks at the end of step 8


FASTENING DETAILS

How each part is held

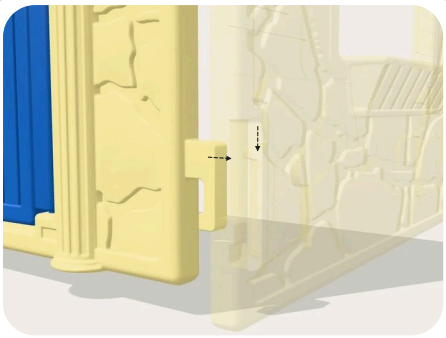


Walls

The hooks at the ends of the front and back walls go into the small windows of the side walls with the wall slightly off the ground and slide down until they lock.

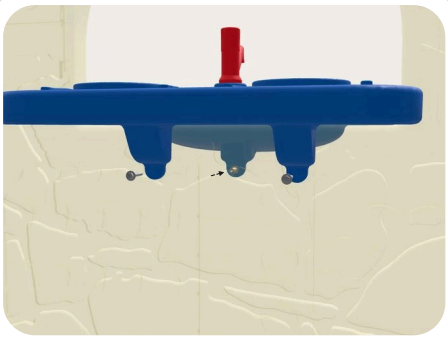

Sink

3 screws: 2 from outside the back wall and 1 from inside.

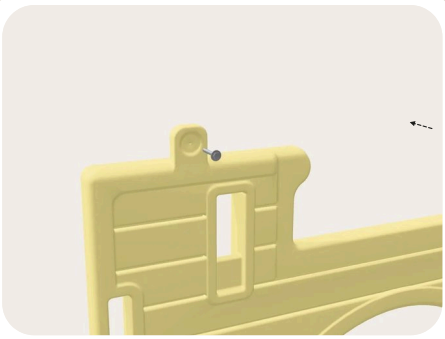

Roof

4 screws, one in each corner, from inside, at the top of the side walls.




Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Check that all four walls are fully fitted, that the 7 screws are tight and that the slide and the climber are held on the side walls.

INSTALLATION DETAILS

Location and safety area

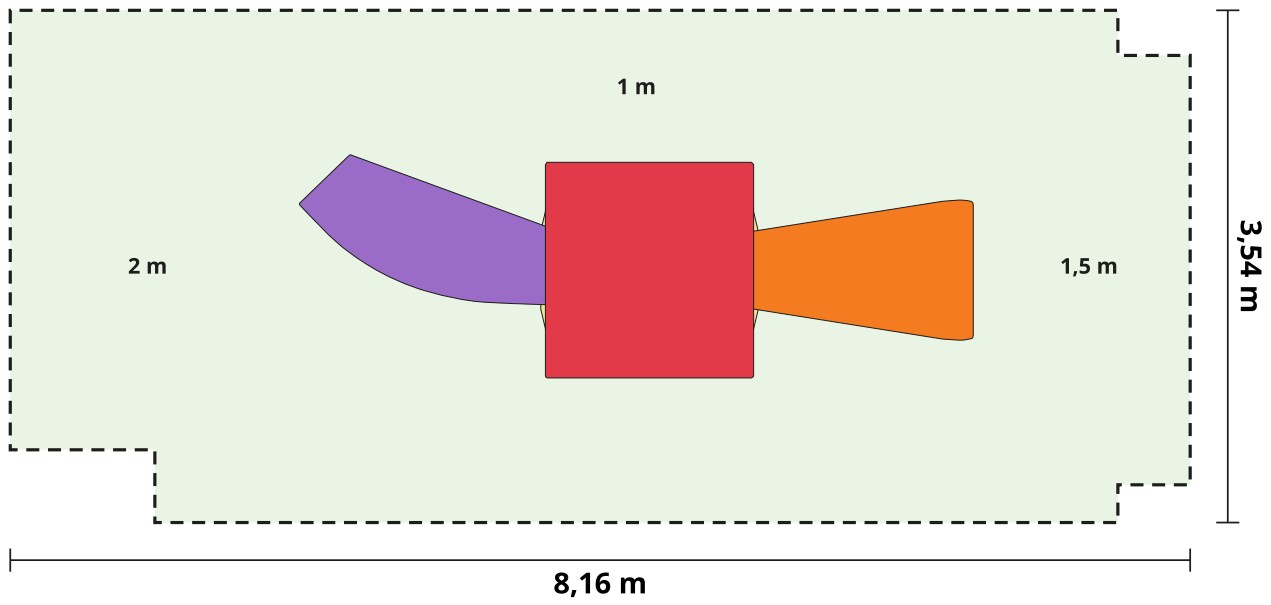

Area reserved for installation and impact (top view): 1 m (3 ft 3 in) clear around it, 2 m (6 ft 7 in) at the slide's exit and 1.5 m (4 ft 11 in) in front of the climber, 8.16 × 3.54 m (26 ft 9 in × 11 ft 7 in). Product size: 4.66 × 1.54 × 1.95 m.

To keep users safe, minimum spaces and free distances must be respected.

Circulation area: at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

Fall space: neighboring static equipment with overlapping fall spaces must be at least 1.50 m apart for a fall height of up to 600 mm, and 2.50 m for higher falls. Maximum fall height of this product: **1120 mm**.

Slide landing area: at least 1000 mm from the sides of the run-out section and 2000 mm (type 01 run-out) or 1000 mm (type 02 run-out) from the end of the run-out section.

Ground: an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

Location: first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

Space taken: the assembled playhouse, with the slide and the climber, takes about 4.66 × 1.54 m (15 ft 3 in × 5 ft 1 in) of floor; keep 1 m (3 ft 3 in) clear around it, 2 m (6 ft 7 in) at the slide's exit and 1.5 m (4 ft 11 in) in front of the climber, as in the figure.

Use the product on grass, sand, carpet or another soft, level surface.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

INSPECTION AND MAINTENANCE

Keep the play house safe

Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Walls fitted, screws tight, slide and climber held

Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

XALINGO S/A INDÚSTRIA E COMÉRCIO
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Play House Dois Andares · ref. 0994.3
Keep this manual for future reference.