Balanço Ursinho 3 em 1

ref. 0935.5 · 0935.6

ASSEMBLY INSTRUCTIONS



Product size: **405 × 309 × 371 mm (sem as cordas)**
3-in-1 toddler swing, with adjustable backrest, front support and safety harness
Same assembly for ref. 0935.5 and 0935.6. Colors may vary by model.
Age: 19 to 36 months · for one child only, up to 23 kg
Assembly by an adult, no tools needed.
Hooks and frame are not included.
11 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Check the parts against the parts list before you start.
- The parts snap together: push until you hear the **click**.
- The T part of the harness comes with the **2 buckles sewn on**: there is no need to fit the buckles.
- The **yellow letters (A to G)** are the same as in the printed manual that comes in the box.

Tools

- **Assembly:** no tools needed. Everything snaps together or is tied.
- **Installation:** a tape measure, to check the height above the ground (35 to 60 cm) and the distance between the hanging points (45 to 65 cm).
- **Not included:** hooks and a frame to hang it (the product comes without hooks).

PARTS LIST

Balanço Ursinho 3 em 1 parts



SEAT 1×
No. 1 · ref. 935504



BACKREST 1×
No. 2 · ref. 935502



FRONT SUPPORT 1×
No. 3 · ref. 935503



3-POINT SAFETY HARNESS 1×
No. 4 · ref. 2501008



ROPE, 6 m 1×
No. 5 · ref. 2501007



BACKREST STICKER 1×
No. 6 · ref. 2030643

PRODUCT ASSEMBLY


Step by step

In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

1

STEP 1 OF 11

Apply the sticker to the backrest

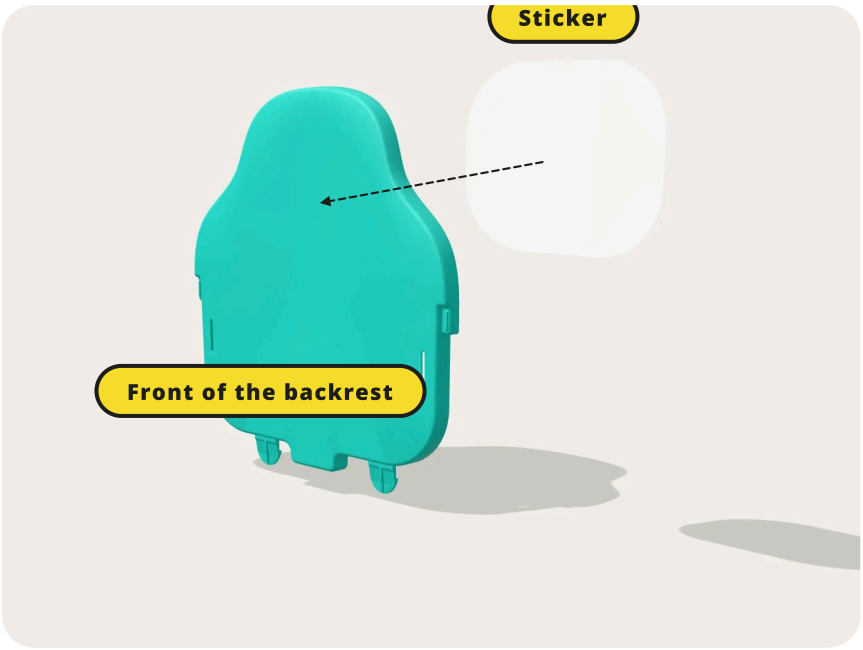

Stick the sticker on the front of the backrest, in the position shown, with the part clean and dry.

> The sticker position in the picture is a guide.


PARTS FOR THIS STEP



1× Backrest
ref. 935502



1× Backrest sticker
ref. 2030643

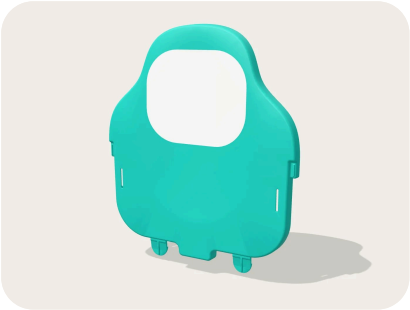

How it looks at the end of step 1

STEP 2 OF 11

2 Fit the backrest into the seat



A Position A: children up to 24 months (front row)

B Position B: children up to 36 months (back row)



Top view: row A (up to 24 months) at the front and row B (up to 36 months) behind it

A Position A: children up to 24 months (front row)

B Position B: children up to 36 months (back row)

Choose the backrest position by the child's age: **position A** (front row) for children up to 24 months, or **position B** (back row) for children up to 36 months.

Fit the 2 latches of the backrest into the slots of the seat and push down until it clicks.

CAUTION
Check that both backrest latches have clicked into place.

PARTS FOR THIS STEP




1× Seat
ref. 935504



How it looks at the end of step 2

STEP 3 OF 11

3 Thread the part without buckle through the backrest

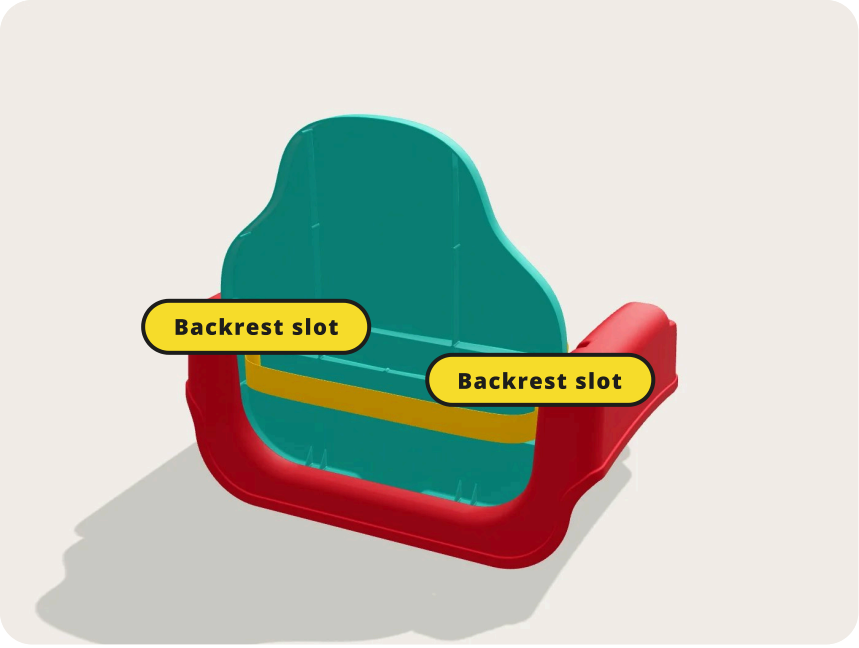

Take the harness part **without buckle**.

Thread the strap through the 2 side slots of the backrest, around its back. Both ends hang loose towards the front: they go into the buckles in step 5.

PARTS FOR THIS STEP




1× 3-point safety harness ref. 2501008 · part without buckle



How it looks at the end of step 3

STEP 4 OF 11


4 Attach the T part to the seat

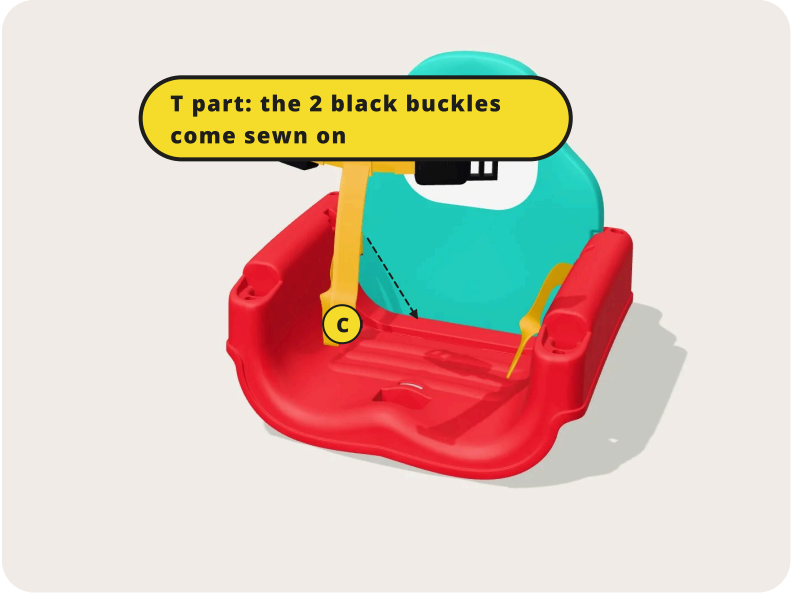

C Slider (C): goes through the front slot of the seat and stays underneath



Front: the slider (C) goes into the front slot of the seat

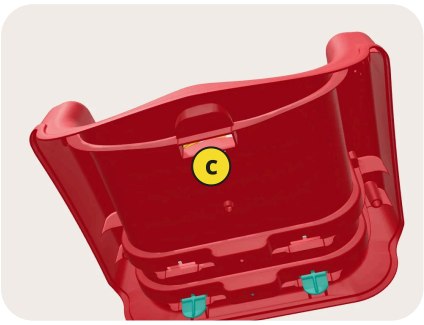

Under the seat: the slider (C) stays inside

Take the **T part** of the harness. It comes with the **2 black buckles sewn on** at the ends of its arms and with the **slider (C)** at the bottom end.


Push the end with the slider (C) through the front slot of the seat, inside the structure of the swing.

Pull the T part up and check that the slider is held firmly.

PARTS FOR THIS STEP



1× 3-point safety harness ref. 2501008 · T part, with the 2 buckles and the slider (C)

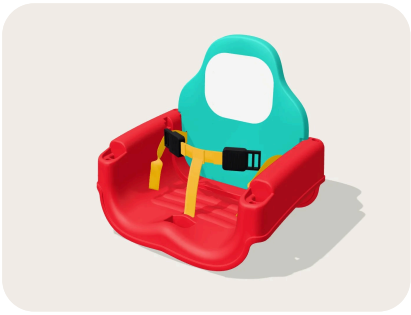


How it looks at the end of step 4

STEP 5 OF 11

5 Fasten the ends in the buckles



D Ridged side of the buckle (D): up, facing outwards

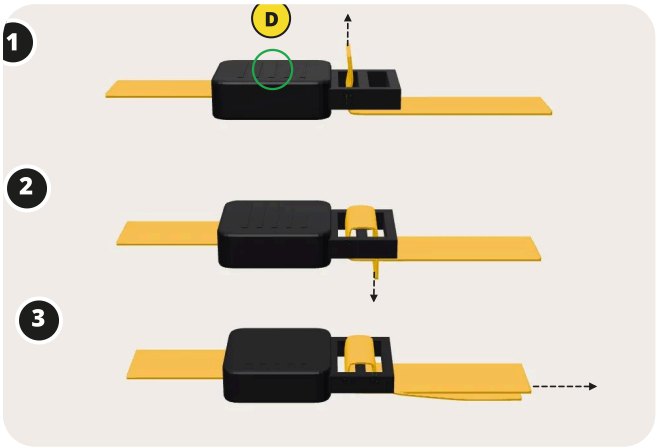

How to thread the end through the buckle: 1. from below, up through the 1st gap · 2. over the middle bar and down through the 2nd gap · 3. pull to adjust

D Ridged side (D) up

Before fastening, check how the buckles sit: the **ridged side (D) faces up**, turned outwards.

Thread each loose end of the part without buckle through the buckle on the same side, following steps 1 to 3 of the detail.

Pull the ends to adjust the harness.

PARTS FOR THIS STEP




1× 3-point safety harness ref. 2501008 · both parts, already on the swing



How it looks at the end of step 5

STEP 6 OF 11

6 Fit the front support

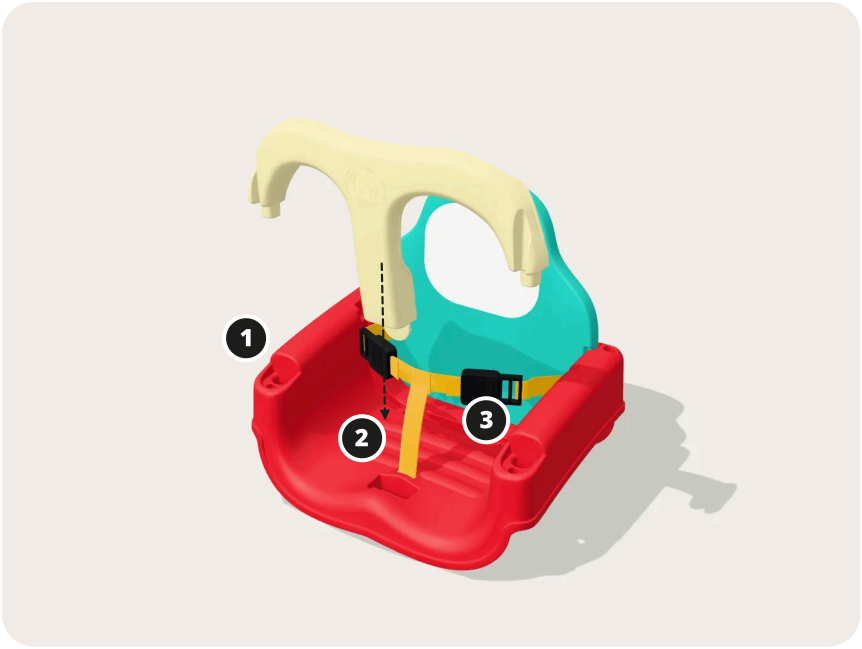

Fit the front support onto the seat, engaging the 3 points shown (1, 2 and 3), until it clicks.

Check under the seat that all 3 points are firmly engaged.


PARTS FOR THIS STEP



1× Front support
ref. 935503




How it looks at the end of step 6

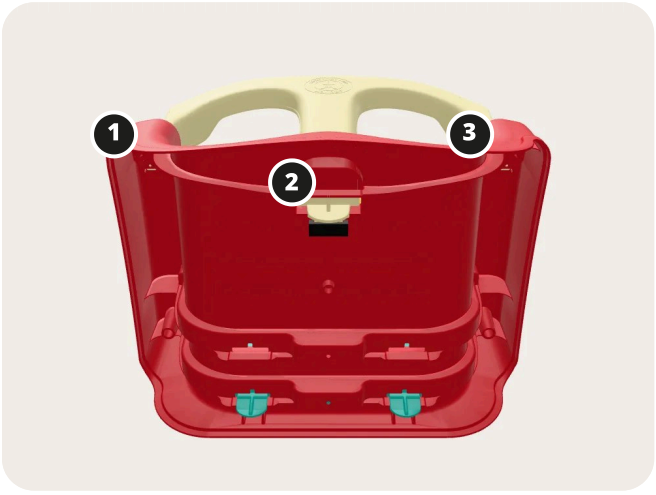

Under the seat: check the 3 points


STEP 7 OF 11

7 Run the rope under the rear of the seat

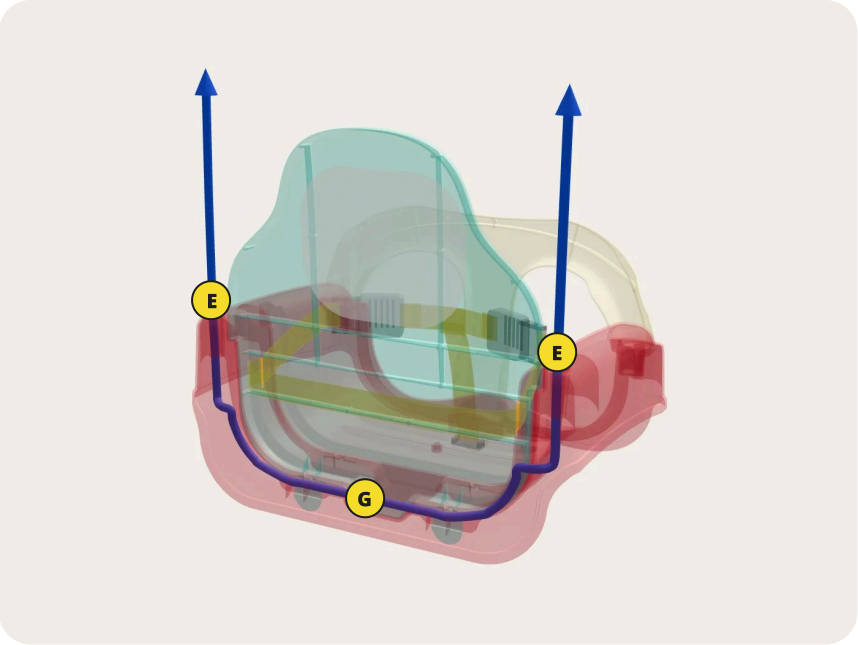

G Fins under the rear (G): the rope locks into them

E Rear holes of the base (E)

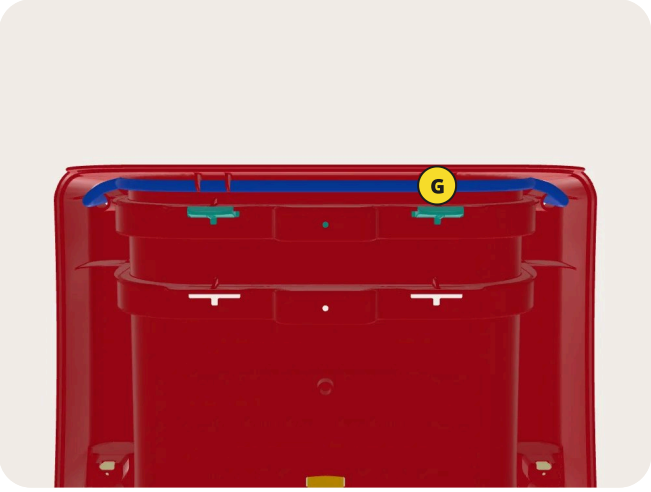

Detail G, seen from below: the rope runs through the fins at the rear

G Fins (G)

Find the middle of the rope and run it under the rear of the seat, locking the rope in the **fins (G)**.

Bring both ends up through the **rear holes of the base (E)**, one on each side.


CAUTION
The rope must be locked in the fins underneath, at the rear of the seat (G).

In the picture, the seat and the backrest are see-through to show the rope underneath.

PARTS FOR THIS STEP




1× 6 m rope ref. 2501007 · the middle of the rope

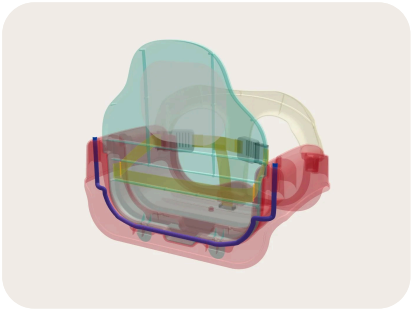

How it looks at the end of step 7


STEP 8 OF 11

8 Bring the ends down through the front holes

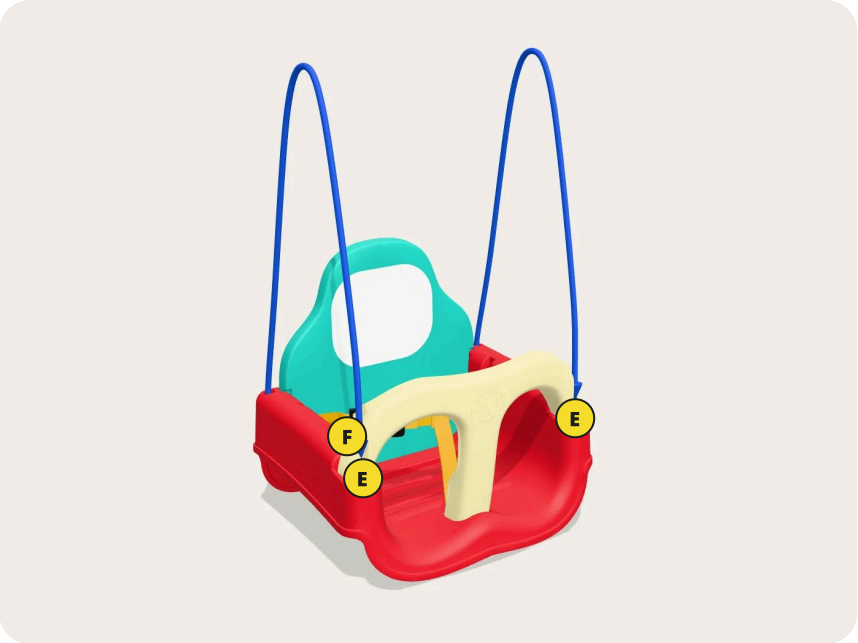

E Front holes (E)

F Groove of the front support (F): the rope sits in it

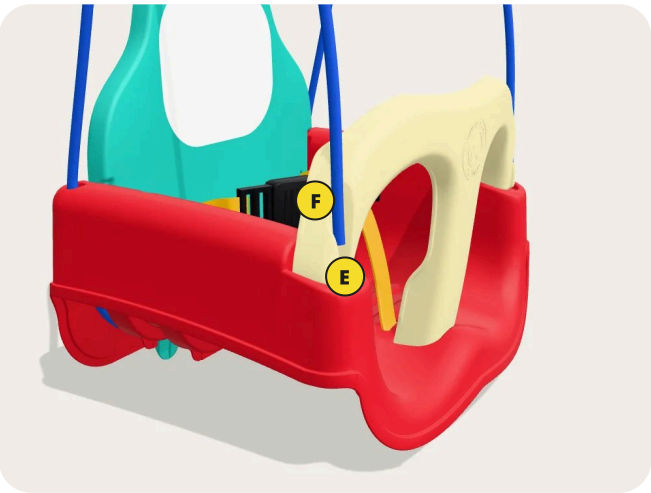

Detail F: the rope in the groove of the front support, going into the front hole (E)

F Groove (F)

E Front hole (E)


Take each end up, leaving a loop of rope above the seat, and bring it down through the **front hole (E)** on the same side.

The rope must sit in the **groove of the front support (F)**.

Make both loops the same size: they will become the hanging loops (step 10).

PARTS FOR THIS STEP


1× 6 m rope ref. 2501007 · both ends

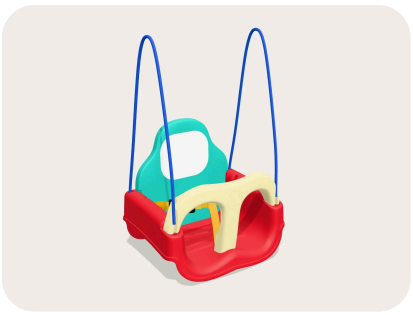

How it looks at the end of step 8

STEP 9 OF 11

9 Tie a figure-eight knot at each end

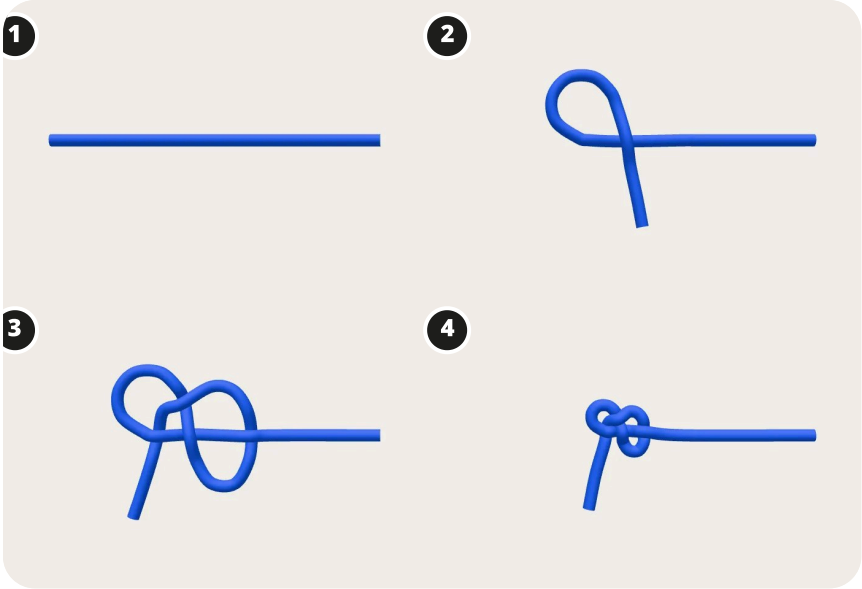

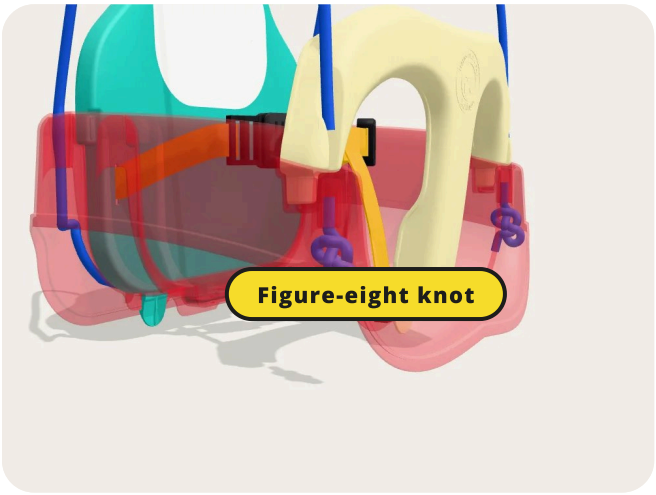


Figure-eight knot under the front hole (seat shown see-through)

Under the front of the seat, tie a **figure-eight knot** at each end of the rope, one on each side.


Follow steps 1 to 4 and pull it tight. The knot must not slip through the hole.

CAUTION
For safety, the knots underneath must be figure-eight knots, one on each side of the front.

PARTS FOR THIS STEP




1× 6 m rope
ref. 2501007 · both ends

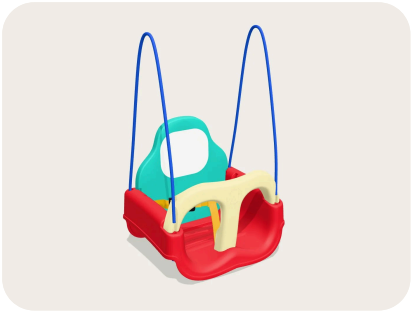

How it looks at the end of step 9

STEP 10 OF 11

10 Make the hanging loops and level the swing

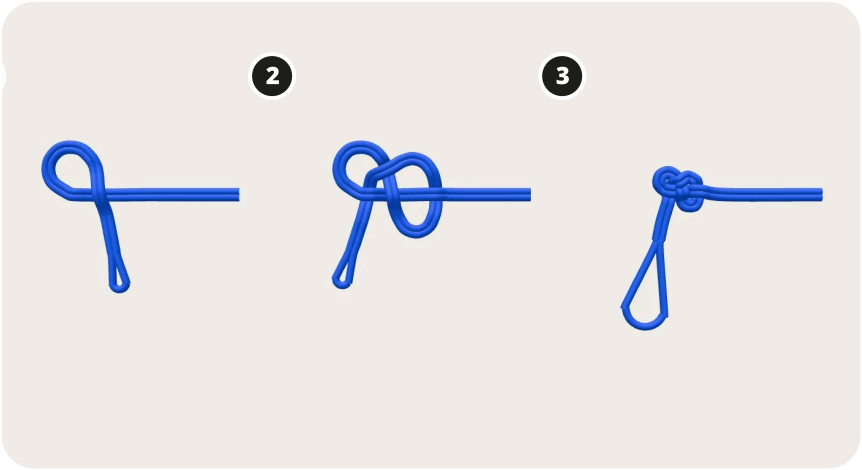


On each side, hold the rope loop at the top and tie a **figure-eight knot on the doubled rope**, making a loop (steps 1 to 3).

Line up the ropes and level the swing by moving the knots if needed.


PARTS FOR THIS STEP



1× 6 m rope ref. 2501007 · the loops at the top

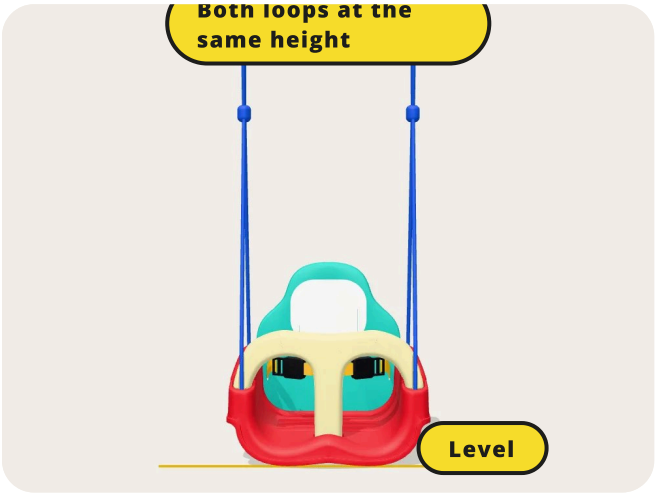

Both loops at the same height: swing level

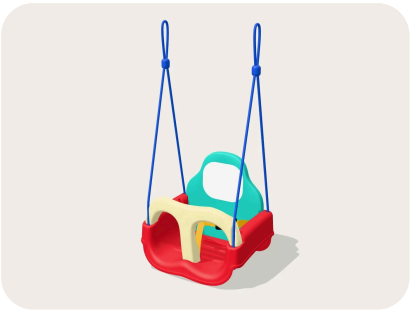

How it looks at the end of step 10

STEP 11 OF 11

11 Hang the swing



Hook the loops onto a suitable support. **Hooks and frame are not included.**

The hanging points must be 45 to 65 cm apart, and the swing must hang 35 to 60 cm above the ground.

CAUTION
Always use the safety harness adjusted to the child while the product is in use.

WAYS TO USE IT

3-in-1 swing



Position A

Backrest in the front row. For children up to 24 months.



Position B

Backrest in the back row. For children up to 36 months.



Without backrest and front support

To adapt the swing, take off the backrest and the front support.



How to take off the backrest and the front support

Under the seat, release the latches (circles), hold the seat down and pull the parts up firmly.



Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

For one child only, up to 23 kg. Check the click fits, the harness adjusted, the figure-eight knots under the front and the loops at the same height.

INSTALLATION DETAILS

Where to install it

Install it in a safe place, at least **2 m away** from structures or obstacles.

The swing must hang **35 cm to 60 cm above the ground**.

The hanging points must be **45 cm to 65 cm** apart.

Hang the loops on a suitable support. Hooks and frame are not included.

Do not install it over hard surfaces such as concrete or asphalt.

Do not install it near stairs, roads or swimming pools.

The swing is for one child only, up to 23 kg, and is not for commercial use.

INSPECTION AND MAINTENANCE

Keep the swing safe

Safe use

- Always use the safety harness well adjusted to the child.
- Use only under adult supervision.
- For one child only, up to 23 kg (age: 19 to 36 months).
- Not for commercial use.

Regular maintenance

- Check the rope knots and the screws of the frame.
- Lubricate the moving metal parts of the frame.
- Inspect covers, edges, seat, chains or ropes.
- Replace damaged parts when needed.

XALINGO S/A INDÚSTRIA E COMÉRCIO
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Balanço Ursinho 3 em 1 · ref. 0935.5 · 0935.6
Keep this manual for future reference.