
Escorregador com Balanço

ref. 0933.2

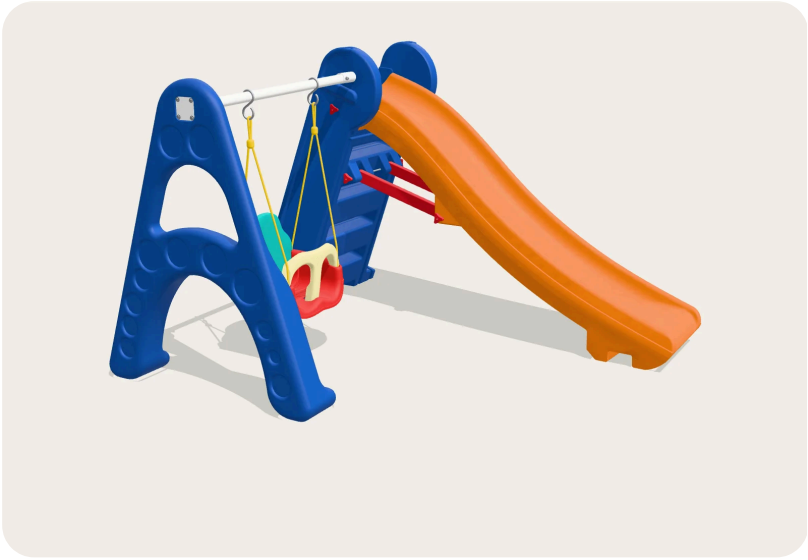

ASSEMBLY INSTRUCTIONS

Assembly video on YouTube:
youtu.be/tOpR00TrJ4Q

Product size: **1.73 × 1.84 × 1.20 m**
2-in-1 playset: slide with a 4-step non-slip ladder and a swing with backrest, safety bar and ropes
Maximum weight: 23 kg on the swing and 70 kg on the slide
Age: 3 to 8 years
To be assembled by an adult, with 10 mm and 13 mm wrenches.
7 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Assemble in this order: the **slide** (slide, long axle, braces and short axles), the 2 **supports**, the **tube** and last the **swing**.
- Each axle goes in with **one knob already screwed on** and takes the other one on the opposite end; tighten by hand until firm.
- Every M6×30 screw takes a **washer**. Assemble on level ground.


Tools

- **10 mm open-end or combination wrench**: M6×30 screws (8 pcs, steps 4 and 5)
- **2 × 13 mm wrenches** (or a wrench + a 13 mm socket): 5/16" × 2 1/4" screw with nut (2 sets, step 6). One holds the nut while the other turns the screw.
- The 6 knobs of the slide are tightened by hand


There are no specific tightening torques for the fasteners. The rivet nuts come already fitted in the parts.

Screws in this playground

Each type has its own color. The same card appears in each step and in the assembly video.

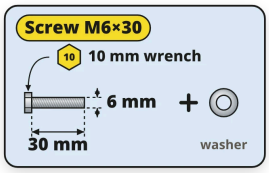

8× Screw M6×30 · steps 4 and 5

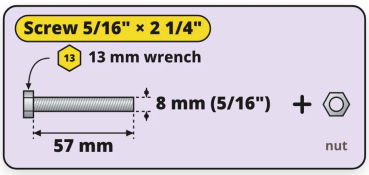

2× Screw 5/16" × 2 1/4" · step 6

PARTS LIST

Escorregador com Balanço parts



LADDER 1×
No. 1 · ref. 953202



SLIDE 1×
No. 2 · ref. 953201



BRACE (C) 2×
No. 3 · ref. 953203



LONG AXLE (A) – 570 mm 1×
No. 4 · ref. 953207



SHORT AXLE (B) – 470 mm 1×
No. 5 · ref. 953206



SHORT AXLE (B) – 415 mm 1×
No. 6 · ref. 953205



KNOB 6×
No. 7 · ref. 2090296



SIDE FRAME 1×
No. 8 · ref. 933215



TUBE SUPPORT 2×
No. 9 · ref. 954312



TUBE WITH 2 HOOKS 1×
No. 10 · ref. 933220



M6×30 SCREW 8×
No. 11 ·
ref. 2090393



M8 WASHER 8×
No. 12 ·
ref. 2090185



5/16" × 2 1/4" BOLT 2×
No. 13 ·
ref. 2090392



5/16" LOCK NUT 2×
No. 14 ·
ref. 2090370




SWING WITH ROPES 1×
No. 15 · ref. 935504

PRODUCT ASSEMBLY

Step by step

In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

1 STEP 1 OF 7
Slide on the ladder

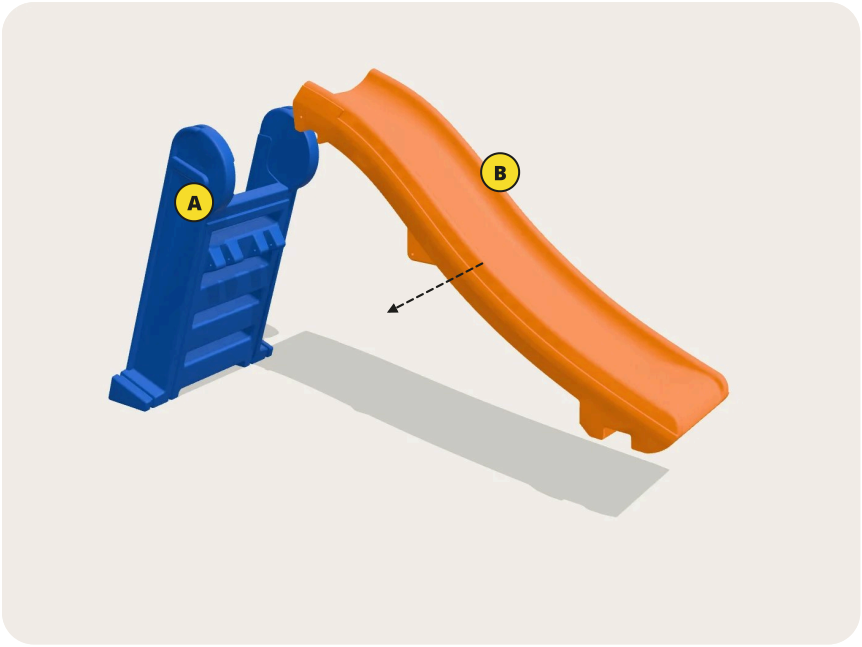

A Ladder

B Slide

Stand the **ladder** up on level ground.

Fit the top end of the **slide** between the two sides at the top of the ladder, lining up the holes of the slide with the holes of the ladder.

CAUTION
Assemble it on the ground, with no child on it.

PARTS FOR THIS STEP



1× Slide
ref. 953201




1× Ladder
ref. 953202




How it looks at the end of step 1

STEP 2 OF 7

2 Long axle (A)

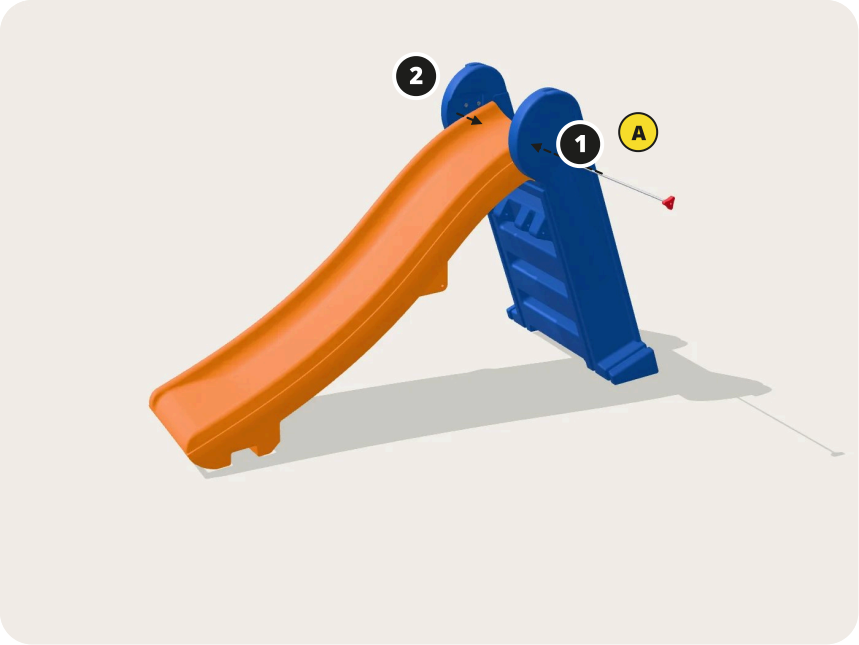

A Long axle (A) with a knob

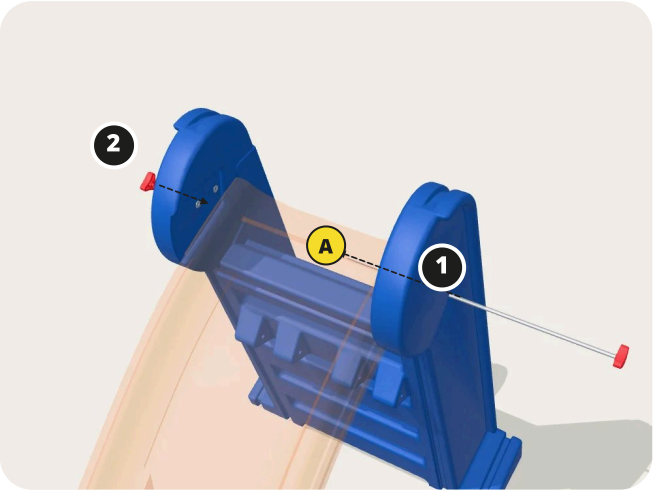

Long axle through the ladder and the slide

A The axle goes through the ladder and the slide

Screw a **knob** onto one end of the **long axle (A)**, 570 mm.

1. Push the axle through the hole at the top of the ladder: it goes through one side of the ladder, the end of the slide and the other side.

2. On the other side, screw the other knob onto the end of the axle. Tighten both by hand until firm.

PARTS FOR THIS STEP


1× Long axle (A) ref. 953207	**2×** Knob ref. 2090296



How it looks at the end of step 2


STEP 3 OF 7

3 Braces (C) and short axles (B)

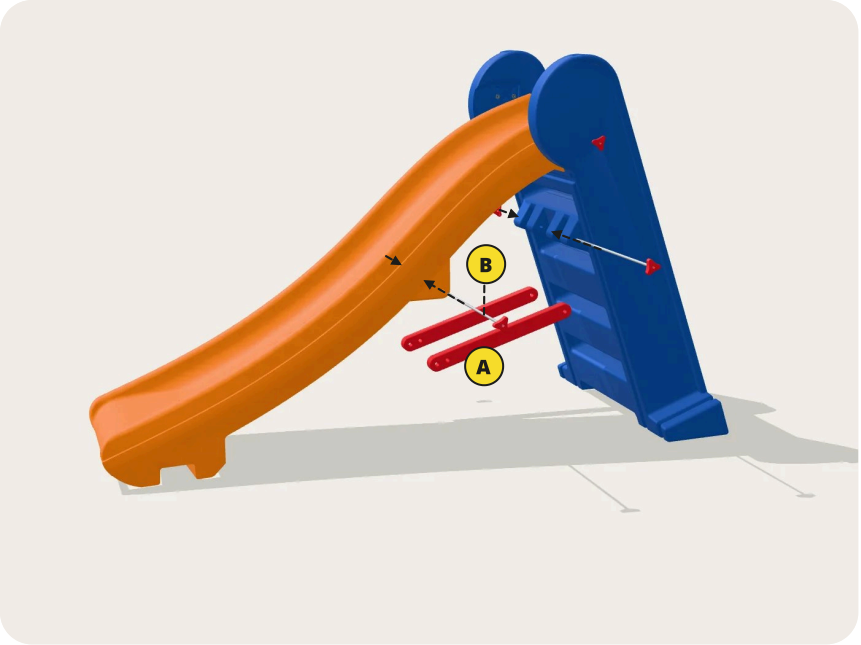

A Braces (C)

B Short axles (B)

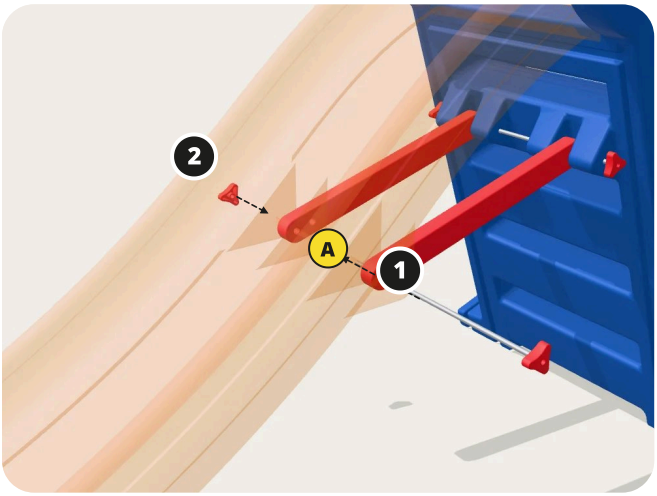

Short axle through the slide and the braces

A The axle goes through the slide and the 2 braces

Place the 2 **braces (C)** under the slide, side by side: one end goes on the ladder and the other on the tab under the slide, with the holes lined up.

With a knob already screwed on, push the **470 mm short axle (B)** through the hole of the ladder and the 2 braces; on the other side, screw on the other knob.

Do the same with the **415 mm short axle (B)**, on the tab of the slide and the other end of the braces.

Check that the **6 knobs** are tight.

PARTS FOR THIS STEP


- **2×** Brace (C) ref. 953203
- **1×** Short axle (B) – 415 mm ref. 953205
- **1×** Short axle (B) – 470 mm ref. 953206
- **4×** Knob ref. 2090296




How it looks at the end of step 3

STEP 4 OF 7

4 Tube support on the ladder

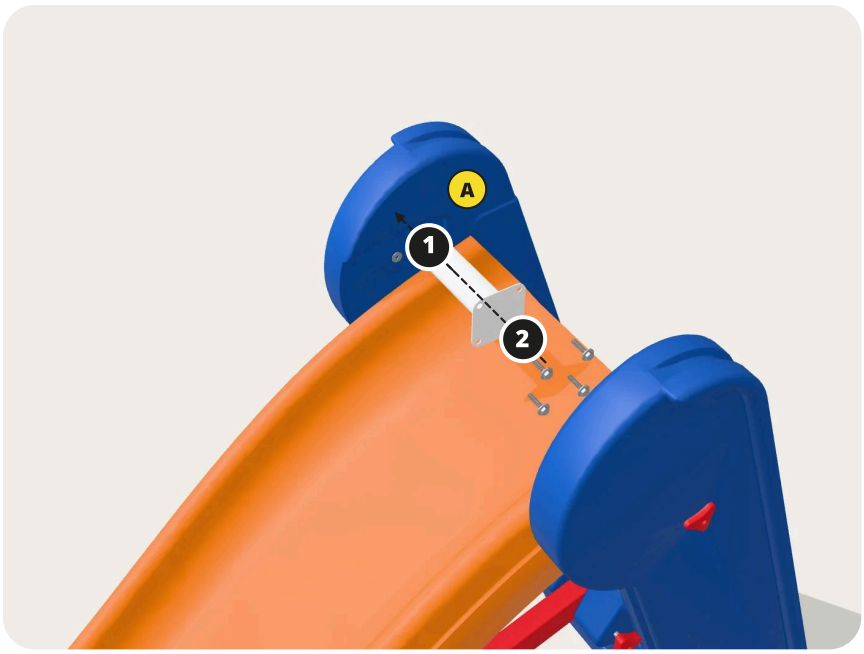

A Tube support

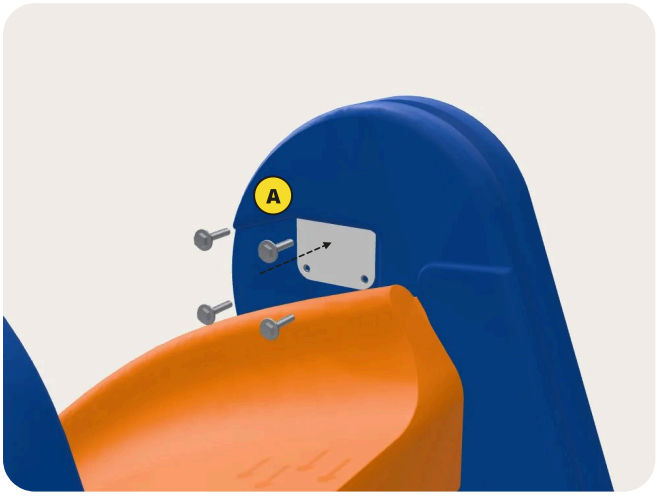

Support plate fixed from the inside with 4 screws

A 4 M6×30 screws with washers

The support goes on the tall side of the ladder that has the **4 rivet nuts**: the swing goes on that side.


From the inside, push the **tube support** through the hole in the tall side until the plate sits against the wall; the end of the support sticks out.

Fix the plate with **4 M6×30 screws with washers**, tightened into the rivet nuts (10 mm wrench).

PARTS FOR THIS STEP

- **1×** Tube support ref. 954312
- **4×** M6×30 screw ref. 2090393
- **4×** Washer one on each screw

SCREW AND TOOL

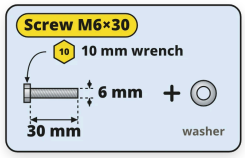

Tool: **10 mm wrench.**



How it looks at the end of step 4

STEP 5 OF 7


5 Tube support on the side frame



A Side frame

B Tube support

SCREW AND TOOL

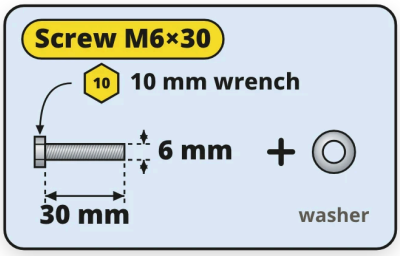

Tool: **10 mm wrench**.

Stand the **side frame** up on the side of the ladder where the support is.

From the outside, push the other **tube support** through the hole at the top of the side frame until the plate sits flat; the end of the support faces the ladder.

Fix the plate with **4 M6×30 screws with washers** into the rivet nuts, as in step 4.

PARTS FOR THIS STEP


1× Side frame ref. 933215	**1×** Tube support ref. 954312
4× M6×30 screw ref. 2090393	**4×** Washer one on each screw




How it looks at the end of step 5

STEP 6 OF 7

6 Tube

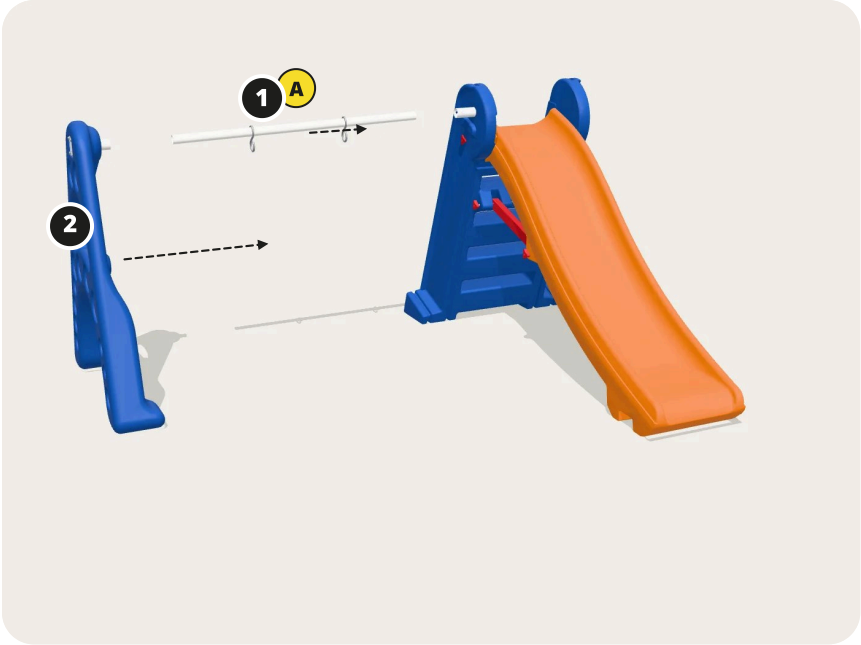

A Tube with the 2 hooks

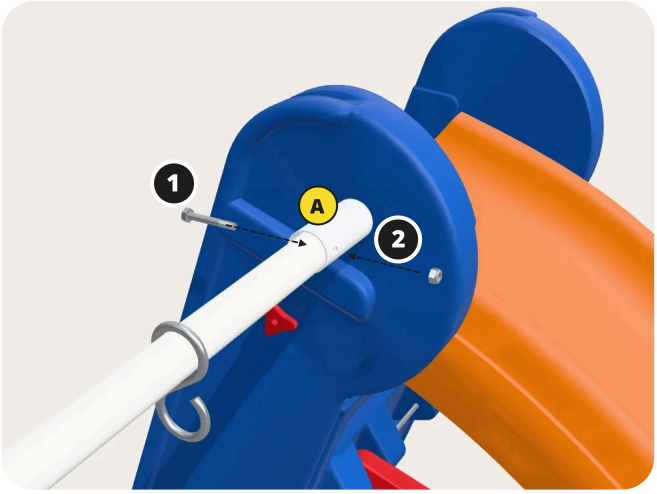

Bolt through the support and the tube, nut on the other side

A The bolt goes through the support and the tube

Check that the 2 **hooks** are on the tube.

1. Push one end of the **tube** all the way into the support on the ladder.

2. Bring the side frame closer and fit the other end of the tube into its support.

At each support, push a **5/16" × 2 1/4" bolt** through the holes of the support and the tube and tighten the **lock nut** on the other side (13 mm wrench).

CAUTION
The tube must be held by both bolts before any child uses the swing.


PARTS FOR THIS STEP

1× Tube with 2 hooks ref. 933220

2× 5/16" lock nut ref. 2090370

2× 5/16" × 2 1/4" bolt ref. 2090392

SCREW AND TOOL



Tool: 2 × 13 mm wrenches: one holds the nut while the other turns the screw.



How it looks at the end of step 6

STEP 7 OF 7

7 Swing



A Swing

Hang the **swing** on the 2 hooks of the tube: fit the top loop of each rope into the lower curve of a hook, with the rope seated at the bottom of the curve.

Check that the 2 ropes are the same length and the seat is level.

CAUTION
Maximum weight: 23 kg on the swing and 70 kg on the slide. One child at a time on each.

PARTS FOR THIS STEP




1× Swing
ref. 935504



How it looks at the end of step 7


FASTENING DETAILS

How each part is held

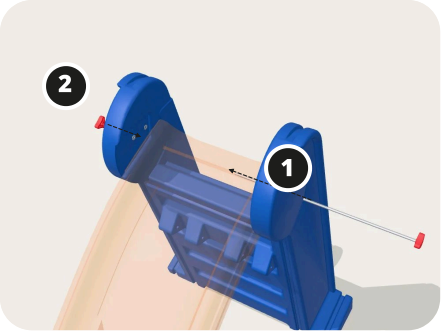


Slide on the ladder

The long axle (A) goes through the top of the ladder and the end of the slide; one knob on each end.

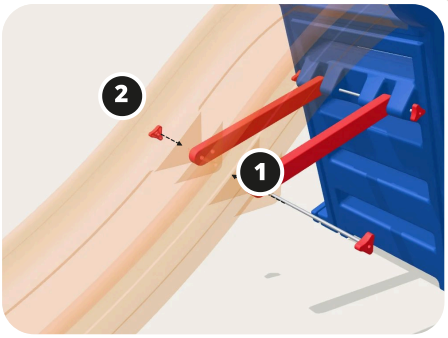


Braces

The 2 braces (C) join the ladder to the slide underneath, with the 2 short axles (B) and a knob on each end.

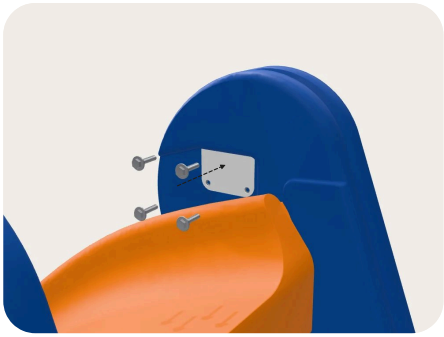

Tube supports

Each support is held by 4 M6×30 screws with washers into the rivet nuts: the ladder one from the inside, the side frame one from the outside.

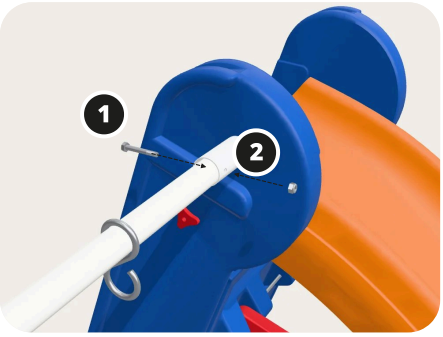

Tube in the supports

A 5/16" × 2 1/4" bolt goes through each support and the tube, with a lock nut on the other side.




Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Maximum weight: 23 kg on the swing and 70 kg on the slide. Check that the 6 knobs are tight, that the 2 supports are held by the 8 screws and that the tube is held by the 2 bolts with nuts.

INSTALLATION DETAILS

Location and safety area

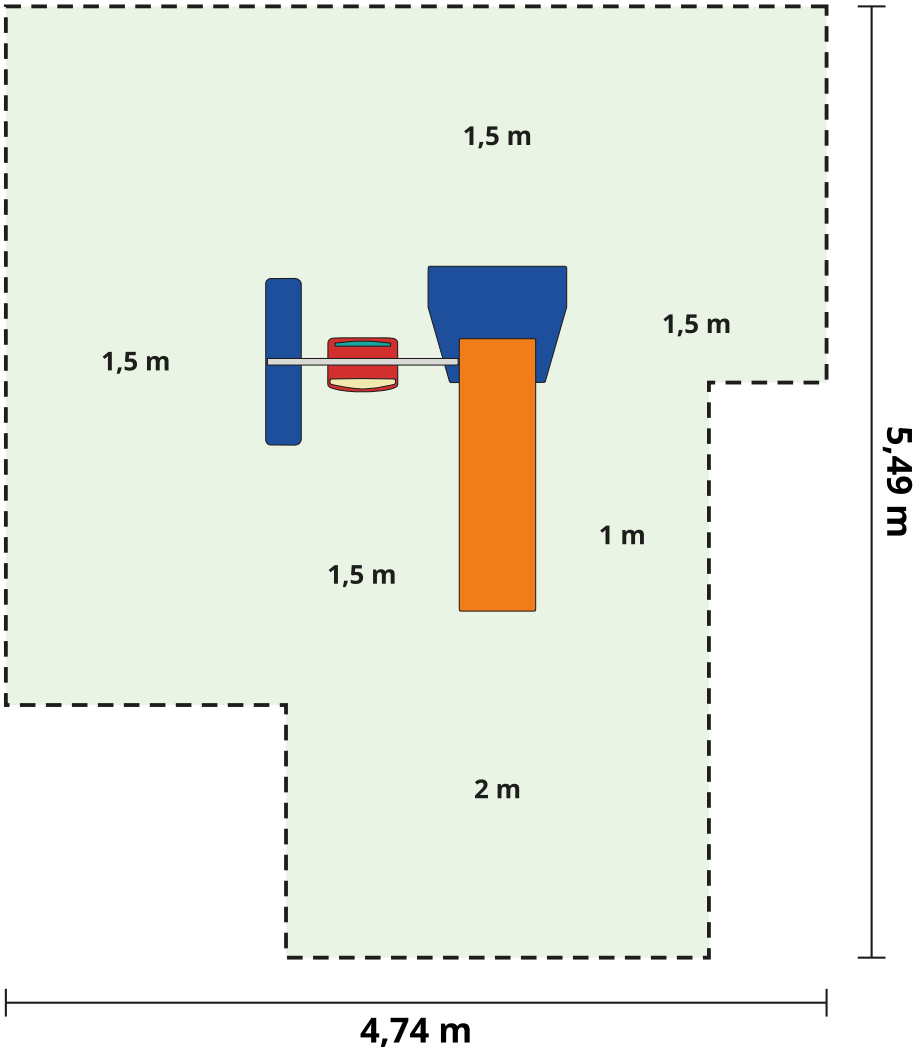

Area reserved for installation and impact (top view): 1.5 m behind the ladder, on the free side of the ladder, beyond the side frame and in front of and behind the swing; 1 m beside the slide and 2 m at the exit. Total 4.74 × 5.49 m. Product size: 1.73 × 1.84 × 1.20 m.

To keep users safe, minimum spaces and free distances must be respected.

Circulation area: at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

Fall space: neighboring static equipment with overlapping fall spaces must be at least 1.50 m apart for a fall height of up to 600 mm, and 2.50 m for higher falls. Maximum fall height of this product: **750 mm**.

Slide landing area: at least 1000 mm from the sides of the run-out section and 2000 mm (type 01 run-out) or 1000 mm (type 02 run-out) from the end of the run-out section.

Ground: an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

Location: first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

Footprint: the assembled playset takes up about 1.73 × 1.84 m on the ground; keep 1.5 m clear around it (1 m beside the slide) and 2 m in front of the slide exit, as in the figure.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

INSPECTION AND MAINTENANCE

Keep the playground safe

Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Slide knobs tight, supports and tube firmly held, swing ropes and hooks free of wear

Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

XALINGO S/A INDÚSTRIA E COMÉRCIO
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Escorregador com Balanço · ref. 0933.2
Keep this manual for future reference.