
Navio dos Piratas

ref. 0989.8

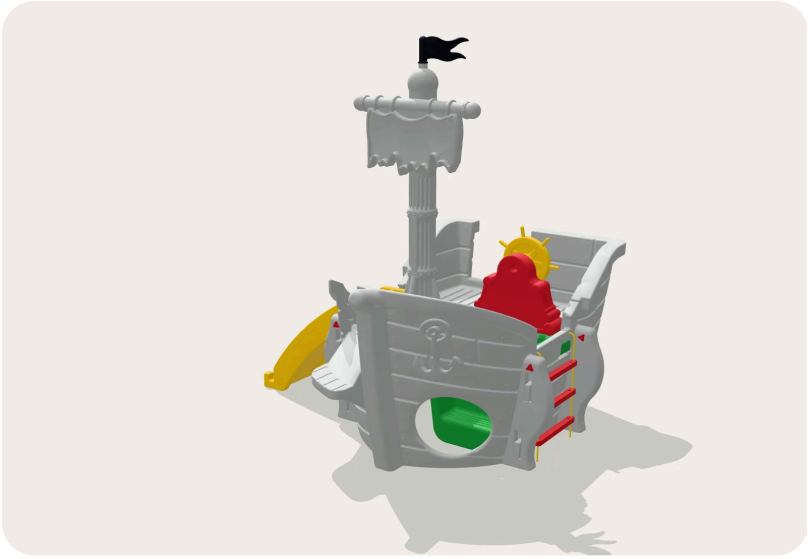

ASSEMBLY INSTRUCTIONS

Assembly video on YouTube:
youtu.be/hnwyvLQCRbY

Product size: **2,26 × 2,49 × 2,63 m**
Ship with mast and flag, ship's wheel, slide-ladder, rope ladder and a hidden hold
Age range: 3 years and up
Assembly by an adult; a second person makes fitting the hull easier.
9 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Until step 6, leave the **right side of the hull open**: the platform and the mast go in that way.
- The **platform** goes into the hull with the ship's wheel already fixed.
- Each metal rod goes in with **one knob already screwed on** and takes the other on the opposite end; the **10 knobs** are tightened by hand until firm.
- Use a **washer** on the M6×45 screws.

Tools




- **10 mm open-end or combination wrench**: M6×45 screws (2 pcs, step 2)
- Knobs and knots: by hand, no tools

There are no specific tightening torques for the fasteners. The rivet nuts come already fitted in the parts.

Screws in this playground

Each type has its own color. The same card appears in each step and in the assembly video.

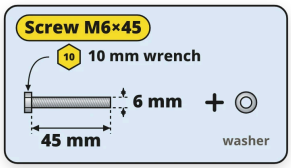

2× Screw M6×45 · step 2

PARTS LIST

Navio dos Piratas parts



BOW (A) 1×
No. 1 · ref. 989802



LEFT SIDE (B) 1×
No. 2 · ref. 989808



STERN (C) 1×
No. 3 · ref. 989804



PLATFORM (D) 1×
No. 4 · ref. 989807



WHEEL BASE (E) 1×
No. 5 · ref. 989806



SHIP'S WHEEL (E) 1×
No. 6 · ref. 1828706



METAL ROD 140 mm FOR THE WHEEL 1×
No. 7 · ref. 1828714




PUSH-ON LOCKING DISC 5/16" 2×
No. 8 · ref. 2090359



HEX SCREW M6 6×45 mm (F) 2×
No. 9 · ref. 2090194



M8 FLAT WASHER 4×
No. 10 ·
ref. 2090185




MAST (G) 1×
No. 11 · ref. 989805

METAL ROD 360 mm FOR THE MAST (H) 1×
No. 12 ·
ref. 1828713

KNOB WITH 5/16" NUT 10×
No. 13 ·
ref. 2090296

RIGHT SIDE (I) 1×
No. 14 · ref. 989803


FLAG (J) 1×
No. 15 ·
ref. 1828711

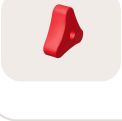

METAL ROD 115 mm (L) 4×
No. 16 ·
ref. 1828712



SLIDE-LADDER (M) 1×
No. 17 ·
ref. 1828708



ROPE 1.6 m (N) 2×
No. 18 · ref. 970912




ROPE LADDER RUNG (N) 3×
No. 19 · ref. 953203

PRODUCT ASSEMBLY

Step by step

In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

1 STEP 1 OF 9
Hull: bow, left side and stern

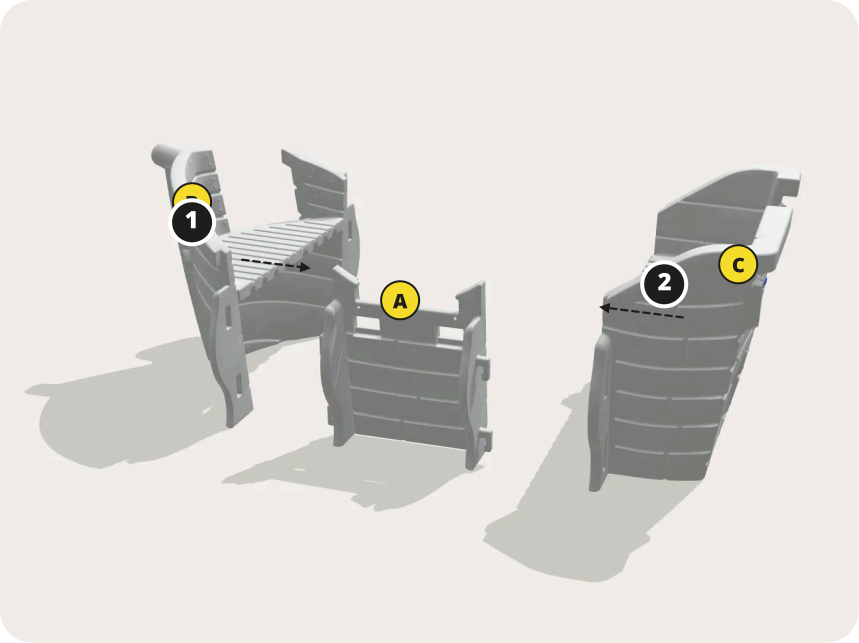

- **A** Left side (B): the rope ladder side
- **B** Bow (A): the part with the plank
- **C** Stern (C): the part with the logo

Lay out the hull parts: the **bow (A)**, with the plank, the **stern (C)**, with the logo, and the two sides.

Fit the **left side (B)**, the rope ladder side, between the bow and the stern: the hooks of the side go into parts A and C.

CAUTION
The hull parts are large: with a second person holding them, fitting is easier.

The right side (I) only goes in at step 6: leave that side open to put in the platform and the mast.

PARTS FOR THIS STEP


1× Bow (A)
ref. 989802


1× Stern (C)
ref. 989804


1× Left side (B)
ref. 989808



How it looks at the end of step 1

STEP 2 OF 9


2 Ship's wheel on the platform



A Ship's wheel with the red base (E)

B Fits on the platform (D), on the stern side

SCREW AND TOOL

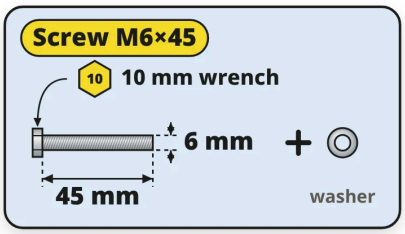

Tool: **10 mm wrench**.

With the green platform (D) outside the hull, fit the **ship's wheel with the red base (E)** on the stern side: the pins of the base go into the holes of the platform.

Screw the base to the platform with the **2 M6×45 screws with washers (F)**.

If the wheel comes apart from its base, push the **140 mm metal rod** through the wheel and the base, with the washers, and lock the ends with the **2 locking discs**.

PARTS FOR THIS STEP



1× Wheel base (E) ref. 989806



1× Ship's wheel (E) ref. 1828706



1× Wheel rod, 140 mm ref. 1828714



4× M8 flat washer on the M6×45 screws and on the wheel rod



2× M6×45 hex screw ref. 2090194




2× Push-on locking disc 5/16" ref. 2090359



How it looks at the end of step 2

3 STEP 3 OF 9
Platform into the hull

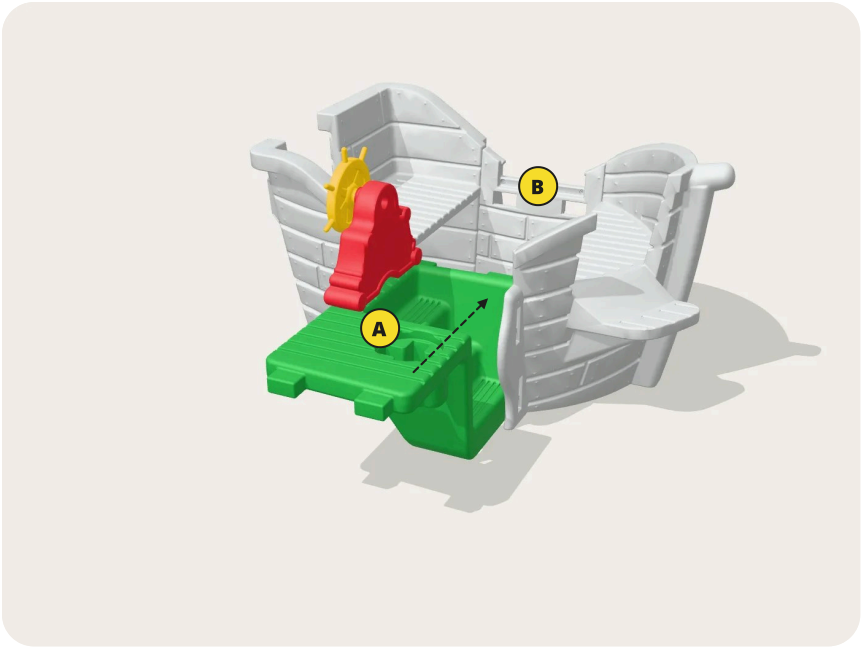

A The platform (D) goes in through the open side

B Hooks on the left side (B)

Take the platform (D), with the wheel already on it, into the hull through the open side and hook it on the **left side (B)**.

The wheel sits on the stern (C) side.

PARTS FOR THIS STEP




1× Platform (D)
ref. 989807



How it looks at the end of step 3

4 STEP 4 OF 9
Flag on the mast

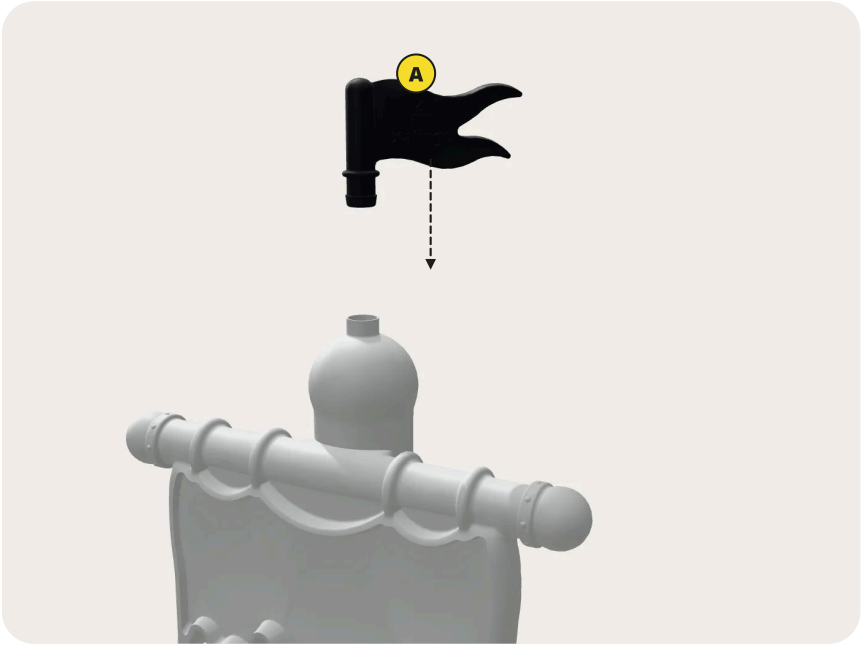

A Flag (J): fits on top of the mast

Fit the **flag (J)** on top of the **mast (G)**.

> Do it before raising the mast: it is easier.

PARTS FOR THIS STEP




1× Flag (J)
ref. 1828711




How it looks at the end of step 4

STEP 5 OF 9

5 Mast

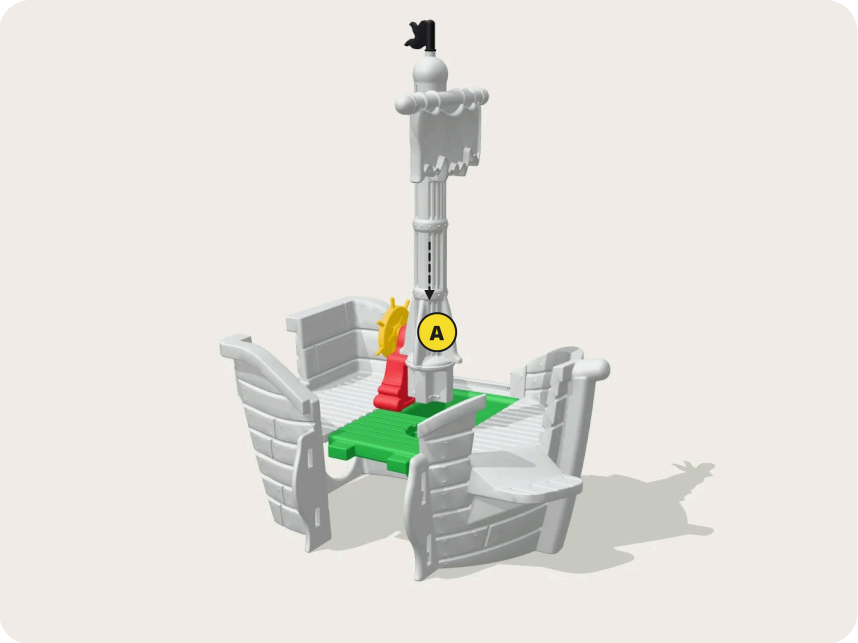

A Mast (G): its foot goes into the hole of the platform

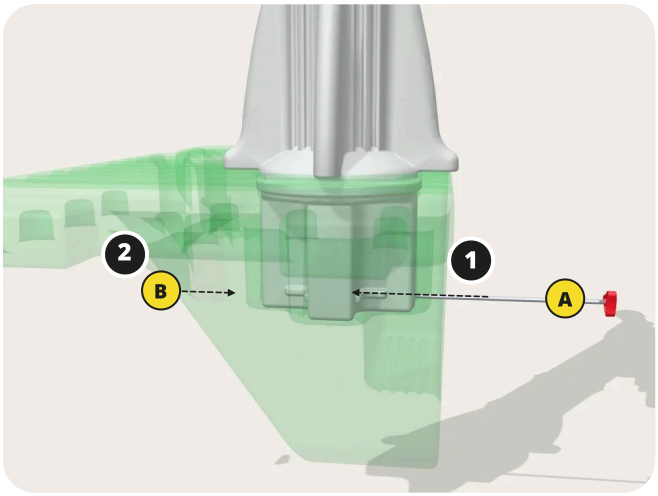

360 mm rod under the platform

A Rod with one knob: goes in from one side, through the foot of the mast

B The other knob screws onto the end, on the other side

Fit the **mast (G)** into the hole of the platform, with the sail facing the bow (A).

Under the platform, push the **360 mm metal rod**, with one **knob** already screwed on its end, through the foot of the mast. On the other side, screw on the other knob (H).

CAUTION
The knobs are tightened by hand until firm.

PARTS FOR THIS STEP




1× Mast (G)
ref. 989805



1× Mast rod, 360 mm (H)
ref. 1828713




2× Knob with 5/16" nut
ref. 2090296

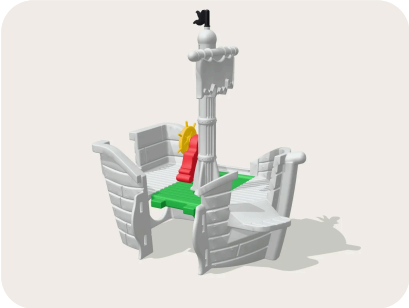

How it looks at the end of step 5

STEP 6 OF 9

6 Right side

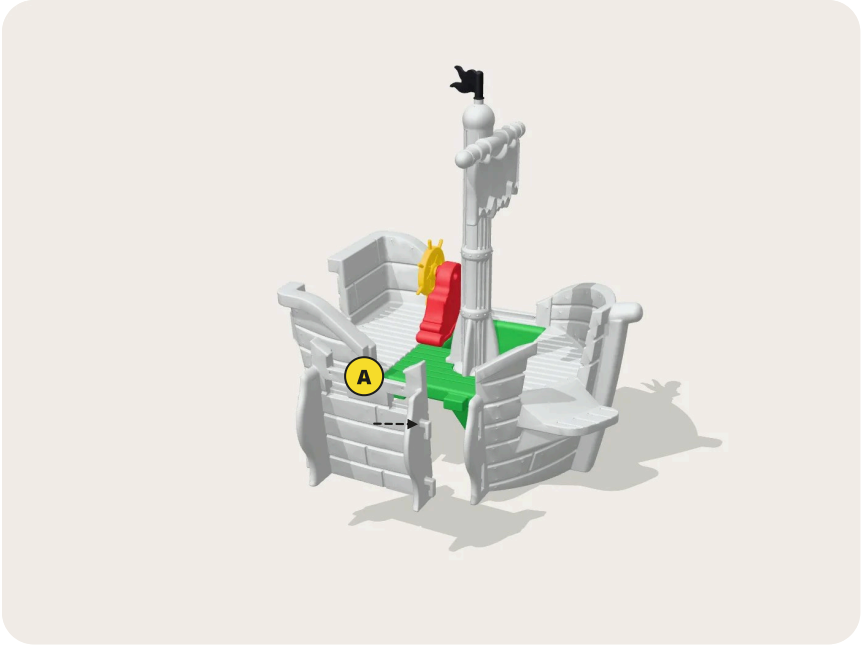

A Right side (I): the slide-ladder side

Fit the **right side (I)** on the stern (C), the bow (A) and the platform (D), closing the hull: the tabs of the platform go into the slots of the side.

> The right side goes in before the slide-ladder: the hooks of the ladder rest on it (step 7).

PARTS FOR THIS STEP




1× Right side (I)
ref. 989803




How it looks at the end of step 6

STEP 7 OF 9

7 Slide-ladder

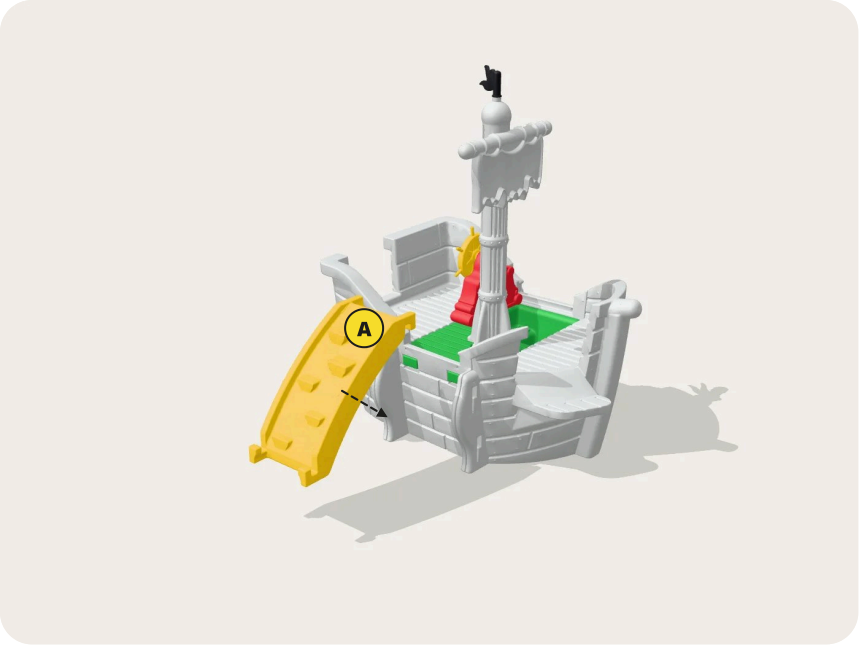

A Slide-ladder (M): its hooks rest on the notch of the right side

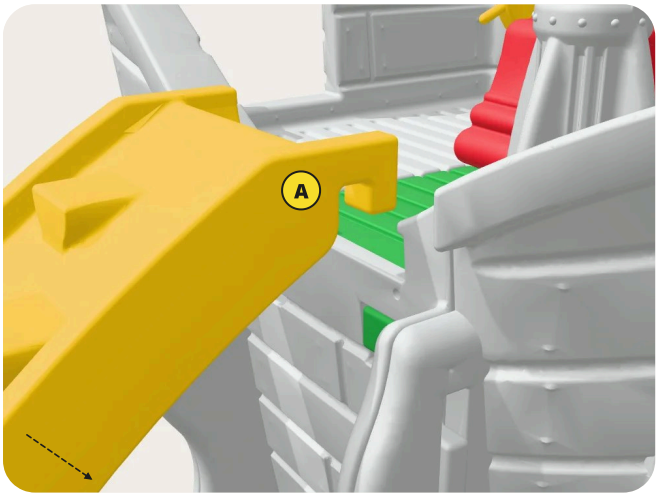

Ladder hooks over the right side

A The ladder hooks fit over the top of the side

Fit the **slide-ladder (M)** in the notch of the right side: its hooks fit over the top of the side, above the edge of the platform.

> The same part works as a slide and as a climber: it has footholds.

PARTS FOR THIS STEP




1× Slide-ladder (M) ref. 1828708




How it looks at the end of step 7

STEP 8 OF 9

8 Corner rods

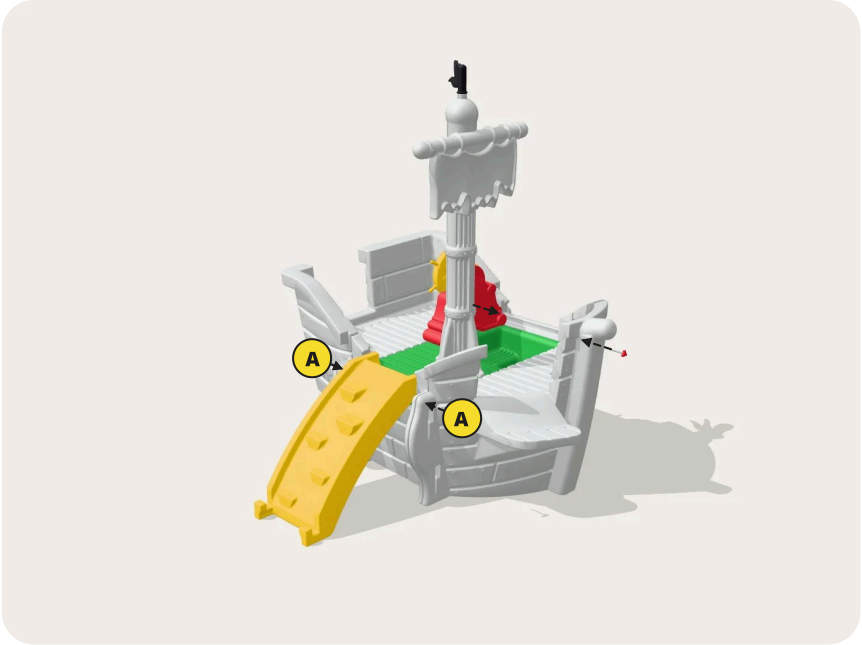

A 4 rods of 115 mm: one at each corner of the sides (L)

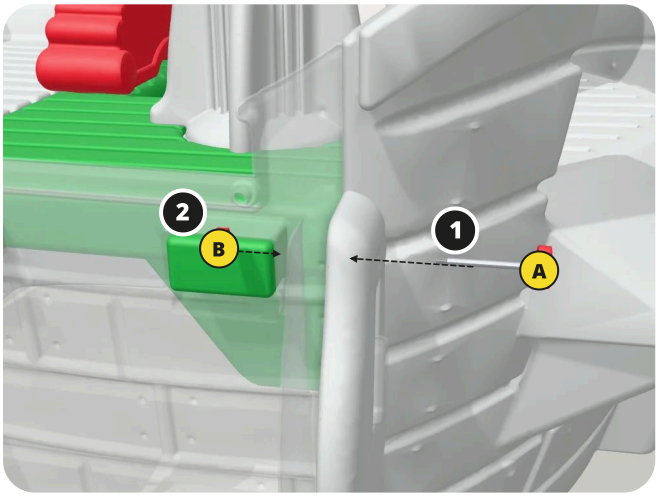

Rod with a knob from outside, the other knob inside

A Rod with one knob: goes in from outside the hull

B The other knob screws onto the end, inside the hull


Lock the 4 corners of the hull with the **4 metal rods of 115 mm** (L).

1. With one **knob** already screwed on its end, push the rod in from outside the hull: it goes through the bow (or the stern), the side and the platform tab.

2. Inside the hull, screw the other knob onto the end of the rod. Tighten both by hand: 8 knobs in all.

PARTS FOR THIS STEP


4× Corner rod, 115 mm (L) ref. 1828712	**8×** Knob with 5/16" nut ref. 2090296

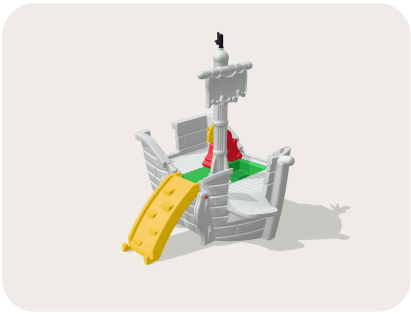


How it looks at the end of step 8

STEP 9 OF 9

9 Rope ladder

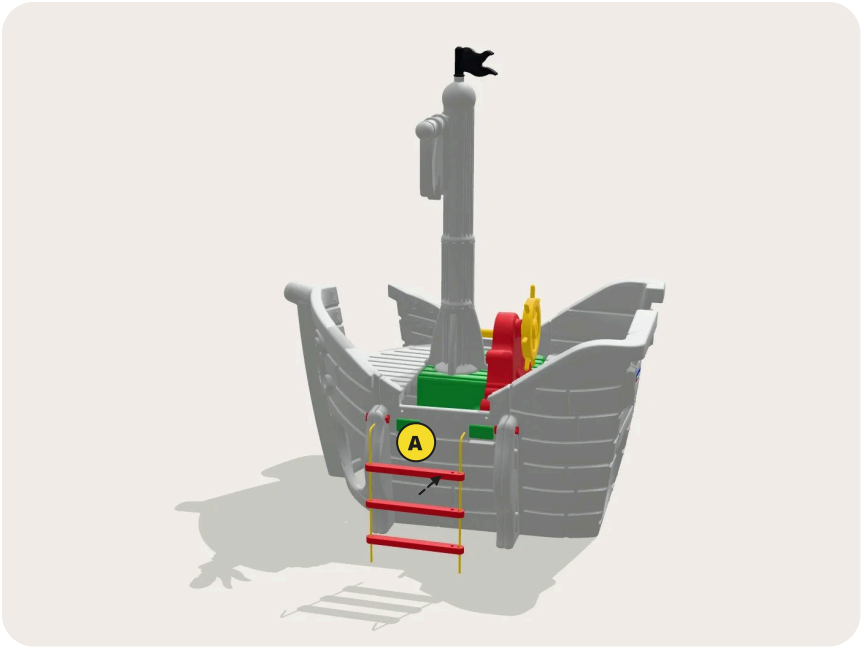

A Rope ladder (N): tie both ropes to the left side

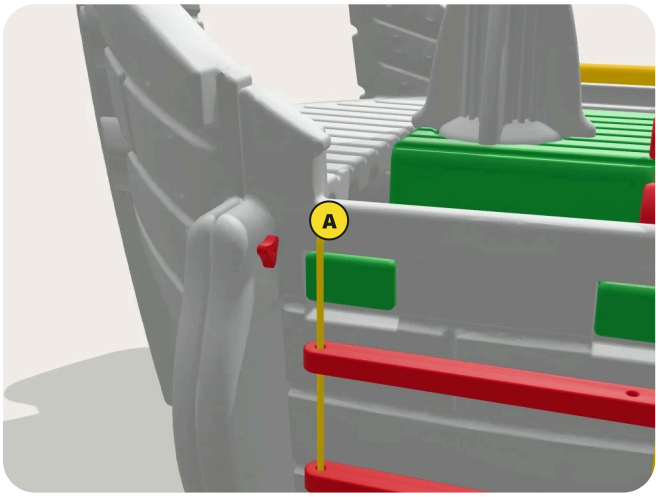

Rope tied at the top of the side

A A firm knot on each rope, at the top of the side

Make the **rope ladder (N)**: the two ropes go through the holes of the **3 red rungs**, about 20 cm apart.

Tie the top end of each rope at the top of the **left side (B)** with a firm knot.

CAUTION
Check the knots before letting children use it: the rungs must not slide on the ropes.


PARTS FOR THIS STEP

3× Rope ladder rung (N)
ref. 953203

2× Rope, 1.6 m (N)
ref. 970912


FASTENING DETAILS

How each part is held

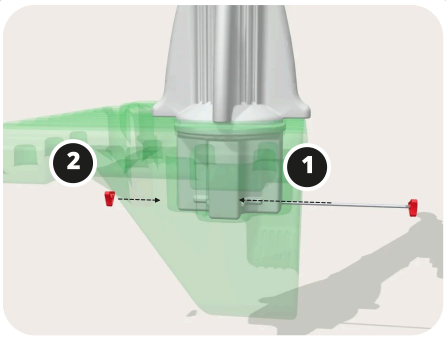


Mast

360 mm rod under the platform, through the foot of the mast, with a knob on each end.

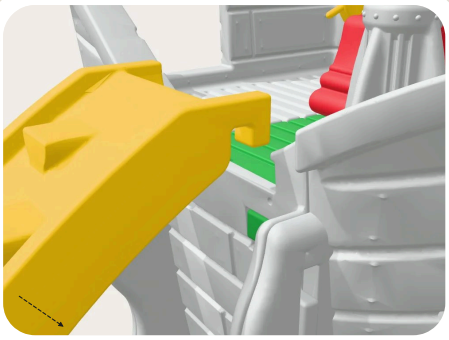


Slide-ladder

No screws: the ladder hooks fit over the notch of the right side.

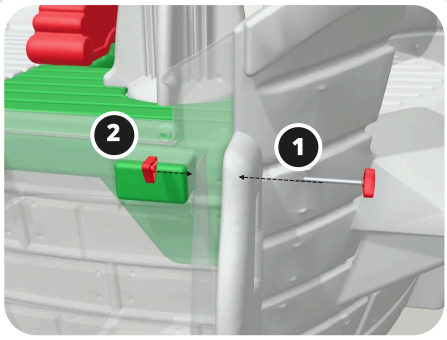


Hull corners

115 mm rod with one knob, from outside, through the bow (or the stern), the side and the platform tab; the other knob inside. 4 corners.

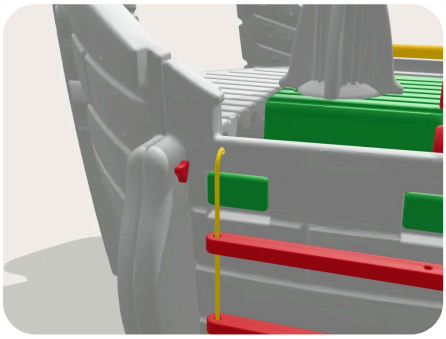

Rope ladder

Two ropes through the 3 red rungs, tied at the top of the left side with a firm knot.

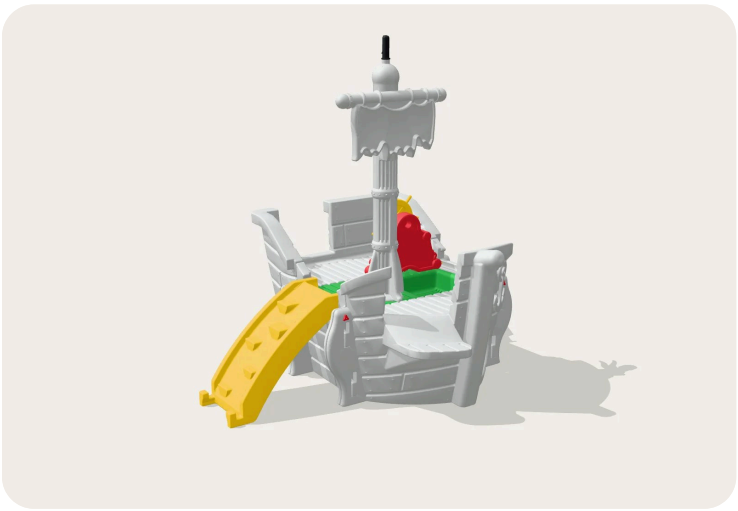

Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Maximum load of 100 kg per platform. Check that the 10 knobs are tight and the knots of the rope ladder are firm.

INSTALLATION DETAILS

Location and safety area

To keep users safe, minimum spaces and free distances must be respected.

Circulation area: at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

Fall space: neighboring static equipment with overlapping fall spaces must be at least 1.50 m apart for a fall height of up to 600 mm, and 2.50 m for higher falls. Maximum fall height of this product: **700 mm**.

Slide landing area: at least 1000 mm from the sides of the run-out section and 2000 mm (type 01 run-out) or 1000 mm (type 02 run-out) from the end of the run-out section.

Ground: an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

Location: first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

Footprint: the assembled ship takes about 2.3 × 2.5 m of ground, counting the slide-ladder and the rope ladder; the free areas above apply all around it.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

INSPECTION AND MAINTENANCE

Keep the playground safe

Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Knobs tight, rods in place and rope ladder knots firm

Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

XALINGO S/A INDÚSTRIA E COMÉRCIO – EM RECUPERAÇÃO JUDICIAL
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Navio dos Piratas · ref. 0989.8
Keep this manual for future reference.