Casinha Chalé da Montanha

ref. 0977.6

ASSEMBLY INSTRUCTIONS

Assembly video on YouTube:
youtu.be/aARNuMi79LY



Product size: **1.48 × 1.23 × 1.52 m**
Playhouse with a wood texture, chimney, mailbox and windows that open and close; inside, a fireplace, clock and cupboard in relief
Rotomolded polyethylene walls and roof
Age: 2 years and up
To be assembled by an adult; a second person makes it easier to fit the walls and the roof.
4 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Assemble in the manual's order: the **back wall** on the **side wall**, the **side wall with chimney**, the **front wall** and the **roof**. The door and the windows come fitted.
- At each corner, the hooks go into the little windows with the wall about 5 cm off the ground and then go down: if the wall does not go down straight, lift it and fit it again.
- Assemble on level ground: on uneven ground the tabs will not line up.

Tools

- No tools needed: all parts snap together

Assembly uses no screws.

PARTS LIST

Casinha Chalé da Montanha parts



SIDE WALL (A)
No. 1 · ref. 977604
1×



BACK WALL, WITH THE WINDOWS (B)
No. 2 · ref. 977602
1×



SIDE WALL WITH CHIMNEY (C)
No. 3 · ref. 977603
1×



FRONT WALL, WITH THE DOOR (D)
No. 4 · ref. 977601
1×



ROOF (E)
No. 5 · ref. 977606
1×

PRODUCT ASSEMBLY

Step by step


In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

1 STEP 1 OF 4
Back wall on the side wall



A Side wall (A)

B Back wall (B)

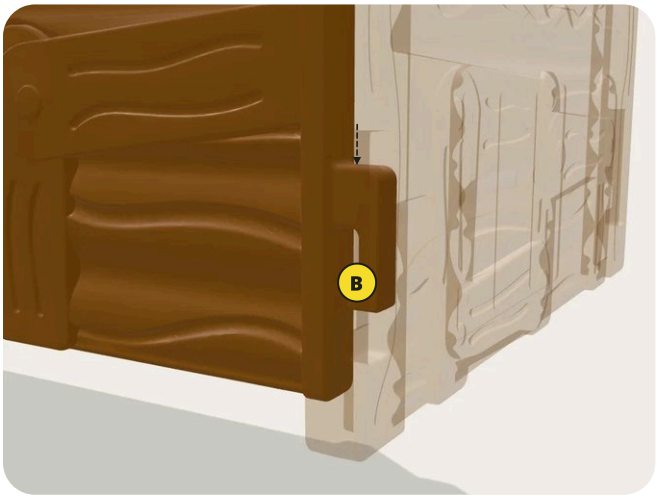

The back wall's hooks go into the side wall's little windows and down

B Hook of the back wall

Lay out the parts: the **side wall (A)**, the gable wall without a chimney; the **back wall (B)**, with the yellow windows; the **side wall with chimney (C)**; the **front wall (D)**, with the red door; and the **roof (E)**. The door and the windows come fitted on the walls.

Stand side wall A up. Hold back wall B about 5 cm off the ground, with the hooks at its end level with the little windows at the side wall's corner.

Push back wall B along its length against side wall A until the hooks go into the little windows, then lower the back wall to the ground: the hooks lock.

CAUTION
The walls are large: with a second person holding them, fitting is easier and the wall will not tip over.

PARTS FOR THIS STEP



1× Back wall (B)
ref. 977602




1× Side wall (A)
ref. 977604



How it looks at the end of step 1


STEP 2 OF 4

2 Side wall with chimney

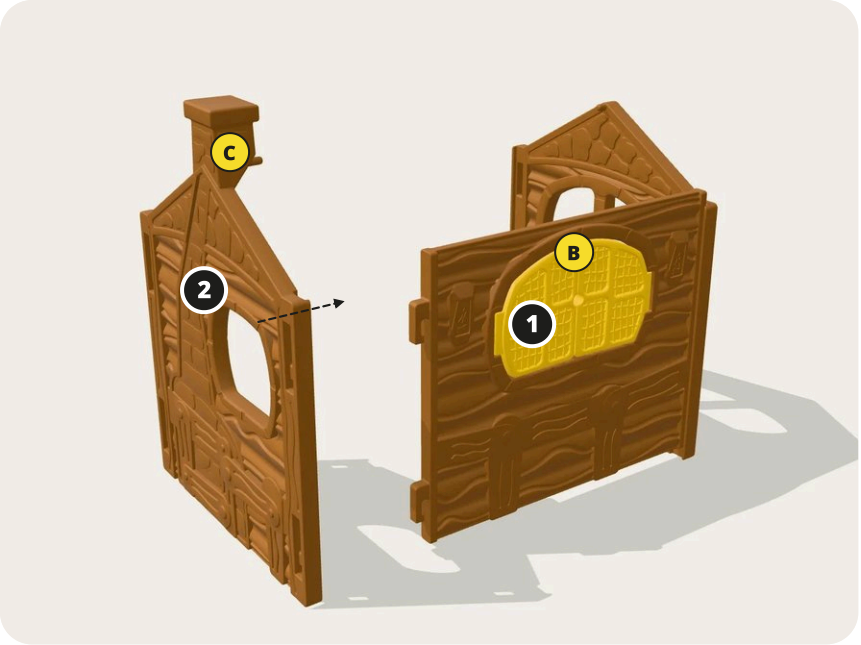

C Side wall with chimney (C)

B Back wall (B)

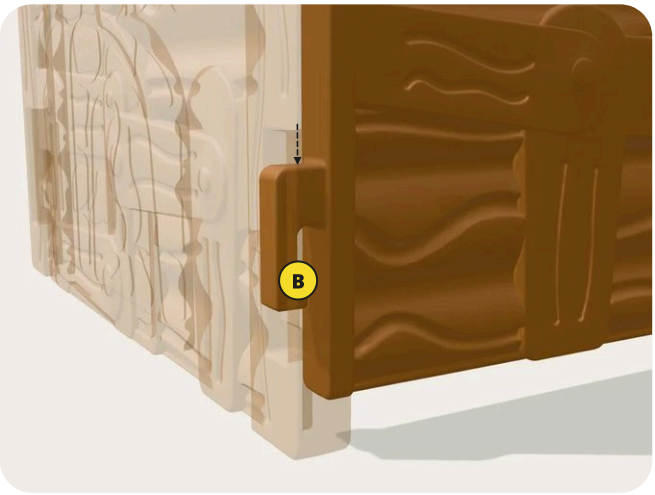

The back wall's hooks go into the little windows of the side wall with chimney and down

B Hook of the back wall

Lift back wall B about 5 cm again: the hooks on side wall A's side go up inside the little windows and stay in.

Bring the **side wall with chimney (C)** to the other end of back wall B, with the hooks inside its little windows.

Lower back wall B to the ground: both side walls are held at the ends of the back wall.

PARTS FOR THIS STEP



1× Side wall with chimney (C) ref. 977603



How it looks at the end of step 2

STEP 3 OF 4

3 Front wall



D Front wall (D)



The front wall's hooks go into the little windows and down

D Hook of the front wall

Open side wall C (with the chimney) a little, swinging its loose end outward: the corner with the back wall works like a hinge.

Hold the **front wall (D)** about 5 cm off the ground and push it against side wall A until the hooks go into the little windows.

Close side wall C against the other end of the front wall, with the hooks inside the little windows, and lower the front wall to the ground.

Check that the four walls are level at the top and resting on the ground.

PARTS FOR THIS STEP



1× Front wall (D)
ref. 977601




How it looks at the end of step 3

STEP 4 OF 4

4 Roof



E Roof (E)

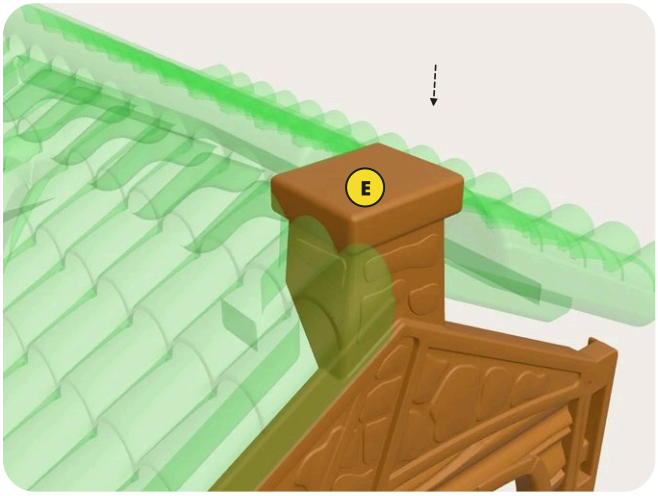

The chimney goes through the roof's notch

E The chimney goes through the roof's notch

Put the **roof (E)** over the playhouse, with the roof's wave over the front wall (the wall with the door) and the notch at the roof's end over the chimney.

Lower the roof straight down: the chimney goes through the notch and the roof sits on top of the walls.

CAUTION
The roof is large: put it on with a second person, one on each side.

PARTS FOR THIS STEP



1× Roof (E)
ref. 977606



How it looks at the end of step 4


FASTENING DETAILS

How each part is held



Walls

At the four corners, the hooks of the back and front walls go into the side walls' little windows with the wall a little off the ground and go down until they lock.

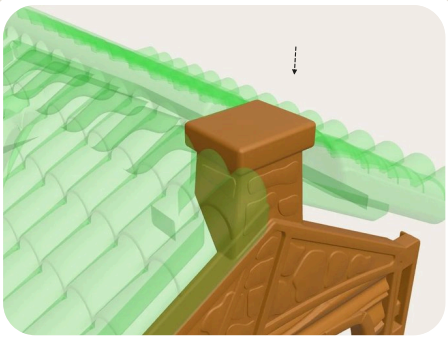

Roof

Goes straight down over the playhouse and sits on top of the walls; the chimney goes through the notch at the roof's end.




Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Check that the four walls are fully fitted, that the roof sits on top of the walls and that the door and the windows open and close.

INSTALLATION DETAILS

Location and safety area

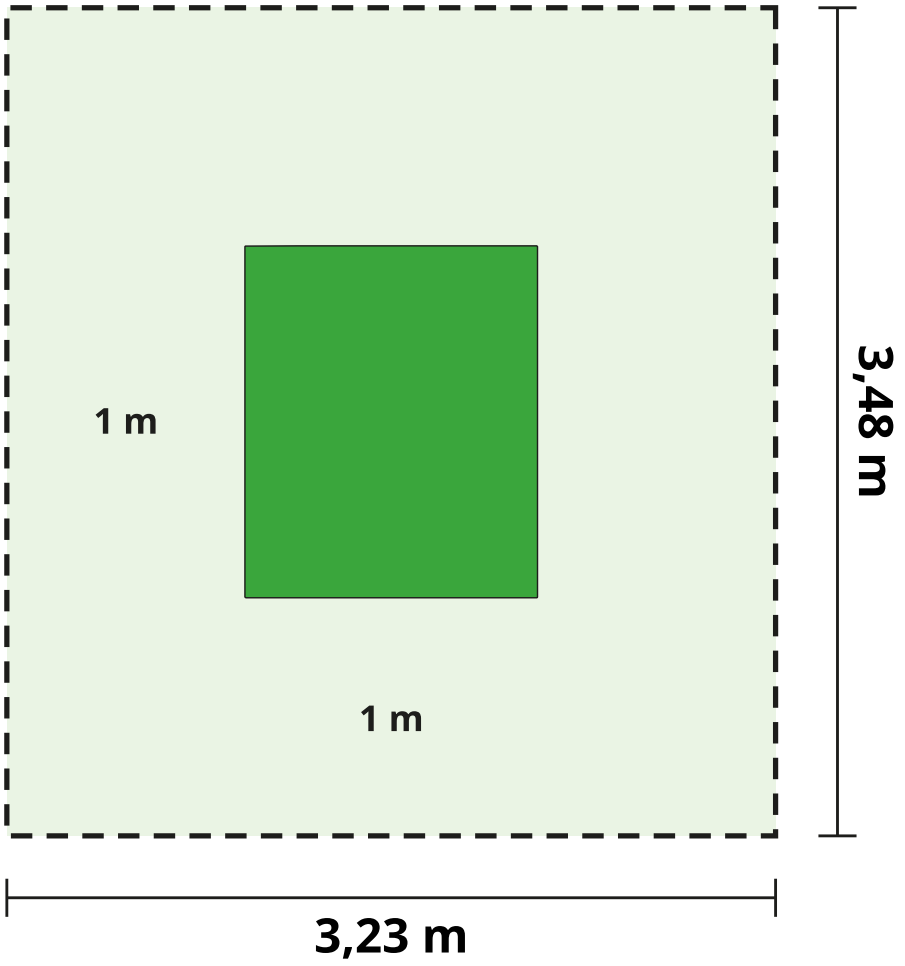

Area reserved for installation (top view): 1 m clear around the playhouse, 3.48 × 3.23 m. Product size: 1.48 × 1.23 × 1.52 m.

To keep users safe, minimum spaces and free distances must be respected.

Circulation area: at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

Ground: an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

Location: first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

Footprint: the assembled playhouse takes up about 1.48 × 1.23 m on the ground, including the roof; keep 1 m clear around it, as in the figure.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

INSPECTION AND MAINTENANCE

Keep the playhouse safe

Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Walls fully fitted, roof seated, door and windows opening and closing

Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

XALINGO S/A INDÚSTRIA E COMÉRCIO
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Casinha Chalé da Montanha · ref. 0977.6
Keep this manual for future reference.