Casinha Encantada Amarela

ref. 0966.6



ASSEMBLY INSTRUCTIONS

Assembly video on YouTube: **youtu.be/eMda--noHrg**

Product size: **4 ft 3 in × 4 ft × 4 ft 2 in (1.30 × 1.23 × 1.26 m)**
Playhouse with a built-in little table and bench, double door, half door, windows and tiled roof
Rotomolded polyethylene walls and roof
Age: 2 years and up
To be assembled by an adult; a second person makes it easier to fit the walls and the roof.
4 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Follow the order of the manual: the **side wall with window** on the **back wall**, the **front wall**, the **side wall with doors** and the **roof**. The doors come already fitted.
- At each corner, the hooks go into the openings with the side wall about 5 cm (2 in) off the ground and then slide down: if the wall does not go down straight, lift it and fit it again.
- Assemble on level ground: on uneven ground the tabs will not line up.

Tools

- No tools needed: all parts snap together

Assembly uses no screws.

PARTS LIST

Casinha Encantada Amarela parts



BACK WALL (A) 1×
No. 1 · ref. 955404



SIDE WALL WITH WINDOW (B) 1×
No. 2 · ref. 955403



FRONT WALL (C) 1×
No. 3 · ref. 955401



SIDE WALL WITH DOORS (D) 1×
No. 4 · ref. 955402




ROOF (E) 1×
No. 5 · ref. 955405

PRODUCT ASSEMBLY

Step by step

In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

1 STEP 1 OF 4
Side wall with window on the back wall

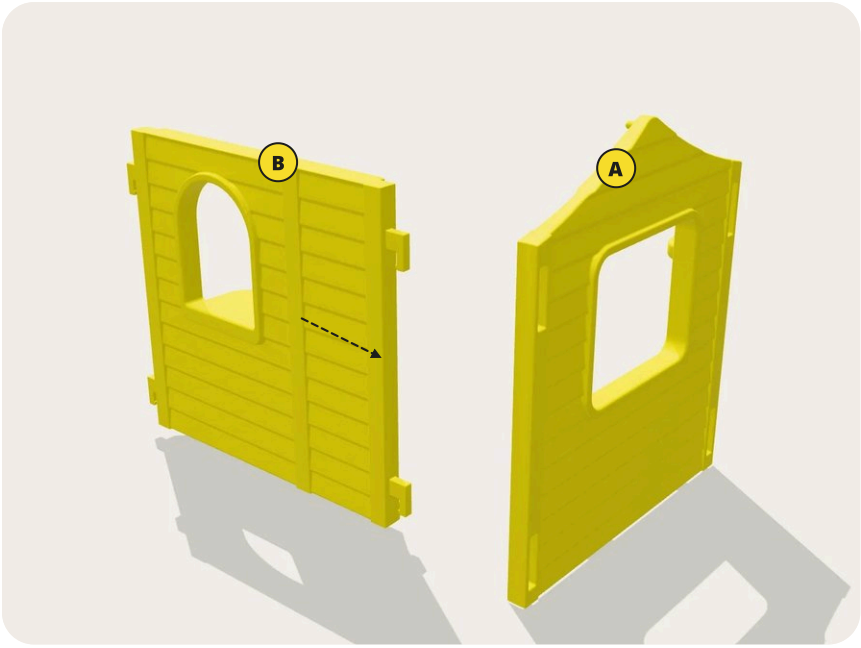

A Back wall (A)

B Side wall with window (B)



The side wall hooks go into the small openings of the back wall and slide down

A Side wall hook

Lay out the parts: the **back wall (A)**, with the little table, the **side wall with window (B)**, with the bench, the **front wall (C)**, with the half door, the **side wall with doors (D)** and the **roof (E)**. The doors come already fitted on the walls.

Stand the back wall A upright. Hold side wall B about 5 cm (2 in) off the ground, with the hooks at its end level with the small openings in the corner of the back wall.

Push side wall B lengthwise against the back wall until the hooks go into the openings, then lower the side wall to the ground: the hooks lock and the two walls line up.

CAUTION
The walls are large: with a second person holding them, fitting is easier and the wall will not tip over.

PARTS FOR THIS STEP



1× Side wall with window (B)
ref. 955403




1× Back wall (A)
ref. 955404



How it looks at the end of step 1


STEP 2 OF 4

2 Front wall

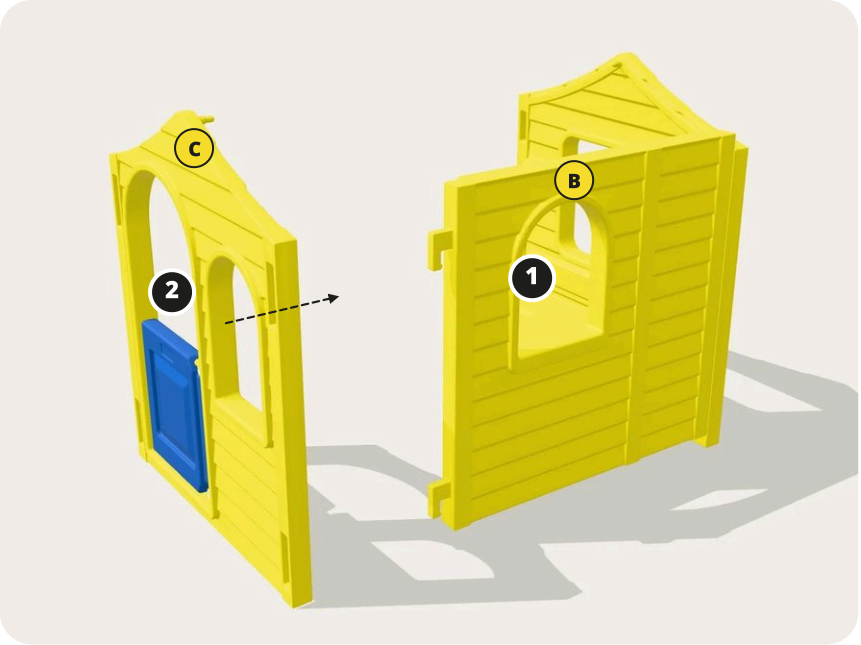

C Front wall (C)

B Side wall with window (B)

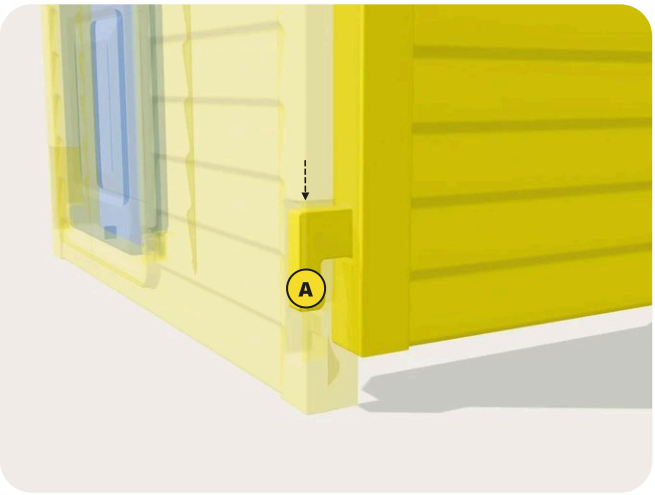

The side wall hooks go into the small openings of the front wall and slide down

A Side wall hook

Lift side wall B again about 5 cm (2 in): the hooks on the back wall side rise inside their openings and stay engaged.


Bring the **front wall (C)** against the other end of side wall B, with the hooks inside the openings of the front wall.

Lower side wall B to the ground: the front and back walls are now held at the two ends of the side wall.

PARTS FOR THIS STEP



1× Front wall (C)
ref. 955401

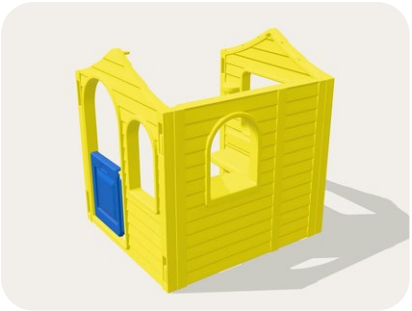

How it looks at the end of step 2

STEP 3 OF 4

3 Side wall with doors



D Side wall with doors (D)



The hooks of the side wall with doors go into the small openings and slide down

A Side wall hook

Swing the loose end of front wall C slightly outward: the corner with side wall B works like a hinge.

Hold the **side wall with doors (D)** about 5 cm (2 in) off the ground and push it against back wall A until the hooks go into the openings.

Close front wall C against the other end of side wall D, with the hooks inside the openings, and lower side wall D to the ground.

Check that the four walls are level at the top and resting on the ground.

PARTS FOR THIS STEP




1× Side wall with doors (D)
ref. 955402




How it looks at the end of step 3

STEP 4 OF 4

4 Roof

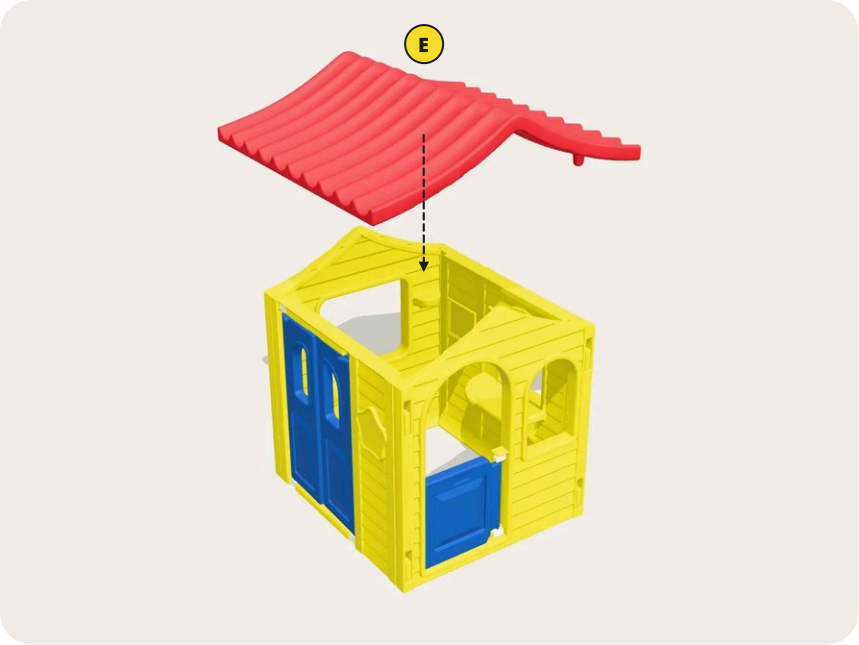

E Roof (E)

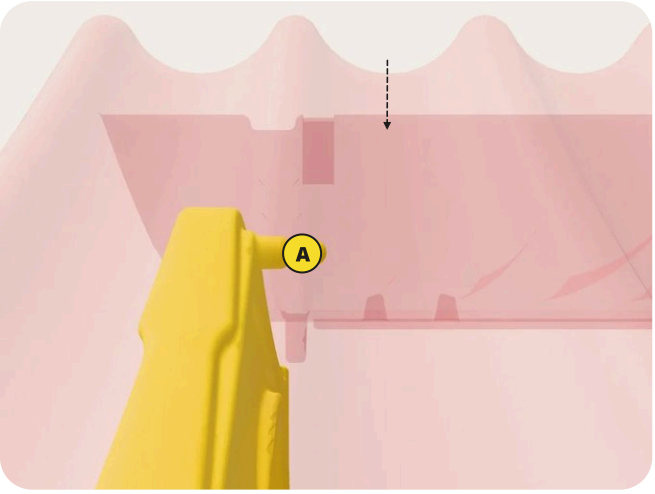

The front wall pin goes into the roof socket

A Front wall pin

Place the **roof (E)** on the playhouse, with its ridge running from the front wall to the back wall, over their peaks.

Lower the roof straight down: the pins at the top of the front and back walls go into the roof sockets, and the roof sits on top of the walls.

CAUTION
The roof is large: put it on with a second person, one on each side.

PARTS FOR THIS STEP



1× Roof (E)
ref. 955405



How it looks at the end of step 4


FASTENING DETAILS

How each part is held



Walls

At the four corners, the side wall hooks go into the openings of the front and back walls with the side wall slightly off the ground, then slide down until they lock.

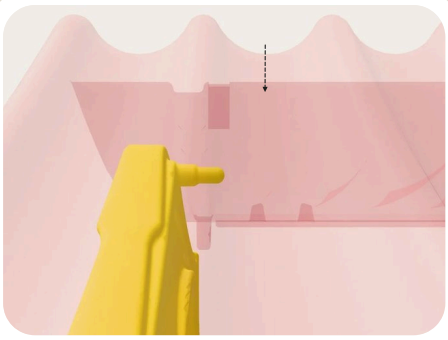

Roof

Goes straight down onto the playhouse: the pins at the top of the front and back walls go into the roof sockets.




Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Check that the four walls are fully engaged, the roof is seated on top of the walls and the doors open and close.

INSTALLATION DETAILS

Location and safety area

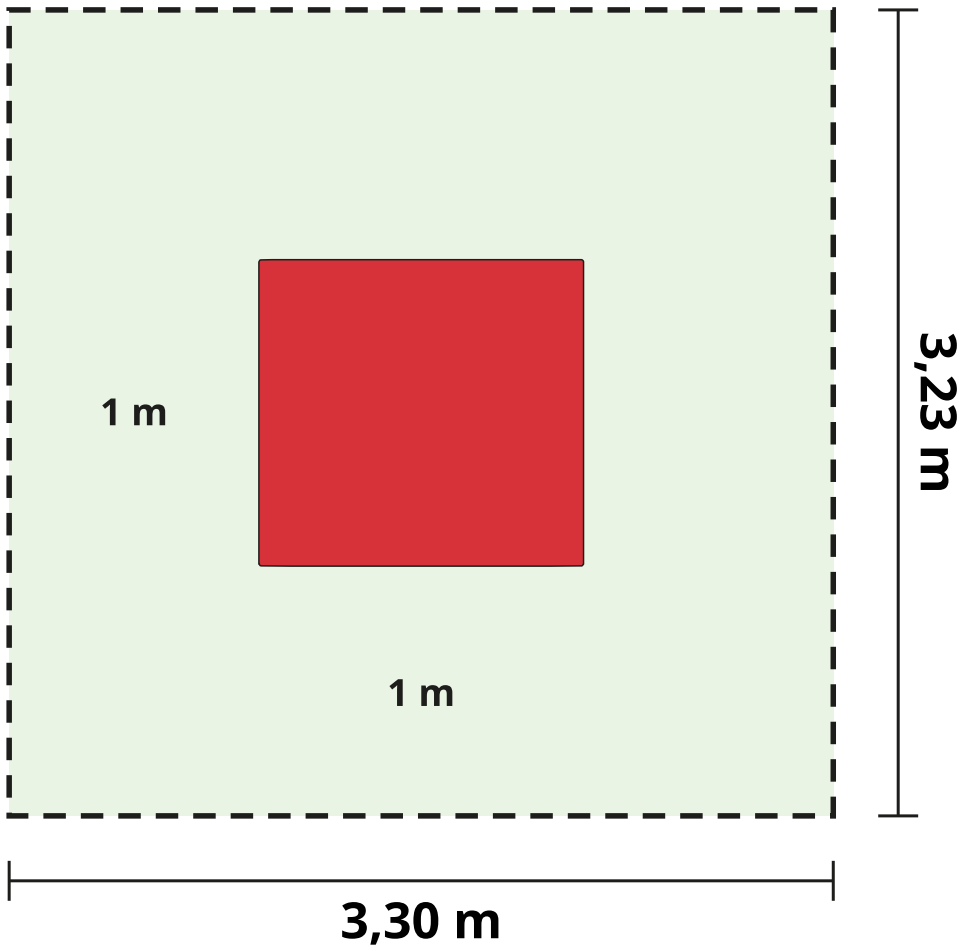

Area reserved for installation (top view): 1 m (3 ft 3 in) of free space around the playhouse, 3.30 × 3.23 m. Product size: 1.30 × 1.23 × 1.26 m.

To keep users safe, minimum spaces and free distances must be respected.

Circulation area: at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

Ground: an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

Location: first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

Footprint: the assembled playhouse takes up about 1.30 × 1.23 m (4 ft 3 in × 4 ft) on the ground, roof included; keep 1 m (3 ft 3 in) of free space around it, as in the figure.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

INSPECTION AND MAINTENANCE

Keep the playhouse safe

Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Walls fully engaged, roof seated, doors opening and closing

Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

XALINGO S/A INDÚSTRIA E COMÉRCIO
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Casinha Encantada Amarela · ref. 0966.6
Keep this manual for future reference.