


IN PRINCIPIO · PHOTOGRAPHY TOOLS

Pose Reference Pack

Sony Edition

Scroll through poses straight on your camera

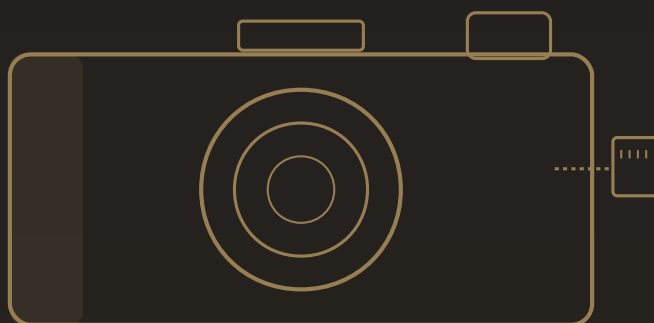

What you got

Pose references that load directly into your camera's playback.
No phone-checking mid-shoot. No Pinterest-scrolling pauses.
Every pose, description and prompt lives on the camera itself.

JPEG files

Camera-spec JPEG files, 1920×1280, built with an authentic Sony JPEG fingerprint. They go straight onto an SD card alongside your real photos.

Pose + prompt

Every pose includes the visual reference, a posing prompt for your subject, and a short framing note. All legible on a 3.7" camera screen.

If-Found image

Bonus: a contact image that lives on the SD card. If you ever lose the card, whoever finds it can reach you through the EXIF metadata.

This guide

Setup takes three minutes; do it once and you can forget the process. The pack just becomes part of the camera, like your photos.

TESTED COMPATIBILITY

Sony **A7 III** (firmware v4.01) · Sony **A7 IV** · Sony **A7 V**

Likely works on A7R V, A1, A1 II, A9 III, A7C II, A7S III (every BIONZ X / XR Sony Alpha body). If you own an older or unusual model and hit a problem, drop us a line; we'll sort it quickly.

Prep the SD card

The whole setup takes three minutes. Do it once; the pack stays put and survives any future body upgrade in the Sony Alpha line.

01 Format the SD card in your camera

Insert the SD card in your camera. Go to **MENU → Setup → Media → Format** and confirm.

This wipes the SD card and creates the structure Sony expects. We recommend using a **dedicated SD card just for pose references**; that way it doesn't mix with your shoot cards.

Tip: an old 16 GB or 32 GB SD card is more than enough. The whole pack takes ~25 MB.

02 Take one photo

Shoot anything; a wall, a table, whatever. The camera will automatically create the **DCIM/100MSDCF/** folder on the SD card. That's the standard Sony structure we need.

Your first photo lands on the SD card as **DSC00001.JPG** ; you'll delete it in the next step before copying the pack.

03 Insert the SD card into your computer

Pull the SD card out of the camera and plug it into a Mac or PC via a USB reader or built-in slot.

The SD card mounts as a volume on your Desktop (on Mac usually as "Untitled"; on Windows as a drive letter).

Copy the poses and go

04 Delete the test photo, then copy the poses

On the SD card, open `DCIM/100MSDCF/` and delete the `DSC00001.JPG` you took in step 02.

From the ZIP you received, open `DCIM/100MSDCF/` and select every `DSC0xxxx.JPG` file. Drag and drop them all into the `DCIM/100MSDCF/` folder on the SD card.

Important: the pose files **have to go into the 100MSDCF folder**, not into a custom folder. Sony cameras only show files from standard MSDCF folders in playback.

05 Eject the SD card

Mac: click the  icon next to the SD card in Finder, or press `cmd+E`. **Windows:** use "Safely Remove Hardware".

Don't yank the card before ejecting; Sony is sensitive to incomplete FAT writes and the SD card can refuse to mount the next time.

06 Recover Image Database

Put the SD card back into the camera. Go to `MENU → Setup → Media → Recover Image Database`; confirm **Yes**.

The camera spends 10-30 seconds indexing every file on the SD card. When it finishes, press **Playback** (▶). Every pose is right there.

Run this step every time you add or change files through your computer. Sony cameras keep an internal index that doesn't refresh on its own; it only updates when you trigger Recover.

On shoot day

Workflow during a shoot: as simple as scrolling through your own photos. Joystick to navigate; zoom button for detail; info button for the prompt text.

Recommended setting before you shoot

Set **MENU → Playback → View Mode → Folder View (Still)**. In Folder View, every pose is grouped in one place; scroll through them with the joystick like a standard photographic reference. In Date View the pack is separated from your shoot photos (poses are date-stamped to January 2024), which is useful if you don't want them mixed in chronologically.

Workflow during the shoot



Before each new pose

Press **Playback**; joystick to the pose you want. Show it to your subject on the camera screen.



Details in the prompt

Press **DISP** to reveal the text overlay; the pose description, framing notes, and light direction.



Back to shoot mode

Half-press the shutter; the camera exits playback immediately and you're ready to shoot. No seconds lost.

If something doesn't work

Most issues fall into one of three buckets. Fix it yourself in 30 seconds, or write in if that doesn't do it.

"I inserted the SD card and the poses aren't showing in playback."

You haven't run **Recover Image Database** (step 06). Sony cameras keep an internal index that ignores manually-added files until you trigger a rebuild. Go to `MENU → Setup → Media → Recover Image Database` ; confirm **Yes**; wait 10-30 s.

"A pose displays, but in the wrong orientation."

This shouldn't be possible with a valid output from us; please let us know. Send a photo of the camera screen (snap it with your phone) plus your camera model and firmware version (`MENU → Setup → Setup Option → Version`) and we'll sort it.

"I have an A7R V / A1 II / a newer Sony Alpha; does it work?"

Most likely yes; every modern Sony Alpha body shares the JPEG validation logic our pipeline targets. We haven't physically tested every model, so if you run into trouble, the fastest first check is to run **Recover Image Database**. If that doesn't help, write in and we'll work it out together.

"Some poses are missing from playback, but the file is on the SD card."

The camera's image index didn't pick up every file on the last rebuild. Take the SD card out, put it back in, and run `MENU → Setup → Media → Recover Image Database` again. If the same poses keep failing, write in and include the file numbers so we can check.

Email us with a description of the problem and, if you can, a photo of the camera screen.
We'll sort it quickly.

In Principio Photography
inprincipiophotography@gmail.com