


IN PRINCIPIO · PHOTOGRAPHY TOOLS

Pose Reference Pack

Sony Edition

Scroll through poses straight on your camera

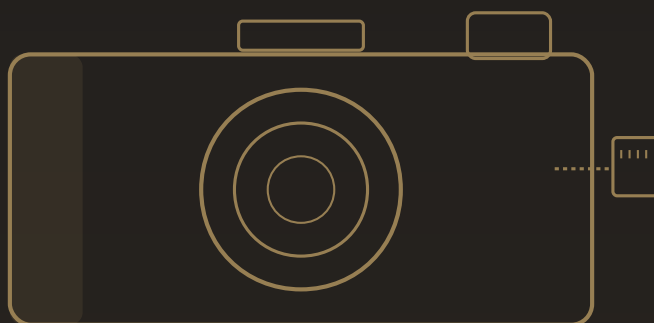

What you got

Pose references that load directly into your camera's playback.
No phone-checking mid-shoot. No Pinterest-scrolling pauses.
Every pose, description and prompt lives on the camera itself.

JPEG files

Camera-spec JPEG files, 1920×1280, built with an authentic Sony JPEG fingerprint. They go straight onto an SD card alongside your real photos.

Pose + prompt

Every pose includes the visual reference, a posing prompt for your subject, and a short framing note. All legible on a 3.7" camera screen.

If-Found image

Bonus: a contact image that lives on the SD card. If you ever lose the card, whoever finds it can reach you through the EXIF metadata.

This guide

Setup takes three minutes; do it once and you can forget the process. The pack just becomes part of the camera, like your photos.

TESTED COMPATIBILITY

Sony **A7 III** (firmware v4.01) · Sony **A7 IV** · Sony **A7 V**

Likely works on A7R V, A1, A1 II, A9 III, A7C II, A7S III (every BIONZ X / XR Sony Alpha body). If you own an older or unusual model and hit a problem, drop us a line; we'll sort it quickly.

Prep the SD card

The whole setup takes three minutes. Do it once; the pack stays put and survives any future body upgrade in the Sony Alpha line.

01 Format the SD card in your camera

Insert the SD card in your camera (slot 1 if you shoot dual-card). Go to **MENU → Setup → Media → Format** and confirm.

This wipes the SD card and creates the folder structure Sony expects.

02 Take one photo

Shoot anything; a wall, a table, whatever. The camera creates the **DCIM/100MSDCF/** folder on the SD card and saves your photo there. That's the standard Sony structure we need.

The filename depends on your camera's File Number setting; it might be **DSC00001.JPG** on a fresh body, or something like **DSC02473.JPG** continuing from your shutter counter. Either way works for what comes next.

03 Insert the SD card into your computer

Pull the SD card out of the camera and plug it into a Mac or PC via a USB reader or built-in slot.

The SD card mounts as a volume on your Desktop (on Mac usually as "Untitled"; on Windows as a drive letter).

Copy the poses and go

04 Copy the poses to the SD card

From the ZIP you received, open `DCIM/100MSDCF/` and select every `DSC0xxxx.JPG` file. Drag and drop them all into the `DCIM/100MSDCF/` folder on the SD card.

Your test photo from step 02 stays in the same folder alongside the poses; most of the time its filename won't clash with any pose. If your computer does prompt to replace a file, click **Replace**; that's a clean overwrite, not a delete, and the SD card's file system stays safe.

Important: the pose files **have to go into the 100MSDCF folder**, not into a custom folder. Sony cameras only show files from standard MSDCF folders in playback.

05 Eject the SD card

Mac: click the  icon next to the SD card in Finder, or press `cmd+E`. **Windows:** use "Safely Remove Hardware".

Don't yank the card before ejecting; Sony is sensitive to incomplete FAT writes and the SD card can refuse to mount the next time.

06 Put the SD card back in the camera

Press **Playback** (▶). The poses should appear immediately, ready to scroll through.

If you don't see the poses right away: run

MENU → Setup → Media → Recover Image Database and confirm **Yes**. Some Sony bodies pick up new files automatically; others want the explicit nudge. The rebuild takes 10-30 seconds; then the poses are there.

On shoot day

The pack lives on the SD card as regular image files. Press **Playback (▶)** on your camera and scroll through the poses with the joystick, exactly the way you review your own photos. Press **DISP** on any pose to reveal the prompt text and framing notes.

Good to know

The poses are date-stamped to January 2024 by design. In Date View they appear in a separate group from your current shoots, so they don't clutter your shoot timeline. In Folder View they sit together in the 100MSDCF folder alongside whatever else is on the SD card.

That's it. No app. No phone. No signal needed.

In Principio Photography

If something doesn't work

Most issues fall into one of three buckets. Fix it yourself in 30 seconds, or write in if that doesn't do it.

"I inserted the SD card and the poses aren't showing in playback."

Most Sony bodies want a small nudge to register newly-added files. Go to

`MENU → Setup → Media → Recover Image Database` ; confirm **Yes**; wait 10-30 s. The poses appear right after the rebuild.

"A pose displays, but in the wrong orientation."

This shouldn't be possible with a valid output from us; please let us know. Send a photo of the camera screen (snap it with your phone) plus your camera model and firmware version (`MENU → Setup → Setup Option → Version`) and we'll sort it.

"I have an A7R V / A1 II / a newer Sony Alpha; does it work?"

Most likely yes; every modern Sony Alpha body shares the JPEG validation logic our pipeline targets. We haven't physically tested every model, so if you run into trouble, the fastest first check is to run **Recover Image Database**. If that doesn't help, write in and we'll work it out together.

"Some poses are missing from playback, but the file is on the SD card."

The camera's image index didn't pick up every file on the last rebuild. Take the SD card out, put it back in, and run `MENU → Setup → Media → Recover Image Database` again. If the same poses keep failing, write in and include the file numbers so we can check.

Email us with a description of the problem and, if you can, a photo of the camera screen.
We'll sort it quickly.

In Principio Photography
inprincipiophotography@gmail.com