QUICK START

Sports Routing on the iPad

Hold the iPad sideways. Open Home Assistant and tap Sports Routing.

Live commit stays off. Take only plans the change. The TVs do not move.

Program names in the pictures are from one evening. They change. The buttons do not.

The screen


Three columns, plus **Take** along the bottom. Left: a sport. Swipe down for **Guide**, **Now**, and **Sets**. Middle: the games or the channel list. Right: where it goes. Lists move when you drag. A scrollbar only flashes while your finger is moving.

One game on every TV


1 Tap the sport, then a league if you need one. **All** shows every game in that sport.
2 Tap the game. It turns blue.
3 Tap **All 35 TVs**.
4 Tap the blue **Take**. Read the summary. Tap **Dismiss**.

One game on a few TVs

Tap the game, then **Pick TVs**, then the TV numbers. Tap a number again to remove it. **Take** turns blue when the plan is ready.

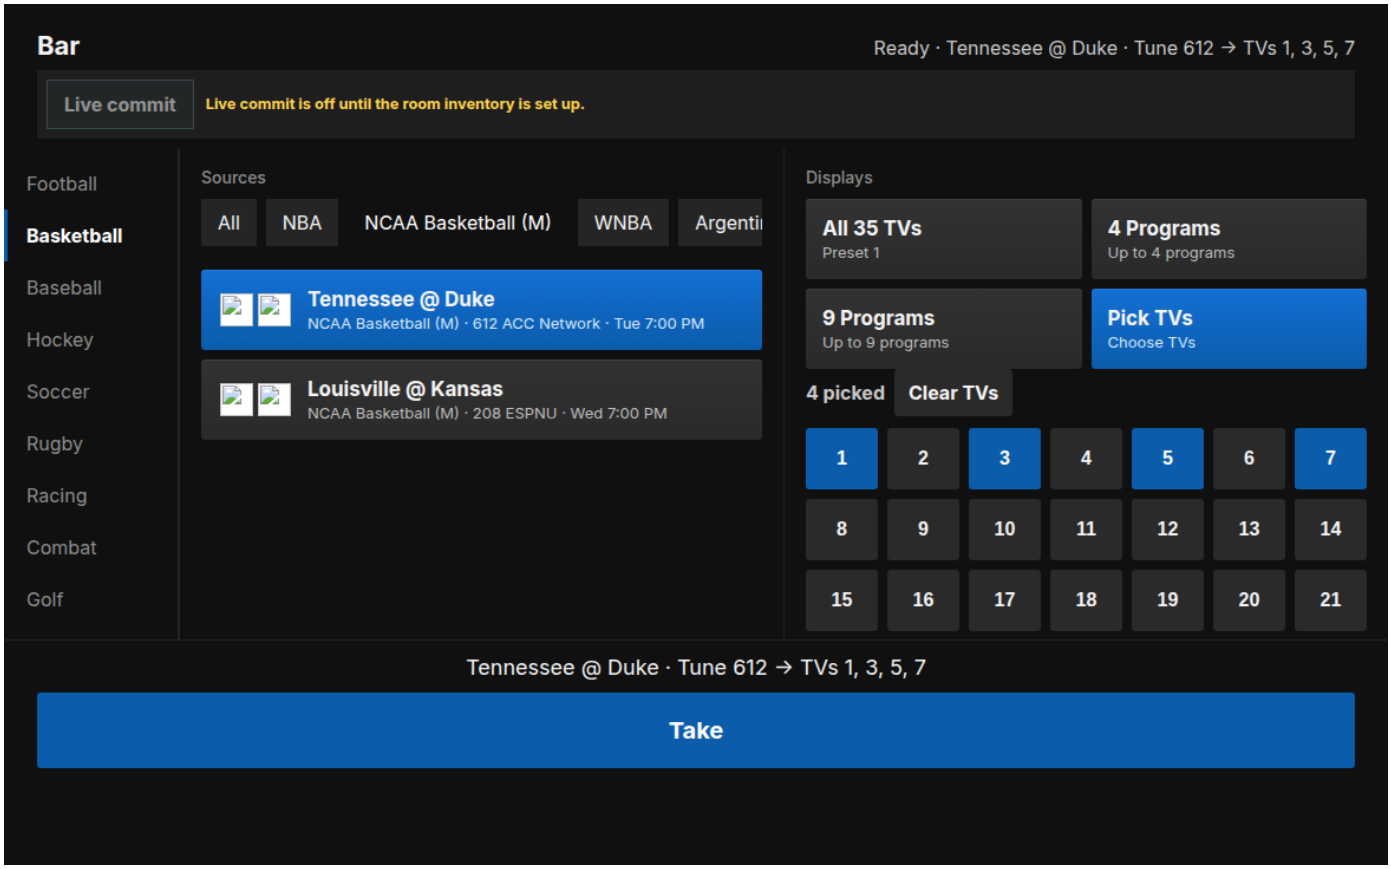


Duke on TVs 1, 3, 5, and 7. Take is blue.

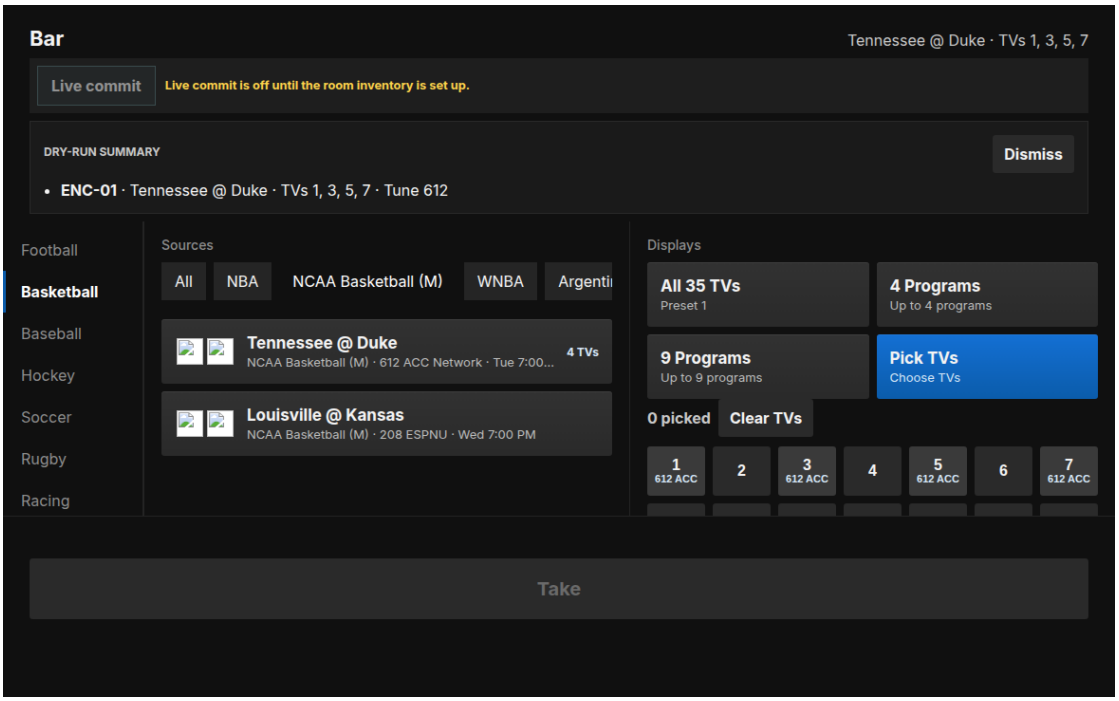

The summary names the DirecTV box, the game, the TVs, and the channel. Nothing is sent to the wall.


A named set of TVs

Use a set for a part of the room you send programs to again and again, such as Patio. Swipe the left column and tap **Sets**. Type a name, tap the TV numbers, and tap **Save**. The button then shows under Displays on Sports and Guide.

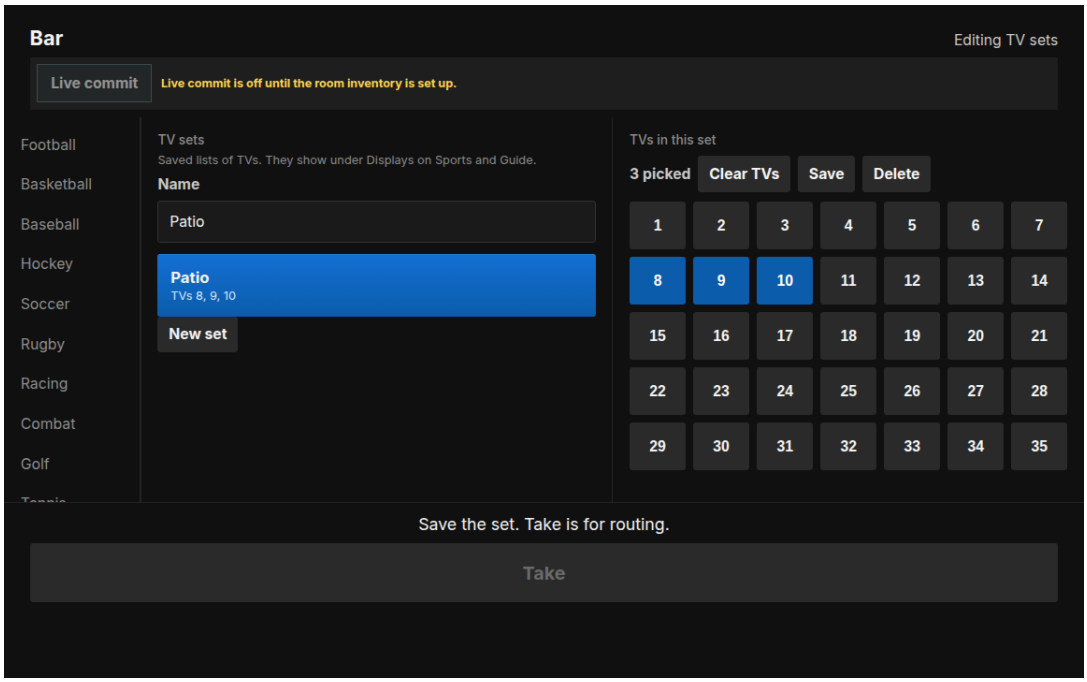

Sets. Patio is TVs 8, 9, and 10.


Tap the game, tap **Patio**, tap **Take**. TVs that are not in Patio stay on whatever they were already showing.

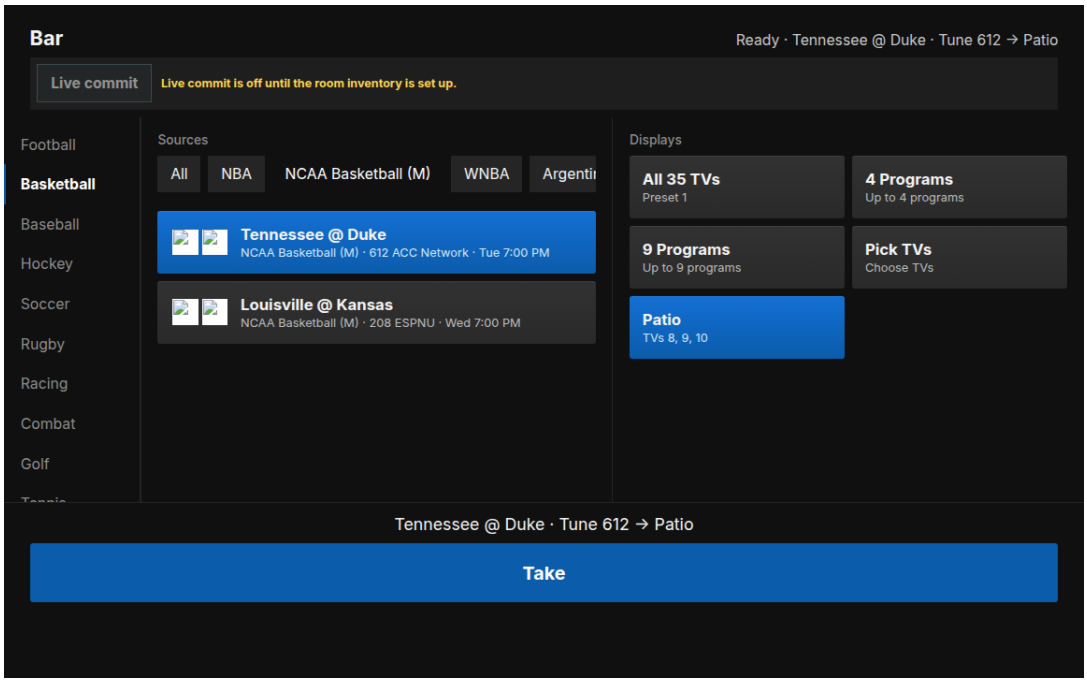


Duke ready for Patio. Take is blue.

Guide

Swipe the left column and tap **Guide**. Search by channel name, by the program that is on, or by the channel number. Tap the row, then **All 35 TVs**, **Pick TVs**, or a set, then **Take**.

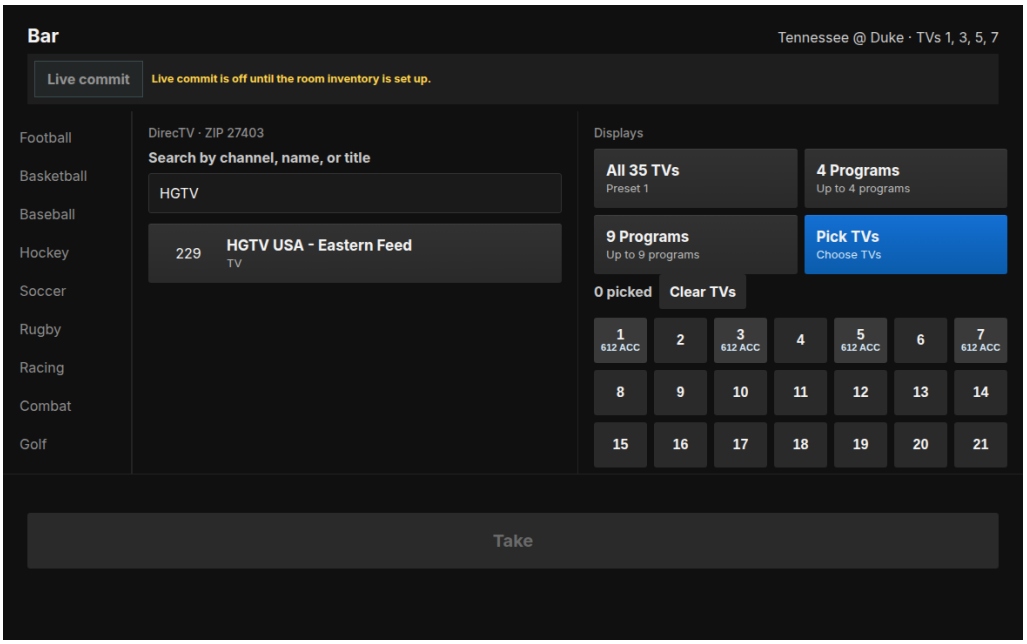


HGTV finds channel 229.

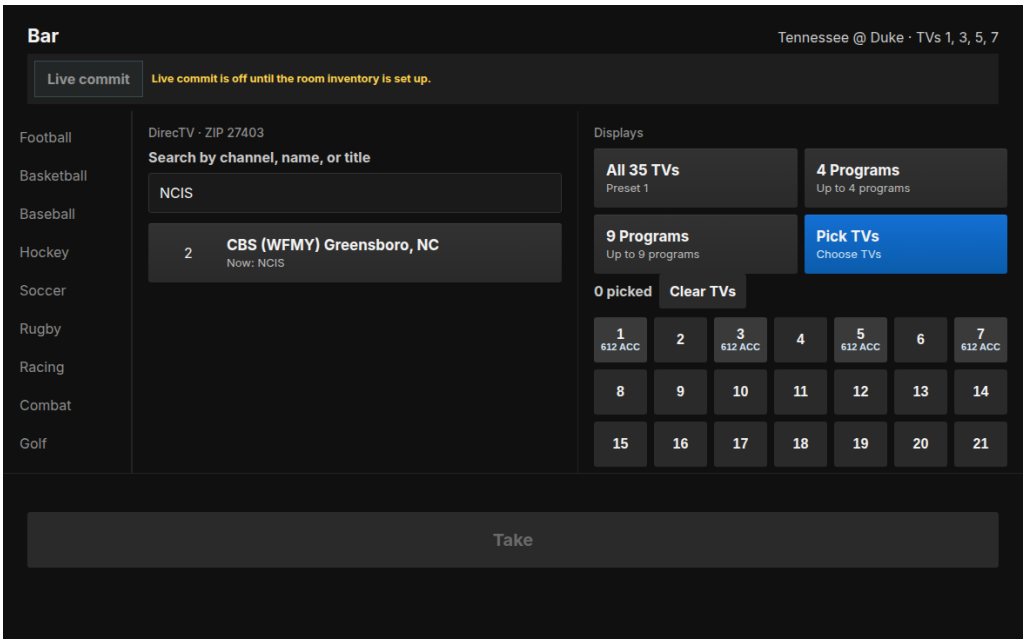

NCIS finds CBS 2, because that is the program on right now.

Several games at once


Tap **4 Programs** before the games, then tap up to four. You do not pick TV numbers. The first game goes on one set of TVs, the next game on the next set. **9 Programs** is the same idea, up to nine.

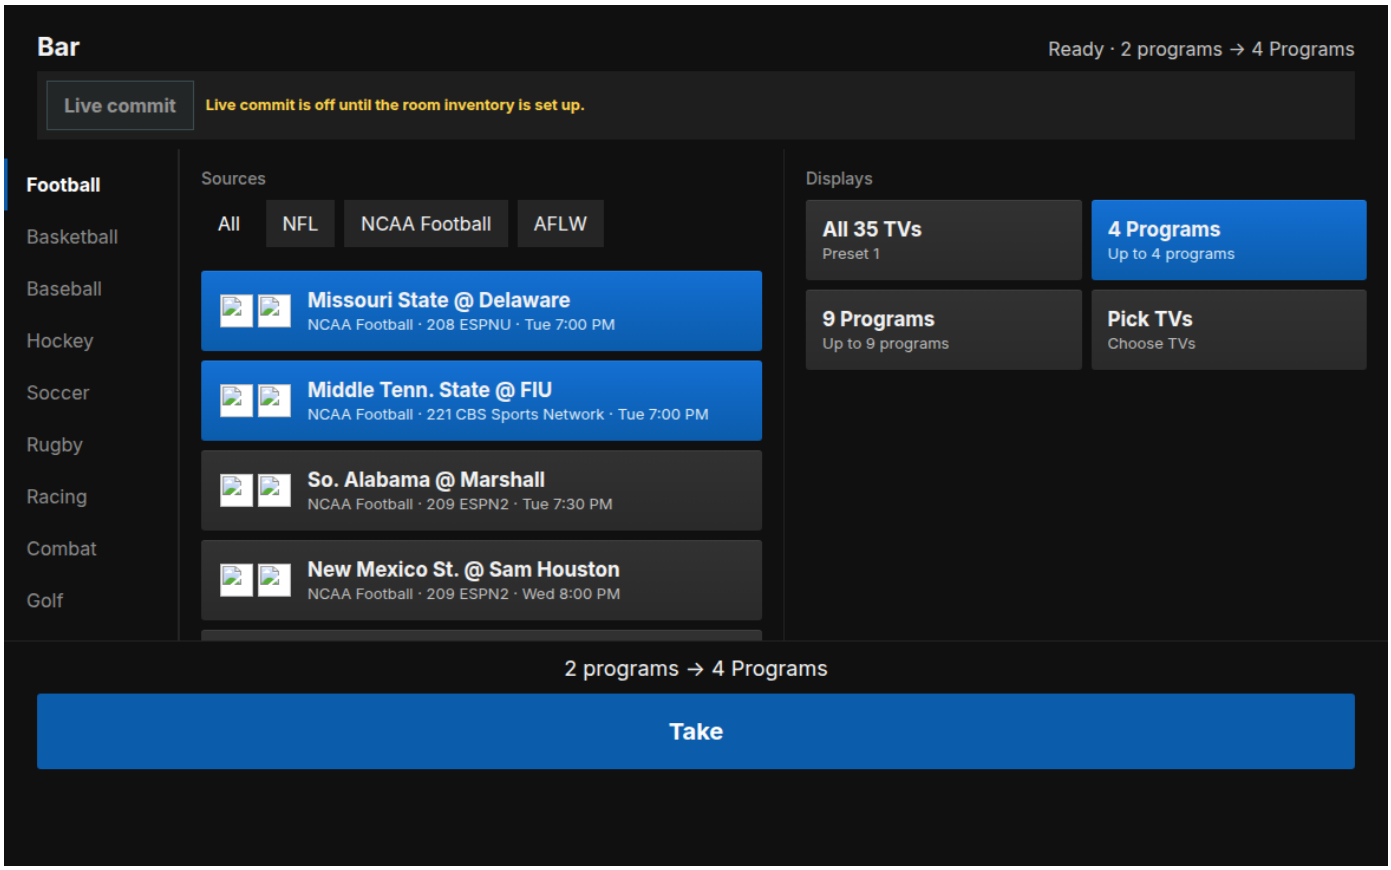

Two college games selected for 4 Programs. Take is blue.

When every DirecTV box is in use

A set or Pick TVs needs a free box. If there is not one, the line above Take says to choose a program to replace. Tap the program in the middle. Take turns into **Replace**. That program goes off. TVs that were on it and are not in your set turn off. The summary says so.

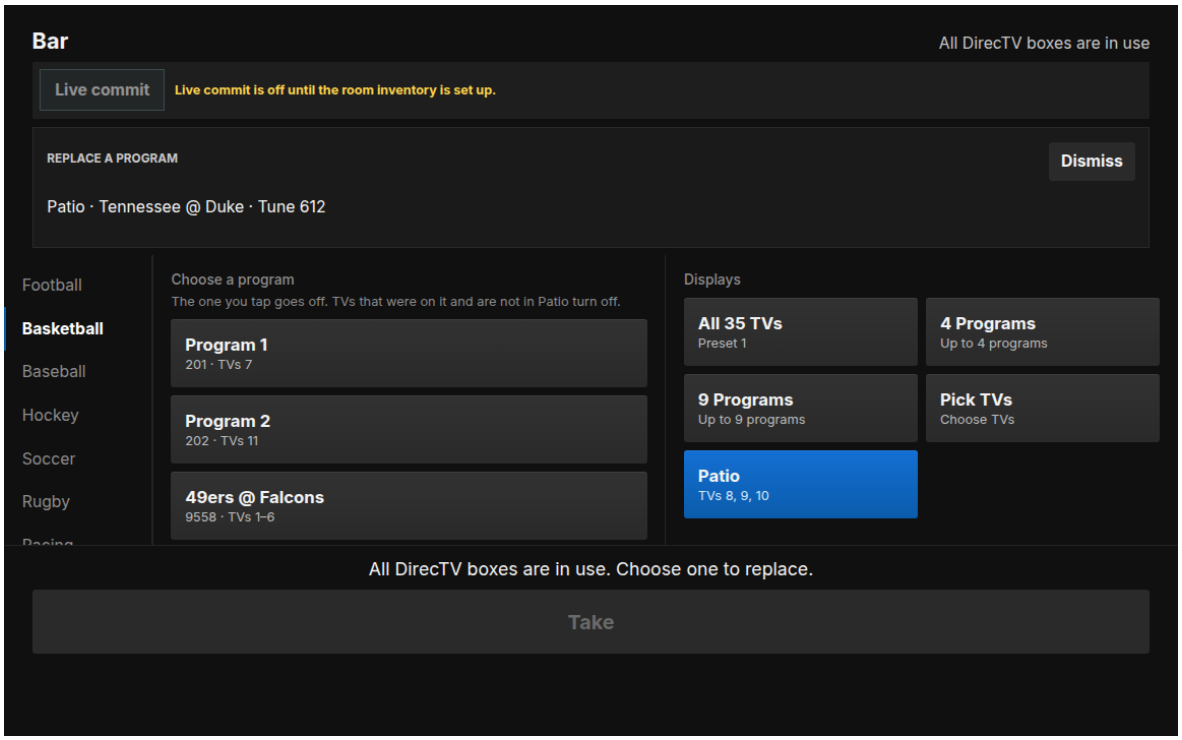

Every box is in use. Patio is still selected. Choose which program to replace.