

Rockchip RK3326 Linux5.10 SDK Release Note

ID: RK-RB-YF-968

Release Version: V1.4.0

Release Date: 2023-12-20

Security Level: ☐Top-Secret ☐Secret ☐Internal ☒Public

DISCLAIMER

THIS DOCUMENT IS PROVIDED "AS IS". ROCKCHIP ELECTRONICS CO., LTD. ("ROCKCHIP") DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

Trademark Statement

"Rockchip", "瑞芯微", "瑞芯" shall be Rockchip's registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

All rights reserved. ©2023. Rockchip Electronics Co., Ltd.

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

Rockchip Electronics Co., Ltd.

No.18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: www.rock-chips.com

Customer service Tel: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-Mail: fae@rock-chips.com

Preface

Overview

The document presents Rockchip RK3326 Linux5.10 SDK release notes, aiming to help engineers get started with RK3326 Linux5.10 SDK development and debugging faster.

Intended Audience

This document (this guide) is mainly intended for:

Technical support engineers

Software development engineers

Chipset and System Support

Chipset	Buildroot
RK3326/RK3326-S	Y

Revision History

Date	Version	Author	Revision History
2022-09-20	V1.0.0	LinJianHua	Initial version
2023-04-20	V1.1.0	WJL	Update to V1.1.0
2023-09-20	V1.3.0	WJL	Update to V1.3.0
2023-12-20	V1.4.0	WJL	Update to V1.4.0

Contents

Rockchip RK3326 Linux5.10 SDK Release Note

1. Overview
2. Main Functions
 - 2.1 Software Features
 - 2.2 Hardware functions
3. How to Get the SDK
 - 3.1 Get General RK3326 Linux5.10 SDK
 - 3.1.1 Get Source Code from Rockchip Code Server
 - 3.1.2 Get Source Code from Local Compression Package
4. Software Development Guide
5. Hardware Development Guide
6. SSH Public Key Operation Introduction
 - 6.1 Key Authority Management
 - 6.2 Reference Documents

1. Overview

This SDK is based on Buildroot 2021.11, with kernel 5.10 and U-boot v2017.09. It is suitable for RK3326/RK3326-S EVB development boards and all other Linux products developed based on it.

It is used in thin clients, cloud terminals, and open-source platforms, providing flexible data path combination interfaces to meet the customized requirements for free combination, please refer to the documents under the project's docs/ directory.


2. Main Functions

2.1 Software Features

Function	Module Name
System	Buildroot
Partition table	uboot, misc, boot, recovery, rootfs, oem, userdata
File System Type	EXT2/4, SquashFS
Upgrade Recovery	OTA, Recovery
Secure Boot	SecureBoot
Stress Test Tool	ROCKCHIP_TEST
Data communication	Wi-Fi, Ethernet card, USB, SD card
Applications	Multimedia playback, camera preview, settings, browser, file management

2.2 Hardware functions

For specific hardware interface functions, please refer to the RK3326 chip diagram below

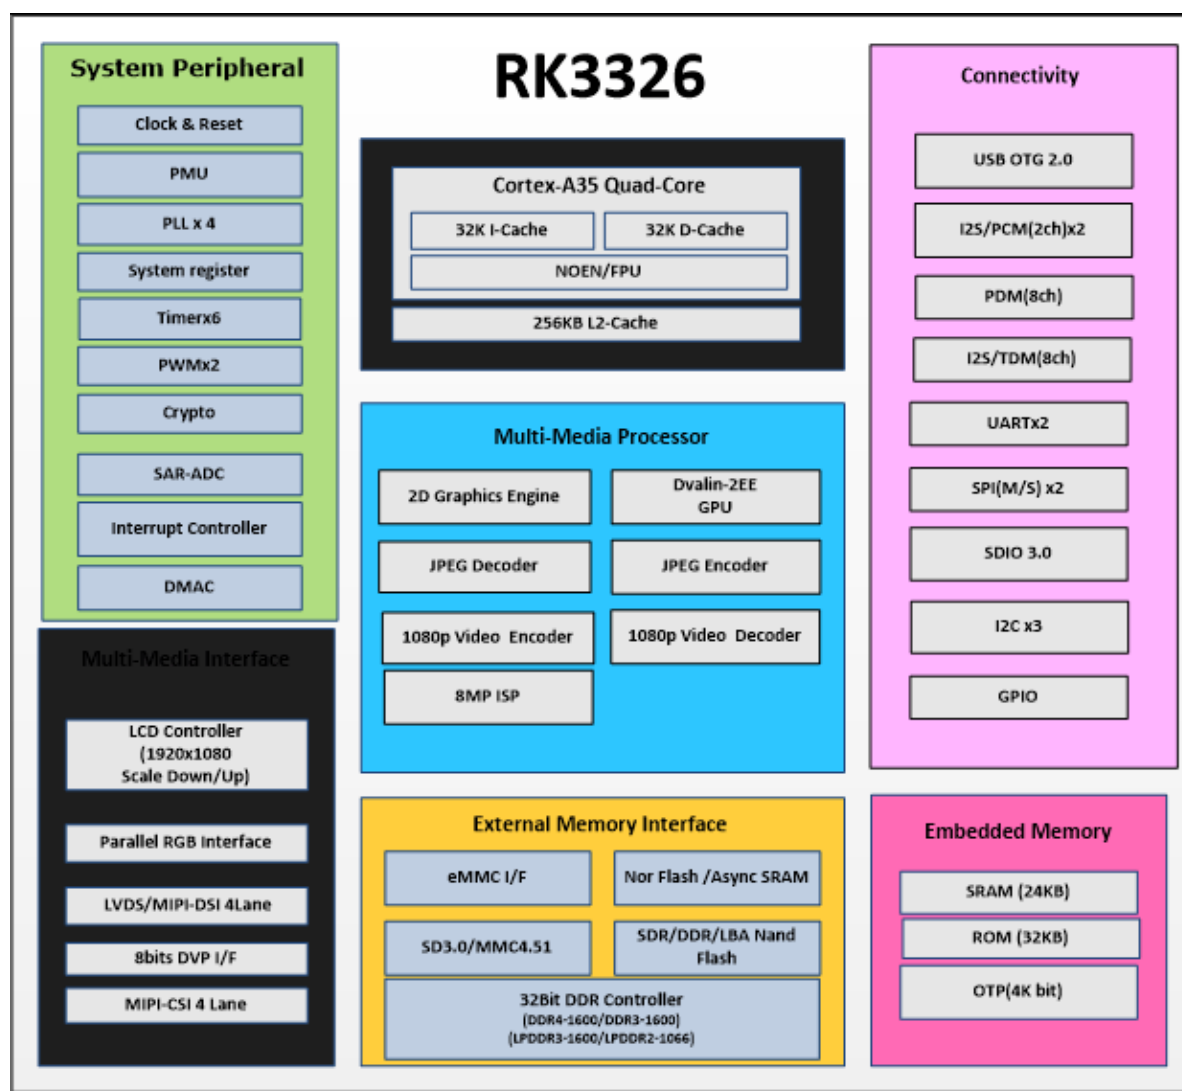

3. How to Get the SDK

The SDK is released by Rockchip server. Please refer to Chapter 4 [Software Development Guide](#) to build a development environment.

3.1 Get General RK3326 Linux5.10 SDK

3.1.1 Get Source Code from Rockchip Code Server

To get RK3326 Linux5.10 SDK software package, customers need an account to access the source code repository provided by Rockchip. In order to be able to obtain code synchronization, please provide SSH public key for server authentication and authorization when apply for SDK from Rockchip technical window. About Rockchip server SSH public key authorization, please refer to Chapter 6 [SSH Public Key Operation Introduction](#).

RK3326 Linux5.10 SDK download command is as follows:

```
repo init --repo-url ssh://git@www.rockchip.com.cn/repo/rk/tools/repo -u \
ssh://git@www.rockchip.com.cn/linux/rockchip/platform/manifests -b linux -m \
rk3326_linux5.10_release.xml
```

Repo, a tool built on Python script by Google to help manage git repositories, is mainly used to download and manage software repository of projects. The download address is as follows:

```
git clone ssh://git@www.rockchip.com.cn/repo/rk/tools/repo
```

3.1.2 Get Source Code from Local Compression Package

For quick access to SDK source code, Rockchip Technical Window usually provides corresponding version of SDK initial compression package. In this way, developers can get SDK source code through decompressing the initial compression package, which is the same as the one downloaded by repo.

Take RK3326_LINUX5.10_SDK_RELEASE_V1.4.0_20231220.tgz as an example. After getting a initialization package, you can get source code by running the following command:

```
mkdir rk3326
tar xvf RK3326_LINUX5.10_SDK_RELEASE_V1.4.0_20231220.tgz -C rk3326
cd rk3326
.repo/repo/repo sync -l
.repo/repo/repo sync -c
```

Developers can update via `.repo/repo/repo sync -c` command according to update introductions that are regularly released by FAE window.

If you encounter issues downloading the repository, you can use the `--force-sync` parameter to force an update, as in `.repo/repo/repo sync -c --force-sync`. Before doing so, please ensure that any local modifications have been backed up.

After updating the SDK code, a clean operation is required. For example: `./build.sh cleanall`.

Note:

The software release version can be viewed through engineering XML, as follows:

```
.repo/manifests$ realpath rk3326_linux5.10_release.xml
# e.g.:printf version v1.4.0, update time on 20231220
<SDK>/.repo/manifests/rk3326_linux5.10_release_v1.4.0_20231220.xml
```

4. Software Development Guide

For software development, please refer to the quick start documents in the project directory:

```
<SDK>/docs/en/RK3326/Quick-start/Rockchip_RK3326_Quick_Start_Linux_EN.pdf
```

5. Hardware Development Guide

For hardware development, please refer to the user guide document in the project directory:

```
<SDK>/docs/en/RK3326/Hardware/Rockchip_RK3326_Hardware_Design_Guide_V1.2_EN.pdf
```

6. SSH Public Key Operation Introduction

Please follow the introduction in the *Rockchip_User_Guide_SDK_Application_And_Synchronization_EN* to generate an SSH public key and send the email to fae@rock-chips.com, to get the SDK code. This document will be released to customers during the process of applying for permission.

6.1 Key Authority Management

Server can monitor download times and IP information of a key in real time. If an abnormality is found, download permission of the corresponding key will be disabled.

Keep the private key file properly. Do not grant second authorization to third parties.

6.2 Reference Documents

For more details, please refer to document:

```
<SDK>/docs/en/Others/Rockchip_User_Guide_SDK_Application_And_Synchronization_EN.pdf
```