

Rockchip eDP Interface Developer Guide

ID: RK-YH-YF-804

Release Version: V2.3.0

Release Date: 2025-11-20

Security Level: ☐Top-Secret ☐Secret ☐Internal ☒Public

DISCLAIMER

THIS DOCUMENT IS PROVIDED "AS IS". ROCKCHIP ELECTRONICS CO., LTD. ("ROCKCHIP") DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

Trademark Statement

"Rockchip", "瑞芯微", "瑞芯" shall be Rockchip's registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

All rights reserved. ©2025. Rockchip Electronics Co., Ltd.

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

Rockchip Electronics Co., Ltd.

No.18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: www.rock-chips.com

Customer service Tel: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-Mail: fae@rock-chips.com

Preface

Overview

This document describes the usage instructions and common problem solutions for the eDP interface on the Rockchip platform. This document will be updated or modified from time to time.

Product Version

Chipset	Kernel Version
RK3288	Linux kernel 4.4 and above kernels
RK3399	Linux kernel 4.4 and above kernels
RK356x	Linux kernel 4.19 and above kernels
RK3588	Linux kernel 5.10 and above kernels
RK3576	Linux kernel 6.1 and above kernels

Intended Audience

This document (this guide) is mainly intended for:

Technical support engineers

Software development engineers

Revision History

Version	Author	Date*	Change Description
V1.0.0	Wu Xiaoping	2024-04-16	Initial version
V1.1.0	Wu Xiaoping	2025-04-10	Added FAQ
V2.0.0	Ding Lingsong	2025-05-10	Content supplementation and format optimization
V2.1.0	Ding Lingsong/Zhang JiaJin	2025-05-25	"Common Problems and Analysis Methods" section merged into FAQ
V2.2.0	Zhang JiaJin	2025-07-28	"Panel DTS Configuration" section content supplementation and optimization
V2.3.0	Ding Lingsong	2025-11-20	"PSR Mode" section content upgrade

Contents

Rockchip eDP Interface Developer Guide

1. Overview
2. eDP Basic Introduction
 - 2.1 DRM Display Framework
 - 2.2 eDP Interface System Framework
 - 2.3 eDP Link Training
3. Introduction to Rockchip Platform eDP
 - 3.1 Feature Highlights
 - 3.2 eDP Connection with VOP
 - 3.3 Driver Files
4. Software Configuration
 - 4.1 Module Enable
 - 4.1.1 Controller DTS Configuration
 - 4.1.1.1 HPD Configuration
 - 4.1.1.2 Panel Scenario
 - 4.1.1.3 Monitor Scenario
 - 4.1.2 PHY DTS Configuration
 - 4.1.3 Panel DTS Configuration
 - 4.1.3.1 Configuring with EDID DTS
 - 4.1.3.2 Fixed Timing DTS Configuration
 - 4.1.3.2.1 Writing Timing Back Through EDID
 - 4.1.3.2.2 Based on Datasheet Calculation
 - 4.2 Feature Configuration
 - 4.2.1 Panel Self-Test Mode
 - 4.2.2 Controller Self-Test Mode
 - 4.2.3 PSR Mode
 - 4.2.4 Connector-split Mode
 - 4.2.5 Dual-channel Mode
5. Common Debugging Techniques
 - 5.1 Check DRM Connector Status
 - 5.2 Viewing Controller/PHY Registers
 - 5.3 Checking VOP Status
 - 5.4 Viewing Clock Configuration
 - 5.5 Forced Switch eDP
 - 5.6 Reading and Writing DPCD
 - 5.7 Adjusting DRM Log Categories
6. Frequently Asked Questions
 - 6.1 Bandwidth Calculation Method
 - 6.2 DCLK Accuracy Issues
 - 6.3 AUX Error Analysis and Resolution
 - 6.3.1 Check PHY Configuration
 - 6.3.2 Check Panel Configuration
 - 6.3.3 Confirm HPD Status and Power-On Sequence
 - 6.3.4 Check AUX Hardware Design
 - 6.4 Error Analysis and Solutions for Link Training
 - 6.4.1 Confirm Panel Protocol Support
 - 6.4.2 Checking Main Link Hardware Design
 - 6.4.3 Checking the Screen Cable and Interface on Hardware for Compliance
 - 6.4.4 Confirming HPD Status and Power-Up Sequence
 - 6.4.5 Modify Pre-emphasis and Voltage Swing Configuration

- 6.4.5.1 Modify Initial Configuration
 - 6.4.5.2 Add Settings for Printing
- 6.4.6 Attempting to Reduce Speed
- 6.4.7 Increase the Retry Count during the CR/EQ Phase
- 6.4.8 Adding Reset Panel Operations
- 6.4.9 Attempting Forced Output
- 6.5 Display Anomalies (Training Successful) Analysis and Solutions
 - 6.5.1 Enable Self-Test Mode
 - 6.5.2 Confirm if the VOP Status Meets Expectations
 - 6.5.3 Verify if the Clock Configuration Meets Expectations
- 6.6 How to Optimize Signal Quality
 - 6.6.1 Optimizing PE/VS Level Configuration
 - 6.6.2 Enabling SSC Feature


1. Overview

This document primarily introduces the basic features, workflow, and analysis guide for common issues related to the eDP display interface of Rockchip platform processors. The purpose is to enable engineers to have a better understanding of the eDP interface display driver framework and hardware interface of the Rockchip platform, and to quickly locate, optimize, and resolve issues through the analysis of common problems.

2. eDP Basic Introduction


2.1 DRM Display Framework

The interaction process between applications and the DRM driver through libdrm is as follows:

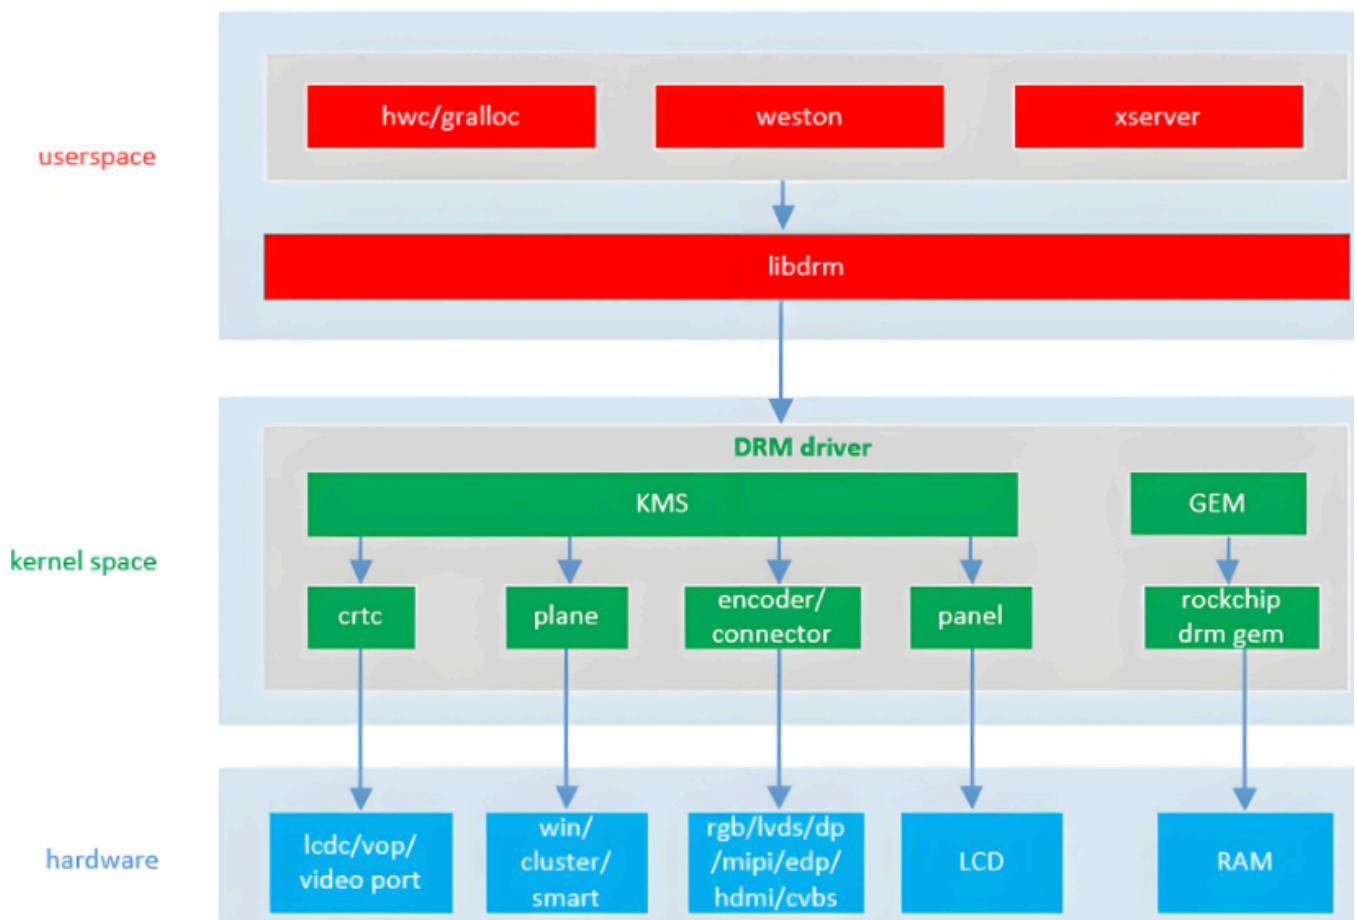

2.2 eDP Interface System Framework

The following figure is a typical application block diagram of eDP:

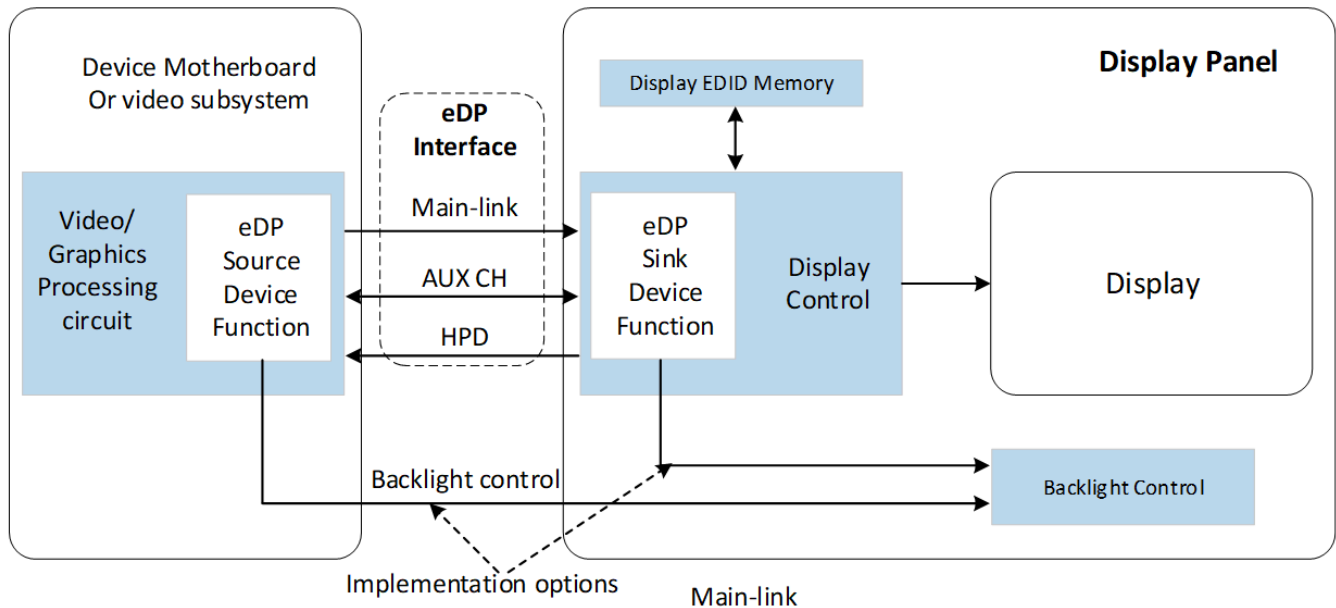


The eDP protocol is an expansion of the DP (Display Port) protocol in the direction of embedded applications and has been widely used in product fields such as laptops, tablet computers, and mobile phones.

The eDP hardware interface mainly consists of Main-Link, AUX CH, and HPD, which together achieve the interactive functions between eDP Source and Sink devices.

- Main-Link: Composed of 1/2/4 pairs of differential signals, used for transmitting video and audio data streams
 - eDP v1.3 supports RBR 1.62G/HBR 2.7G/HBR2 5.4G bps/lane, while eDP v1.4 adds R216 2.16G/R243 2.43G/R324 3.24G/R432 4.32G bps/lane four recommended rates.
- AUX CH: A pair of half-duplex differential data transmission paths, used for the exchange of configuration information between Source and Sink devices, such as DPCD reading and writing and EDID parsing, with a transmission rate of 1 Mbps.
- HPD: At the Source end, it is usually a single pin with hot-plug detection functionality, used to detect the connection status of the Sink device and respond to its HDP IRQ requests.
 - When the Sink device changes from the disconnected state to the connected state, the HPD pin should change from low to high level.
 - HPD can reflect the working status of the Sink device. When HPD is high, it usually indicates that the Sink is in a ready state for normal display. It is recommended to connect the HPD pins at both ends of the Source and Sink during the hardware design phase.

2.3 eDP Link Training

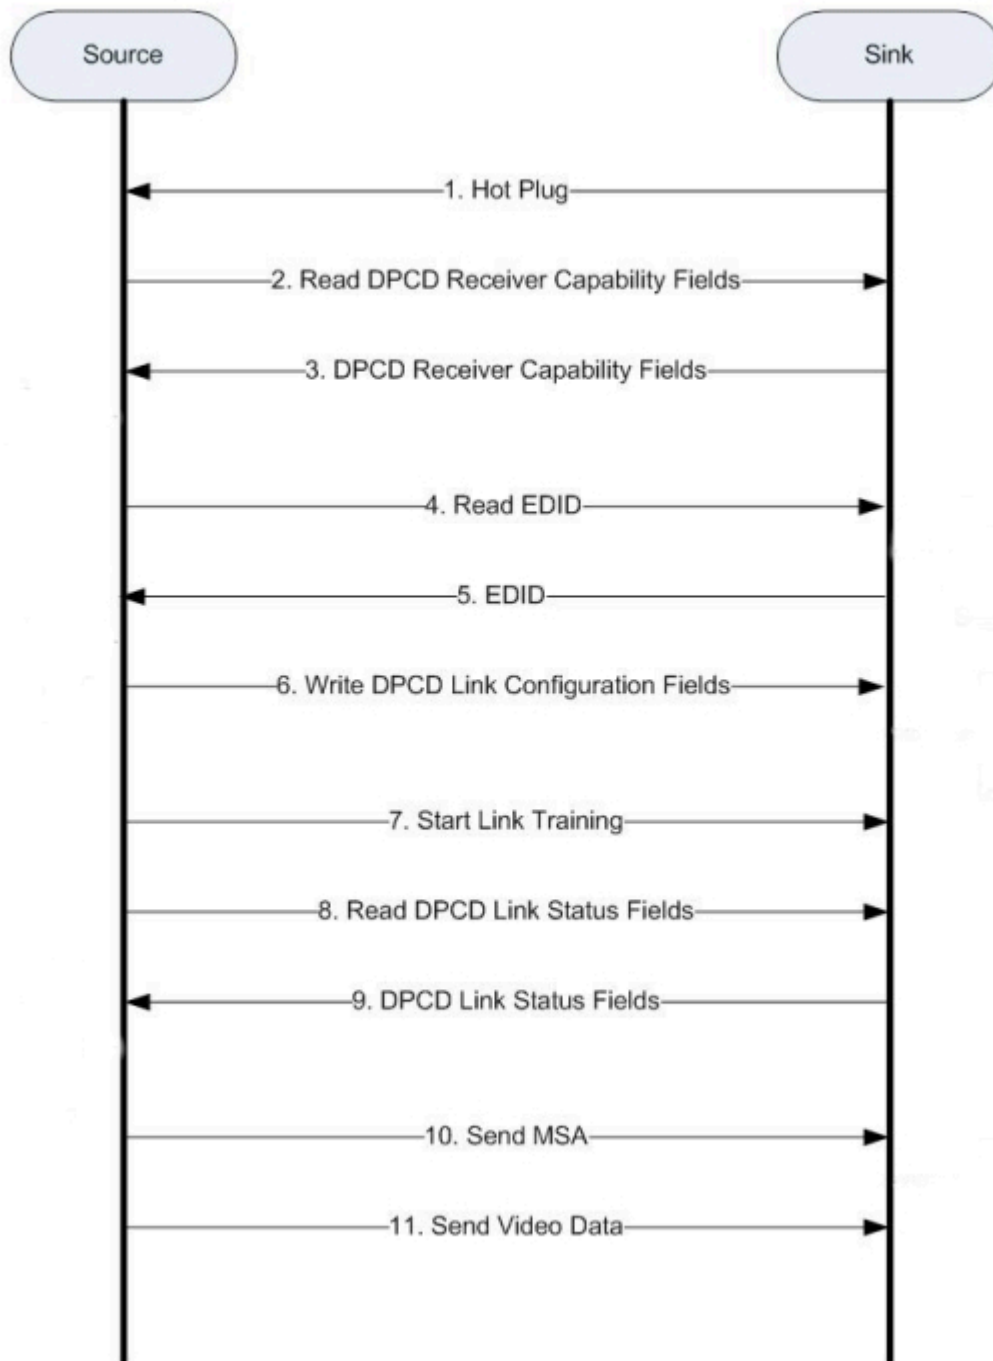

As shown in the figure above, the process of Link Training is as follows:

- 1: After the Sink is powered on, it sends an HPD Plug pulse signal to the Source;
- 2-3: The Source reads the Sink DPCD to determine the supported Features of the Sink;
- 4-5: The Source reads the Sink EDID to determine the display timing information supported by the Sink;
- 6: The Source writes the Link configuration into the DPCD, such as the typical MAX_LINK_RATE and MAX_LANE_COUNT;
- 7: The Source initiates Link Training, and the Sink performs Clock Recovery and Equalization;

8-9: The Source reads the DPCD to obtain the Link Status to determine the result of the Link Training. If it fails, it retreats to step 7;

10: After the Link Training is successful, the Source sends MSA data, and the Sink parses the video stream configuration and recovers the Stream Clock;

11: The Source transmits the video data stream.

3. Introduction to Rockchip Platform eDP

3.1 Feature Highlights

Feature	RK3288	RK3399	RK3568	RK3588	RK3576
eDP Version	v1.3	v1.3	v1.3	v1.3	v1.3
DP Mode	Not supported	Not supported	Not supported	v1.2	v1.2
Max Resolution	2560x1600@60Hz	2560x1600@60Hz	2560x1600@60Hz	3840x2160@60Hz	3840x2160@60Hz
Main-Link Lanes	1/2/4 lanes	1/2/4 lanes	1/2/4 lanes	1/2/4 lanes	1/2/4 lanes
Main-Link Rate	2.7/1.62 Gbps/lane	2.7/1.62 Gbps/lane	2.7/1.62 Gbps/lane	5.4/4.32/3.24/2.7/2.43/2.16/1.62 Gbps/lane	5.4/4.32/3.24/2.7/2.43/2.16/1.62 Gbps/lane
AUX_CH	1 M	1 M	1 M	1 M	1 M
Color Format	RGB	RGB	RGB	RGB/YUV444/YUV422	RGB/YUV444/YUV422
Color Depth	8 bpc	8 bpc	8 bpc	8/10 bpc (6bpc just for RGB)	8/10 bit (6bpc just for RGB)
ASSR	Supported	Supported	Supported	Supported	Supported
I2S	Not supported	Not supported	Not supported	Supported	Supported
SPDIF	Not supported	Not supported	Not supported	Supported	Supported
PSR	Not supported	Not supported	Not supported	Supported	Supported
Display Split Mode	Not supported	Not supported	Not supported	Supported	Supported

3.2 eDP Connection with VOP

For detailed information, refer to the document "Rockchip_Developer_Guide_DRM_Display_Driver_CN" in the section "VOP2 Platform Display Pathway".

3.3 Driver Files

U-Boot Drivers:

```

/* Controller */
drivers/video/drm/analogix_dp.c
drivers/video/drm/analogix_dp.h
drivers/video/drm/analogix_dp_reg.c

/* PHY */
/* RK3568 */
drivers/phy/phy-rockchip-naneng-edp.c
/* RK3588/RK3576 */
drivers/phy/phy-rockchip-samsung-hdptx.c

/* Panel */
drivers/video/drm/rockchip_panel.c

```

Kernel Drivers:

```

/* Controller */
drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
drivers/gpu/drm/bridge/analogix/analogix_dp_core.h
drivers/gpu/drm/bridge/analogix/analogix_dp_reg.c
drivers/gpu/drm/bridge/analogix/analogix_dp_reg.h
drivers/gpu/drm/rockchip/analogix_dp-rockchip.c
include/drm/bridge/analogix_dp.h

/* PHY */
/* RK3568 */
drivers/phy/rockchip/phy-rockchip-naneng-edp.c
/* RK3588/RK3576 */
drivers/phy/rockchip/phy-rockchip-samsung-hdptx.c

/* Panel */
drivers/gpu/drm/panel/panel-simple.c

```

- For RK3288/RK3399 eDP PHY, there is no separate driver; the Analogix DP Controller driver includes PHY-related configuration operations.

4. Software Configuration

4.1 Module Enable

4.1.1 Controller DTS Configuration

The DTS configuration for the eDP controller depends on the type of connected display device, distinguishing between Panel (screen) and Monitor (display) scenarios. The following text will use the eDP0 output on the RK3588 platform as an example for illustration.

4.1.1.1 HPD Configuration

Although the eDP protocol specifies HPD functionality as Optional, the level of HPD is an important basis for determining the working status of the Sink device, and it is recommended to consider the configuration of HPD functionality during the hardware design phase.

- If there is an anomaly at the screen end, HPD can notify the master control to avoid problems.
- Configuring HPD can effectively reduce display anomalies caused by unreasonable timing configuration, such as AUX errors and Link Training failures.

If the hardware design does not support HDP functionality, Force HPD configuration must be enabled; for designs that require HDP, the Rockchip platform can support both Function Pin HPD and GPIO HPD methods:

- Force HPD

```
&edp0 {
    force-hpd;
};
```

- Function Pin HPD:

```
&edp0 {
    pinctrl-names = "default";
    pinctrl-0 = <&hdmim0_tx0_hpd>;
};
```

The HPD Function Pin pinctrl configurations for various platforms are as follows, and should be confirmed according to the specific hardware design schematic.

	Pinctrl Configuration
RK3288	edp_hpd (GPIO7_B3)
RK3399	edp_hpd (GPIO4_C7)
RK3568	edpdpm0_pins (GPIO4_C4) edpdpm1_pins (GPIO0_C2)
RK3588	hdmim0_tx0_hpd (GPIO1_A5) hdmim0_tx1_hpd (GPIO1_A6) hdmim1_tx0_hpd (GPIO3_D4) hdmim1_tx1_hpd (GPIO3_B7)
RK3576	edp_txm0_pins (GPIO4_C1) edp_txm1_pins (GPIO0_B6)

- GPIO HPD:

Any GPIO can be chosen to implement the HPD function.

```

&edp0 {
    pinctrl-names = "default";
    pinctrl-0 = <&edp0_hpd>;
    hpd-gpios = <&gpio1 RK_PA5 GPIO_ACTIVE_HIGH>;
};

&pinctrl {
    edp {
        edp0_hpd: edp0-hpd {
            rockchip,pins = <1 RK_PA5 0 &pcfg_pull_none>;
        };
    };
};

```

If there is an anomaly where the driver misidentifies the state as Connected when the Source and Sink devices are not connected by a cable, the corresponding GPIO can be configured as a pull-down to improve stability.

```

&pinctrl {
    edp {
        edp0_hpd: edp0-hpd {
            rockchip,pins = <1 RK_PA5 0 &pcfg_pull_down>;
        };
    };
};

```

4.1.1.2 Panel Scenario

```

&edp0 {
    status = "okay";
    pinctrl-names = "default";
    pinctrl-0 = <&hdmi0_tx0_hpd>;

    ports {
        port@1 {
            reg = <1>;

            edp_out_panel: endpoint {
                remote-endpoint = <&panel_in_edp>;
            };
        };
    };
};

```

4.1.1.3 Monitor Scenario

The eDP interface of the RK3588/RK3576 platform can support DP mode. When used as DP, it is necessary to configure HPD (see [《HPD DTS Configuration》](#)).

Refer to DTS arch/arm64/boot/dts/rockchip/rk3588-evb1-lp4-v10-hdmi2dp.dts (naming reason: Since HDMI and eDP PHY are combo, this board directly converts the HDMI socket into a DP socket to use eDP as DP):

```
&edp1 {
    pinctrl-names = "default";
    pinctrl-0 = <&hdmi0_tx1_hpd>;
    status = "okay";
};
```

4.1.2 PHY DTS Configuration

For RK3568/RK3588/RK3576, PHY DTS configuration is required, whereas RK3288/RK3399 does not need it.

```
/* RK3568 */
&edp_phy {
    status = "okay";
};

/* RK3588/RK3576 */
&hdptxphy0 {
    status = "okay";
};

&hdptxphy_hdmi0 {
    status = "disabled";
};
```

- On RK3588 and RK3576, the eDP and HDMI interfaces are Combo on the PHY. When using eDP, ensure that the corresponding HDMI PHY nodes `hdptxphy_hdmi0/hdptxphy_hdmi1` are disabled.
- On RK3588 and RK3576, the eDP PHY can support the configuration of Link Training Table to replace default values, used for optimizing signal quality and adjusting eye diagram indicators, etc.

```
&hdptxphy0 {
    /* Single Vdiff Training Table (optional) */
    training-table = /bits/ 8 <
        /* voltage swing 0, pre-emphasis 0->3 */
        0x0d 0x0a 0x04 0x06 0x00 0x04
        0x0d 0x0a 0x04 0x06 0x00 0x04
        0x0d 0x0a 0x04 0x06 0x00 0x04
        0x0d 0x0a 0x04 0x06 0x00 0x04
        /* voltage swing 1, pre-emphasis 0->2 */
        0x0d 0x0a 0x04 0x06 0x00 0x04
        0x0d 0x0a 0x04 0x06 0x00 0x04
        0x0d 0x0a 0x04 0x06 0x00 0x04
    >;
};
```

```

        /* voltage swing 2, pre-emphasis 0->1 */
        0x0d 0x0a 0x04 0x06 0x00 0x04
        0x0d 0x0a 0x04 0x06 0x00 0x04
        /* voltage swing 3, pre-emphasis 0 */
        0x0d 0x0a 0x04 0x06 0x00 0x04

    >;
    status = "okay";
};

```

- RK3588 and RK3576 eDP support Lane differential signal P/N Swap functionality, which can be used in hardware design scenarios where the Lane P/N signals between Source and Sink are reversed. The reference configuration is as follows:

```

&hdptxphy0 {
    /* swap lane1 P/N */
    lane-polarity-invert = <0 1 0 0>;
    status = "okay";
};

```

4.1.3 Panel DTS Configuration

In the Panel scenario, the display timing for eDP is transmitted through the Panel driver. The driver used for eDP Panel on the Rockchip platform is `drivers/gpu/drm/panel/panel-simple.c`.

- For Kernel-5.10 and above, refer to the documentation at `Documentation/devicetree/bindings/display/panel/panel-simple.yaml`.
- For Kernel-4.19 and below, refer to the documentation at `Documentation/devicetree/bindings/display/panel/simple-panel.txt`.

eDP requires the output of Panel Timing to display normally. For Timing-related information, refer to the "Scan Timing Description" section in the document "Rockchip_Developer_Guide_DRM_Display_Driver_CN.pdf".

Methods to obtain Panel Timing include:

- Obtaining through reading EDID (recommended method)
- Obtaining from the Signal Timing Specifications table in the Panel Datasheet
- Contacting the screen manufacturer to obtain Panel Timing

Note: For some screens, the EDID may be damaged and unreadable. In such cases, it is suggested to obtain Timing from other methods.

There are two ways to configure DTS:

- Not configuring the Timing node, obtaining Timing through EDID and outputting (recommended configuration)
- Configuring the Timing node, outputting through the fixed Timing configured

HPD and Delay Requirements:

- If using the method without configuring the Timing node, it is necessary to connect HPD in the hardware design to prevent issues caused by timing abnormalities

- For the method of configuring the Timing node, it is also recommended to connect HPD
 - If HPD is not connected, it is necessary to configure `prepare-delay-ms` (controls the interval from VCC power-on to the first AUX access) to meet the Panel power-on timing requirements.

4.1.3.1 Configuring with EDID DTS

Taking the RK3588S EVB1 as an example, the corresponding DTS for Kernel-6.1 is located at `arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi`.

```
panel-edp {
    compatible = "simple-panel";
    backlight = <&backlight>;
    power-supply = <&vcc3v3_lcd_edp>;
    prepare-delay-ms = <120>;
    enable-delay-ms = <120>;
    unprepare-delay-ms = <120>;
    disable-delay-ms = <120>;
    width-mm = <120>;
    height-mm = <160>;

    port {
        panel_in_edp: endpoint {
            remote-endpoint = <&edp_out_panel>;
        };
    };
};
```

- The configuration of `pwms` for the backlight node needs to be modified according to the actual hardware connections, ensuring that the backlight is properly illuminated before displaying images.
 - For details, refer to the PWM module reference document **Rockchip_Developer_Guide_Linux_PWM_CN**.
- The `power-supply` configuration is for the panel's power supply.
 - For scenarios where the Sink is abnormal, forcibly powering the Panel or Bridge on and off to reset the device is a common method. Ensure that the panel's power supply can be controlled by the main controller for powering on and off.
- `enable-gpios/reset-gpios` is used for the configuration of the Panel's enable/reset pins, which need to be modified according to the actual hardware circuit design.
 - (Optional) The enable pin is typically used for enabling the screen-side power supply, and the gpio configuration depends on the specific design of the power supply circuit.
 - (Optional) The reset pin is usually directly drawn out from the screen side and the conditions for triggering the reset function are specified in the datasheet. The gpio configuration depends on the specific design of the reset circuit.
- The `delay-ms` configuration must meet the timing requirements for power on/off and reset as specified in the Panel Datasheet.
 - (Optional) `enable-delay-ms/disable-delay-ms` is used for delay control after enabling or before disabling the enable pin.

- (Optional) `reset-delay-ms` is used for delay control after enabling the reset pin.
- (Optional) `prepare-delay-ms/unprepare-delay-ms` is used for delay control after powering on or before powering off the `power-supply`.

(The following explanation about `delay-ms` is excerpted from **Documentation/devicetree/bindings/display/panel/panel-simple.yaml**)

```
.....
prepare-delay-ms:
  description: |
    the time (in milliseconds) that it takes for the panel to
    become ready and start receiving video data
enable-delay-ms:
  description: |
    the time (in milliseconds) that it takes for the panel to
    display the first valid frame after starting to receive
    video data
disable-delay-ms:
  description: |
    the time (in milliseconds) that it takes for the panel to
    turn the display off (no content is visible)
unprepare-delay-ms:
  description: |
    the time (in milliseconds) that it takes for the panel
    to power itself down completely
reset-delay-ms:
  description: |
    the time (in milliseconds) that it takes for the panel to
    reset itself completely
init-delay-ms:
  description: |
    the time (in milliseconds) that it takes for the panel to
    send init command sequence after reset deassert
.....
```

4.1.3.2 Fixed Timing DTS Configuration

Advantages of DTS Fixed Panel Timing:

- Interfaces no longer read EDID information, avoiding exceptions caused by errors in reading EDID.
- Timing parameters can be adjusted according to requirements, avoiding issues where Pixel alignment or Clock special frequency division is needed.

Disadvantages of DTS Fixed Panel Timing:

- If the Timing configuration does not meet the Panel requirements, it will cause Training failure or abnormal display.

For special cases of certain Panels, such as disordered EDID data, special Clock frequencies, and the need to adjust Timing parameters, we can fix the Timing DTS configuration.

DRM framework's description of the `display_timing` structure and its variables can be found in `include/video/display_timing.h`, with an example as follows:

```
/*
 * Single "mode" entry. This describes one set of signal timings a display can
 * have in one setting. This struct can later be converted to struct videomode
 * (see include/video/videomode.h). As each timing_entry can be defined as a
 * range, one struct display_timing may become multiple struct videomodes.
 *
 * Example: hsync active high, vsync active low
 *
 *
 *           Active Video
 * Video  _____XXXXXXXXXXXXXXXXXXXXX_____
 *   |<- sync ->|<- back ->|<----- active ----->|<- front ->|<- sync..
 *   |      |   porch |           |   porch   |
 *
 *
 * HSync _|-----|_____||-----
 *
 * VSync ^|_____||-----|_____
 */
struct display_timing {
    struct timing_entry pixelclock;

    struct timing_entry hactive;          /* hor. active video */
    struct timing_entry hfront_porch;     /* hor. front porch */
    struct timing_entry hback_porch;      /* hor. back porch */
    struct timing_entry hsync_len;        /* hor. sync len */

    struct timing_entry vactive;          /* ver. active video */
    struct timing_entry vfront_porch;     /* ver. front porch */
    struct timing_entry vback_porch;      /* ver. back porch */
    struct timing_entry vsync_len;        /* ver. sync len */

    enum display_flags flags;             /* display flags */
};
```

For the calculation method of Timing basic parameters, refer to the following:

- $htotal = hsync_len + hback_porch + hactive + hfront_porch$
- $hsync_start = hfront_porch + hactive$
- $hsync_end = htotal - hback_porch = hsync_len + hactive + hfront_porch$
- $vtotal = vsync_len + vback_porch + vactive + vfront_porch$
- $vsync_start = vfront_porch + vactive$
- $vsync_end = vtotal - vback_porch = vsync_len + vactive + vfront_porch$

After obtaining Timing, it is configured within the Panel node, and Timing parameters will be recognized and filled into the corresponding `display_timing` structure by the DRM framework, with the configuration reference as follows:

```
panel-edp {
```

```

compatible = "simple-panel";
backlight = <&backlight>;
power-supply = <&vcc3v3_lcd_edp>;
prepare-delay-ms = <120>;
enable-delay-ms = <120>;
unprepare-delay-ms = <120>;
disable-delay-ms = <120>;
width-mm = <120>;
height-mm = <160>;

panel-timing {
    clock-frequency = <200000000>;
    hactive = <1536>;
    vactive = <2048>;
    hfront-porch = <12>;
    hsync-len = <16>;
    hback-porch = <48>;
    vfront-porch = <8>;
    vsync-len = <4>;
    vback-porch = <8>;
    hsync-active = <0>;
    vsync-active = <0>;
    de-active = <0>;
    pixelclk-active = <0>;
};

port {
    panel_in_edp: endpoint {
        remote-endpoint = <&edp_out_panel>;
    };
};
};

```

- The clock-frequency property value will determine the frame rate output by VOP, and the calculation requires the DRM framework's timing attributes htotal and vtotal.
 - For special cases of clock-frequency that cannot be divided, you can try to zero out the numerical value and retain it to the unit MHz for testing.
 - The frame rate calculation can refer to the implementation of the `drm_mode_vrefresh()` function in `drivers/gpu/drm/drm_modes.c`, with the frame rate denoted as *fr*, the calculation formula is:

$$fr = \frac{clock}{htotal \times vtotal}$$

```

/**
 * drm_mode_vrefresh - get the vrefresh of a mode
 * @mode: mode
 *
 * Returns:
 * @mode's vrefresh rate in Hz, rounded to the nearest integer. Calculates the
 * value first if it is not yet set.
 */
int drm_mode_vrefresh(const struct drm_display_mode *mode)

```

```

{
    unsigned int num, den;

    if (mode->htotal == 0 || mode->vtotal == 0)
        return 0;

    num = mode->clock;
    den = mode->htotal * mode->vtotal;

    if (mode->flags & DRM_MODE_FLAG_INTERLACE)
        num *= 2;
    if (mode->flags & DRM_MODE_FLAG_DBLSCAN)
        den *= 2;
    if (mode->vscan > 1)
        den *= mode->vscan;

    return DIV_ROUND_CLOSEST_ULL(mul_u32_u32(num, 1000), den);
}
EXPORT_SYMBOL(drm_mode_vrefresh);

```

- The hsync-active/vsync-active/de-active/pixelclk-active properties will determine the polarity of the synchronization signals hsync/vsync/den and pixelclk (macro definitions refer to the display_flags section below)
 - `hsync-active = <0>;`
 - Indicates DISPLAY_FLAGS_HSYNC_LOW, meaning the HSYNC signal is low active; otherwise, it is DISPLAY_FLAGS_HSYNC_HIGH, meaning the HSYNC signal is high active.
 - `vsync-active = <0>;`
 - Indicates DISPLAY_FLAGS_VSYNC_LOW, meaning the VSYNC signal is low active; otherwise, it is DISPLAY_FLAGS_VSYNC_HIGH, meaning the VSYNC signal is high active.
 - `de-active = <0>;`
 - Indicates DISPLAY_FLAGS_DE_LOW, meaning the DEN signal is low active; otherwise, it is DISPLAY_FLAGS_DE_HIGH, meaning the DEN signal is high active.
 - `pixelclk-active = <0>;`
 - Indicates DISPLAY_FLAGS_PIXDATA_NEGEDGE, meaning the DATA signal is valid on the falling edge of Clock; otherwise, it is DISPLAY_FLAGS_PIXDATA_POSEDGE, meaning the DATA signal is valid on the rising edge of Clock.

4.1.3.2.1 Writing Timing Back Through EDID

If there is no Timing node configured in the DTS Panel node (refer to section 4.1.3.1 for an example of using EDID DTS configuration), the default action is to use the AUX channel to read the Panel EDID information.

After connecting the display, the following information will be printed in the U-Boot serial port:

#Old version code prints other EDID information

Maximum visible display size: 26 cm x 17 cm

Power management features: no active off, no suspend, no standby

Established timings:

Standard timings:

2400x1600 59 Hz (detailed)

Monitor name: LQ123P1JX31

Detailed mode clock 252750 kHz, flags[a]

H: 2400 2448 2480 2560

V: 1600 1603 1613 1646

bus_format: 1009

#New version does not print other EDID information

edp@fded0000: detailed mode clock 148500 kHz, flags[5]

H: 1920 2008 2052 2200

V: 1080 1084 1089 1125

bus_format: 100a

It is crucial to confirm that the following statement does not appear in the U-Boot Log; if it does, it indicates that the DTS corresponding Panel node is still configured with Timing, and the interface will not read the EDID information:

Using display timing dts

From the above information, we can obtain:

- clock-frequency = 252750 kHz
- hactive = 2400 hsync_start = 2448 hsync_end = 2480 htotal = 2560
- vactive = 1600 vsync_start = 1603 vsync_end = 1613 vtotal = 1646
- flags = 0xa
 - Corresponding to the Timing node's hsync-active/vsync-active/de-active/pixelclk-active and other display_flags.
 - The definition of display_flags is detailed in include/video/display_timing.h:

```
enum display_flags {
    DISPLAY_FLAGS_HSYNC_LOW      = BIT(0),
    DISPLAY_FLAGS_HSYNC_HIGH     = BIT(1),
    DISPLAY_FLAGS_VSYNC_LOW      = BIT(2),
    DISPLAY_FLAGS_VSYNC_HIGH     = BIT(3),

    /* data enable flag */
    DISPLAY_FLAGS_DE_LOW         = BIT(4),
    DISPLAY_FLAGS_DE_HIGH        = BIT(5),
    /* drive data on pos. edge */
    DISPLAY_FLAGS_PIXDATA_POSEDGE = BIT(6),
    /* drive data on neg. edge */
    DISPLAY_FLAGS_PIXDATA_NEGEDGE = BIT(7),
    DISPLAY_FLAGS_INTERLACED     = BIT(8),
    DISPLAY_FLAGS_DOUBLESCAN     = BIT(9),
}
```

```

DISPLAY_FLAGS_DOUBLECLK    = BIT(10),
/* drive sync on pos. edge */
DISPLAY_FLAGS_SYNC_POSEDGE = BIT(11),
/* drive sync on neg. edge */
DISPLAY_FLAGS_SYNC_NEGEDGE = BIT(12),
};

```

- bus_format = 1009
 - Refers to the current color format in use, details are in `include/uapi/linux/media-bus-format.h`

```

/* RGB - next is 0x1024 */
#define MEDIA_BUS_FMT_RGB444_1X12      0x1016
#define MEDIA_BUS_FMT_RGB444_2X8_PADHI_BE 0x1001
#define MEDIA_BUS_FMT_RGB444_2X8_PADHI_LE 0x1002
#define MEDIA_BUS_FMT_RGB555_2X8_PADHI_BE 0x1003
#define MEDIA_BUS_FMT_RGB555_2X8_PADHI_LE 0x1004
#define MEDIA_BUS_FMT_RGB565_1X16      0x1017
#define MEDIA_BUS_FMT_BGR565_2X8_BE     0x1005
#define MEDIA_BUS_FMT_BGR565_2X8_LE     0x1006
#define MEDIA_BUS_FMT_RGB565_2X8_BE     0x1007
#define MEDIA_BUS_FMT_RGB565_2X8_LE     0x1008
#define MEDIA_BUS_FMT_RGB666_1X18      0x1009
#define MEDIA_BUS_FMT_RGB888_1X24      0x100e
#define MEDIA_BUS_FMT_RGB666_1X24_CPADHI 0x1015
#define MEDIA_BUS_FMT_RGB666_1X7X3_SPWG 0x1010
#define MEDIA_BUS_FMT_BGR888_1X24      0x1013
#define MEDIA_BUS_FMT_BGR888_3X8       0x101b
#define MEDIA_BUS_FMT_GBR888_1X24      0x1014
#define MEDIA_BUS_FMT_RGB888_1X24      0x100a
#define MEDIA_BUS_FMT_RGB888_2X12_BE    0x100b
#define MEDIA_BUS_FMT_RGB888_2X12_LE    0x100c
#define MEDIA_BUS_FMT_RGB888_3X8       0x101c
#define MEDIA_BUS_FMT_RGB888_3X8_DELTA  0x101d
#define MEDIA_BUS_FMT_RGB888_1X7X4_SPWG 0x1011
#define MEDIA_BUS_FMT_RGB888_1X7X4_JEIDA 0x1012

```

4.1.3.2.2 Based on Datasheet Calculation

The following figure is excerpted from the example DTS Panel "lg,lp079qx1-sp0v" corresponding Datasheet:

ITEM	Symbol		Min.	Typ.	Max.	Unit	Note
DCLK	Frequency	f _{CLK}	-	200.02	-	MHz	
Hsync	Active	t _{WHA}	-	1536	-	tCLK	
	Period	t _{HP}	-	1612	-		
	Width-Active	t _{WH}	-	16	-		
Vsync	Active	t _{WVA}	-	2048	-	tHP	
	Period	t _{VP}	-	2068	-		
	Width-Active	t _{WV}	-	4	-		
Data Enable	Horizontal back porch	t _{HBP}	-	48	-	tCLK	
	Horizontal front porch	t _{HFP}	-	12	-		
	Vertical back porch	t _{VBP}	-	8	-	tHP	
	Vertical front porch	t _{VFP}	-	8	-		

According to the Panel Datasheet configuration, users can fine-tune within the upper and lower threshold ranges specified in the Datasheet based on specific application requirements.

Refer to the calculated Timing parameters fixed in the eDP Panel Timing node as mentioned above, and output according to the specified Timing.

4.2 Feature Configuration

4.2.1 Panel Self-Test Mode

This mode is typically used during the Panel debugging phase. If the Panel displays abnormally but shows normal when the Panel Self-Test mode is enabled, it indicates that the Sink end is working properly, and the issue needs to be confirmed from the Source end. For more details, see [Common Problems and Analysis Methods](#).


Taking RK3588S EVB1 arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi as an example, the DTS needs to add the panel-self-test property to the edp node:

```
diff --git a/arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi
b/arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi
index 8c1d0f37b8a3..e58dd8aae2ee 100644
--- a/arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi
+++ b/arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi
@@ -262,6 +262,7 @@ &dp0_sound{
};

&edp0 {
+   panel-self-test;
   force-hpd;
   status = "okay";
```

For the "lg,lp079qx1-sp0v" panel, the Panel Self-Test mode is a dynamic switch between the following two images:



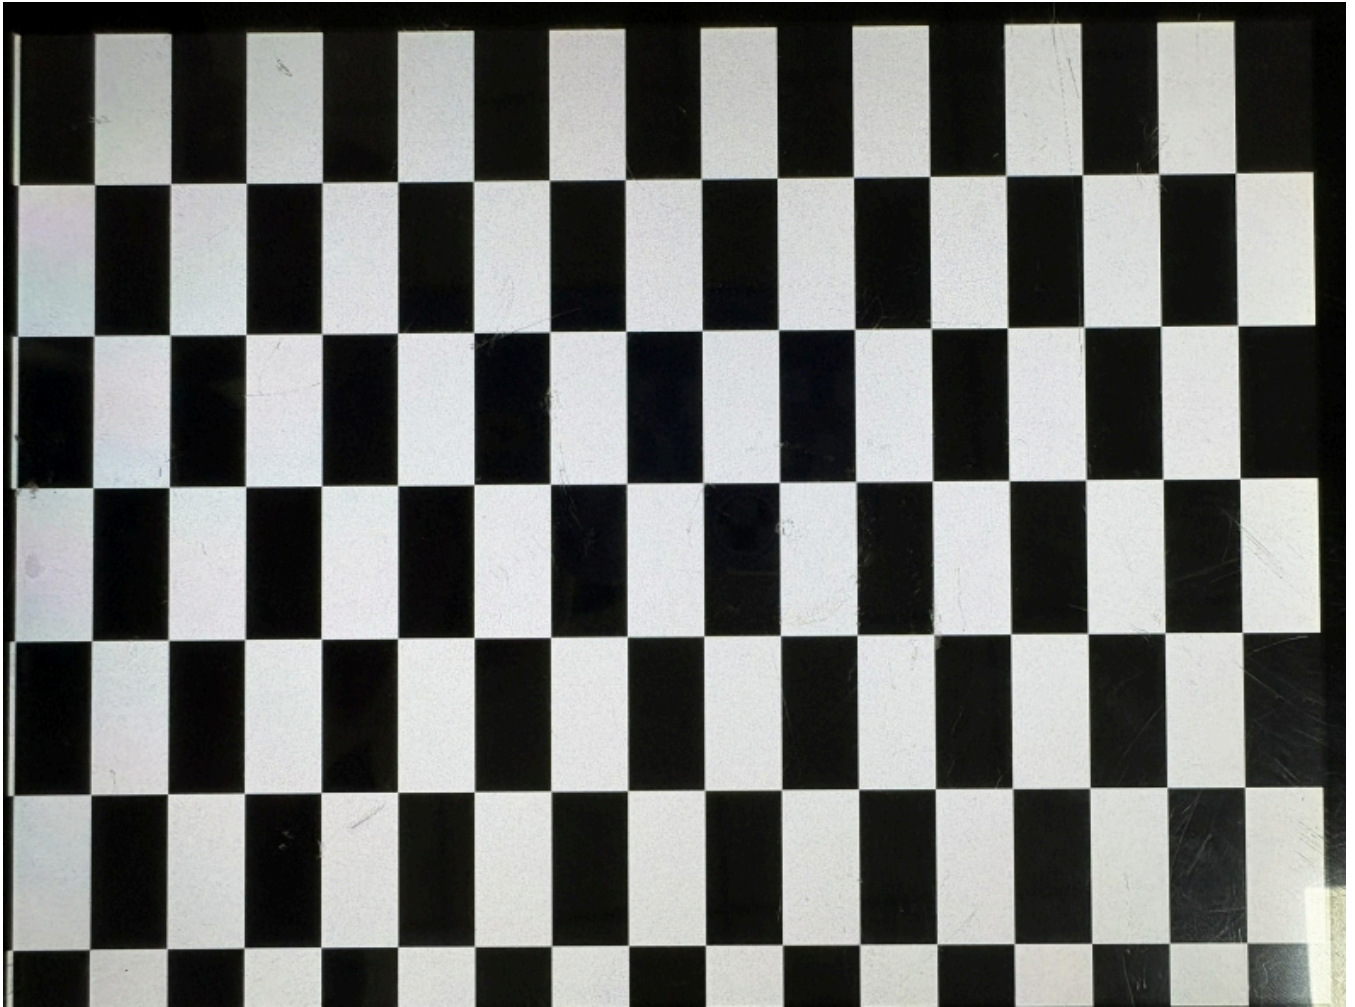

4.2.2 Controller Self-Test Mode

This mode is typically used during the panel debugging phase. If a screen displays abnormally but displays normally after enabling the Controller Self-Test mode, it indicates that the display chain from eDP Controller -> PHY -> Panel is normal. The analysis should be conducted upstream of the display chain, specifically on the VOP. For analysis related to VOP, you can refer to the document **Rockchip_Developer_Guide_DRM_Display_Driver_CN**.

Taking the example of RK3588S EVB1 arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi, in the DTS, the edp node needs to add the property `analogix,video-bist-enable`:

```
diff --git a/arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi
b/arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi
index 8c1d0f37b8a3..07a9de32f910 100644
--- a/arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi
+++ b/arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi
@@ -262,6 +262,7 @@ &dp0_sound{
 };

 &edp0 {
+    analogix,video-bist-enable;
     force-hpd;
     status = "okay";
```


The eDP Controller Self-Test mode displays the following image by default:



4.2.3 PSR Mode

PSR (Panel Self-Refresh), introduced in eDP v1.3, is an optional feature for both the Source and Sink. It can only be properly enabled when both the Source and Sink ends support this feature.

Once the PSR function is enabled, during static display scenarios (e.g., showing a static Android desktop), both the VOP and eDP modules in the display pipeline (VOP -> eDP -> Panel) will automatically enter a low-power state. This effectively reduces overall system power consumption. Under the Kernel-6.1 DTS configuration `arch/arm64/boot/dts/rockchip/rk3576-evb1-v10-edp-NE160QAM-NX1.dts`, for a single display connected via eDP -> Panel (NE160QAM-NX1) showing a static desktop, enabling PSR yielded a measured average system power reduction of approximately 470mW.

```
commit 303b0de1b8fd9f33a8cbfa935e0885c53fe9f78c
Author: Damon Ding <damon.ding@rock-chips.com>
Date:   Wed Jul 16 14:22:21 2025 +0800
```

```
drm/bridge: analogix_dp: Add &analogix_dp_plat_data.disable_psr to check whether to
disable PSR
```

First of all, since the PSR feature can help to reduce the power consumption, the Source device, which can support PSR function,

should enable PSR **if** the PSR capability of Sink device is detected rather than depending on the user to add '**support-psr**' DTS property manually.

Different platforms that use the same Analogix DP bridge driver may have different methods **for** parsing the PSR capability. Therefore, add a new flag **&analogix_dp_plat_data.disable_psr** to disable PSR forcibly, which set in the platform side, should be more reasonable.

If the user truly does not want to enable PSR function or the Panel has something wrong with it, the property '**rockchip,disable-psr**' will be helpful.

Fixes: 9622f2d0f10a ("**drm/bridge: analogix_dp: disable PSR feature by default**")
Change-Id: Id2fce34857df80de5a1ec97f342709a6e2840ed4
Signed-off-by: Damon Ding <damon.ding@rock-chips.com>

For the Kernel version that contains the above commit, the eDP interface driver checks the Sink's PSR support via the DPCD register (DP_PSR_SUPPORT at address 0x70). If the Sink supports the function, the driver will automatically enable the PSR feature on the Source end. If you encounter a situation where the Sink's DPCD (DP_PSR_SUPPORT) reads as 1(supported) but the PSR function operates abnormally, it is recommended to further confirm the actual PSR support status with the panel manufacturer. As a workaround, you can forcibly disable the PSR function by configuring the **rockchip,disable-psr** property under the edpnode in the device tree.

```
&edp {  
    rockchip,disable-psr;  
};
```

If this commit is not included, you need to manually enable the PSR function by configuring the **support-psr** property under the edp node:


```
&edp {  
    support-psr;  
};
```

4.2.4 Connector-split Mode

The Connector-split feature provided by VOP2 is a technology similar to MIPI Dual Channel Mode, which allows the output of a single Video Port to be split in half horizontally to drive two timing-consistent identical/different interfaces (for details, see the "Connector-split" section in the document "Rockchip_Developer_Guide_DRM_Display_Driver_CN").

Taking the dual eDP Connector-split scenario as an example, the application scenarios are as follows:

1. A single VP drives two timing-consistent eDP screens.
2. The two eDP screens display left and right half-screen images, respectively.
3. The DRM framework only registers one Connector, and the application layer can only query the eDP0 device.

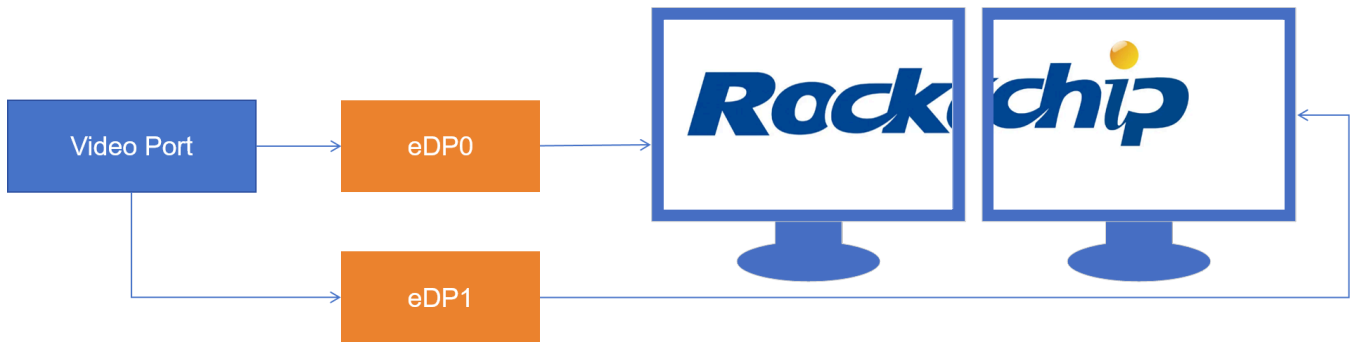

The example DTS configuration is Kernel-6.1 arch/arm64/boot/dts/rockchip/rk3588-vehicle-serdes-display-v20.dtsi, with key configurations as follows:

- Both edp0 and edp1 need to be output on the same VP, corresponding to enabling edp0_in_vp1 and edp1_in_vp1 simultaneously in the instance.
- The interface displaying on the left in the Connector-split function needs to add the rockchip,split-mode property.

```
&edp0 {
    rockchip,split-mode;
    force-hpd;
    status = "okay";

    ports {
        port@1 {
            reg = <1>;

            edp0_out_i2c5_bu18t182: endpoint {
                remote-endpoint = <&i2c5_bu18t182_in_edp0>;
            };
        };
    };
};

&edp0_in_vp0 {
    status = "disabled";
};

&edp0_in_vp1 {
    status = "okay";
};

&edp0_in_vp2 {
    status = "disabled";
};

&edp1 {
    force-hpd;
    status = "okay";

    ports {
        port@1 {
```

```

        reg = <1>;

        edp1_out_i2c7_bu18tl82: endpoint {
            remote-endpoint = <&i2c7_bu18tl82_in_edp1>;
        };
    };
};

&edp1_in_vp0 {
    status = "disabled";
};

&edp1_in_vp1 {
    status = "okay";
};

&edp1_in_vp2 {
    status = "disabled";
};

```

4.2.5 Dual-channel Mode

The Connector-split function typically maps a single VP-driven interface to two screens/monitors, whereas for scenarios where two identical interfaces drive a single screen/monitor, the rockchip,dual-channel property of the left display interface must be enabled.



The Dual-channel mode can be understood as a subset of the Connector-split function, sharing the same implementation mechanism. The difference lies in the fact that when the left connector is mapped, the timing must be configured to match the actual output timing of the VP, whereas when the split-mode property is enabled, it is configured to be 1/2 of the actual VP timing.

Taking an 8 lane 3840x2160@144Hz eDP panel module M280DCA as an example, the data mapping required by the datasheet is as follows:

Area	Lane	Data Stream
Left	Lane 0	Pixel 1,5,9, ,1913,1917
	Lane 1	Pixel 2,6,10, ,1914,1918
	Lane 2	Pixel 3,7,11, ,1915,1919
	Lane 3	Pixel 4,8,12, ,1916,1920
Right	Lane 4	Pixel 1921,1925,1929, ,3833,3837
	Lane 5	Pixel 1922,1926,1930, ,3834,3838
	Lane 6	Pixel 1923,1927,1931, ,3835,3839
	Lane 7	Pixel 1924,1928,1932, ,3836,3840

The RK3588 supports a single eDP at 4 lanes for 3840x2160@60Hz, and 8 lanes for 3840x2160@144Hz can be achieved through the Dual-channel function. An example DTS is located at [arch/arm64/boot/dts/rockchip/rk3588-evb1-lp4-v10-edp-8lanes-M280DCA.dts](#), with key configurations as follows:

- Both edp0 and edp1 need to output from the same VP, corresponding to enabling both edp0_in_vp0 and edp1_in_vp0 in the example instance.
- The rockchip,dual-channel property must be added to the interface of the left display in the Dual-channel function.

```

/ {
    panel-edp {
        compatible = "simple-panel";
        backlight = <&backlight>;
        power-supply = <&vcc3v3_edp>;
        enable-gpios = <&gpio4 RK_PC1 GPIO_ACTIVE_HIGH>;
        prepare-delay-ms = <120>;
        enable-delay-ms = <120>;
        unprepare-delay-ms = <120>;
        disable-delay-ms = <120>;

        display-timings {
            native-mode = <&timing_4kp144>;
            timing_4kp144: timing0 {
                clock-frequency = <1360800000>;
                hactive = <3840>;
                vactive = <2160>;
                hfront-porch = <160>;
                hsync-len = <40>;
                hback-porch = <160>;
                vfront-porch = <40>;
                vsync-len = <10>;
                vback-porch = <40>;
                hsync-active = <0>;
                vsync-active = <0>;
            };
        };
    };
};

```

```

        de-active = <0>;
        pixelclk-active = <0>;
    };

    timing_4kp120: timing1 {
        clock-frequency = <1188000000>;
        hactive = <3840>;
        vactive = <2160>;
        hfront-porch = <240>;
        hsync-len = <80>;
        hback-porch = <240>;
        vfront-porch = <40>;
        vsync-len = <10>;
        vback-porch = <40>;
        hsync-active = <0>;
        vsync-active = <0>;
        de-active = <0>;
        pixelclk-active = <0>;
    };
};

ports {
    #address-cells = <1>;
    #size-cells = <0>;

    port@0 {
        reg = <0>;
        panel_in_edp0: endpoint {
            remote-endpoint = <&edp0_out_panel>;
        };
    };

    port@1 {
        reg = <1>;
        panel_in_edp1: endpoint {
            remote-endpoint = <&edp1_out_panel>;
        };
    };
};

};

&edp0 {
    force-hpd;
    status = "okay";
    dual-channel;

    ports {
        port@1 {
            reg = <1>;

            edp0_out_panel: endpoint {
                remote-endpoint = <&panel_in_edp>;
            };
        };
    };
};

```

```

        };
    };
};

&edp0 {
    force-hpd;
    rockchip,dual-channel;
    rockchip,data-swap;
    status = "okay";

    ports {
        port@1 {
            reg = <1>;

            edp0_out_panel: endpoint {
                remote-endpoint = <&panel_in_edp0>;
            };
        };
    };
};

&edp0_in_vp0 {
    status = "okay";
};

&edp0_in_vp1 {
    status = "disabled";
};

&edp0_in_vp2 {
    status = "disabled";
};

&edp1 {
    force-hpd;
    status = "okay";

    ports {
        port@1 {
            reg = <1>;

            edp1_out_panel: endpoint {
                remote-endpoint = <&panel_in_edp1>;
            };
        };
    };
};

&edp1_in_vp0 {
    status = "okay";
};

```

```
&edp1_in_vp1 {
    status = "disabled";
};

&edp1_in_vp2 {
    status = "disabled";
};
```

5. Common Debugging Techniques

5.1 Check DRM Connector Status

Taking RK3588S EVB1 as an example, refer to the corresponding DTS file located at `arch/arm64/boot/dts/rockchip/rk3588s-evb1-lp4x.dtsi`.

Under the Linux system, you can see the registered DRM devices in the `/sys/class/drm` directory. As shown in the logs below, `card0` represents the Display-subsystem device for the Rockchip platform, while `card0-DP-1` and `card0-eDP-1` correspond to the DP interface device and eDP interface device, respectively.

```
console:/ # cat /sys/class/drm/
card0-DP-1/      card0-eDP-1/      card1/            renderD129/
card0-Writeback-1/  card0/            renderD128/      version
```

Taking `card0-eDP-1` as an example, its directory contains the following content:

```
console:/ # ls /sys/class/drm/card0-eDP-1/
device dpms edid enabled modes power status subsystem uevent
```

- `dpms`: The Power Status of the device.

```
console:/ # cat /sys/class/drm/card0-eDP-1/dpms
On
```

- `edid`: The EDID information obtained from the Sink device.
 - It can be parsed using the `edid-decode` command:

```
console:/ # edid-decode /sys/class/drm/card0-eDP-1/edid
edid-decode (hex):
```

```
00 ff ff ff ff ff ff 00 16 83 00 00 00 00 00 00
04 17 01 00 a5 10 0c 78 06 ef 05 a3 54 4c 99 26
0f 50 54 00 00 00 01 01 01 01 01 01 01 01 01 01
01 01 01 01 01 01 ea 4e 00 4c 60 00 14 80 0c 10
84 00 78 a0 00 00 00 18 00 00 00 10 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 fe 00 4c
50 30 37 39 51 58 31 2d 53 50 30 56 00 00 00 fc
```



```
00 43 6f 6c 6f 72 20 4c 43 44 0a 20 20 20 00 3f
```

Block 0, Base EDID:

EDID Structure Version & Revision: 1.0

Vendor & Product Identification:

Manufacturer: ETC

Model: 0

Made in: week 4 of 2013

Basic Display Parameters & Features:

Digital display

Maximum image size: 16 cm x 12 cm

Gamma: 2.20

Monochrome or grayscale display

Default (sRGB) color space is primary color space

First detailed timing is the preferred timing

Color Characteristics:

Red : 0.6396, 0.3300

Green: 0.2998, 0.6005

Blue : 0.1484, 0.0585

White: 0.3134, 0.3291

Established Timings I & II: none

Standard Timings: none

Detailed Timing Descriptors:

DTD 1: 1536x2048 60.600861 Hz 3:4 125.323 kHz 202.020000 MHz (120 mm x 160 mm)

Hfront 12 Hsync 16 Hback 48 Hpol N

Vfront 8 Vsync 4 Vback 8 Vpol N

Dummy Descriptor:

Alphanumeric Data String: 'LP079QX1-SP0V'

Display Product Name: 'Color LCD'

Checksum: 0x3f

- o If the edid-decode tool is not supported in the current SDK, you can save it as a binary file and then parse it:

```
cat /sys/class/drm/card0-eDP-1/edid > /data/edid.bin
```

The EDID of Panel "lg,lp079qx1-sp0v" parsed through the website <https://hverkuil.home.xs4all.nl/edid-decode/edid-decode.html> yields the following results:

edid-decode (hex):

```
00 ff ff ff ff ff ff 00 16 83 00 00 00 00 00 00
04 17 01 00 a5 10 0c 78 06 ef 05 a3 54 4c 99 26
0f 50 54 00 00 00 01 01 01 01 01 01 01 01 01
01 01 01 01 01 01 ea 4e 00 4c 60 00 14 80 0c 10
84 00 78 a0 00 00 00 18 00 00 00 10 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 fe 00 4c
50 30 37 39 51 58 31 2d 53 50 30 56 00 00 00 fc
00 43 6f 6c 6f 72 20 4c 43 44 0a 20 20 20 00 3f
```

```
Block 0, Base EDID:
  EDID Structure Version & Revision: 1.0
  Vendor & Product Identification:
    Manufacturer: ETC
    Model: 0
    Made in: week 4 of 2013
  Basic Display Parameters & Features:
    Digital display
    Maximum image size: 16 cm x 12 cm
    Gamma: 2.20
    Monochrome or grayscale display
    Default (sRGB) color space is primary color space
    First detailed timing is the preferred timing
  Color Characteristics:
    Red : 0.6396, 0.3300
    Green: 0.2998, 0.6005
    Blue : 0.1484, 0.0585
    White: 0.3134, 0.3291
  Established Timings I & II: none
  Standard Timings: none
  Detailed Timing Descriptors:
    DTD 1: 1536x2048 60.600861 Hz 3:4 125.323 kHz 202.020000 MHz (120
mm x 160 mm)
          Hfront 12 Hsync 16 Hback 48 Hpol N
          Vfront 8 Vsync 4 Vback 8 Vpol N
    Dummy Descriptor:
    Alphanumeric Data String: 'LP079QX1-SP0V'
    Display Product Name: 'Color LCD'
  Checksum: 0x3f

-----
Preferred Video Timing if only Block 0 is parsed:
  DTD 1: 1536x2048 60.600861 Hz 3:4 125.323 kHz 202.020000 MHz (120
mm x 160 mm)
          Hfront 12 Hsync 16 Hback 48 Hpol N
          Vfront 8 Vsync 4 Vback 8 Vpol N

-----
Native Video Resolution:
  1536x2048

-----
edid-decode SHA: dc3a7b9f5453 2025-04-29 13:26:06

Warnings:

Block 0, Base EDID:
  EDID Structure Version & Revision: EDID 1.0 is deprecated, do not use.

Failures:

Block 0, Base EDID:
```

```
Basic Display Parameters & Features: Digital Video Interface Standard set to reserved value 0x25.
Basic Display Parameters & Features: sRGB is signaled, but the chromaticities do not match.
Detailed Timing Descriptor #1: Mismatch of image size 120x160 mm vs display size 160x120 mm.
Display Descriptor #2: Has descriptor blocks other than detailed timings.
Display Descriptor #3: Has descriptor blocks other than detailed timings.
Display Descriptor #4: Has descriptor blocks other than detailed timings.
EDID:
Base EDID: The DTD max image size is 120x160mm, which is larger than the display size 160.0x120.0mm.

EDID conformity: FAIL
```

- enabled: The enabled status of the device.

```
console:/ # cat /sys/class/drm/card0-eDP-1/enabled
enabled
```

- modes: The list of supported resolutions.

```
console:/ # cat /sys/class/drm/card0-eDP-1/modes
1536x2048
```

- status: The connection status of the device.

```
cat /sys/class/drm/card0-eDP-1/status
connected
```

5.2 Viewing Controller/PHY Registers

The base addresses of Controller/PHY for various eDP platforms are as follows:

	RK3288	RK3399	RK3568	RK3588	RK3576
Controller	0xff970000	0xff970000	0xfe0c0000	0xfdec0000/0xfded0000	0x27dc0000
PHY	0xff970600	0xff970600	0xfdc00000	0xfed60000/0xfed70000	0x2b000000

Instruction to dump Controller registers (using RK3576 as an example):

```
io -4 -l 0x400 0x27dc0000
```

Instructions to dump PHY registers vary by platform:

- RK3288/RK3399

```
io -4 -l 0x200 0xff970600
```

- RK3568

```
io -4 -1 0x100 0xfdc00000
```

- RK3588/RK3576

```
cat /sys/kernel/debug/regmap/2b000000.phy/registers
```

5.3 Checking VOP Status

For more details, refer to the section "Dumping the Current Display Status" in the document "Rockchip_Developer_Guide_DRM_Display_Driver_CN".

5.4 Viewing Clock Configuration

For detailed information, refer to the "Viewing Current Display Clock" section in the document "Rockchip_Developer_Guide_DRM_Display_Driver_CN".

5.5 Forced Switch eDP

Taking the RK3576 platform as an example, the eDP display path can be forcibly switched on or off using the status node introduced in ["Check DRM Connector Status"](#):

```
console:/ # echo off > /sys/class/drm/card0-eDP-1/status
console:/ # [ 480.579852][ T333] rockchip-vop2 27d00000.vop:
[drm:vop2_crtc_atomic_disable] Crtc atomic disable vp1
[ 480.589443][ T333] [WLAN_RFKILL]: wlan_early_suspend :enter
.....
console:/ # echo on > /sys/class/drm/card0-eDP-1/status
console:/ # [ 503.199908][ T333] [WLAN_RFKILL]: wlan_late_resume :enter
[ 503.199952][ T333] rockchip-vop2 27d00000.vop: [drm:vop2_crtc_atomic_enable] Update mode
to 1536x2048p60, type: 14(if:eDP0, flag:0x0) for vp1 dclk: 200000000
[ 503.200223][ T333] rockchip-vop2 27d00000.vop: [drm:vop2_crtc_atomic_enable] set
dclk_vp1 to 200000000, get 200000000
```

5.6 Reading and Writing DPCD

Reading and writing DPCD is implemented through `drm_dp_aux_dev`, and the driver details can be found in `/drivers/gpu/drm/drm_dp_aux_dev.c`.

After enabling the `CONFIG_DRM_DP_AUX_CHARDEV` configuration option, DPCD reading and writing can be performed with the following commands:

Reading the values of 16 DPCD registers starting at address 0x00000

```
console:/ # dd if=/dev/drm_dp_aux0 bs=1 skip=$((0x00000)) count=16 status=none | od -tx1
0000000 11 06 84 41 00 00 01 c0 02 00 00 00 0f 03 00 00
0000020
```

- `if`: Specifies the aux node. When two eDP interfaces are registered, there will be two nodes `/dev/drm_dp_aux0` and `/dev/drm_dp_aux1` available for use.
- `skip`: Configures the starting address of the DPCD registers.
- `count`: Configures the number of DPCD registers to read.

Writing the values 0x0a and 0x80 to two DPCD registers starting at 0x100

```
console:/ # echo -e -n "\x0a\x80" | dd of=/dev/drm_dp_aux0 bs=1 seek=$((0x100)) count=2
status=none
```

- `of`: Specifies the aux node. When two eDP interfaces are registered, there will be two nodes `/dev/drm_dp_aux0` and `/dev/drm_dp_aux1` available for use.
- `seek`: Configures the starting address of the DPCD registers.
- `count`: Configures the number of DPCD registers to write.

5.7 Adjusting DRM Log Categories

For an explanation of DRM's interpretation of Debug Log levels, see `drivers/gpu/drm/drm_print.c`

```
/*
 * __drm_debug: Enable debug output.
 * Bitmask of DRM_UT_x. See include/drm/drm_print.h for details.
 */
unsigned long __drm_debug;
EXPORT_SYMBOL(__drm_debug);

MODULE_PARM_DESC(debug, "Enable debug output, where each bit enables a debug category.\n"
"\t\tBit 0 (0x01) will enable CORE messages (drm core code)\n"
"\t\tBit 1 (0x02) will enable DRIVER messages (drm controller code)\n"
"\t\tBit 2 (0x04) will enable KMS messages (modesetting code)\n"
"\t\tBit 3 (0x08) will enable PRIME messages (prime code)\n"
"\t\tBit 4 (0x10) will enable ATOMIC messages (atomic code)\n"
"\t\tBit 5 (0x20) will enable VBL messages (vblank code)\n"
"\t\tBit 7 (0x80) will enable LEASE messages (leasing code)\n"
"\t\tBit 8 (0x100) will enable DP messages (displayport code)");
```

You can adjust the DRM Log categories as needed. If you want to view prints related to DPCD read/write, enter the following command:

```
echo 0x100 > /sys/module/drm/parameters/debug
```

You can also directly modify the value of the aforementioned `__drm_debug` variable (note: this method is not applicable to GKI version SDKs):

```
diff --git a/drivers/gpu/drm/drm_print.c b/drivers/gpu/drm/drm_print.c
index 5b93c11895bb..8da96cde8308 100644
--- a/drivers/gpu/drm/drm_print.c
+++ b/drivers/gpu/drm/drm_print.c
@@ -39,7 +39,7 @@
 * __drm_debug: Enable debug output.
 * Bitmask of DRM_UT_x. See include/drm/drm_print.h for details.
 */
-unsigned long __drm_debug;
+unsigned long __drm_debug = 0x100;
EXPORT_SYMBOL(__drm_debug);
```

6. Frequently Asked Questions

6.1 Bandwidth Calculation Method

Calculate the bandwidth that each Lane of eDP needs to support under a specified display mode, using the following formula:

$$bandwidth_per_lane = pixel_clk * bit_per_pixel * 1.25 / lane_count$$

Here, `bit_per_pixel` represents the number of bits per pixel, `1.25` is the data encoding efficiency for Lanes as stipulated by the eDP protocol, and `lane_count` is the number of available Lanes. The calculated result, `bandwidth_per_lane`, is the minimum bandwidth required per Lane. If the current Lane rate is lower than the required minimum bandwidth, the corresponding pixel clk display mode will be filtered out by the eDP driver.

For example, for a screen with 2 Lanes, a resolution of 2K@60Hz, and a pixel clk of 297MHz, using the RGB888 format requires a minimum bandwidth per Lane of:

$$bandwidth_per_lane = 297 * 24 * 1.25 / 2 = 4.46Gbps/lane$$

Refer to the introduction in [Functional Features](#) to determine that the RK3399/RK3588/RK3576 platforms can support this screen, while RK3288/RK3568 do not support it.

6.2 DCLK Accuracy Issues

During the U-Boot stage, confirm if there is a discrepancy between the expected and actual DCLK by examining the following Log (using RK3588S EVB1 as an example):

```
edp@fdec0000: detailed mode clock 200000 kHz, flags[a] //expected dclk rate
  H: 1536 1548 1564 1612
  V: 2048 2056 2060 2068
bus_format: 100e
VOP update mode to: 1536x2048p60, type: eDP0 for VP2
VP2 set crtc_clock to 200000KHz //actual dclk rate
```

During the Kernel stage, confirmation is done by executing the command `cat`

`/sys/kernel/debug/dri/0/summary`:

```
console:/ # cat /sys/kernel/debug/dri/0/summary
Video Port1: DISABLED
Video Port2: ACTIVE
  Connector:eDP-1      Encoder: TMDS-463
    bus_format[100a]: RGB888_1X24
    overlay_mode[0] output_mode[f] SDR[0] color-encoding[BT.709] color-range[Full]
  Display mode: 1536x2048p60
    dclk[200000 kHz] real_dclk[200000 kHz] aclk[500000 kHz] type[48] flag[a]
//dclk[expected] real_dclk[actual]
  H: 1536 1548 1564 1612
  V: 2048 2056 2060 2068
  Fixed H: 1536 1548 1564 1612
  Fixed V: 2048 2056 2060 2068
  Cluster2-win0: ACTIVE
    win_id: 4
    format: AB24 little-endian (0x34324241)_AFBC-16x16 pixel_blend_mode[0]
glb_alpha[0xff]
  color: SDR[0] color-encoding[BT.709] color-range[Full]
  rotate: xmirror: 0 ymirror: 0 rotate_90: 0 rotate_270: 0
  csc: y2r[0] r2y[0] csc mode[0]
  zpos: 0
  src: pos[0, 0] rect[1536 x 2048]
  dst: pos[0, 0] rect[1536 x 2048]
  buf[0]: addr: 0x00000000f16bb000 pitch: 6144 offset: 0
```

If there is a discrepancy between the actual DCLK and the expected value, first confirm whether the actual allocated DCLK meets the requirements according to the Panel datasheet. If it complies with the datasheet requirements, displays normally, and the frame rate is as expected, the discrepancy can be disregarded:

- eDP Panels typically have a certain "tolerance" for Pixel Clock, and can display normally and maintain frame rate within a certain error range.
- The PLL of each chip platform is limited and cannot guarantee precise allocation of DCLK for every module. In principle, "nearest frequency division" is ensured, for details see the document **Rockchip_Developer_Guide_Clock_CN**.

If it has been confirmed with the screen manufacturer that the Panel is very sensitive to Pixel Clock precision and display anomalies have occurred due to the discrepancy between the actual DCLK and the expected value, refer to the section **VOP Platform DCLK Clock** in the document

Rockchip_Developer_Guide_DRM_Display_Driver_CN to configure the corresponding VOP/VP DCLK to a display-exclusive PLL to ensure accuracy.

6.3 AUX Error Analysis and Resolution

```
/* DEMO1 */
[ 11.591242] Rockchip-dp fe0c0000.edp: AUX CH error occurred: 0x2 (1)
[ 11.592663] Rockchip-dp fe0c0000.edp: AUX CH error occurred: 0x2 (1)
[ 11.594057] Rockchip-dp fe0c0000.edp: AUX CH error occurred: 0x2 (1)
/* DEMO2 */
console:/ # dmesg | grep edp
[ 3.236549] Rockchip-dp fdec0000.edp: failed to read max link rate
[ 3.260422] Rockchip-dp fdec0000.edp: failed to read max link rate
[ 3.284163] Rockchip-dp fdec0000.edp: failed to read max link rate
```

Check and confirm the following aspects:

6.3.1 Check PHY Configuration

Refer to the [PHY DTS Configuration](#), ensure that the PHY nodes corresponding to eDP0/eDP1 are correctly enabled.

6.3.2 Check Panel Configuration

Refer to [Panel DTS Configuration](#) to ensure that all configurations of Panel DTS comply with the requirements of the Datasheet.

Also, verify that the Power configuration meets the Panel requirements (specific requirements refer to Panel Datasheet), as detailed in the document [Rockchip Developer Guide Linux IO DOMAIN CN](#).

It is important to note that the Panel Power-supply is recommended to be controlled by the main controller, which allows for reset remedies in special exceptional cases.

6.3.3 Confirm HPD Status and Power-On Sequence

Ensure the configuration method of HPD (refer to [HPD Configuration](#)), choose one among Force HPD, Function Pin HPD, and GPIO HPD.

- Force HPD

In Force HPD mode, since there is no HPD signal to notify the Sink end's ready status to the Source end, there may be situations where the power-on sequence does not meet the Datasheet requirements.

Timing configuration should refer to the [Panel DTS Configuration](#) section to confirm the enable-delay-ms/reset-delay-ms/prepare-delay-ms/unprepare-delay-ms/disable-delay-ms settings using an oscilloscope.

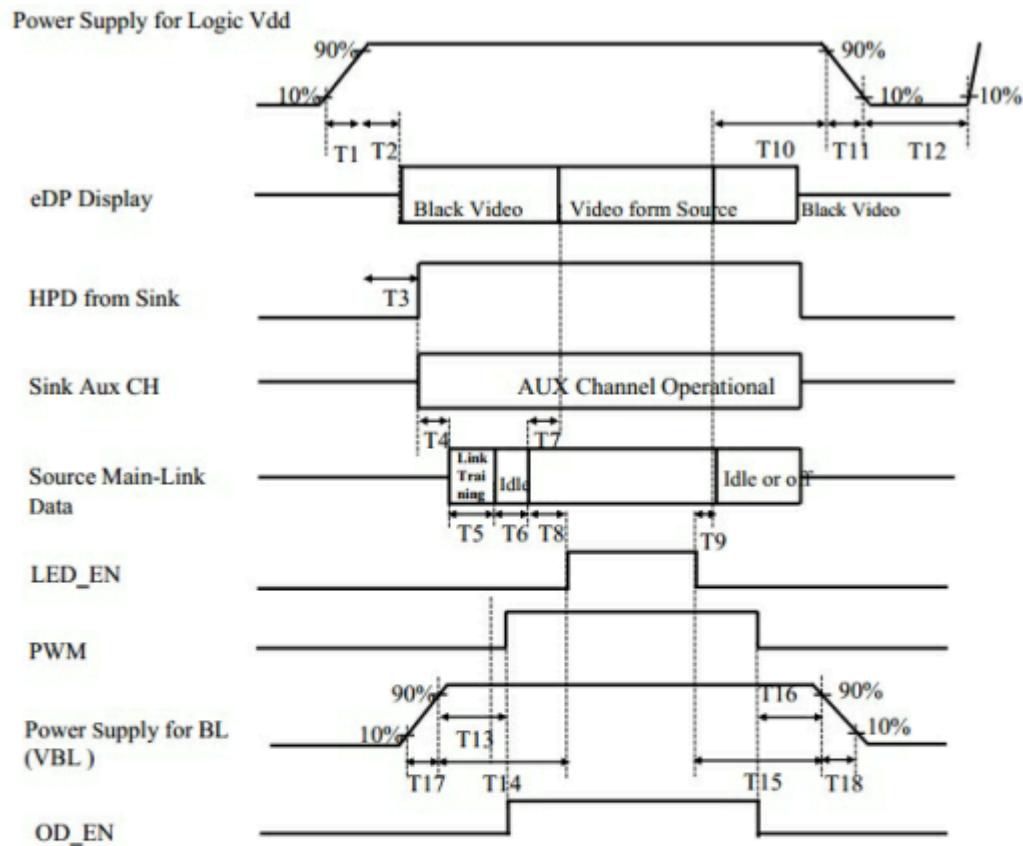


Figure 18. Power Sequence

- $0.5\text{ms} \leq T1 \leq 10\text{ ms}$
- $0\text{ms} < T2 \leq 200\text{ ms}$
- $0\text{ms} < T3 \leq 200\text{ ms}$
- $T4+T5+T6+T8 > 80\text{ms}$
- $0\text{ms} < T7 \leq 50\text{ms}$
- $50\text{ms} < T8$
- $0\text{ms} < T9$
- $100\text{ms} < T10 < 500\text{ ms}$
- $0.5\text{ms} \leq T11 \leq 10\text{ ms}$
- $500\text{ms} \leq T12$
- $0\text{ms} < T13$
- $0\text{ms} < T14$
- $0\text{ms} < T15$
- $0\text{ms} < T16$
- $0.5\text{ms} \leq T17$
- $0.5\text{ms} \leq T18$

For cases where all timing requirements are met according to the Datasheet but there are still AUX errors, you can appropriately extend T3 (as shown in the figure, even exceeding the required ≤ 200), i.e., prepare-delay-ms, to ensure the Sink end is ready before the Source initiates AUX communication, such as:

```
&panel {
    prepare-delay-ms = <500>;
}
```

- GPIO HPD

In GPIO HPD mode, in addition to the aforementioned power-on sequence checks, it is also necessary to confirm whether the designated HPD PIN is occupied by other modules. You can use the command `cat /d/gpio` to confirm:

```

console:/ # cat /d/gpio
gpiochip1: GPIOs 32-63, parent: platform/ff730000.gpio1, gpio1:
gpio-33 (          |?          ) out lo
gpio-34 (          |int-n       ) in  hi
gpio-45 (          |enable      ) out lo
gpio-46 (          |vsel        ) out lo
gpio-49 (          |vsel        ) out lo
gpio-50 (          |vbus-5v     ) out lo
gpio-55 (          |reset       ) out lo
... ..
gpiochip5: GPIOs 511-511, parent: platform/rk805-pinctrl, rk817-gpio, can sleep:

```

Additionally, GPIO HPD can also ensure stable recognition of the HPD signal through Pin pull-down configuration, refer to [HPD Configuration](#).

6.3.4 Check AUX Hardware Design

- Confirm whether the positive and negative poles of the AUX differential lines are reversed. If reversed due to hardware design oversight, refer to the following modifications:

U-Boot:

```

diff --git a/drivers/video/drm/analogix_dp_reg.c b/drivers/video/drm/analogix_dp_reg.c
index 292a5076705..373189e9157 100644
--- a/drivers/video/drm/analogix_dp_reg.c
+++ b/drivers/video/drm/analogix_dp_reg.c
@@ -1241,7 +1241,7 @@ ssize_t analogix_dp_aux_transfer(struct drm_dp_aux *aux, struct
drm_dp_aux_msg *
    }

    /* Enable AUX CH operation */
-   reg = AUX_EN;
+   reg = AUX_EN | 0x4;

    /* Zero-sized messages specify address-only transactions. */
    if (msg->size < 1)

```

Kernel:

```
diff --git a/drivers/gpu/drm/bridge/analogix/analogix_dp_reg.c
b/drivers/gpu/drm/bridge/analogix/analogix_dp_reg.c
index 810b5a2f6041..2dbde10033c5 100644
--- a/drivers/gpu/drm/bridge/analogix/analogix_dp_reg.c
+++ b/drivers/gpu/drm/bridge/analogix/analogix_dp_reg.c
@@ -1202,7 +1202,7 @@ ssize_t analogix_dp_transfer(struct analogix_dp_device *dp,
    }

    /* Enable AUX CH operation */
-   reg = AUX_EN;
+   reg = AUX_EN | 0x4;

    /* Zero-sized messages specify address-only transactions. */
    if (msg->size < 1)
```

- For eDP v1.2 and above versions of AUX link hardware design, the pull-up and pull-down resistors on the AUX differential lines should be removed. If there are still AUX error exceptions, you can try reducing the series capacitance of the AUX signal lines.

6.4 Error Analysis and Solutions for Link Training

eDP Link Training errors are as follows:

```
# Link Training CR(Clock Recovery) phase failure
[ 1410.198900][ T318] rockchip-dp fdec0000.edp: CR Max reached (0,3,0)
[ 1410.202213][ T318] rockchip-dp fdec0000.edp: LT CR failed!
[ 1410.202227][ T318] rockchip-dp fdec0000.edp: eDP link training failed (-5)
[ 1410.202238][ T318] rockchip-dp fdec0000.edp: unable to do link train, ret=-5

# Link Training EQ(Channel Equalization) phase failure
[ 6673.100385][ T318] rockchip-dp fdec0000.edp: EQ Max loop
[ 6673.101511][ T318] rockchip-dp fdec0000.edp: LT EQ failed!
[ 6673.101515][ T318] rockchip-dp fdec0000.edp: eDP link training failed (-5)
[ 6673.101517][ T318] rockchip-dp fdec0000.edp: unable to do link train, ret=-5
[ 6673.101522][ T318] [drm:analogix_dp_bridge_atomic_enable] ERROR dp commit error, ret = -5
[ 6673.101533][ T318] rockchip-dp fdec0000.edp: failed to set bridge, retry: 0
```

The main loop code for eDP Link Training is roughly as follows, with variations between different versions:

```
while (!retval && !training_finished) {
    switch (dp->link_train.lt_state) {
        case START:
            retval = analogix_dp_link_start(dp);
            if (retval)
                dev_err(dp->dev, "LT link start failed!\n");
            break;
        case CLOCK_RECOVERY:
            retval = analogix_dp_process_clock_recovery(dp);
            if (retval)
                dev_err(dp->dev, "LT CR failed!\n");
```

```

        break;
    case EQUALIZER_TRAINING:
        retval = analogix_dp_process_equalizer_training(dp);
        if (retval)
            dev_err(dp->dev, "LT EQ failed!\n");
        break;
    case FINISHED:
        training_finished = 1;
        break;
    case FAILED:
        return -EREMOTEIO;
    }
}

```

eDP Link Training can be divided into three stages in the driver: START, CLOCK_RECOVERY, and EQUALIZER_TRAINING:

- START: Initialization of training start parameters.
- CLOCK_RECOVERY: Link clock recovery.
- EQUALIZER_TRAINING: Link equalization.

The phase where Link Training fails can be determined from the Log.

6.4.1 Confirm Panel Protocol Support

Compare the protocol support for the eDP interface on RK platforms as described in the [Functional Features](#) section with the protocol version indicated in the eDP Panel Datasheet. The protocol version supported by the eDP interface must be greater than or equal to the protocol version of the Panel.

6.4.2 Checking Main Link Hardware Design

- Ensure that each Lane of Main Link has a one-to-one correspondence at both the Source and Sink ends. If there is a mistake in the hardware design, refer to the following adjustments to modify the correspondence of Lanes:

```

&edp0 {
    data-lanes = <3 2 1 0>;
};

```

- Verify that the Main Link hardware design complies with the specifications. Refer to the official hardware design guide of the RK platform, for example, the "Rockchip RK3576 Hardware Design Guide" for RK3576.

6.4.3 Checking the Screen Cable and Interface on Hardware for Compliance

The specifications and standards for screen cables and interfaces need to be confirmed with the screen manufacturer, common requirements include:

- The screen cable length should not exceed **30cm**
- The screen cable should have shielding design on the hardware
- The connection between the screen cable and interface must be correct and stable

6.4.4 Confirming HPD Status and Power-Up Sequence

As previously mentioned in ["Confirming HPD Status and Power-Up Sequence"](#).

6.4.5 Modify Pre-emphasis and Voltage Swing Configuration

PE (Pre-emphasic, pre-emphasis) and VS (Voltage Swing, voltage swing) configurations are significant factors affecting the quality of eDP signals. The combination of their configurations is as follows:

Voltage Swing Level	Pre-emphasis Level			
	Level 0 Vdiff_pre_pp	Level 1 Vdiff_pre_pp	Level 2 Vdiff_pre_pp	Level 3 Vdiff_pre_pp
0	Required	Required	Required	Optional
1	Required	Required	Required	Not allowed
2	Required	Required	Not allowed	Not allowed
3	Optional	Not allowed	Not allowed	Not allowed

6.4.5.1 Modify Initial Configuration

The eDP protocol specifies the initial configuration as PE Level 0/ VS Level 0. Different combinations can be attempted by modifying the following PE/VS initial configuration, with the parameters defined as follows:

```
# define DP_TRAIN_MAX_SWING_REACHED      (1 << 2)
# define DP_TRAIN_VOLTAGE_SWING_LEVEL_0 (0 << 0)
# define DP_TRAIN_VOLTAGE_SWING_LEVEL_1 (1 << 0)
# define DP_TRAIN_VOLTAGE_SWING_LEVEL_2 (2 << 0)
# define DP_TRAIN_VOLTAGE_SWING_LEVEL_3 (3 << 0)

# define DP_TRAIN_PRE_EMPHASIS_MASK      (3 << 3)
# define DP_TRAIN_PRE_EMPH_LEVEL_0      (0 << 3)
# define DP_TRAIN_PRE_EMPH_LEVEL_1      (1 << 3)
# define DP_TRAIN_PRE_EMPH_LEVEL_2      (2 << 3)
# define DP_TRAIN_PRE_EMPH_LEVEL_3      (3 << 3)
```

Uboot reference modification as follows:

```
diff --git a/drivers/video/drm/analogix_dp.c b/drivers/video/drm/analogix_dp.c
index c4b50018baa..0afb116104f 100644
--- a/drivers/video/drm/analogix_dp.c
+++ b/drivers/video/drm/analogix_dp.c
@@ -240,8 +240,8 @@ static int analogix_dp_link_start(struct analogix_dp_device *dp)
    /* Set TX voltage-swing and pre-emphasis to minimum */
    for (lane = 0; lane < lane_count; lane++)
        dp->link_train.training_lane[lane] =
-           DP_TRAIN_VOLTAGE_SWING_LEVEL_0 |
-           DP_TRAIN_PRE_EMPH_LEVEL_0;
+           DP_TRAIN_VOLTAGE_SWING_LEVEL_2 |
+           DP_TRAIN_PRE_EMPH_LEVEL_1;
    analogix_dp_set_lane_link_training(dp);

    /* Set training pattern 1 */
@@ -254,8 +254,8 @@ static int analogix_dp_link_start(struct analogix_dp_device *dp)
    return retval;

    for (lane = 0; lane < lane_count; lane++)
-       buf[lane] = DP_TRAIN_PRE_EMPH_LEVEL_0 |
-       DP_TRAIN_VOLTAGE_SWING_LEVEL_0;
+       buf[lane] = DP_TRAIN_PRE_EMPH_LEVEL_1 |
+       DP_TRAIN_VOLTAGE_SWING_LEVEL_2;

    retval = drm_dp_dpcd_write(&dp->aux, DP_TRAINING_LANE0_SET, buf,
                               lane_count);
```

Kernel reference modification as follows:

```
diff --git a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
index 4015073bbb39..10407e67c95f 100644
--- a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
+++ b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
@@ -435,8 +435,8 @@ static int analogix_dp_link_start(struct analogix_dp_device *dp)
    /* Set TX voltage-swing and pre-emphasis to minimum */
    for (lane = 0; lane < lane_count; lane++)
        dp->link_train.training_lane[lane] =
-           DP_TRAIN_VOLTAGE_SWING_LEVEL_0 |
-           DP_TRAIN_PRE_EMPH_LEVEL_0;
+           DP_TRAIN_VOLTAGE_SWING_LEVEL_2 |
+           DP_TRAIN_PRE_EMPH_LEVEL_1;
    analogix_dp_set_lane_link_training(dp);

    /* Set training pattern 1 */
@@ -450,8 +450,8 @@ static int analogix_dp_link_start(struct analogix_dp_device *dp)
    return retval;

    for (lane = 0; lane < lane_count; lane++)
-       buf[lane] = DP_TRAIN_PRE_EMPH_LEVEL_0 |
```

```

-             DP_TRAIN_VOLTAGE_SWING_LEVEL_0;
+             buf[lane] = DP_TRAIN_PRE_EMPH_LEVEL_2 |
+             DP_TRAIN_VOLTAGE_SWING_LEVEL_1;

    retval = drm_dp_dpcd_write(&dp->aux, DP_TRAINING_LANE0_SET, buf,
                              lane_count);

```

6.4.5.2 Add Settings for Printing

It should be noted that if the initial Link Training fails after setting the Voltage_swing and Pre-emphasis parameters, the next round of Link Training will be based on the parameters recommended by the Panel. You can refer to the following to add printing to determine the subsequent settings for pre-emphasis and voltage swing parameters. The Uboot reference is as follows:

```

diff --git a/drivers/video/drm/analogix_dp_reg.c b/drivers/video/drm/analogix_dp_reg.c
index d2cb10cc0e..c96495f5e9 100644
--- a/drivers/video/drm/analogix_dp_reg.c
+++ b/drivers/video/drm/analogix_dp_reg.c
@@ -1002,6 +1002,7 @@ void analogix_dp_set_lane_link_training(struct analogix_dp_device *dp)
    DP_TRAIN_PRE_EMPHASIS_SHIFT;
    phy_cfg.dp.voltage[lane] = vs;
    phy_cfg.dp.pre[lane] = pe;
+   printf("[Link Training] vs = %d pe = %d\n", vs, pe);
+
    }

    phy_cfg.dp.lanes = dp->link_train.lane_count;

```

Kernel reference is as follows:

```

diff --git a/drivers/gpu/drm/bridge/analogix/analogix_dp_reg.c
b/drivers/gpu/drm/bridge/analogix/analogix_dp_reg.c
index 42d1cbe28b40..ea5657770cfb 100644
--- a/drivers/gpu/drm/bridge/analogix/analogix_dp_reg.c
+++ b/drivers/gpu/drm/bridge/analogix/analogix_dp_reg.c
@@ -733,10 +733,14 @@ void analogix_dp_set_lane_link_training(struct analogix_dp_device *dp)
    u8 lane;
    int ret;

-   for (lane = 0; lane < dp->link_train.lane_count; lane++)
+   for (lane = 0; lane < dp->link_train.lane_count; lane++) {
        analogix_dp_write(dp,
                           ANALOGIX_DP_LN0_LINK_TRAINING_CTL + 4 * lane,
                           dp->link_train.training_lane[lane]);
+
+       printk("[Link Training] vs = %d pe = %d\n",
+              (dp->link_train.training_lane[lane] &
+               DP_TRAIN_VOLTAGE_SWING_MASK) >> DP_TRAIN_VOLTAGE_SWING_SHIFT,
+              (dp->link_train.training_lane[lane] &
+               DP_TRAIN_PRE_EMPHASIS_MASK) >> DP_TRAIN_PRE_EMPHASIS_SHIFT);
+   }

```

```

if (dp->phy) {
    union phy_configure_opts phy_cfg;

```

6.4.6 Attempting to Reduce Speed

For details on bandwidth calculation methods, refer to the previous section [Bandwidth Calculation Method](#).

When the bandwidth is sufficient, attempts can be made to reduce the Link Rate, with reference to the DTS configuration as follows:

```

&edp {
    force-hpd;
    status = "okay";
    ports {
        port@1 {
            reg = <1>;
            edp_out: endpoint {
                link-frequencies = <2700000000>;
                remote-endpoint = <&panel_in>;
            };
        };
    };
};

```

Alternatively, by forcibly specifying the Link Rate in the driver, the Link Rate macro definitions are as follows:

```

# define DP_LINK_BW_1_62          0x06
# define DP_LINK_BW_2_7           0x0a
# define DP_LINK_BW_5_4           0x14
# define DP_LINK_BW_8_1           0x1e

```

U-Boot reference modification:

```

diff --git a/drivers/video/drm/analogix_dp.c b/drivers/video/drm/analogix_dp.c
index c4b50018baa..35daf949017 100644
--- a/drivers/video/drm/analogix_dp.c
+++ b/drivers/video/drm/analogix_dp.c
@@ -665,6 +665,7 @@ static int analogix_dp_get_max_rx_bandwidth(struct analogix_dp_device
 *dp,

        *bandwidth = data;
    }
+    *bandwidth = DP_LINK_BW_1_62;

    return 0;
}

```

Kernel reference modification:


```
diff --git a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
index 4015073bbb39..f70898e0319e 100644
--- a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
+++ b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
@@ -851,6 +851,7 @@ static int analogix_dp_get_max_rx_bandwidth(struct analogix_dp_device
 *dp,

        *bandwidth = data;
    }
+    *bandwidth = DP_LINK_BW_1_62;

    return 0;
}
```

6.4.7 Increase the Retry Count during the CR/EQ Phase

In the eDP protocol, the maximum number of Retries during the CR/EQ phase is 5, but some specific displays may require more Retries to ensure the success of Link Training.

U-Boot reference modification is as follows:

```
diff --git a/drivers/video/drm/analogix_dp.h b/drivers/video/drm/analogix_dp.h
index c6cb113190e..f9312f7391d 100644
--- a/drivers/video/drm/analogix_dp.h
+++ b/drivers/video/drm/analogix_dp.h
@@ -460,9 +460,9 @@
/* ANALOGIX_DP_LINK_POLICY */
#define ALTERNATE_SR_ENABLE                (0x1 << 7)

-#define DP_TIMEOUT_LOOP_COUNT 100
-#define MAX_CR_LOOP 5
-#define MAX_EQ_LOOP 5
+#define DP_TIMEOUT_LOOP_COUNT 200
+#define MAX_CR_LOOP 10
+#define MAX_EQ_LOOP 10

/* I2C EDID Chip ID, Slave Address */
#define I2C_EDID_DEVICE_ADDR                0x50
```

Kernel reference modification is as follows:

```
diff --git a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.h
b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.h
index 879a56eab2b7..8d493a0f76d1 100644
--- a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.h
+++ b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.h
@@ -13,9 +13,9 @@
#include <drm/drm_crtc.h>
#include <drm/drm_bridge.h>
```

```

-#define DP_TIMEOUT_LOOP_COUNT 100
-#define MAX_CR_LOOP 5
-#define MAX_EQ_LOOP 5
+#define DP_TIMEOUT_LOOP_COUNT 200
+#define MAX_CR_LOOP 10
+#define MAX_EQ_LOOP 10
#define MAX_PLL_LOCK_LOOP 5

/* Training takes 22ms if AUX channel comm fails. Use this as retry interval */

```

6.4.8 Adding Reset Panel Operations

U-Boot reference modifications are as follows:

```

diff --git a/drivers/video/drm/analogix_dp.c b/drivers/video/drm/analogix_dp.c
index c4b50018baa..91ff3fa2ae6 100644
--- a/drivers/video/drm/analogix_dp.c
+++ b/drivers/video/drm/analogix_dp.c
@@ -715,6 +715,12 @@ static int analogix_dp_init_training(struct analogix_dp_device *dp,
    /* All DP analog module power up */
    analogix_dp_set_analog_power_down(dp, POWER_ALL, 0);

+    if (dp->connector.panel->funcs->unprepare)
+        dp->connector.panel->funcs->unprepare(dp->connector.panel);
+
+    if (dp->connector.panel->funcs->prepare)
+        dp->connector.panel->funcs->prepare(dp->connector.panel);
+
    return 0;
}

```

Kernel reference modifications are as follows:

```

diff --git a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
index 4015073bbb39..4dfc04a6ccae 100644
--- a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
+++ b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
@@ -910,6 +910,11 @@ static int analogix_dp_full_link_train(struct analogix_dp_device *dp,
    /* All DP analog module power up */
    analogix_dp_set_analog_power_down(dp, POWER_ALL, 0);

+    if (dp->plat_data->panel) {
+        analogix_dp_panel_unprepare(dp);
+        analogix_dp_panel_prepare(dp);
+    }
+
    dp->link_train.lt_state = START;

```

```
/* Process here */
```

6.4.9 Attempting Forced Output

If the above methods all fail to successfully perform Link Training, you can also try forced output to confirm the issue.

U-Boot reference modification is as follows:

```
diff --git a/drivers/video/drm/analogix_dp.c b/drivers/video/drm/analogix_dp.c
index c4b50018baa..5cf45165698 100644
--- a/drivers/video/drm/analogix_dp.c
+++ b/drivers/video/drm/analogix_dp.c
@@ -1035,6 +1035,7 @@ static int analogix_dp_connector_enable(struct rockchip_connector
 *conn,
     u32 fmt_id;
     u32 val;
     int ret;
+    int i;

     drm_mode_copy(&video->mode, &conn_state->mode);

@@ -1097,8 +1098,11 @@ static int analogix_dp_connector_enable(struct rockchip_connector
 *conn,
     ret = analogix_dp_set_link_train(dp, dp->video_info.max_lane_count,
                                     dp->video_info.max_link_rate);

     if (ret) {
-        dev_err(dp->dev, "unable to do link train\n");
-        return ret;
+        dev_err(dp->dev, "unable to do link train, using default strength\n");
+        for (i = 0; i < dp->link_train.lane_count; i++) {
+            dp->link_train.training_lane[i] = DP_TRAIN_VOLTAGE_SWING_LEVEL_0 |
DP_TRAIN_PRE_EMPH_LEVEL_0;
+        }
+        analogix_dp_set_lane_link_training(dp);
     }

     ret = analogix_dp_enable_scramble(dp, 1);
```

Kernel reference modification is as follows:

```
diff --git a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
index 4015073bbb39..b97cd40ef205 100644
--- a/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
+++ b/drivers/gpu/drm/bridge/analogix/analogix_dp_core.c
@@ -1341,6 +1341,7 @@ static int analogix_dp_commit(struct analogix_dp_device *dp)
{
    struct video_info *video = &dp->video_info;
    int ret;
+    int i;
```

```

        ret = drm_dp_read_dpcd_caps(&dp->aux, dp->dpcd);
        if (ret < 0) {
@@ -1362,8 +1363,10 @@ static int analogix_dp_commit(struct analogix_dp_device *dp)

        ret = analogix_dp_train_link(dp);
        if (ret) {
-            dev_err(dp->dev, "unable to do link train, ret=%d\n", ret);
-            return ret;
+            dev_err(dp->dev, "unable to do link train, using default strength\n");
+            for (i = 0; i < dp->link_train.lane_count; i++)
+                dp->link_train.training_lane[i] = DP_TRAIN_VOLTAGE_SWING_LEVEL_0 |
DP_TRAIN_PRE_EMPH_LEVEL_0;
+            analogix_dp_set_lane_link_training(dp);
        }

        ret = analogix_dp_enable_scramble(dp, 1);

```

Note: The above forced output method does not comply with the eDP protocol specification. If the screen can be lit, there may still be hidden dangers. It is recommended to contact the screen manufacturer for further analysis.

6.5 Display Anomalies (Training Successful) Analysis and Solutions

If Link Training has been successful and yet the display remains black or exhibits anomalies, please attempt the following DEBUG methods in sequence.

6.5.1 Enable Self-Test Mode

For details, refer to the sections [Panel Self-Test Mode](#) and [Controller Self-Test Mode](#).

6.5.2 Confirm if the VOP Status Meets Expectations

For details, refer to the section ["Check VOP Status"](#) above.

6.5.3 Verify if the Clock Configuration Meets Expectations

Refer to the previous section ["View Clock Configuration"](#).

6.6 How to Optimize Signal Quality

6.6.1 Optimizing PE/VS Level Configuration

For details, refer to the section ["Modifying PE/VS Configuration"](#).

6.6.2 Enabling SSC Feature

SSC (Spread Spectrum Clocking) can reduce electromagnetic interference (EMI) and mitigate the impact of power supply noise, thereby optimizing signal integrity.

The RK platform will enable this feature by default when **Sink end supports SSC functionality**. The detection function for SSC feature is as follows, and you can add prints to check if it is supported:

```
bool analogix_dp_ssc_supported(struct analogix_dp_device *dp)
{
    /* Check if SSC is supported by both sides */
    return dp->plat_data->ssc && dp->link_train.ssc;
}
```

If you need to forcibly enable the SSC feature, simply let the above function return True. Both Uboot and Kernel need to be modified simultaneously.