

Rockchip RKADK Development Guide

ID: RK-KF-YF-904

Release Version: V2.3.2

Release Date: 2025-08-04

Security Level: ☐Top-Secret ☐Secret ☐Internal ☒Public

DISCLAIMER

THIS DOCUMENT IS PROVIDED "AS IS". ROCKCHIP ELECTRONICS CO., LTD. ("ROCKCHIP") DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

Trademark Statement

"Rockchip", "瑞芯微", "瑞芯" shall be Rockchip's registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

All rights reserved. ©2025 Rockchip Electronics Co., Ltd.

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

Rockchip Electronics Co., Ltd.

No.18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: www.rock-chips.com

Customer service Tel: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-Mail: fae@rock-chips.com

Preface

Overview

This document is going to introduce development reference of Rockchip Rkadc component.

Product Version

Chipset	Kernel Version
RV1126/RV1109	Linux 4.19
RV1106/RV1103	Linux 5.10
RV1103B	Linux 5.10
RK3576	Linux 6.10
RV1126B	Linux 6.10

Intended Audience

This document (this guide) is mainly intended for:

Technical support engineers

Software development engineers

Revision History

Version	Author	Date	Change Description
V1.0.0	CTF	2021-05-02	Initial version
V1.1.0	CTF	2021-08-23	1. Add API introduction: (1) RKADK RECORD GetAencChn (2) RKADK GetThmInMp4 (3) RKADK PHOTO GetThmInJpg (4) RKADK PARAM GetVencChnId 2. New module introduction: (1) Local preview module <code>Display</code> (2) Live broadcast module <code>Live</code> : includes RTSP and RTMP sub-modules
V1.2.0	CTF	2021-09-26	1. Add thumbnail extension API: (1) RKADK GetThmInMp4Ex (2) RKADK ThmBufFree (3) RKADK PHOTO GetThmInJpgEx (4) RKADK PHOTO ThumbBufFree 2. Support multi sensor 3. Support setting INI file path 4. Add VI ISP module 5. Support setting VENC GOP
V1.3.0	GZC	2021-11-30	New storage module
V1.3.1	CTF	2021-12-20	1. Add API introduction: (1) RKADK PHOTO GetData (2) RKADK PHOTO FreeData (3) RKADK PLAYER GetDuration 2. Add INI configuration notes
V2.0.0	CTF	2023-01-29	1. Adapt to general Linux SDK 2. Add API introduction: (1) RKADK OSD Init (2) RKADK OSD Deinit (3) RKADK OSD UpdateOsdSize (4) RKADK OSD AttachToStream (5) RKADK OSD DettachFromStream (6) RKADK OSD UpdateDisplayAttr
V2.1.0	CTF	2023-04-27	Compatible with RV1109/RV1126 platforms

Version	Author	Date	Change Description
V2.2.0	CTF	2023-11-07	1. Added UI overlay module 2. Added JPEG Slice function 3. Added the following functions to Player: (1) Supported third-party demuxer library (2) Supports RTSP network stream playback (3) Supports screen snapshot function (4) Compatible with RV1106/RV1103, RK3308, RK3506 platforms 4. Added Record File Cache description 5. Add Record/Photo rotation, flip, mirror API description 6. Update ini description 7. Update test cases
V2.2.1	CTF	2024-01-04	1. Added Post AI ISP function
V2.2.2	CTF	2024-04-23	Added AOV(Always On Video) time-lapse recording function
V2.2.3	CTF	2024-09-11	1. Added Picture-In-Picture (PiP) recording function 2. Add API introduction: (1) RKADK_RECORD_Single_Start (2) RKADK_RECORD_Single_Stop (3) RKADK_RECORD_SetPipAttr (4) RKADK_RECORD_FileCacheSetMode (5) RKADK_PLAYER_GetSendFrameNum (6) RKADK_PLAYER_SetVdecWaterline (7) RKADK_PLAYER_SetAoVolume
V2.3.0	CTF	2025-04-07	1. Compatible with RV1103B, RK3576, RV1126B platforms 2. Add API introduction: (1) RKADK_STREAM_VideoReset (2) RKADK_RTSP_VideoReset (3) RKADK_RTMP_VideoReset

Version	Author	Date	Change Description
V2.3.1	CTF	2015-07-29	1. Compatible with RV1126B AOV(Always On Video) time-lapse recording function 2. Added Muxer module (1) RKADK_MUXER_Create (2) RKADK_MUXER_Destroy (3) RKADK_MUXER_Enable (4) RKADK_MUXER_Disable (5) RKADK_MUXER_Start (6) RKADK_MUXER_Stop (7) RKADK_MUXER_Single_Start (8) RKADK_MUXER_Single_Stop (9) RKADK_MUXER_ManualSplit (10) RKADK_MUXER_Reset (11) RKADK_MUXER_ResetParam (12) RKADK_MUXER_SetResetState (13) RKADK_MUXER_BuildInThumb (14) RKADK_MUXER_WriteVideoFrame (15) RKADK_MUXER_WriteAudioFrame 3. Add support for horizontal splicing display and vertical splicing display and picture-in-picture display of multiple streams (1) RKADK_DISP_InitEx (2) RKADK_DISP_DeInitEx (3) RKADK_DISP_SetAttrEx (4) RKADK_DISP_SendVideoStream
V2.3.2	CTF	2015-08-04	1. Add advanced parameter selection instructions for coding 2. Add Record support for using third-party Muxer instructions

Contents

Rockchip RKADK Development Guide

1. System Overview
 - 1.1 Version Introduction
2. Record
 - 2.1 Overview
 - 2.2 API Reference
 - 2.2.1 RKADK_RECORD_Create
 - 2.2.2 RKADK_RECORD_Destroy
 - 2.2.3 RKADK_RECORD_Start
 - 2.2.4 RKADK_RECORD_Stop
 - 2.2.5 RKADK_RECORD_Single_Start
 - 2.2.6 RKADK_RECORD_Single_Stop
 - 2.2.7 RKADK_RECORD_Reset
 - 2.2.8 RKADK_RECORD_ManualSplit
 - 2.2.9 RKADK_RECORD_GetAencChn
 - 2.2.10 RKADK_GetThmInMp4
 - 2.2.11 RKADK_GetThmInMp4Ex
 - 2.2.12 RKADK_ThmBufFree
 - 2.2.13 RKADK_RECORD_SetRotation
 - 2.2.14 RKADK_RECORD_ToggleMirror
 - 2.2.15 RKADK_RECORD_ToggleFlip
 - 2.2.16 RKADK_RECORD_FileCacheInit
 - 2.2.17 RKADK_RECORD_FileCacheDeInit
 - 2.2.18 RKADK_RECORD_FileCacheSetMode
 - 2.2.19 RKADK_MEDIA_EnablePostIsp
 - 2.2.20 RKADK_MEDIA_SetPostIspAttr
 - 2.2.21 RKADK_RECORD_SetPipAttr
 - 2.3 Type of Data
 - 2.3.1 Public Data Types
 - 2.3.2 RKADK_MW_PTR
 - 2.3.3 RKADK_MAX_SENSOR_CNT
 - 2.3.4 RECORD_FILE_NUM_MAX
 - 2.3.5 RKADK_REC_EVENT_CALLBACK_FN
 - 2.3.6 RKADK_REC_TYPE_E
 - 2.3.7 RKADK_REC_REQUEST_FILE_NAMES_FN
 - 2.3.8 RKADK_REC_PTS_CALLBACK_FN
 - 2.3.9 RKADK_MOUNT_SDCARD_FN
 - 2.3.10 RKADK_RECORD_ATTR_S
 - 2.3.11 RKADK_REC_MANUAL_SPLIT_ATTR_S
 - 2.3.12 FILE_CACHE_ARG
 - 2.3.13 FILE_WRITE_THREAD_ARG
 - 2.3.14 FILE_SDCARD_ARG
 - 2.3.15 RKADK_POST_ISP_ATTR_S
 - 2.3.16 RKADK_AOV_ATTR_S
 - 2.3.17 RKADK_PIP_ATTR_S
3. Muxer
 - 3.1 API Reference
 - 3.1.1 RKADK_MUXER_Create
 - 3.1.2 RKADK_MUXER_Destroy
 - 3.1.3 RKADK_MUXER_Enable

- 3.1.4 RKADK_MUXER_Disable
 - 3.1.5 RKADK_MUXER_Start
 - 3.1.6 RKADK_MUXER_Stop
 - 3.1.7 RKADK_MUXER_Single_Start
 - 3.1.8 RKADK_MUXER_Single_Stop
 - 3.1.9 RKADK_MUXER_ManualSplit
 - 3.1.10 RKADK_MUXER_Reset
 - 3.1.11 RKADK_MUXER_ResetParam
 - 3.1.12 RKADK_MUXER_SetResetState
 - 3.1.13 RKADK_MUXER_BuildInThumb
 - 3.1.14 RKADK_MUXER_WriteVideoFrame
 - 3.1.15 RKADK_MUXER_WriteAudioFrame
- 3.2 Data Types
 - 3.2.1 RKADK_MUXER_FILE_TYPE_E
 - 3.2.2 RKADK_MUXER_EVENT_E
 - 3.2.3 RKADK_MUXER_FILE_EVENT_INFO_S
 - 3.2.4 RKADK_MUXER_EVENT_INFO_S
 - 3.2.5 RKADK_MUXER_EVENT_CALLBACK_FN
 - 3.2.6 RKADK_REC_MANUAL_SPLIT_ATTR_S
 - 3.2.7 RKADK_MUXER_MANUAL_SPLIT_TYPE_E
 - 3.2.8 RKADK_THIRD_MUXER_ATTR_S
 - 3.2.9 RKADK_MUXER_ATTR_S
 - 3.2.10 RKADK_MUXER_REC_TYPE_E
 - 3.2.11 RKADK_MUXER_TYPE_E
 - 3.2.12 RKADK_MUXER_REQUEST_FILE_NAME_CB
 - 3.2.13 RKADK_MUXER_PTS_CALLBACK_FN
 - 3.2.14 RKADK_MUXER_PTS_INFO_S
 - 3.2.15 RKADK_MUXER_STREAM_ATTR_S
 - 3.2.16 RKADK_MUXER_TRACK_SOURCE_S
 - 3.2.17 RKADK_TRACK_SOURCE_TYPE_E
 - 3.2.18 RKADK_TRACK_VIDEO_SOURCE_INFO_S
 - 3.2.19 RKADK_TRACK_AUDIO_SOURCE_INFO_S
 - 3.2.20 RKADK_MUXER_PRE_RECORD_ATTR_S
 - 3.2.21 RKADK_MUXER_PRE_RECORD_MODE_E
 - 3.2.22 RKADK_MUXER_DATA_S
 - 3.2.23 RKADK_MUXER_THUMB_INFO_S
- 4. AOV(Always On Video)
 - 4.1 Overview
 - 4.2 API Reference
 - 4.2.1 RKADK_AOV_Init
 - 4.2.2 RKADK_AOV_DeInit
 - 4.2.3 RKADK_AOV_SetSuspendTime
 - 4.2.4 RKADK_AOV_EnterSleep
 - 4.2.5 RKADK_AOV_WakeupLock
 - 4.2.6 RKADK_AOV_WakeupUnlock
 - 4.3 Type of data
 - 4.3.1 RKADK_AOV_ARG_S
 - 4.3.2 RKADK_AOV_NOTIFY_CALLBACK
 - 4.3.3 RKADK_AOV_EVENT_E
- 5. Photo
 - 5.1 Overview
 - 5.2 API Reference
 - 5.2.1 RKADK_PHOTO_Init

- 5.2.2 RKADK_PHOTO_DeInit
 - 5.2.3 RKADK_PHOTO_TakePhoto
 - 5.2.4 RKADK_PHOTO_Reset
 - 5.2.5 RKADK_PHOTO_GetThmInJpg
 - 5.2.6 RKADK_PHOTO_GetThmInJpgEx
 - 5.2.7 RKADK_PHOTO_ThumbBufFree
 - 5.2.8 RKADK_MEDIA_SetVencRotation
 - 5.2.9 RKADK_MEDIA_ToggleVencMirror
 - 5.2.10 RKADK_MEDIA_ToggleVencFlip
- 5.3 Type of Data
 - 5.3.1 RKADK_PHOTO_TYPE_E
 - 5.3.2 RKADK_PHOTO_SINGLE_ATTR_S
 - 5.3.3 RKADK_PHOTO_MULTIPLE_ATTR_S
 - 5.3.4 RKADK_PHOTO_THUMB_ATTR_S
 - 5.3.5 RKADK_PHOTO_RECV_DATA_S
 - 5.3.6 RKADK_PHOTO_DATA_RECV_FN_PTR
 - 5.3.7 RKADK_TAKE_PHOTO_ATTR_S
 - 5.3.8 RKADK_PHOTO_FMT_CHANGE_S
 - 5.3.9 RKADK_PHOTO_ATTR_S
 - 5.3.10 RKADK_JPG_THUMB_TYPE_E
 - 5.3.11 RKADK_THUMB_TYPE_E
 - 5.3.12 RKADK_THUMB_ATTR_S
 - 5.3.13 ROTATION_E
- 6. Remote Preview
 - 6.1 Overview
 - 6.2 API Reference
 - 6.2.1 RKADK_STREAM_VideoInit
 - 6.2.2 RKADK_STREAM_VideoDeInit
 - 6.2.3 RKADK_STREAM_VencStart
 - 6.2.4 RKADK_STREAM_VencStop
 - 6.2.5 RKADK_STREAM_VideoReset
 - 6.2.6 RKADK_STREAM_GetVideoInfo
 - 6.2.7 RKADK_STREAM_AudioInit
 - 6.2.8 RKADK_STREAM_AudioDeInit
 - 6.2.9 RKADK_STREAM_AencStart
 - 6.2.10 RKADK_STREAM_AencStop
 - 6.2.11 RKADK_STREAM_GetAudioInfo
 - 6.3 Type of Data
 - 6.3.1 RKADK_CODEC_TYPE_E
 - 6.3.2 RKADK_VENC_DATA_PROC_FUNC
 - 6.3.3 RKADK_VIDEO_STREAM_S
 - 6.3.4 RKADK_VENC_DATA_PACK_S
 - 6.3.5 RKADK_VENC_DATA_TYPE_S
 - 6.3.6 RKADK_VIDEO_INFO_S
 - 6.3.7 RKADK_STREAM_VIDEO_ATTR_S
 - 6.3.8 RKADK_AUDIO_DATA_PROC_FUNC
 - 6.3.9 RKADK_AUDIO_STREAM_S
 - 6.3.10 RKADK_AUDIO_INFO_S
 - 6.3.11 RKADK_STREAM_AUDIO_ATTR_S
- 7. Player
 - 7.1 Overview
 - 7.2 API Reference
 - 7.2.1 RKADK_PLAYER_Create

- 7.2.2 RKADK_PLAYER_Destroy
 - 7.2.3 RKADK_PLAYER_SetDataSource
 - 7.2.4 RKADK_PLAYER_SetDataParam
 - 7.2.5 RKADK_PLAYER_Prepare
 - 7.2.6 RKADK_PLAYER_GetCurrentPosition
 - 7.2.7 RKADK_PLAYER_Play
 - 7.2.8 RKADK_PLAYER_Stop
 - 7.2.9 RKADK_PLAYER_Pause
 - 7.2.10 RKADK_PLAYER_Seek
 - 7.2.11 RKADK_PLAYER_GetPlayStatus
 - 7.2.12 RKADK_PLAYER_GetDuration
 - 7.2.13 RKADK_PLAYER_Snapshot
 - 7.2.14 RKADK_PLAYER_SendAudioPacket
 - 7.2.15 RKADK_PLAYER_SendVideoPacket
 - 7.2.16 RKADK_PLAYER_GetSendFrameNum
 - 7.2.17 RKADK_PLAYER_SetVdecWaterline
 - 7.2.18 RKADK_PLAYER_SetAoVolume
- 7.3 Type of Data
 - 7.3.1 RKADK_PLAYER_EVENT_E
 - 7.3.2 RKADK_PLAYER_EVENT_FN
 - 7.3.3 RKADK_PLAYER_CFG_S
 - 7.3.4 RKADK_VO_FORMAT_E
 - 7.3.5 RKADK_VO_INTF_TYPE_E
 - 7.3.6 RKADK_VO_SPLICE_MODE_E
 - 7.3.7 RKADK_PLAYER_FRAME_INFO_S
 - 7.3.8 RKADK_PLAYER_STATE_E
 - 7.3.9 RKADK_PLAYER_SNAPSHOT_S
 - 7.3.10 RKADK_PPLAYER_SNAPSHOT_RECV_FN
 - 7.3.11 RKADK_PLAYER_SNAPSHOT_CFG_S
 - 7.3.12 RKADK_PLAYER_VDEC_CFG_S
 - 7.3.13 RKADK_PLAYER_RTSP_CFG_S
 - 7.3.14 RKADK_PLAYER_PACKET
 - 7.3.15 RKADK_PLAYER_DATA_PARAM_S
- 8. Live Streaming
 - 8.1 Overview
 - 8.2 API Reference
 - 8.2.1 RTSP
 - 8.2.1.1 RKADK_RTSP_Init
 - 8.2.1.2 RKADK_RTSP_DeInit
 - 8.2.1.3 RKADK_RTSP_Start
 - 8.2.1.4 RKADK_RTSP_Stop
 - 8.2.1.5 RKADK_RTSP_VideoReset
 - 8.2.2 RTMP
 - 8.2.2.1 RKADK_RTMP_Init
 - 8.2.2.2 RKADK_RTMP_DeInit
 - 8.2.2.3 RKADK_RTSP_VideoReset
- 9. Storage
 - 9.1 Overview
 - 9.2 API Reference
 - 9.2.1 RKADK_STORAGE_Init
 - 9.2.2 RKADK_STORAGE_Deinit
 - 9.2.3 RKADK_STORAGE_GetDevAttr
 - 9.2.4 RKADK_STORAGE_GetMountStatus

- 9.2.5 RKADK_STORAGE_GetCapacity
 - 9.2.6 RKADK_STORAGE_GetFileList
 - 9.2.7 RKADK_STORAGE_FreeFileList
 - 9.2.8 RKADK_STORAGE_GetFileNum
 - 9.2.9 RKADK_STORAGE_GetDevPath
 - 9.2.10 RKADK_STORAGE_Format
- 9.3 Type of Data
 - 9.3.1 RKADK_MOUNT_STATUS
 - 9.3.2 RKADK_SORT_TYPE
 - 9.3.3 RKADK_SORT_CONDITION
 - 9.3.4 RKADK_STR_FOLDER_ATTR
 - 9.3.5 RKADK_STR_DEV_ATTR
 - 9.3.6 RKADK_FILE_INFO
 - 9.3.7 RKADK_FILE_LIST
 - 9.3.8 RKADK_FILE_LIST_ARRAY
- 10. Display
 - 10.1 Overview
 - 10.2 API Reference
 - 10.2.1 RKADK_DISP_Init
 - 10.2.2 RKADK_DISP_DeInit
 - 10.2.3 RKADK_DISP_SetAttr
 - 10.2.4 RKADK_DISP_InitEx
 - 10.2.5 RKADK_DISP_DeInitEx
 - 10.2.6 RKADK_DISP_SetAttrEx
 - 10.2.7 RKADK_DISP_SendVideoStream
 - 10.3 Type of Data
 - 10.3.1 RKADK_DISP_SUB_STREAM_NUM
 - 10.3.2 RKADK_DISP_CFG_S
 - 10.3.3 RKADK_DISP_STREAM_CFG_S
 - 10.3.4 RKADK_DISP_VDEC_CFG_S
 - 10.3.5 RKADK_DISP_VO_CFG_S
 - 10.3.6 RKADK_DISP_ATTR_S
 - 10.3.7 RKADK_DISP_STREAM_ATTR_S
 - 10.3.8 RKADK_DISP_VDEC_ATTR_S
 - 10.3.9 RKADK_DISP_DATA_S
- 11. OSD
 - 11.1 Overview
 - 11.2 API Reference
 - 11.2.1 RKADK_OSD_Init
 - 11.2.2 RKADK_OSD_Deinit
 - 11.2.3 RKADK_OSD_UpdateBitMap
 - 11.2.4 RKADK_OSD_AttachToStream
 - 11.2.5 RKADK_OSD_DettachFromStream
 - 11.2.6 RKADK_OSD_UpdateOsdSize
 - 11.2.7 RKADK_OSD_UpdateDisplayAttr
 - 11.3 Type of Data
 - 11.3.1 RKADK_OSD_ATTR_S
 - 11.3.2 RKADK_OSD_STREAM_ATTR_S
 - 11.4 RKADK_OSD_TYPE_E
- 12. UI Overlay
 - 12.1 Overview
 - 12.2 API Reference
 - 12.2.1 RKADK_UI_Create

- 12.2.2 RKADK_UI_Destroy
 - 12.2.3 RKADK_UI_Update
- 12.3 Type of Data
 - 12.3.1 RKADK_UI_ATTR_S
 - 12.3.2 RKADK_UI_FRAME_INFO
 - 12.3.3 RKADK_FORMAT_E
- 13. Parameter Settings
 - 13.1 Overview
 - 13.2 API Reference
 - 13.2.1 RKADK_PARAM_Init
 - 13.2.2 RKADK_PARAM_GetCamParam
 - 13.2.3 RKADK_PARAM_SetCamParam
 - 13.2.4 RKADK_PARAM_GetCommParam
 - 13.2.5 RKADK_PARAM_SetCommParam
 - 13.2.6 RKADK_PARAM_SetDefault
 - 13.2.7 RKADK_PARAM_GetResolution
 - 13.2.8 RKADK_PARAM_GetResType
 - 13.2.9 RKADK_PARAM_GetVencChnId
 - 13.3 Type of Data
 - 13.3.1 RKADK_DEFPARAM_PATH
 - 13.3.2 RKADK_DEFPARAM_PATH_SENSOR_PREFIX
 - 13.3.3 RKADK_PARAM_PATH
 - 13.3.4 RKADK_PARAM_PATH_SENSOR_PREFIX
 - 13.3.5 RKADK_PARAM_TYPE_E
 - 13.3.6 RKADK_PARAM_RES_E
 - 13.3.7 RKADK_STREAM_TYPE_E
 - 13.3.8 RKADK_PARAM_CODEC_CFG_S
 - 13.3.9 RKADK_PARAM_BITRATE_S
 - 13.3.10 RKADK_PARAM_REC_TIME_S
 - 13.3.11 RKADK_PARAM_GOP_S
 - 13.3.12 RKADK_VQE_MODE_E
 - 13.3.13 RKADK_MIC_TYPE_E
 - 13.4 INI File Introduction
 - 13.4.1 Global INI Configuration File
 - 13.4.2 Sensor INI Configuration Files
 - 13.4.3 INI Configuration Precaution
- 14. Examples
 - 14.1 rkadk_record_test
 - 14.2 rkadk_photo_test
 - 14.3 rkadk_stream_test
 - 14.4 rkadk_player_test
 - 14.5 rkadk_thumb_test
 - 14.6 rkadk_rtsp_test
 - 14.7 rkadk_rtmp_test
 - 14.8 rkadk_storage_test
 - 14.9 rkadk_disp_test
 - 14.10 rkadk_ui_test
 - 14.11 rkadk_muxer_test

1. System Overview

Rkadk provides basic and universal components such as video recording, photo capture, playback, preview, etc., simplifying the difficulty of application development and supporting the rapid development of audio and video recording-related software.

This component only supports the implementation of single-process functionality. It does not support multiple processes used simultaneously unless noted otherwise.

1.1 Version Introduction

- Version 1.x.x: Further encapsulation based on rkmedia and rockit, corresponding to the master repository.
- Version 2.x.x: Further encapsulation based on rockit, corresponding to the develop repository.

2. Record

2.1 Overview

Provides basic video recording functionality, offering the following features to product:

- Creation and destruction of recording tasks
- Start and stop of recording tasks
- Manual slice of recording files
- Time-lapse recording
- Pre-recording
- Picture-In-Picture (PiP) recording

Recording tasks obtain video and audio information through the parameter module, start and stop VENC (video encoding), start and stop AENC (audio encoding), and call the muxer module to create recording files and write frames to the files.

Each recording task corresponds to one or more recording files. Each file must correspond to a video encoding channel, and if audio recording is needed, an audio encoding channel must be added.

Multiple recording files under the same recording task have the same recording type, the same slicing conditions, and in time-lapse recording mode, they also have the same time-lapse interval. Different recording times can be configured.

Post AI ISP: RV1106/RV1126/RV1109 chip supports noise reduction in dim light environments and intelligent enhancement processing of VI output images through AI ISP, which can still present a clearer picture without dragging shadows, low noise, and even in dim light environments.

2.2 API Reference

2.2.1 RKADK_RECORD_Create

Description

Create a video recording task.

Syntax

RKADK_S32 RKADK_RECORD_Create([RKADK_RECORD_ATTR_S](#) *pstRecAttr, [RKADK_MW_PTR](#) *ppRecorder);

Parameters

Parameter name	Description	Input/output
pstRecAttr	Recording task attributes	Input
ppRecorder	Created recording task pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

Notice

- Each recording task supports a maximum of 2 recording files simultaneously.
- Each recording file must have at least 1 video stream and supports encapsulating 1 video stream and 1 audio stream simultaneously at most.
- It does not support the creation of the same task repeatedly.
- After creating a recording task, RKADK_RECORD_Start must be called to start recording.
- To enable the Picture-in-Picture feature, it must be enabled through stPipAttr when RKADK_RECORD_Create, which will then create the Picture-in-Picture pathway.

Example

[rkadk_record_test](#).

See Also

[RKADK_RECORD_Destroy](#).

2.2.2 RKADK_RECORD_Destroy

Description

Destroy video tasks.

Syntax

```
RKADK_S32 RKADK_RECORD_Destroy(RKADK\_MW\_PTR pRecorder);
```

Parameters

Parameter name	Description	Input/output
pRecorder	Pointer to recording task	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

Notice

- The RKADK_RECORD_Destroy interface can only be used after creating a recording task.
- Only created recording tasks can be destroyed, and repeated destruction of the same recording task is not supported.

Example

[rkadk_record_test](#).

See Also

[RKADK_RECORD_Create](#)

2.2.3 RKADK_RECORD_Start

Description

Start recording task.

Syntax

```
RKADK_S32 RKADK_RECORD_Start(RKADK MW PTR pRecorder);
```

Parameters

Parameter name	Description	Input/output
pRecorder	Pointer to recording task	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

Notice

- The RKADK_RECORD_Start interface can only be used after creating a recording task.
- It is possible to restart a recording task after stopping it.

Example

[rkadk_record_test](#).

See Also

[RKADK_RECORD_Stop](#)

2.2.4 RKADK_RECORD_Stop

Description

Stop recording task.

Syntax

```
RKADK_S32 RKADK_RECORD_Stop(RKADK MW PTR pRecorder);
```

Parameters

Parameter name	Description	Input/output
pRecorder	Pointer to recording task	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

Notice

- The RKADK_RECORD_Stop interface can only be used after creating a recording task.
- Repeatedly stopping the same recording task is not supported.

Example

[rkadk_record_test](#).

See Also

[RKADK_RECORD_Start](#)

2.2.5 RKADK_RECORD_Single_Start

Description

Start the recording task for a specified stream.

Syntax

RKADK_S32 RKADK_RECORD_Single_Start([RKADK_MW_PTR](#) pRecorder, [RKADK_STREAM_TYPE_E](#) enStrmType);

Parameters

Parameter Name	Description	Input/Output
pRecorder	Pointer to recording task	Input
enStrmType	Stream type	Input

Return Value

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_record.h

Library file: librkadk.so

Notes

- The RKADK_RECORD_Single_Start interface can only be used after creating a recording task.
- Used in conjunction with RKADK_RECORD_Single_Stop.
- Supports restarting the recording task after stopping.

Example

[rkadk_record_test](#).

Related Topics

[RKADK_RECORD_Single_Stop](#).

2.2.6 RKADK_RECORD_Single_Stop

Description

Stop the recording task for a specified stream.

Syntax

RKADK_S32 RKADK_RECORD_Single_Stop([RKADK_MW_PTR](#) pRecorder, [RKADK_STREAM_TYPE](#) EenStrmType);

Parameters

Parameter Name	Description	Input/Output
pRecorder	Pointer to recording task	Input
enStrmType	Stream type	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_record.h

Library file: librkadk.so

Notes

- The RKADK_RECORD_Stop interface can only be used after creating a recording task.
- Use in conjunction with RKADK_RECORD_Single_Start.
- Does not support stopping the same recording task repeatedly.

Example

[rkadk_record_test](#).

Related Topics

[RKADK_RECORD_Single_Start](#)

2.2.7 RKADK_RECORD_Reset

Description

Reconfigure the recording task.

Syntax

RKADK_S32 RKADK_RECORD_Reset([RKADK_MW_PTR](#) *ppRecorder);

parameters

Parameter name	Description	Input/output
ppRecorder	Pointer to recording task	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

Notice

- The RKADK_RECORD_Reset interface can only be used after creating a recording task.
- When switching resolution, frame rate, bit rate, encoding type, or recording type, reset the parameters of the Record module in the ini file by using the RKADK_PARAM_SetCamParam API.
- RV1126/RV1109 and RK3576 does not support dynamic switching of resolution and encoding type. You

need to RKADK_RECORD_Destroy first, then configure the new resolution or encoding type, and finally RKADK_RECORD_Create again.

- If Record and other modules share the VI channel, both the resolution of Record and multiplexing modules need to be switched simultaneously to avoid VI and VENC resolution mismatch.

Example

[rkadk_record_test](#).

See Also

None

2.2.8 RKADK_RECORD_ManualSplit

Description

Manually split video files.

Syntax

RKADK_S32 RKADK_RECORD_ManualSplit([RKADK_MW_PTR](#) pRecorder, [RKADK_REC_MANUAL_SPLIT_ATTR_S](#) *pstSplitAttr);

Parameters

Parameter name	Description	Input/output
pRecorder	Pointer to recording task	Input
pstSplitAttr	Manual split attribute parameters	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

Notice

- The RKADK_RECORD_ManualSplit interface can only be used after creating a recording task.
- Supports repeated manual splitting of video files when the manual splitting of video files has not ended.

Example

[rkadk_record_test](#).

See Also

No

2.2.9 RKADK_RECORD_GetAencChn

Description

Get the video AENC channel ID.

Syntax

```
RKADK_S32 RKADK_RECORD_GetAencChn();
```

Return value

AENC channel ID used for recording.

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

2.2.10 RKADK_GetThmInMp4

Description

Get thumbnail data from MP4 files.

Syntax

```
RKADK_S32 RKADK_GetThmInMp4(RKADK_U32 u32CamId, RKADK_CHAR *pszFileName, RKADK_U8 *pu8Buf,  
                             RKADK_U32 *pu32Size);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
pszFileName	MP4 file path	Input
pu8Buf	Input: thumbnail data storage pointer, output: actual thumbnail data	Input/Output
pu32Size	Input: pu8Buf length, output: actual thumbnail data length	Input/Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_thumb.h

Library file: librkadk.so

Example

[rkadk_thumb_test](#)

See Also

None

2.2.11 RKADK_GetThmInMp4Ex

Description

MP4 obtains thumbnail extension interface, obtains thumbnail data from MP4 files, and supports specifying the type and resolution of output thumbnails. It must be used together with [RKADK_ThmBufFree](#).

Syntax

```
RKADK_S32 RKADK_GetThmInMp4Ex(RKADK_U32 u32CamId, RKADK_CHAR *pszFileName,
RKADK\_THUMB\_ATTR S *pstThumbAttr);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
pszFileName	MP4 file path	Input
pstThumbAttr	Thumbnail attribute structure pointer	Input/output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_thumb.h

Library file: librkadk.so

Example

[rkadk_thumb_test](#)

See Also

[RKADK_ThmBufFree](#)

2.2.12 RKADK_ThmBufFree

Description

Release the memory requested by [RKADK_GetThmInMp4Ex](#). It must be used together with [RKADK_GetThmInMp4Ex](#).

Syntax

```
RKADK_S32 RKADK_ThmBufFree(RKADK\_THUMB\_ATTR\_S *pstThumbAttr);
```

Parameters

Parameter name	Description	Input/output
pstThumbAttr	Thumbnail attribute structure pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_thumb.h

Library file: librkadk.so

Example

[rkadk_thumb_test](#)

See Also

[RKADK_GetThmInMp4Ex](#)

2.2.13 RKADK_RECORD_SetRotation

Description

Set Record rotation.

Syntax

RKADK_S32 RKADK_RECORD_SetRotation([RKADK MW PTR](#) pRecorder, [ROTATION E](#) enRotation, [RKADK STREAM TYPE E](#) enStreamType);

Parameters

Parameter name	Description	Input/output
pRecorder	Pointer to recording task	Input
enRotation	Rotation angle	Input
enStreamType	Stream type	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

Example

[rkadk_record_test](#)

2.2.14 RKADK_RECORD_ToggleMirror

Description

Set Record Mirror.

Syntax

RKADK_S32 RKADK_RECORD_ToggleMirror([RKADK MW PTR](#) pRecorder, [RKADK STREAM TYPE E](#) enStrmType, bool mirror);

Parameters

Parameter name	Description	Input/output
pRecorder	Pointer to recording task	Input
enStreamType	Stream type	Input
mirror	Whether to enable mirror	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

2.2.15 RKADK_RECORD_ToggleFlip

Description

Set Record Flip.

Syntax

RKADK_S32 RKADK_RECORD_ToggleFlip([RKADK_MW_PTR](#) pRecorder, [RKADK_STREAM_TYPE_E](#) enStrmType, bool flip);

Parameters

Parameter name	Description	Input/output
pRecorder	Pointer to recording task	Input
enStreamType	Stream type	Input
flip	Whether to enable flip	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

2.2.16 RKADK_RECORD_FileCacheInit

Description

File Cache initialization is aimed at making file writing smoother. Enabling File Cache means that files are written to the storage device through DirectIO, and the kernel's cache mechanism is not effective.

Syntax

RKADK_S32 RKADK_RECORD_FileCacheInit([FILE_CACHE_ARG](#) *pstFileCacheAttr)

Parameters

Parameter name	Description	Input/output
pstFileCacheAttr	File Cache attribute pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

Notice

- File Cache is not enabled by default.
- To enable File Cache, the file_cache_env environment variable must be set

```
export file_cache_env=1
```

- If File Cache is enabled, this interface must be called before RKADK_RECORD_Create, and only needs to be called once, otherwise there is no need to call it.
- Enabling File Cache will need additional memory, and the memory size is determined by u32TotalCache.
- This interface must be used in pair with [RKADK_RECORD_FileCacheDeInit](#)

Example

[rkadk_record_test](#)

2.2.17 RKADK_RECORD_FileCacheDeInit

Description

De-initialization File Cache

Syntax

```
RKADK_S32 RKADK_RECORD_FileCacheDeInit();
```

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_record.h

Library file: librkadk.so

Notice

- It must be used together with [RKADK_RECORD_FileCacheInit](#).
- If File Cache is enabled, this interface needs to be called after RKADK_RECORD_Destroy, otherwise there is no need to call it.

[rkadk_record_test](#)

2.2.18 RKADK_RECORD_FileCacheSetMode

Description

Set the recording type for File Cache.

Syntax

```
void RKADK_RECORD_FileCacheSetMode(RKADK\_REC\_TYPE\_E enRecType);
```

Parameters

Parameter Name	Description	Input/Output
enRecType	Recording type	Input

Requirements

Header file: rkadk_record.h

Library file: librkadk.so

Notes

- After enabling File Cache, when switching recording types, this API must be called to set a new recording type for File Cache.

[rkadk aov record test](#)

2.2.19 RKADK_MEDIA_EnablePostIsp

Description

Enable post AI ISP, in addition to the interface, you can also enable post AI ISP by configuring post_aiisp in sensor ini.

Syntax

```
RKADK_S32 RKADK_MEDIA_EnablePostIsp(RKADK_U32 u32CamId, RKADK\_STREAM\_TYPE\_E enStrmType, RKADK\_POST\_ISP\_ATTR\_S *pstPostIspAttr);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
enStrmType	Stream type	Input
pstPostIspAttr	Post AI ISP attribute pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_media_comm.h

Library file: librkadk.so

2.2.20 RKADK_MEDIA_SetPostIspAttr

Description

Dynamically set post AI ISP attributes.

Syntax

```
RKADK_S32 RKADK_MEDIA_SetPostIspAttr(RKADK_U32 u32CamId, RKADK\_STREAM\_TYPE\_E enStrmType, bool bEnable, RKADK\_POST\_ISP\_ATTR\_S *pstPostIspAttr);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
enStrmType	Stream type	Input
bEnable	Post AI ISP function switch, dynamic attribute	Input
pstPostIspAttr	Post AI ISP attribute pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_media_comm.h

Library file: librkadk.so

2.2.21 RKADK_RECORD_SetPipAttr

Description

Dynamically set picture-in-picture (PiP) attributes.

Syntax

RKADK_S32 RKADK_RECORD_SetPipAttr([RKADK_MW_PTR](#) pRecorder, [RKADK_PIP_ATTR_S](#) *pstPipAttr);

Parameters

Parameter Name	Description	Input/Output
pRecorder	Pointer to recording task	Input
pstPipAttr	Picture-in-picture attributes	Input

Return Value

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_record.h

Library file: librkadk.so

Note

- To enable the Picture-in-Picture feature, it must be enabled through `stPipAttr` when `RKADK_RECORD_Create`, which will then create the Picture-in-Picture pathway.

2.3 Type of Data

The video recording module mainly provides the following data types:

[RKADK_MW_PTR](#): Pointer to recording task

[RECORD_FILE_NUM_MAX](#): The maximum number of files recorded simultaneously by a single recording task

[RKADK_REC_EVENT_CALLBACK_FN](#): Event callback function pointer

[RKADK_REC_TYPE_E](#): Recording type enumeration

[RKADK_REC_REQUEST_FILE_NAMES_FN](#): Request video file name function pointer

[RKADK_REC_PTS_CALLBACK_FN](#): Video frame timestamp callback function pointer

[RKADK_RECORD_ATTR_S](#): Recording task attribute structure

[RKADK_REC_MANUAL_SPLIT_ATTR_S](#): Manually split attribute structure

[FILE_CACHE_ARG](#): File Cache attribute structure

[RKADK_POST_ISP_ATTR_S](#): Post AI ISP attribute structure

[RKADK_MOUNT_SDCARD_FN](#): SD card mounting function pointer

[RKADK_AOV_ATTR_S](#): AOV attribute structure

[RKADK_PIP_ATTR_S](#): Picture-in-Picture attribute structure

2.3.1 Public Data Types

Description

Definition of basic data types.

Definition

```
typedef unsigned char RKADK_U8;
typedef unsigned short RKADK_U16;
typedef unsigned int RKADK_U32;

typedef signed char RKADK_S8;
typedef short RKADK_S16;
typedef int RKADK_S32;

typedef unsigned long RKADK_UL;
typedef signed long RKADK_SL;
```

```

typedef float RKADK_FLOAT;
typedef double RKADK_DOUBLE;

#ifdef _M_IX86
typedef unsigned long long RKADK_U64;
typedef long long RKADK_S64;
#else
typedef unsigned __int64 RKADK_U64;
typedef __int64 RKADK_S64;
#endif

typedef char RKADK_CHAR;
#define RKADK_VOID void

typedef unsigned int RKADK_HANDLE;

typedef RKADK_VOID *RKADK_MW_PTR;

typedef char (*ARRAY_FILE_NAME)[RKADK_MAX_FILE_PATH_LEN];

typedef enum {
    RKADK_FALSE = 0,
    RKADK_TRUE = 1,
} RKADK_BOOL;

#ifdef NULL
#define NULL 0L
#endif

#define RKADK_NULL 0L
#define RKADK_SUCCESS 0
#define RKADK_FAILURE (-1)

```

2.3.2 RKADK_MW_PTR

Description

Define task pointer

Definition

```
typedef RKADK_VOID *RKADK_MW_PTR;
```

2.3.3 RKADK_MAX_SENSOR_CNT

Description

Define the maximum number of sensors supported, which can be adjusted according to the actual situation

Definition

```
#define RKADK_MAX_SENSOR_CNT 8
```

2.3.4 RECORD_FILE_NUM_MAX

Description

Define the maximum number of files recorded simultaneously by a single recording task.

Definition

```
#define RECORD_FILE_NUM_MAX 2
```

2.3.5 RKADK_REC_EVENT_CALLBACK_FN

Description

Define the video event callback function pointer.

Definition

```
typedef RKADK_MUXER_EVENT_CALLBACK_FN RKADK_REC_EVENT_CALLBACK_FN;
```

Related data types and interfaces

[RKADK_MUXER_EVENT_CALLBACK_FN](#)

2.3.6 RKADK_REC_TYPE_E

Description

Define the enumeration of recording types.

Definition

```
typedef RKADK_MUXER_REC_TYPE_E RKADK_REC_TYPE_E;
```

Related Data Types and Interfaces

[RKADK_MUXER_REC_TYPE_E](#)

2.3.7 RKADK_REC_REQUEST_FILE_NAMES_FN

Description

Define the callback function pointer to request the video file name.

Definition

```
typedef RKADK_S32 (*RKADK_REC_REQUEST_FILE_NAMES_FN)(RKADK_MW_PTR pRecorder, RKADK_U32
u32FileCnt, RKADK_CHAR(*paszFilename)[RKADK_MAX_FILE_PATH_LEN]);
```

Members

Member Name	Description
pRecorder	Pointer to recording task
u32FileCnt	Number of requested file names
paszFilename	Store file name buffer

Related data types and interfaces

[RKADK_MW_PTR](#)

[RKADK_RECORD_ATTR_S](#)

2.3.8 RKADK_REC_PTS_CALLBACK_FN

Description

Define the video frame timestamp callback function pointer.

Definition

```
typedef RKADK_MUXER_PTS_CALLBACK_FN RKADK_REC_PTS_CALLBACK_FN;
```

Related data types and interfaces

[RKADK_MUXER_PTS_CALLBACK_FN](#)

[RKADK_RECORD_ATTR_S](#)

2.3.9 RKADK_MOUNT_SDCARD_FN

Description

Define the SD card mounting function pointer.

Definition


```
typedef int (*RKADK_MOUNT_SDCARD_FN)(void);
```

Related Data Types and Interfaces

[RKADK_RECORD_ATTR_S](#)

2.3.10 RKADK_RECORD_ATTR_S

Description

Define the recording task attribute structure.

Definition

```
typedef struct {
    RKADK_S32 s32CamID; /* Camera ID */
    RKADK_U32 u32FragKeyFrame;
    RKADK_REC_REQUEST_FILE_NAMES_FN pfnRequestFileNames; /* rec callbak */
    RKADK_REC_EVENT_CALLBACK_FN pfnEventCallback; /* event callbak */
    RKADK_AOV_ATTR_S stAovAttr;
    RKADK_POST_ISP_ATTR_S *pstPostIspAttr;
    RKADK_MOUMNT_SDCARD_FN pfnMountSdcard;
    RKADK_PIP_ATTR_S stPipAttr[RECORD_FILE_NUM_MAX];
    RKADK_U32 u32GetThumbTime[RECORD_FILE_NUM_MAX]; /* get thumbnail delay time(ms) when
enbale file cache, default: 3000(ms) */
    RKADK_THIRD_MUXER_ATTR_S *pstThirdMuxerAttr; /* third party muxer attr */
} RKADK_RECORD_ATTR_S;
```

Members

Member Name	Description
s32CamID	Camera ID
u32FragKeyFrame	Whether the video file is sliced into I frames
pfnRequestFileNames	Request file name function pointer
pfnEventCallback	Recording event callback function pointer
stAovAttr	AOV (Always On Video) attributes
pstPostIspAttr	Post AI ISP attributes
pfnMountSdcard	Sdcard mount function pointer
stPipAttr	Picture-in-picture attributes
u32GetThumbTime	Get thumbnail delay time(ms) when enbale file cache
pstThirdMuxerAttr	Third party Muxer attribute pointer

Related data types and interfaces

[RKADK_REC_EVENT_CALLBACK_FN](#)

[RKADK_REC_REQUEST_FILE_NAMES_FN](#)

[RKADK_MOUNT_SDCARD_FN](#)

[RKADK_AOV_ATTR_S](#)

[RKADK_POST_ISP_ATTR_S](#)

[RKADK_PIP_ATTR_S](#)

[RKADK_THIRD_MUXER_ATTR_S](#)

[RKADK_RECORD_Create](#)

2.3.11 RKADK_REC_MANUAL_SPLIT_ATTR_S

Description

Define manually split attribute structure.

Definition

```
typedef MUXER_MANUAL_SPLIT_ATTR_S RKADK_REC_MANUAL_SPLIT_ATTR_S;
```

Related data types and interfaces

[MUXER_MANUAL_SPLIT_ATTR_S](#)

[RKADK_RECORD_ManualSplit](#)

2.3.12 FILE_CACHE_ARG

Description

Define the File Cache attribute structure.

Definition

```
typedef struct _FILE_CACHE_ARG {  
    const char *sdcard_path;  
    int write_cache; /* write cache size(byte), default 1M */  
    int total_cache; /* total cache size(byte), default 10M */  
    FILE_WRITE_THREAD_ARG write_thread_arg;  
    FILE_SDCARD_ARG sdcard_arg;  
} FILE_CACHE_ARG;
```

Members

Member Name	Description
sdcard_path	SD card mounting path
write_cache	Cache size for each write file
total_cache	Total Cache size
write_thread_arg	Write thread attribute
sdcard_arg	sdcard attribute

Related data types and interfaces

[RKADK_RECORD_FileCacheInit](#)

[FILE_WRITE_THREAD_ARG](#)

[FILE_SDCARD_ARG](#)

2.3.13 FILE_WRITE_THREAD_ARG

Description

Define the write thread attribute structure.

Definition

```
typedef enum _FILE_SCHED_POLICY {
    FILE_SCHED_OTHER = 0,
    FILE_SCHED_BATCH,
    FILE_SCHED_IDLE,
    FILE_SCHED_FIFO,      /* sched_priority[1, 99] */
    FILE_SCHED_RR,        /* sched_priority[1, 99] */
} FILE_SCHED_POLICY;

typedef struct _FILE_WRITE_THREAD_ARG {
    FILE_SCHED_POLICY sched_policy;
    int priority; /* SCHED_OTHER/SCHED_IDLE/SCHED_BATCH inoperative */
} FILE_WRITE_THREAD_ARG;
```

Members

Member Name	Description
sched_policy	Thread schedule policy
priority	Thread priority

Related data types and interfaces

[RKADK_RECORD_FileCacheInit](#)

2.3.14 FILE_SDCARD_ARG

Description

Define the sdcard attribute structure.

Definition

```
typedef struct _FILE_SDCARD_ARG {
    FILE_CACHE_SDCARD_LOCK lock;
    FILE_CACHE_SDCARD_UNLOCK unlock;
    FILE_CACHE_MOUmnt_SDCARD mount_sdcard;
    FILE_CACHE_UMOUmnt_SDCARD umount_sdcard;
} FILE_SDCARD_ARG;
```

Members

Member Name	Description
lock	sdcard operation lock function
unlock	sdcard operation unlock function
mount_sdcard	sdcard mount function
umount_sdcard	sdcard unmount function

Related data types and interfaces

2.3.15 RKADK_POST_ISP_ATTR_S

Description

Define the post AI ISP attribute structure.

Definition

```
typedef struct {
    AIIISP_CALLBACK_FUNC_S stAiIspCallback; /* post isp callback function */
    const RK_CHAR          *pModelFilePath; /* post isp model file path */
    RK_U32                  u32FrameBufCnt; /* RW; frame buffer cnt */
} RKADK_POST_ISP_ATTR_S;
```

Members

Member Name	Description
stAiIspCallback	AI NR parameter update callback function
pModelFilePath	Post AI ISP model file path
u32FrameBufCnt	frame buffer cnt, default 1

Related data types and interfaces

[RKADK_MEDIA_EnablePostIsp](#)

[RKADK_MEDIA_SetPostIspAttr](#)

2.3.16 RKADK_AOV_ATTR_S

Description

Define the AOV attribute structure.

Definition

```
typedef struct {
    RKADK_ISP_WAKE_UP_PAUSE_FN pfnSingleFrame;
    RKADK_ISP_WAKE_UP_RESUME_FN pfnMultiFrame;
} RKADK_AOV_ATTR_S;
```

Members

Member Name	Description
pfnSingleFrame	Pointer to the single-frame mode function
pfnMultiFrame	Pointer to the multi-frame mode function

Related Data Types and Interfaces

[RKADK_RECORD_Create](#)

2.3.17 RKADK_PIP_ATTR_S

Description

Define the structure for picture-in-picture attributes.

Definition

```
typedef struct {
    RKADK_BOOL bEnablePip;           /* enable picture-in-picture */
    RKADK_U32 u32AvsGrpId;           /* AVS group id [0, AVS_MAX_GRP_NUM)] */
    RKADK_U32 u32AvsBufCnt;          /* default 2, min value 2 */
    RKADK_U32 u32SubCamId;           /* subwindow camera id */
    RKADK_STREAM_TYPE_E enSubStreamType; /* subwindow stream type */
    RKADK_RECT_S stSubRect;          /* The subwindow is based on the display area
of the main window */
} RKADK_PIP_ATTR_S;
```

Members

Member Name	Description
bEnablePip	Enable picture-in-picture
u32AvsGrpId	AVS Group Id used for picture-in-picture
u32AvsBufCnt	Maximum number of target image buffers for AVS
u32SubCamId	Subwindow Camera Id
enSubStreamType	Subwindow stream type
stSubRect	Display area of the subwindow within the main window

Related Data Types and Interfaces

[RKADK_RECORD Create](#)

[RKADK_RECORD SetPipAttr](#)

3. Muxer

This section provides basic muxer functionality, offering the following features to the product layer:

- Creation and destruction of muxer.
- Starting and stopping of muxer.
- Manual file splitting

Each muxer supports the simultaneous packaging of up to two files.

Each muxer file includes at least one video stream, with a maximum support of packaging one video stream and one audio stream simultaneously.

Multiple muxer can be created at the same time.

Supports third-party stream packaging.

3.1 API Reference

3.1.1 RKADK_MUXER_Create

Description

Create a muxer.

Syntax

```
RKADK_S32 RKADK_MUXER_Create(RKADK\_MUXER\_ATTR\_S *pstMuxerAttr, RKADK\_MW\_PTR *ppHandle);
```

Parameters

Parameter Name	Description	Input/Output
pstMuxerAttr	Muxer attributes	Input
ppHandle	Pointer to created muxer	Output

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- Creating the same muxer repeatedly is not supported.
- After creating the muxer, you must call [RKADK_MUXER_Enable](#) to enable the muxer, and then call [RKADK_MUXER_Start](#) to start the muxer.

Example

[rkadk_muxer_test](#).

Related Topics

[RKADK_MUXER_Destroy](#).

3.1.2 RKADK_MUXER_Destroy

Description

Destroy the muxer.

Syntax

```
RKADK_S32 RKADK_MUXER_Destroy(RKADK MW PTR pHandle);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Muxer pointer	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- Only created muxers can be destroyed; repeated destruction of the same muxer is not supported.
- Before destroying the muxer, you must first call [RKADK_MUXER_Stop](#) to stop the muxer, and then call [RKADK_MUXER_Disable](#) to disable the muxer.

Example

[rkadk_muxer_test](#).

Related Topics

[RKADK_MUXER_Create](#)

3.1.3 RKADK_MUXER_Enable

Description

Enable the muxer.

Syntax

```
RKADK_S32 RKADK_MUXER_Enable(RKADK\_MUXER\_ATTR\_S *pstMuxerAttr, RKADK MW PTR pHandle);
```

Parameters

Parameter Name	Description	Input/Output
pstMuxerAttr	Muxer attributes	Input
pHandle	Muxer pointer	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- Use in conjunction with [RKADK_MUXER_Disable](#).

Example

[rkadk_muxer_test](#).

Related Topics

[RKADK_MUXER_Disable](#).

3.1.4 RKADK_MUXER_Disable

Description

Disable the muxer.

Syntax

RKADK_S32 RKADK_MUXER_Disable([RKADK_MW_PTR](#) pHandle);

Parameters

Parameter Name	Description	Input/Output
pHandle	Muxer pointer	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- Used in conjunction with [RKADK_MUXER_Enable](#).

Example

[rkadk_muxer_test](#).

Related Topics

[RKADK_MUXER_Enable](#)

3.1.5 RKADK_MUXER_Start

Description

Initialize the muxer.

Syntax

```
RKADK_S32 RKADK_MUXER_Start(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Muxer pointer	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- Muxer can be restarted after being stopped.

Example

[rkadk muxer test.](#)

Related Topics

[RKADK_MUXER_Stop](#)

3.1.6 RKADK_MUXER_Stop

Description

Stop the muxer.

Syntax

```
RKADK_S32 RKADK_MUXER_Stop(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Muxer pointer	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- Repeated stopping of the same muxer is not supported.

Example

[rkadk muxer test.](#)

Related Topics

[RKADK_MUXER_Start](#)

3.1.7 RKADK_MUXER_Single_Start

Description

Starts the specified stream's muxer.

Syntax

```
RKADK_S32 RKADK_MUXER_Single_Start(RKADK\_MW\_PTR pHandle, int s32MuxerId, int s32VencChn);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Encapsulator pointer	Input
s32MuxerId	Muxer Id	Input
s32VencChn	Venc channel; if it's a third-party stream muxer, s32VencChn must be set to -1	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- Used in conjunction with [RKADK_MUXER_Single_Stop](#).
- Supports restarting the muxer after it has been stopped.

Example

[rkadk_muxer_test](#).

Related Topics

[RKADK_MUXER_Single_Stop](#)

3.1.8 RKADK_MUXER_Single_Stop

Description

Stop the specified stream's muxer.

Syntax

```
RKADK_S32 RKADK_MUXER_Single_Stop(RKADK MW PTR pHandle, int s32MuxerId, int s32VencChn);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Packager pointer	Input
s32MuxerId	Muxer Id	Input
s32VencChn	Venc channel, if it is a third-party stream packaging, s32VencChn must be set to -1	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- Use in conjunction with [RKADK_MUXER_Single_Start](#).
- Does not support stopping the same muxer repeatedly.

Example

[rkadk_muxer_test](#).

Related Topics

[RKADK_MUXER_Single_Start](#)

3.1.9 RKADK_MUXER_ManualSplit

Description

Manually split files.

Syntax

```
RKADK_S32 RKADK_MUXER_ManualSplit(RKADK\_MW\_PTR pHandle, RKADK\_MUXER\_MANUAL\_SPLIT\_ATTR\_S *pstSplitAttr);
```

Parameters

Parameter Name	Description	Input/Output
pRecorder	Muxer pointer	Input
pstSplitAttr	Manual split attribute parameters	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- Supports repeatedly manually splitting files before the manual splitting is completed.

Example

[rkadk_muxer_test](#)

3.1.10 RKADK_MUXER_Reset

Description

Reset the muxer.

Syntax

```
RKADK_S32 RKADK_MUXER_Reset(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Muxer pointer	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librokadk.so

Notes

- Before calling [RKADK_MUXER_Reset](#), first call [RKADK_MUXER_SetResetState](#) to set the muxer to reset state; after [RKADK_MUXER_Reset](#), you need to call [RKADK_MUXER_ResetParam](#) to reconfigure the muxer parameters; after [RKADK_MUXER_ResetParam](#), call [RKADK_MUXER_SetResetState](#) again to set the muxer to a non-reset state.

Example

[rkadk_muxer_test](#).

Related Topics

[RKADK_MUXER_ResetParam](#)

[RKADK_MUXER_SetResetState](#)

3.1.11 RKADK_MUXER_ResetParam

Description

Reconfigure the muxer parameters.

Syntax

```
RKADK_S32 RKADK_MUXER_ResetParam(RKADK\_MUXER\_ATTR\_S *pstMuxerAttr, RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter Name	Description	Input/Output
pstMuxerAttr	Muxer attributes	Input
pHandle	Muxer pointer	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Example

[rkadk_muxer_test](#).

Related Topics

[RKADK_MUXER_Reset](#)

[RKADK_MUXER_SetResetState](#)

3.1.12 RKADK_MUXER_SetResetState

Description

Set the muxer reset state.

Syntax

```
void RKADK_MUXER_SetResetState(RKADK\_MW\_PTR pHandle, bool state);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Muxer pointer	Input
state	Whether to Reset, set to True before Reset, and False after Reset	Input

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Example

[rkadk_muxer_test](#).

Related Topics

[RKADK_MUXER_Reset](#)

[RKADK_MUXER_ResetParam](#)

3.1.13 RKADK_MUXER_BuildInThumb

Description

Build-in thumbnails into files.

Syntax

```
RKADK_S32 RKADK_MUXER_BuildInThumb(RKADK MW PTR pHandle, RKADK\_MUXER\_THUMB\_INFO\_S stThumbInfo);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Encoder pointer	Input
stThumbInfo	Thumbnail information	Input

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Notes

- If you need to build-in thumbnails into files, [RKADK_MUXER_Create](#) should be properly configured with thumbnail resolution to reserve space for thumbnail storage.
- Only MP4 files support build-in thumbnails.

Example

[rkadk_muxer_test](#).

3.1.14 RKADK_MUXER_WriteVideoFrame

Description

Writing video stream data.

Syntax

```
int RKADK_MUXER_WriteVideoFrame(RKADK\_MUXER\_DATA\_S stData, void *handle);
```

Parameters

Parameter Name	Description	Input/Output
handle	Muxer pointer	Input
stData	Video stream data	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Example

[rkadk_muxer_test](#).

3.1.15 RKADK_MUXER_WriteAudioFrame

Description

Writing audio stream data.

Syntax

int RKADK_MUXER_WriteAudioFrame([RKADK_MUXER_DATA_S](#) stData, void *handle);

Parameters

Parameter Name	Description	Input/Output
handle	Muxer pointer	Input
stData	Audio stream data	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_muxer.h

Library file: librkadk.so

Example

[rkadk_muxer_test](#).

3.2 Data Types

The Muxer module primarily provides the following data types:

[RKADK_MUXER_FILE_TYPE_E](#): Muxer file types

[RKADK_MUXER_EVENT_E](#): Muxer event types

[RKADK_MUXER_FILE_EVENT_INFO_S](#): Structure for file-related event information

[RKADK_MUXER_EVENT_INFO_S](#): Structure for muxer event information

[RKADK_MUXER_EVENT_CALLBACK_FN](#): Pointer to event callback function

[RKADK_MUXER_MANUAL_SPLIT_ATTR_S](#): Structure for manual split attributes

[RKADK_MUXER_MANUAL_SPLIT_TYPE_E](#): Manually split enumeration types

[RKADK_MUXER_ATTR_S](#): Structure for muxer attributes

[RKADK_MUXER_REC_TYPE_E](#): Muxer recording types

[RKADK_MUXER_TYPE_E](#): Muxer types

[RKADK_MUXER_REQUEST_FILE_NAME_CB](#): Pointer to function requesting file names

[RKADK_MUXER_STREAM_ATTR_S](#): Structure for muxer stream attributes

[RKADK_MUXER_PRE_RECORD_ATTR_S](#): Structure for pre-record attributes

[RKADK_MUXER_PRE_RECORD_MODE_E](#): Pre-record mode enumeration

[RKADK_MUXER_PTS_CALLBACK_FN](#): Pointer to video frame timestamp callback function

[RKADK_MUXER_PTS_INFO_S](#): Structure for timestamp information

[RKADK_MUXER_DATA_S](#): Structure for packaging data

[RKADK_MUXER_THUMB_INFO_S](#): Structure for thumbnail information

[RKADK_THIRD_MUXER_ATTR_S](#): Third party Muxer attributes

3.2.1 RKADK_MUXER_FILE_TYPE_E

Description

Defines the enumeration of muxer file types.

Definition

```
typedef enum rkMUXER_TYPE_E {  
    RKADK_MUXER_TYPE_MP4 = 0,  
    RKADK_MUXER_TYPE_MPEGTS,  
    RKADK_MUXER_TYPE_FLV,  
    RKADK_MUXER_TYPE_BUTT  
} RKADK_MUXER_FILE_TYPE_E;
```

Members

Member Name	Description
RKADK_MUXER_TYPE_MP4	MP4
RKADK_MUXER_TYPE_MPEGTS	TS
RKADK_MUXER_TYPE_FLV	FLV

Notes

- Only MP4 files support build-in thumbnails.

3.2.2 RKADK_MUXER_EVENT_E

Description

Define the Muxer event enumeration type.

Definition

```
typedef enum rkMUXER_EVENT_E {
    RKADK_MUXER_EVENT_STREAM_START = 0,
    RKADK_MUXER_EVENT_STREAM_STOP,
    RKADK_MUXER_EVENT_FILE_BEGIN,
    RKADK_MUXER_EVENT_FILE_END,
    RKADK_MUXER_EVENT_MANUAL_SPLIT_END,
    RKADK_MUXER_EVENT_ERR_CREATE_FILE_FAIL,
    RKADK_MUXER_EVENT_ERR_WRITE_FILE_FAIL,
    RKADK_MUXER_EVENT_FILE_WRITING_SLOW,
    RKADK_MUXER_EVENT_ERR_CARD_NONEXIST,
    RKADK_MUXER_EVENT_BUTT
} RKADK_MUXER_EVENT_E;
```

Members

Member Name	Description
RKADK_MUXER_EVENT_STREAM_START	Start recording
RKADK_MUXER_EVENT_STREAM_STOP	Stop recording
RKADK_MUXER_EVENT_FILE_BEGIN	Start recording a new file
RKADK_MUXER_EVENT_FILE_END	End of file recording
RKADK_MUXER_EVENT_MANUAL_SPLIT_END	End of manual split file recording
RKADK_MUXER_EVENT_ERR_GET_FILENAME	Failed to get file name
RKADK_MUXER_EVENT_ERR_CREATE_FILE_FAIL	Reserved
RKADK_MUXER_EVENT_ERR_WRITE_FILE_FAIL	Failed to write file
RKADK_MUXER_EVENT_FILE_WRITING_SLOW	Writing files is slow
RKADK_MUXER_EVENT_ERR_CARD_NONEXIST	SD card does not exist

Related data types and interfaces

[RKADK_MUXER_EVENT_INFO_S](#)

3.2.3 RKADK_MUXER_FILE_EVENT_INFO_S

Description

Define file-related event information structure.

Definition

```
typedef struct {
    RK_CHAR asFileName[RKADK_MUXER_FILE_NAME_LEN];
    RK_U32 u32Duration; // ms
} RKADK_MUXER_FILE_EVENT_INFO_S;
```

Members

Member Name	Description
asFileName	File name
u32Duration	Actual recorded file duration

Related data types and interfaces

[RKADK_MUXER_EVENT_INFO_S](#)

3.2.4 RKADK_MUXER_EVENT_INFO_S

Description

Define the muxer event information structure.

Definition

```
typedef struct {
    RKADK_MUXER_EVENT_E enEvent;
    union {
        RKADK_MUXER_FILE_EVENT_INFO_S stFileInfo;
        RKADK_MUXER_ERROR_EVENT_INFO_S stErrorInfo;
    } unEventInfo;
} RKADK_MUXER_EVENT_INFO_S;
```

Members

Member Name	Description
enEvent	Recording event type
stFileInfo	File event information
stErrorInfo	Error event information (Reserved)

Related data types and interfaces

[RKADK_MUXER_EVENT_E](#)

[RKADK_MUXER_FILE_EVENT_INFO_S](#)

3.2.5 RKADK_MUXER_EVENT_CALLBACK_FN

Description

Define the muxer event callback function pointer.

Definition

```
typedef RKADK_VOID (*RKADK_MUXER_EVENT_CALLBACK_FN)(RKADK_MW_PTR pRecorder, const
RKADK_MUXER_EVENT_INFO_S *pstEventInfo);
```

Related data types and interfaces

[RKADK_MUXER_EVENT_INFO_S](#)

3.2.6 RKADK_REC_MANUAL_SPLIT_ATTR_S

Description

Define manually split attribute structure.

Definition

```
typedef struct {
    RKADK_MUXER_MANUAL_SPLIT_TYPE_E enManualType;           /* maual split type */
    RKADK_U32 u32DurationSec; /* file duration of manual split file */
} MUXER_MANUAL_SPLIT_ATTR_S;
```

Members

Member Name	Description
enManualType	Manually split type
u32DurationSec	Manually split video file duration

Related data types and interfaces

[RKADK_MUXER_MANUAL_SPLIT_TYPE_E](#)

[RKADK_MUXER_ManualSplit](#)

3.2.7 RKADK_MUXER_MANUAL_SPLIT_TYPE_E

Description

Define manual split type.

Definition

```
typedef enum {
    MUXER_PRE_MANUAL_SPLIT,      /* pre manual split type */
    MUXER_NORMAL_MANUAL_SPLIT,   /* normal manual split type */
} RKADK_MUXER_MANUAL_SPLIT_ATTR_S;
```

Members

Member Name	Description
MUXER_PRE_MANUAL_SPLIT	Manually split video files and pre-record
MUXER_NORMAL_MANUAL_SPLIT	Manually split video files

Related data types and interfaces

[RKADK_REC_MANUAL_SPLIT_ATTR_S](#)

3.2.8 RKADK_THIRD_MUXER_ATTR_S

Description

Defines the structure of the third party muxer attributes.

Definition

```
typedef struct {
    RKADK_THIRD_MUXER_INIT_FN pfnMuxerInit;
    RKADK_THIRD_MUXER_DEINIT_FN pfnMuxerDeinit;
    RKADK_THIRD_MUXER_WRITE_VIDEO_FN pfnWriteVideo;
    RKADK_THIRD_MUXER_WRITE_AUDIO_FN pfnWriteAudio;
    RKADK_THIRD_MUXER_GET_THUMB_POS_FN pfnGetThumbPos;
} RKADK_THIRD_MUXER_ATTR_S;
```

Members

Member Name	Description
pfnMuxerInit	Third party Muxer initialization function pointer
pfnMuxerDeinit	Third party Muxer anti initialization function pointer
pfnWriteVideo	Third party Muxer writes video frame function pointer
pfnWriteAudio	Third party Muxer writes audio frame function pointer
pfnGetThumbPos	Third party Muxer obtains thumbnail write position pointer

Notes

- Enable third-party Muxer, it is not supported to use [RKADK_GetthmInMp4](#) and [RKADK_GetthmInMp4Ex](#) to obtain video thumbnails.

Related data types and interfaces

[RKADK_MUXER_ATTR_S](#)

3.2.9 RKADK_MUXER_ATTR_S

Description

Defines the structure of the muxer attributes.

Definition

```
typedef struct {
    RKADK_U32 u32CamId;
    RKADK_MUXER_REC_TYPE_E enRecType;
    RKADK_MUXER_TYPE_E enMuxerType;
    RKADK_U32 u32StreamCnt; /* stream cnt */
}
```



```

RKADK_U32 u32FragKeyFrame;
RKADK_MUXER_STREAM_ATTR_S
astStreamAttr[RKADK_MUXER_STREAM_MAX_CNT]; /* array of stream attr */
RKADK_MUXER_PRE_RECORD_ATTR_S stPreRecordAttr;
RKADK_MUXER_REQUEST_FILE_NAME_CB pcbRequestFileNames;
RKADK_MUXER_EVENT_CALLBACK_FN pfnEventCallback;
RKADK_MUXER_PTS_CALLBACK_FN pfnPtsCallback;
RKADK_AOV_ATTR_S stAovAttr;
RKADK_MOUMNT_SDCARD_FN pfnMountSdcard;
bool bEnableAiisp;
RKADK_THIRD_MUXER_ATTR_S *pstThirdMuxerAttr; /* third party muxer attr */
} RKADK_MUXER_ATTR_S;

```

Members

Member Name	Description
u32CamId	Camera identifier
enRecType	Recording type, third-party stream muxer does not support AOV time-lapse
enMuxerType	Muxer type
u32StreamCnt	Number of muxer streams
u32FragKeyFrame	Whether the file is I-frame sliced
astStreamAttr	Muxer stream attributes
stPreRecordAttr	Pre-recording attributes
pcbRequestFileNames	Function pointer for requesting file names
pfnEventCallback	Event callback function pointer
pfnPtsCallback	Current video frame timestamp callback pointer
stAovAttr	AOV(Always On Video) attributes, third-party stream muxer does not support
pfnMountSdcard	Sdcard mounting function pointer, must be set in AOV time-lapse mode
bEnableAiisp	Whether to enable Aiisp
pstThirdMuxerAttr	Third party Muxer attribute pointer

Related Data Types and Interfaces

[RKADK_MUXER_REC_TYPE_E](#)

[RKADK_MUXER_TYPE_E](#)

[RKADK_MUXER_STREAM_ATTR_S](#)

[RKADK_MUXER_PRE_RECORD_ATTR_S](#)

[RKADK_MUXER_REQUEST_FILE_NAME_CB](#)

[RKADK_MUXER_EVENT_CALLBACK_FN](#)

[RKADK_MUXER_PTS_CALLBACK_FN](#)

[RKADK_AOV_ATTR_S](#)

[RKADK_MOUMNT_SDCARD_FN](#)

[RKADK_THIRD_MUXER_ATTR_S](#)

[RKADK_MUXER_Create](#)

[RKADK_MUXER_ResetParam](#)

3.2.10 RKADK_MUXER_REC_TYPE_E

Description

Define the enumeration of muxer recording types.

Definition

```
typedef enum {
    RKADK_REC_TYPE_NORMAL = 0, /* normal record */
    RKADK_REC_TYPE_LAPSE,      /* time lapse record */
    RKADK_REC_TYPE_AOV_LAPSE,  /* low power time lapse record */
    RKADK_REC_TYPE_BUTT
} RKADK_MUXER_REC_TYPE_E;
```

Members

Member Name	Description
RKADK_REC_TYPE_NORMAL	Normal recording
RKADK_REC_TYPE_LAPSE	Time-lapse video
RKADK_REC_TYPE_AOV_LAPSE	Low power time-lapse record

Related data types and interfaces

None

Note

- Only RV1126 and RV1106 and RV1126B platforms support AOV time-lapse record

3.2.11 RKADK_MUXER_TYPE_E

Description

Defines the enumeration of muxer types.

Definition

```
typedef enum {
    RKADK_MUXER_TYPE_RECORD = 0,
    RKADK_MUXER_TYPE_THIRD_STREAM,
} RKADK_MUXER_TYPE_E;
```

Members

Member Name	Description
RKADK_MUXER_TYPE_RECORD	Local recording muxer
RKADK_MUXER_TYPE_THIRD_STREAM	Third-party stream muxer

Related Data Types and Interfaces

[RKADK_MUXER_ATTR_S](#)

3.2.12 RKADK_MUXER_REQUEST_FILE_NAME_CB

Description

Defines the callback function pointer for requesting file names.

Definition

```
typedef int (*RKADK_MUXER_REQUEST_FILE_NAME_CB)(void *pHandle, char *pcFileName, unsigned
int u32MuxerId);
```

Members

Member Name	Description
pHandle	Encoder pointer
pcFileName	File name pointer
u32MuxerId	Muxer ID

Related Data Types and Interfaces

[RKADK_MUXER_ATTR_S](#)

3.2.13 RKADK_MUXER_PTS_CALLBACK_FN

Description

Defines the callback function pointer for video frame timestamps.

Definition

```
typedef RKADK_VOID (*RKADK_MUXER_PTS_CALLBACK_FN)(const RKADK_MUXER_PTS_INFO_S *pstPtsInfo);
```

Members

Member Name	Description
pstPtsInfo	Pointer to video frame timestamp information

Related Data Types and Interfaces

[RKADK_MUXER_PTS_INFO_S](#)

[RKADK_MUXER_ATTR_S](#)

3.2.14 RKADK_MUXER_PTS_INFO_S

Description

Defines the structure for timestamp information.

Definition

```
typedef struct {  
    RKADK_U32 u32CamId;  
    RKADK_S32 s32MuxerId;  
    RKADK_U32 u32ChnId;  
    RKADK_U64 u64PTS;  
    RKADK_U32 u32Seq;  
    const char *pFileName;  
} RKADK_MUXER_PTS_INFO_S;
```

Members

Member Name	Description
u32CamId	Camera ID
s32MuxerId	Muxer ID
u32ChnId	Venc Channel
u64PTS	Frame Timestamp
u32Seq	Frame Sequence Number
pFileName	File Name

Related Data Types and Interfaces

[RKADK_MUXER_PTS_CALLBACK_FN](#)

3.2.15 RKADK_MUXER_STREAM_ATTR_S

Description

Defines the structure for muxer stream attributes.

Definition

```
typedef struct {
    RKADK_S32 s32MuxerId;
    /* If it is a third-party stream that is not Rockit(such as a network stream),
       * s32ViChn/s32VencChn must set to -1.
       */
    RKADK_S32 s32ViChn;
    RKADK_S32 s32VencChn;
    RKADK_S32 s32ThumbVencChn;
    bool bUseVpss;
    RKADK_U32 u32TimeLenSec; /* record time */
    RKADK_PIP_ATTR_S stPipAttr;
    RKADK_U32 u32GetThumbTime;
    RKADK_U32 u32TrackCnt; /* track cnt*/
    RKADK_MUXER_TRACK_SOURCE_S
    aHTrackSrcHandle[RKADK_MUXER_TRACK_MAX_CNT]; /* array of track source cnt */
    RKADK_MUXER_FILE_TYPE_E enType;
} RKADK_MUXER_STREAM_ATTR_S;
```

Members

Member Name	Description
s32MuxerId	Muxer Id
s32ViChn	Vi channel, must set to -1 for third-party streams
s32VencChn	Venc channel, must set to -1 for third-party streams
s32ThumbVencChn	Thumbnail Venc channel, must set to -1 for third-party streams
bUseVpss	Whether to use Vpss, set to False for third-party streams
u32TimeLenSec	File name
stPipAttr	Picture-in-picture attributes, not effective for third-party streams
u32GetThumbTime	Built-in thumbnail timing, default 3000ms
u32TrackCnt	Number of streams
aHTrackSrcHandle	Stream attributes
enType	File type

Related Data Types and Interfaces

[RKADK_MUXER_TRACK_SOURCE_S](#)

[RKADK_MUXER_FILE_TYPE_E](#)

3.2.16 RKADK_MUXER_TRACK_SOURCE_S

Description

Defines the structure for muxer stream attributes.

Definition

```
typedef struct {
    RKADK_TRACK_SOURCE_TYPE_E enTrackType;
    union {
        RKADK_TRACK_VIDEO_SOURCE_INFO_S stVideoInfo; /* <video track info */
        RKADK_TRACK_AUDIO_SOURCE_INFO_S stAudioInfo; /* <audio track info */
    } unTrackSourceAttr;
} RKADK_MUXER_TRACK_SOURCE_S;
```

Members

Member Name	Description
enTrackType	Stream Type
stVideoInfo	Video Stream Attributes
stAudioInfo	Audio Stream Attributes

Related Data Types and Interfaces

[RKADK_TRACK_SOURCE_TYPE_E](#)

[RKADK_TRACK_VIDEO_SOURCE_INFO_S](#)

[RKADK_TRACK_AUDIO_SOURCE_INFO_S](#)

3.2.17 RKADK_TRACK_SOURCE_TYPE_E

Description

Defines the enumeration type for muxer stream tracks.

Definition

```
typedef enum {
    RKADK_TRACK_SOURCE_TYPE_VIDEO = 0,
    RKADK_TRACK_SOURCE_TYPE_AUDIO,
    RKADK_TRACK_SOURCE_TYPE_BUTT
} RKADK_TRACK_SOURCE_TYPE_E;
```

Members

Member Name	Description
RKADK_TRACK_SOURCE_TYPE_VIDEO	Video stream
RKADK_TRACK_SOURCE_TYPE_AUDIO	Audio stream

3.2.18 RKADK_TRACK_VIDEO_SOURCE_INFO_S

Description

Defines the structure muxer video stream attributes.

Definition

```
typedef struct {  
    RKADK_CODEC_TYPE_E enCodecType;  
    RKADK_CHAR cPixFmt[RKADK_PIX_FMT_LEN];  
    RKADK_U32 u32Width;  
    RKADK_U32 u32Height;  
    RKADK_U32 u32BitRate;  
    RKADK_U32 u32FrameRate;  
    RKADK_U32 u32Gop;  
    RKADK_U16 u16Profile;  
    RKADK_U16 u16Level;  
    RKADK_U32 u32ThumbWidth;  
    RKADK_U32 u32ThumbHeight;  
} RKADK_TRACK_VIDEO_SOURCE_INFO_S;
```

Members

Member Name	Description
enCodecType	Encoding Type
cPixFmt	Pixel Format
u32Width	Resolution Width
u32Height	Resolution Height
u32BitRate	Bit Rate
u32FrameRate	Framerate
u32Gop	GOP
u16Profile	Encoding Profile
u16Level	Encoding Level
u32ThumbWidth	Thumbnail Width
u32ThumbHeight	Thumbnail Height

3.2.19 RKADK_TRACK_AUDIO_SOURCE_INFO_S

Description

Defines the structure for muxer audio stream attributes.

Definition

```
typedef struct {
    RKADK_CODEC_TYPE_E enCodecType;
    RKADK_U16 u32BitWidth;
    RKADK_U32 u32ChnCnt;
    RKADK_U32 u32SampleRate;
    RKADK_U32 u32SamplesPerFrame;
    RKADK_U32 u32Bitrate;
} RKADK_TRACK_AUDIO_SOURCE_INFO_S;
```

Members

Member Name	Description
enCodecType	Codec Type
u32BitWidth	Bit Width
u32ChnCnt	Channel Count
u32SampleRate	Samplerate
u32SamplesPerFrame	Samples Per Frame
u32Bitrate	Bitrate

3.2.20 RKADK_MUXER_PRE_RECORD_ATTR_S

Description

Defines the structure for pre-record attributes.

Definition

```
typedef struct {
    RKADK_U32 u32PreRecTimeSec; /* pre record time, unit in second(s) */
    RKADK_U32 u32PreRecCacheTime;
    RKADK_MUXER_PRE_RECORD_MODE_E enPreRecordMode;
} RKADK_MUXER_PRE_RECORD_ATTR_S;
```

Members

Member Name	Description
u32PreRecTimeSec	Pre-record duration
u32PreRecCacheTime	Pre-record cache duration
enPreRecordMode	Pre-record mode

Related Data Types and Interfaces

[RKADK_MUXER_PRE_RECORD_MODE_E](#)

[RKADK_MUXER_ATTR_S](#)

Notes

- u32PreRecCacheTime must be greater than or equal to u32PreRecTimeSec and include a complete GoP to correctly obtain the I-frame.

3.2.21 RKADK_MUXER_PRE_RECORD_MODE_E

Description

Defines the enumeration type for pre-record modes.

Definition

```
typedef enum {  
    RKADK_MUXER_PRE_RECORD_NONE = 0,  
    RKADK_MUXER_PRE_RECORD_MANUAL_SPLIT, /* manual split file prerecord */  
    RKADK_MUXER_PRE_RECORD_SINGLE      /* first file prerecord */  
} RKADK_MUXER_PRE_RECORD_MODE_E;
```

Members

Member Name	Description
RKADK_MUXER_PRE_RECORD_NONE	No pre-recording
RKADK_MUXER_PRE_RECORD_MANUAL_SPLIT	Manually split file pre-recording
RKADK_MUXER_PRE_RECORD_SINGLE	First file pre-recorded

3.2.22 RKADK_MUXER_DATA_S

Description

Defines the muxer data structure.

Definition

```
typedef struct {  
    RKADK_S32 s32MuxerId;  
    RKADK_S32 s32VencChn;  
    int isKeyFrame;  
    RKADK_U64 u64Pts;  
    RKADK_U32 u32Seq;  
    RKADK_U32 u32Len;  
    MB_BLK pMbBlk;  
} RKADK_MUXER_DATA_S;
```

Members

Member Name	Description
s32MuxerId	Muxer ID
s32VencChn	Venc channel, third-party stream muxer must be set to -1
isKeyFrame	Whether it is a key frame
u64Pts	Frame timestamp
u32Seq	Frame sequence number
u32Len	Frame data length
pMbBlk	Frame buffer block pointer

Related Data Types and Interfaces

[RKADK_MUXER_WriteVideoFrame](#)

[RKADK_MUXER_WriteAudioFrame](#)

3.2.23 RKADK_MUXER_THUMB_INFO_S

Description

Defines the thumbnail information structure.

Definition

```
typedef struct {
    RKADK_S32 s32MuxerId;
    unsigned char* pBuf;
    RKADK_U32 u32Len;
} RKADK_MUXER_THUMB_INFO_S;
```

Members

Member Name	Description
s32MuxerId	Muxer Id
pBuf	Thumbnail data pointer
u32Len	Thumbnail data length

Related Data Types and Interfaces

[RKADK_MUXER_BuildInThumb](#)

4. AOV(Always On Video)


4.1 Overview

AOV (Always On Video) is a low frame rate continuous recording based on sleep&wake-up. It can switch back to the normal frame rate mode when there is an event, such as AI detection, PIR trigger, WIFI wake-up, etc.

It is recommended to enable the file cache function when using AOV. For file cache usage, please refer to the [RKADK_RECORD FileCacheInit](#) and [RKADK_RECORD FileCacheDeInit](#) APIs in the recording chapter of this document.

In order to reduce power consumption in the AOV time-lapse recording mode, the sdcard needs to be powered off after sleeping, and the sdcard must be unmounted before the application goes to sleep. When the file cache is enabled, the file cache will try to mount the sdcard when writing files, and perform file write protection, to ensure that the sdcard will not be unmounted during the file writing process.

The AOV process is shown in the figure below:

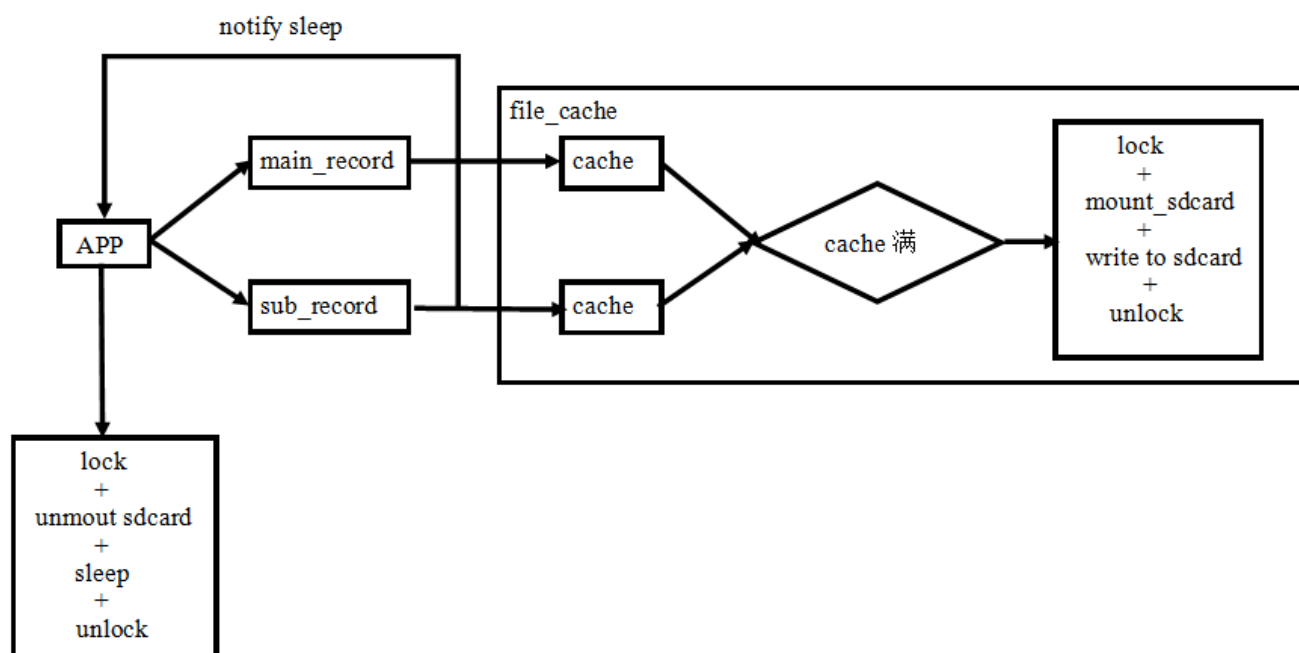

4.2 API Reference

4.2.1 RKADK_AOV_Init

Description

AOV initialization.

Grammar

```
int RKADK_AOV_Init(RKADK AOV ARG S *pstAovAttr);
```

Parameter

Parameter name	Description	Input/output
pstAovAttr	AOV attribute pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_aov.h

Library file: librkadk.so

Notice

- It Must be used in conjunction with RKADK_AOV_DeInit.
- Repeated initialization is not supported.

Example

[rkadk_aov_record_test](#)

Related topic

[RKADK AOV DeInit](#)

4.2.2 RKADK_AOV_DeInit

Description

AOV deinitialization.

Grammar

```
int RKADK_AOV_DeInit();
```

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_aov.h

Library file: librkadk.so

Notice

- It Must be used in conjunction with RKADK_AOV_Init.
- Repeated deinitialization is not supported.

Example

[rkadk aov record test](#)

Related topic

[RKADK AOV Init](#)

4.2.3 RKADK_AOV_SetSuspendTime

Description

Set the AOV scheduled sleep time in ms.

Grammar

```
int RKADK_AOV_SetSuspendTime(int u32WakeupSuspendTime);
```

Parameter

Parameter name	Description	Input/output
u32WakeupSuspendTime	Sleep time	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_aov.h

Library file: librkadk.so

Example

[rkadk aov record test](#)

4.2.4 RKADK_AOV_EnterSleep

Description

Enter AOV.

Grammar

```
int RKADK_AOV_EnterSleep();
```

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_aov.h

Library file: librkadk.so

Example

[rkadk aov record test](#)

4.2.5 RKADK_AOV_WakeupLock

Description

Lock AOV related operations.

Grammar

```
void RKADK_AOV_WakeupLock();
```

Requirement

Header file: rkadk_aov.h

Library file: librkadk.so

Notice

- Must be used in conjunction with RKADK_AOV_WakeupUnlock.

Example

[rkadk aov record test](#)

Related topic

[RKADK AOV WakeupUnlock](#)

4.2.6 RKADK_AOV_WakeupUnlock

Description

Unlocked AOV related operations.

Grammar

```
void RKADK_AOV_WakeupUnlock();
```

Requirement

Header file: rkadk_aov.h

Library file: librkadk.so

Notice

- Must be used in conjunction with RKADK_AOV_WakeupLock.

Example

[rkadk aov record test](#)

Related topic

[RKADK AOV WakeupLock](#)

4.3 Type of data

The AOV module mainly provides the following data types:

[RKADK AOV ARG S](#): AOV attribute structure

[RKADK AOV NOTIFY CALLBACK](#): AOV notification callback function pointer

4.3.1 RKADK_AOV_ARG_S

Definition

Define the AOV attribute structure.

definition

```
typedef struct {  
    RKADK_AOV_NOTIFY_CALLBACK pfnNotifyCallback;  
} RKADK_AOV_ARG_S;
```

Members

Member Name	Description
pfnNotifyCallback	AOV notification callback function pointer

[Related data types and interfaces]

[RKADK AOV Init](#)

[RKADK AOV NOTIFY CALLBACK](#)

4.3.2 RKADK_AOV_NOTIFY_CALLBACK

Definition

Define the AOV notification callback function pointer.

Definition

```
typedef void (*RKADK_AOV_NOTIFY_CALLBACK)(RKADK_AOV_EVENT_E enEvent, void *msg);
```

Members

Member Name	Description
enEvent	AOV notification event enumeration
msg	Reserve

[Related data types and interfaces]

[RKADK AOV ARG S](#)

[RKADK AOV EVENT E](#)

4.3.3 RKADK_AOV_EVENT_E

Definition

Defines the AOV notification event enumeration.

definition

```
typedef enum {
    RKADK_AOV_ENTER_SLEEP = 0,
    RKADK_AOV_EVENT_BUTT
} RKADK_AOV_EVENT_E;
```

Members

Member Name	Description
RKADK_AOV_ENTER_SLEEP	Enter AOV sleep

[Related data types and interfaces]

5. Photo

5.1 Overview

Provides basic snapshot functionality, offering JPEG encapsulation for capturing photos. The features include:

- Single snapshot
- Multiple snapshots
- JPEG Slice: Encodes VI data into JPEG in segments, which can save memory usage. When enlarging the JPEG, use interpolation algorithms to enlarge VI data in segments, and then encode it into JPEG in segments.

Notice about JPEG Slice:

- Segment height requires alignment to 16 pixels.
- Considering the stitching effect of final images, it is recommended to keep the aspect ratio of the segmented image as consistent as possible with the original images.
- The more segments, the less memory required, but the image generation time increases. Conversely, when the number of segments decreases, the required memory increases, but the image generation speed accelerates; the actual number of segments depends on the actual situation.

5.2 API Reference

5.2.1 RKADK_PHOTO_Init

Description

The photo taking task is initialized.

Syntax

```
RKADK_S32 RKADK_PHOTO_Init(RKADK\_PHOTO\_ATTR\_S *pstPhotoAttr, RKADK\_MW\_PTR *ppHandle);
```

Parameters

Parameter name	Description	Input/output
pstPhotoAttr	Photo task attribute pointer	Input
ppHandle	Created photo task pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_photo.h

Library file: librkadk.so

Notice

- Repeated initialization is not supported.

Example

[rkadk_photo_test](#)

See Also

[RKADK_PHOTO_DeInit](#)

5.2.2 RKADK_PHOTO_DeInit

Description

Deinitialize the photo taking task.

Syntax

RKADK_S32 RKADK_PHOTO_DeInit([RKADK_MW_PTR](#) pHandle);

Parameters

Parameter name	Description	Input/output
PHandle	Pointer to photo taking task	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_photo.h

Library file: librkadk.so

Notice

- Repeated deinitialization is not supported.

Example

[rkadk_photo_test](#)

See Also

[RKADK_PHOTO_DeInit](#)

5.2.3 RKADK_PHOTO_TakePhoto

Description

Take Photos.

Syntax

RKADK_S32 RKADK_PHOTO_TakePhoto([RKADK_MW_PTR](#) pHandle, [RKADK_TAKE_PHOTO_ATTR_S](#) *pstAttr);

Parameters

Parameter name	Description	Input/output
PHandle	Pointer to photo taking task	Input
pstAttr	Photo attributes	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_photo.h

Library file: librkadk.so

Notice

- The RKADK_PHOTO_TakePhoto interface can only be used after the recording task is initialized.

Example

[rkadk_photo_test](#)

See Also

No

5.2.4 RKADK_PHOTO_Reset

Description

Reconfigure the photo taking task.

Syntax

```
RKADK_S32 RKADK_PHOTO_Reset(RKADK\_MW\_PTR *ppHandle);
```

Parameters

Parameter name	Description	Input/output
ppHandle	Pointer to photo taking task	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_photo.h

Library file: librkadk.so

Notice

- The RKADK_PHOTO_Reset interface can only be used after initializing the recording task.
- When switching resolution, reset the resolution of the Photo module in the ini file by using the RKADK_PARAM_SetCamParam API.
- RV1126/RV1109 and RK3576 does not support dynamic resolution switching. You need to RKADK_PHOTO_DeInit first, then configure the new resolution, and finally RKADK_PHOTO_Init again.
- If Photo and other modules share the VI channel, both the resolution of Photo and multiplex modules need to be switched simultaneously to avoid VI and VENC resolution mismatch.

Example

[rkadk_photo_test](#)

See Also

5.2.5 RKADK_PHOTO_GetThmInJpg

Description

Get thumbnail data from a JPG file.

Syntax

```
RKADK_S32 RKADK_PHOTO_GetThmInJpg(RKADK_U32 u32CamId, RKADK_CHAR *pszFileName,  
    RKADK\_JPG\_THUMB\_TYPE\_E eThmType,  
    RKADK_U8 *pu8Buf, RKADK_U32 *pu32Size);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
pszFileName	JPG file path	Input
eThmType	Thumbnail Type	Input
pu8Buf	Input: thumbnail data storage pointer, output: actual thumbnail data	Input/Output
pu32Size	Input: length of pu8Buf , output: length of actual thumbnail data	Input/Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_photo.h

Library file: librkadk.so

Example

[rkadk_thumb_test](#)

See Also

No.

5.2.6 RKADK_PHOTO_GetThmInJpgEx

Description

JPG Thumbnail obtaining extended Interface: get thumbnail data from a JPG file, supporting the specification of the output thumbnail type and resolution. It must be used together with [RKADK_PHOTO_ThumbBufFree](#).

Syntax

```
RKADK_S32 RKADK_PHOTO_GetThmInJpgEx(RKADK_U32 u32CamId, RKADK_CHAR *pszFileName,  
    RKADK\_JPG\_THUMB\_TYPE\_E eThmType,  
    RKADK\_THUMB\_ATTR\_S *pstThumbAttr);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
pszFileName	JPG file path	Input
eThmType	Thumbnail Type	Input
pstThumbAttr	Thumbnail attribute structure pointer	Input/output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_photo.h

Library file: librkadk.so

Example

[rkadk_thumb_test](#)

See Also

[RKADK_PHOTO_ThumbBufFree](#)

5.2.7 RKADK_PHOTO_ThumbBufFree

Description

Release the memory requested by [RKADK_PHOTO_GetThmInJpgEx](#). It must be used together with [RKADK_PHOTO_GetThmInJpgEx](#).

Syntax

```
RKADK_S32 RKADK_PHOTO_ThumbBufFree(RKADK\_THUMB\_ATTR\_S *pstThumbAttr);
```

Parameters

Parameter name	Description	Input/output
pstThumbAttr	Thumbnail attribute structure pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_photo.h

Library file: librkadk.so

Example

[rkadk_thumb_test](#)

See Also

[RKADK_PHOTO_GetThmInJpgEx](#)

5.2.8 RKADK_MEDIA_SetVencRotation

Description

Set VENC channel rotation.

Syntax

RKADK_S32 RKADK_MEDIA_SetVencRotation(RKADK_U32 u32CamId, [ROTATION_E](#) enRotation, [RKADK_STREAM_TYPE_E](#) enStreamType);

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
enRotation	Rotation angle	Input
enStreamType	Stream type	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_media_comm.h

Library file: librkadk.so

5.2.9 RKADK_MEDIA_ToggleVencMirror

Description

Set VENC channel Mirror.

Syntax

```
RKADK_S32 RKADK_MEDIA_ToggleVencMirror(RKADK_U32 u32CamId, RKADK\_STREAM\_TYPE\_E enStrmType, bool mirror);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
enStreamType	Stream type	Input
mirror	Whether to enable mirror	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_media_comm.h

Library file: librkadk.so

5.2.10 RKADK_MEDIA_ToggleVencFlip

Description

Set VENC channel Flip.

Syntax

```
RKADK_S32 RKADK_MEDIA_ToggleVencFlip(RKADK_U32 u32CamId, RKADK\_STREAM\_TYPE\_E enStrmType, bool flip);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
enStreamType	Stream type	Input
flip	Whether to enable flip	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_media_comm.h

Library file: librkadk.so

5.3 Type of Data

The camera module mainly provides the following data types:

[RKADK_PHOTO_TYPE_E](#): Photo type enumeration

[RKADK_PHOTO_SINGLE_ATTR_S](#): Single snapshot attribute structure

[RKADK_PHOTO_MULTIPLE_ATTR_S](#): Multi snapshots attribute structure

[RKADK_PHOTO_RECV_DATA_S](#): Photo data structure

[RKADK_PHOTO_DATA_RECV_FN_PTR](#): Photo data receiving function pointer

[RKADK_TAKE_PHOTO_ATTR_S](#): Photo attribute structure

[RKADK_PHOTO_ATTR_S](#): Photo task attribute structure

[RKADK_JPG_THUMB_TYPE_E](#): JPG thumbnail type enumeration

[RKADK_THUMB_TYPE_E](#): Output thumbnail type enumeration

[RKADK_THUMB_ATTR_S](#): Thumbnail attribute structure

[ROTATION_E](#): Rotation type enumeration

[RKADK_PHOTO_FMT_CHANGE_S](#): Format conversion parameter structure, used for FBC0/NV16 format conversion

5.3.1 RKADK_PHOTO_TYPE_E

Description

Define the photo type enumeration.

Definition

```
typedef enum {
    RKADK_PHOTO_TYPE_SINGLE = 0,
    RKADK_PHOTO_TYPE_MULTIPLE,
    RKADK_PHOTO_TYPE_LAPSE, // TODO
    RKADK_PHOTO_TYPE_BUTT
} RKADK_PHOTO_TYPE_E;
```

Members

Member Name	Description
RKADK_PHOTO_TYPE_SINGLE	Single snapshot mode
RKADK_PHOTO_TYPE_MULTIPLE	Multi snapshots mode
RKADK_PHOTO_TYPE_LAPSE	Time-lapse photography (Reserved)

Related data types and interfaces

[RKADK TAKE PHOTO ATTR S](#)

5.3.2 RKADK_PHOTO_SINGLE_ATTR_S

Description

Define the single photo attribute structure.

Definition

```
typedef struct {
    // TODO
    RKADK_S32 s32Time_sec;
} RKADK_PHOTO_SINGLE_ATTR_S;
```

Members

Member Name	Description
s32Time_sec	Reserved

Related data types and interfaces

[RKADK TAKE PHOTO ATTR S](#)

5.3.3 RKADK_PHOTO_MULTIPLE_ATTR_S

Description

Define the multi photos attribute structure.

Definition

```
typedef struct {
    /* s32Count is -1 that means continuous photo, larger than 0 that meas photo
    * number */
    RKADK_S32 s32Count;
} RKADK_PHOTO_MULTIPLE_ATTR_S;
```

Members

Member Name	Description
s32Count	Number of continuous photo taking, -1 means continuous photo taking until RKADK_PHOTO_DeInit is called

Related data types and interfaces

[RKADK TAKE PHOTO ATTR SS](#)

5.3.4 RKADK_PHOTO_THUMB_ATTR_S

Description

Define the thumbnail parameter attribute structure.

Definition

```
#define RKADK_MPF_LARGE_THUMB_NUM_MAX 2 /* Supports the maximum number of MPF thumbnails to
be generated simultaneously */

typedef struct rkSIZE_S {
    RK_U32 u32Width;          /* Thumbnail width*/
    RK_U32 u32Height;         /* Thumbnail height */
} SIZE_S;

typedef enum {
    RKADK_PHOTO_MPF_SINGLE = 0, /* Single MPF thumbnail */
    RKADK_PHOTO_MPF_MULT I,    /* Multiple MPF thumbnails */
    RKADK_PHOTO_MPF_BUTT
} RKADK_PHOTO_MPF_MODE_E;

typedef struct {
    RKADK_U8 u8LargeThumbNum; /* Number of generated MPF thumbnails*/
    SIZE_S astLargeThumbSize[RKADK_MPF_LARGE_THUMB_NUM_MAX]; /* Each thumbnail resolution */
} RKADK_PHOTO_MPF_CFG_S;
```

```
typedef struct {
    RKADK_PHOTO_MPF_MODE_E eMode; /* MPF thumbnail mode */
    RKADK_PHOTO_MPF_CFG_S sCfg; /* MPF thumbnail configuration */
} RKADK_PHOTO_MPF_ATTR_S;

typedef struct {
    RKADK_BOOL bSupportDCF; /* Fixed resolution: 160 * 120 jpg */
    RKADK_PHOTO_MPF_ATTR_S stMPFAttr;
} RKADK_PHOTO_THUMB_ATTR_S;
```

Members

Member Name	Description
bSupportDCF	Whether to generate DCF thumbnails (fixed resolution 160*120)
stMPFAttr	MPF thumbnail attribute parameters

Related data types and interfaces

[RKADK_PHOTO_ATTR_S](#)

5.3.5 RKADK_PHOTO_RECV_DATA_S

Description

Define the photo data structure.

Definition

```
typedef struct {
    RKADK_U8 *pu8DataBuf;
    RKADK_U32 u32DataLen;
    RKADK_U32 u32CamId;
    bool bStreamEnd;
    void *userdata;
} RKADK_PHOTO_RECV_DATA_S;
```

Members

Member Name	Description
pu8DataBuf	Data pointer
u32DataLen	Data length
u32CamId	Camera ID
bStreamEnd	Whether the data stream ends, mainly used for JPEG Slice
userdata	User data pointer

Related data types and interfaces

[RKADK_PHOTO_DATA_RECV_FN_PTR](#)

5.3.6 RKADK_PHOTO_DATA_RECV_FN_PTR

Description

Define the camera data receiving function pointer.

Definition

```
typedef void (*RKADK_PHOTO_DATA_RECV_FN_PTR) (RKADK_PHOTO_RECV_DATA_S *pstData);
```

Members

Member Name	Description
pstData	Data pointer

Related data types and interfaces

[RKADK_PHOTO_RECV_DATA_S](#)

[RKADK_PHOTO_ATTR_S](#)

5.3.7 RKADK_TAKE_PHOTO_ATTR_S

Description

Define the photo attribute structure.

Definition

```
typedef struct {
    RKADK_PHOTO_TYPE_E enPhotoType;
    union tagPhotoTypeAttr {
        RKADK_PHOTO_SINGLE_ATTR_S stSingleAttr;
        RKADK_PHOTO_LAPSE_ATTR_S stLapseAttr; // TODO
        RKADK_PHOTO_MULTIPLE_ATTR_S stMultipleAttr;
    } unPhotoTypeAttr;
} RKADK_TAKE_PHOTO_ATTR_S;
```

Members

Member Name	Description
enPhotoType	Photo type
stSingleAttr	Single photo parameter attribute
stMultipleAttr	Multi photos parameter attribute
stLapseAttr	Time-lapse photo parameter attribute (Reserved)

Related data types and interfaces

[RKADK_PHOTO_TYPE_E](#)

[RKADK_PHOTO_SINGLE_ATTR_S](#)

[RKADK_PHOTO_MULTIPLE_ATTR_S](#)

[RKADK_PHOTO_TakePhoto](#)

5.3.8 RKADK_PHOTO_FMT_CHANGE_S

Description

Define the format conversion parameter structure, used for FBC0/NV16 format conversion

Definition

```
typedef struct {
    RKADK_U32 u32VencChn;
    RKADK_U32 u32VdecChn;

    //format change venc parameter
    RKADK_U32 u32BitRate;    //default 4M
    RKADK_U32 u32Profile;    //default 77
} RKADK_PHOTO_FMT_CHANGE_S;
```

Members

Member Name	Description
u32VencChn	VENC channel ID used for format conversion
u32VdecChn	VDEC channel ID used for format conversion
u32BitRate	Encoding bitrate, default 4M
u32Profile	Encoding level, default 77

Related Data Types and Interfaces

[RKADK_PHOTO_ATTR_S](#)

[RKADK_PHOTO_Init](#)

5.3.9 RKADK_PHOTO_ATTR_S

Description

Define the photo task attribute structure.

Definition

```
typedef struct {
    RKADK_U32 u32CamId;
    RKADK_PHOTO_THUMB_ATTR_S stThumbAttr;
    RKADK_PHOTO_DATA_RECV_FN_PTR pfnPhotoDataProc;
    void *userdata;
    RKADK_POST_ISP_ATTR_S *pstPostIspAttr;
    RKADK_PHOTO_FMT_CHANGE_S stFmtChange;
} RKADK_PHOTO_ATTR_S;
```

Members

Member Name	Description
u32CamId	Camera ID
stThumbAttr	Thumbnail parameter attribute
pfnPhotoDataProc	Photo data receiving callback function pointer
userdata	User data pointer
pstPostIspAttr	Post AI ISP attributes
stFmtChange	Format conversion parameters for FBC0/NV16 format conversion

Related data types and interfaces

[RKADK_PHOTO_THUMB_ATTR_S](#)

[RKADK_PHOTO_DATA_RECV_FN_PTR](#)

[RKADK_POST_ISP_ATTR_S](#)

[RKADK_PHOTO_FMT_CHANGE_S](#)

[RKADK_PHOTO_Init](#)

5.3.10 RKADK_JPG_THUMB_TYPE_E

Description

Defines the JPG thumbnail type enumeration.

Definition

```
typedef enum {
    RKADK_JPG_THUMB_TYPE_DCF,
    RKADK_JPG_THUMB_TYPE_MFP1,
    RKADK_JPG_THUMB_TYPE_MFP2,
    RKADK_JPG_THUMB_TYPE_BUTT
} RKADK_JPG_THUMB_TYPE_E;
```

Members

Member Name	Description
RKADK_JPG_THUMB_TYPE_DCF	DCF thumbnail
RKADK_JPG_THUMB_TYPE_MFP1	MPF1 thumbnail
RKADK_JPG_THUMB_TYPE_MFP2	MPF2 thumbnail

Related data types and interfaces

[RKADK_PHOTO_GetThmInJpg](#)

[RKADK_PHOTO_GetThmInJpgEx](#)

5.3.11 RKADK_THUMB_TYPE_E

Description

Defines the output thumbnail type enumeration.

Definition

```
typedef enum {
    RKADK_THUMB_TYPE_NV12 = 0,
    RKADK_THUMB_TYPE_JPEG,
    RKADK_THUMB_TYPE_RGB565,
    RKADK_THUMB_TYPE_RGBA8888,
    RKADK_THUMB_TYPE_BGRA8888
} RKADK_THUMB_TYPE_E;
```

Members

Member Name	Description
RKADK_THUMB_TYPE_NV12	Output thumbnails in NV12 format
RKADK_THUMB_TYPE_JPEG	Output thumbnails in JPG format
RKADK_THUMB_TYPE_RGB565	Output thumbnails in RGB565 format
RKADK_THUMB_TYPE_RGBA8888	Output thumbnails in RGBA9888 format
RKADK_THUMB_TYPE_BGRA8888	Output format thumbnails in BGRA8888

Related data types and interfaces

[RKADK_THUMB_ATTR_S](#)

[RKADK_GetThmInMp4Ex](#)

[RKADK_PHOTO_GetThmInJpgEx](#)

5.3.12 RKADK_THUMB_ATTR_S

Description

Define the thumbnail attribute structure.

Definition

```
typedef struct {
    RKADK_THUMB_TYPE_E enType;
    // 4 alignment
    RKADK_U32 u32Width;
    // 2 alignment
    RKADK_U32 u32Height;
    // 4 alignment
    RKADK_U32 u32VirWidth;
    // 2 alignment
    RKADK_U32 u32VirHeight;
    RKADK_U8 *pu8Buf;
    RKADK_U32 u32BufSize;
} RKADK_THUMB_ATTR_S;
```

Members

Member Name	Description
enType	The the desired thumbnail type
u32Width	Enter the desired thumbnail width and output the actual thumbnail width
u32Height	Enter the desired thumbnail height and output the actual thumbnail height
u32VirWidth	Enter the desired virtual width of the thumbnail and output the actual virtual width of the thumbnail
u32VirHeight	Enter the desired virtual height of the thumbnail and output the actual virtual height of the thumbnail
pu8Buf	Thumbnail data pointer
u32BufSize	Thumbnail data length

Related data types and interfaces

[RKADK_THUMB_TYPE_E](#)

[RKADK GetThmInMp4Ex](#)

[RKADK PHOTO GetThmInJpgEx](#)

5.3.13 ROTATION_E

Description

Defines an enumeration of rotation types.

Definition

```
typedef enum rkROTATION_E {  
    ROTATION_0      = 0,  
    ROTATION_90     = 1,  
    ROTATION_180    = 2,  
    ROTATION_270    = 3,  
    ROTATION_BUTT  
} ROTATION_E;
```

Related data types and interfaces

[RKADK MEDIA SetVencRotation](#)

6. Remote Preview

6.1 Overview

It provides callback interfaces for previewing to obtain Video and Audio information, start and stop VENC, start and stop AENC, and register functions for processing audio and video frame data.

6.2 API Reference

6.2.1 RKADK_STREAM_VideoInit

Description

Initialize Video module: VI, VENC.

Syntax

```
RKADK_S32 RKADK_STREAM_VideoInit(RKADK\_STREAM\_VIDEO\_ATTR\_S *pstVideoAttr, RKADK\_MW\_PTR *ppHandle);
```

Parameters

Parameter name	Description	Input/output
pstVideoAttr	Video attribute pointer	Input
ppHandle	Created Video task pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

- Repeated initialization of the Video module is not supported.

Example

[rkadk_stream_test](#)

See Also

[RKADK_STREAM_VideoDeInit](#)

6.2.2 RKADK_STREAM_VideoDeInit

Description

Deinitialize Video modules: VI, VENC.

Syntax

```
RKADK_S32 RKADK_STREAM_VideoDeInit(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Video task pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

- Repeated deinitialization is not supported.

Example

[rkadk_stream_test](#)

See Also

[RKADK_STREAM_VideoInit](#)

6.2.3 RKADK_STREAM_VencStart

Description

Enable VENC.

Syntax

RKADK_S32 RKADK_STREAM_VencStart([RKADK MW PTR](#) pHandle, RKADK_S32 s32FrameCnt);

Parameters

Parameter name	Description	Input/output
PHandle	Video task pointer	Input
s32FrameCnt	Specify the number of image frames to be received, -1 means infinite reception until VencStop is called	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

- The RKADK_STREAM_VencStart interface can be called only after the Video module is initialized.
- After calling RKADK_STREAM_VencStart, trigger the VENC data callback function to start receiving data.

Example

[rkadk stream test](#)

See Also

[RKADK_STREAM_VencStop](#)

6.2.4 RKADK_STREAM_VencStop

Description

Disable VENC.

Syntax

RKADK_S32 RKADK_STREAM_VencStop([RKADK MW PTR](#) pHandle);

Parameters

Parameter name	Description	Input/output
PHandle	Video task pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

None

Example

[rkadk_stream_test](#)

See Also

[RKADK_STREAM_VencStart](#)

6.2.5 RKADK_STREAM_VideoReset

Description

Reconfigure the stream video..

Syntax

RKADK_S32 RKADK_STREAM_VideoReset([RKADK_MW_PTR](#) pHandle);

Parameters

Parameter name	Description	Input/output
PHandle	Video task pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

- The RKADK_STREAM_VideoReset interface can only be used after RKADK_STREAM_VideoInit.
- When switching resolution, frame rate, bit rate, encoding type, or recording type, reset the parameters of the Preview module in the ini file by using the RKADK_PARAM_SetCamParam API.
- RV1126/RV1109 and RK3576 does not support dynamic switching of resolution and encoding type. You need to RKADK_STREAM_VideoDeInit first, then configure the new resolution or encoding type, and finally RKADK_STREAM_VideoInit again.
- If Preview and other modules share the VI channel, both the resolution of Preview and multiplexing modules need to be switched simultaneously to avoid VI and VENC resolution mismatch.

Example

[rkadk_stream_test](#)

6.2.6 RKADK_STREAM_GetVideoInfo

Description

Get Video information.

Syntax

```
RKADK_S32 RKADK_STREAM_GetVideoInfo(RKADK_U32 u32CamId, RKADK\_VIDEO\_INFO\_S *pstVideoInfo);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
pstVideoInfo	Video information structure pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

None

Example

[rkadk_stream_test](#)

See Also

None

6.2.7 RKADK_STREAM_AudioInit

Description

Initialize Audio modules: AI, AENC.

Syntax

```
RKADK_S32 RKADK_STREAM_AudioInit(RKADK\_STREAM\_AUDIO\_ATTR\_S *pstAudioAttr, RKADK\_MW\_PTR *ppHandle);
```

Parameters

Parameter name	Description	Input/output
pstAudioAttr	Audio attribute pointer	Input
ppHandle	Created Audio task pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

- Repeated initialization of the Audio module is not supported.

Example

[rkadk_stream_test](#)

See Also

[RKADK_STREAM_AudioDeInit](#)

6.2.8 RKADK_STREAM_AudioDeInit

Description

Deinitialize Audio modules: AI, AENC.

Syntax

```
RKADK_S32 RKADK_STREAM_AudioDeInit(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Audio task pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

None

Example

[rkadk_stream_test](#)

See Also

[RKADK_STREAM_AudioInit](#)

6.2.9 RKADK_STREAM_AencStart

Description

Enable AENC.

Syntax

```
RKADK_S32 RKADK_STREAM_AencStart(RKADK\_MW\_PTR *pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Audio task pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

- The RKADK_STREAM_AencStart interface can be called only after the Audio module is initialized.
- After calling RKADK_STREAM_AencStart, trigger the AENC data callback function to start receiving data.

Example

[rkadk_stream_test](#)

See Also

[RKADK_STREAM_AencStop](#)

6.2.10 RKADK_STREAM_AencStop

Description

Disable AENC.

Syntax

RKADK_S32 RKADK_STREAM_AencStop([RKADK_MW_PTR](#) *pHandle);

Parameters

Parameter name	Description	Input/output
PHandle	Audio task pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

None

Example

[rkadk_stream_test](#)

See Also

[RKADK_STREAM_AencStart](#)

6.2.11 RKADK_STREAM_GetAudioInfo

Description

Get Audio information.

Syntax

RKADK_S32 RKADK_STREAM_GetAudioInfo([RKADK_MW_PTR](#) *pHandle, [RKADK_AUDIO_INFO_S](#) *pstAudioInfo);

Parameters

Parameter name	Description	Input/output
PHandle	Audio task pointer	Input
pstAudioInfo	Audio information structure pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_stream.h

Library file: librkadk.so

Notice

None

Example

[rkadk_stream_test](#)

See Also

None

6.3 Type of Data

The playback module mainly provides the following data types:

[RKADK_CODEC_TYPE_E](#): Encoding format enumeration

[RKADK_VENC_DATA_PROC_FUNC](#): VENC data callback function pointer

[RKADK_VIDEO_STREAM_S](#): Video data stream structure

[RKADK_VENC_DATA_PACK_S](#): VENC data packet structure

[RKADK_VENC_DATA_TYPE_S](#): VENC packet type

[RKADK_VIDEO_INFO_S](#): Video information structure

[RKADK_STREAM_VIDEO_ATTR_S](#): Video task attribute structure

[RKADK_AUDIO_DATA_PROC_FUNC](#): Audio data callback function pointer

[RKADK_AUDIO_STREAM_S](#): Audio data structure

[RKADK_AUDIO_INFO_S](#): Audio information structure

[RKADK_STREAM_AUDIO_ATTR_S](#): Audio task attribute structure

6.3.1 RKADK_CODEC_TYPE_E

Description

Define the encoding format enumeration type. Audio encoding does not support AAC by default.

Definition

```
typedef enum {  
    //Video  
    RKADK_CODEC_TYPE_H264 = 0,  
    RKADK_CODEC_TYPE_H265,  
    RKADK_CODEC_TYPE_MJPEG,  
    RKADK_CODEC_TYPE_JPEG,  
  
    //Audio  
    RKADK_CODEC_TYPE_G711A,  
    RKADK_CODEC_TYPE_G711U,  
    RKADK_CODEC_TYPE_G726,  
    RKADK_CODEC_TYPE_MP2,  
    RKADK_CODEC_TYPE_MP3,  
    RKADK_CODEC_TYPE_ACC,  
    RKADK_CODEC_TYPE_PCM,  
    RKADK_CODEC_TYPE_BUTT
```

```
} RKADK_CODEC_TYPE_E;
```

6.3.2 RKADK_VENC_DATA_PROC_FUNC

Description

Define the VENC data callback function pointer.

Definition

```
typedef RKADK_S32 (*RKADK_VENC_DATA_PROC_FUNC)(RKADK_VIDEO_STREAM_S *pVStreamData);
```

Related data types and interfaces

[RKADK_VIDEO_STREAM_S](#)

6.3.3 RKADK_VIDEO_STREAM_S

Description

Define the Video stream structure.

Definition

```
typedef struct {  
    RKADK_VENC_DATA_PACK_S astPack; /* stream pack attribute */  
    RKADK_U32 u32Seq;                /* the list number of stream */  
    RKADK_BOOL bEndOfStream;         /* frame end flag */  
    RKADK_U32 u32CamId;  
} RKADK_VIDEO_STREAM_S;
```

Members

Member Name	Description
astPack	Packet structure
u32Seq	Packet sequence ID
bEndOfStream	Reserved
u32CamId	Camera ID

Related data types and interfaces

[RKADK_VENC_DATA_PACK_S](#)

[RKADK_VENC_DATA_PROC_FUNC](#)

6.3.4 RKADK_VENC_DATA_PACK_S

Description

Define the VENC packet structure.

Definition

```
typedef struct {
    RKADK_U8  *apu8Addr;           /* the virtual address of stream */
    RKADK_U32  au32Len;            /* the length of stream */
    RKADK_U64  u64PTS;            /* time stamp */
    RKADK_VENC_DATA_TYPE_S  stDataType; /* the type of stream */
} RKADK_VENC_DATA_PACK_S;
```

Members

Member Name	Description
apu8Addr	Data pointer
au32Len	Data length
u64PTS	Timestamp
stDataType	Data type

Related data types and interfaces

[RKADK_VENC_DATA_TYPE_S](#)

[RKADK_VIDEO_STREAM_S](#)

6.3.5 RKADK_VENC_DATA_TYPE_S

Description

Define VENC packet type.

Definition

```
/* the nalu type of H264 */
typedef enum {
    RKADK_H264E_NALU_BSLICE = 0, /* B SLICE types */
    RKADK_H264E_NALU_PSLICE = 1, /* P SLICE types */
    RKADK_H264E_NALU_ISLICE = 2, /* I SLICE types */
    RKADK_H264E_NALU_IDRSLICE = 5, /* IDR SLICE types */
    RKADK_H264E_NALU_SEI = 6, /* SEI types */
    RKADK_H264E_NALU_SPS = 7, /* SPS types */
    RKADK_H264E_NALU_PPS = 8, /* PPS types */
    RKADK_H264E_NALU_BUTT
} RKADK_H264E_NALU_TYPE_E;
```



```

/* the nalu type of H265 */
typedef enum {
    RKADK_H265E_NALU_BSLICE = 0,      /* B SLICE types */
    RKADK_H265E_NALU_PSLICE = 1,      /* P SLICE types */
    RKADK_H265E_NALU_ISLICE = 2,      /* I SLICE types */
    RKADK_H265E_NALU_IDRSLICE = 19,   /* IDR SLICE types */
    RKADK_H265E_NALU_VPS = 32,        /* VPS types */
    RKADK_H265E_NALU_SPS = 33,        /* SPS types */
    RKADK_H265E_NALU_PPS = 34,        /* PPS types */
    RKADK_H265E_NALU_SEI = 39,        /* SEI types */
    RKADK_H265E_NALU_BUTT
} RKADK_H265E_NALU_TYPE_E;

typedef struct {
    RKADK_CODEC_TYPE_E enPayloadType;    /* H.264/H.265/JPEG/MJPEG */
    union {
        RKADK_H264E_NALU_TYPE_E enH264EType; /* H264E NALU types */
        RKADK_H265E_NALU_TYPE_E enH265EType; /* H265E NALU types */
        RKADK_JPEGE_PACK_TYPE_E enJPEGEType; /* TODO: JPEG PACK types*/
    };
} RKADK_VENC_DATA_TYPE_S;

```

Members

Member Name	Description
enPayloadType	Encoding type
enH264EType	H264 encoded packet type
enH265EType	H265 encoded packet type
enJPEGEType	Reserved

Related data types and interfaces

[RKADK_CODEC_TYPE_E](#)

[RKADK_VENC_DATA_PACK_S](#)

6.3.6 RKADK_VIDEO_INFO_S

Description

Define Video information structure.

Definition

```
typedef struct {
    RKADK_CODEC_TYPE_E enCodecType;
    RKADK_U32 u32Width;
    RKADK_U32 u32Height;
    RKADK_U32 u32BitRate;
    RKADK_U32 u32FrameRate;
    RKADK_U32 u32Gop;
} RKADK_VIDEO_INFO_S;
```

Members

Member Name	Description
enPayloadType	Encoding type
u32Width	Resolution width
u32Height	Resolution height
u32BitRate	Bit rate
u32FrameRate	Frame rate
u32Gop	I frame interval

Related data types and interfaces

[RKADK_CODEC_TYPE_E](#)

[RKADK_STREAM_GetVideoInfo](#)

6.3.7 RKADK_STREAM_VIDEO_ATTR_S

Description

Define the Video task attribute structure.

Definition

```
typedef struct {
    RKADK_U32 u32CamId;
    RKADK_VENC_DATA_PROC_FUNC pfnDataCB;
} RKADK_STREAM_VIDEO_ATTR_S;
```

Members

Member Name	Description
u32CamId	Camera ID
pfnDataCB	Video data output callback function

Related data types and interfaces

[RKADK_VENC_DATA_PROC_FUNC](#)

[RKADK_STREAM_VideoInit](#)

6.3.8 RKADK_AUDIO_DATA_PROC_FUNC

Description

Define the AENC data callback function pointer.

Definition

```
typedef RKADK_S32  (*RKADK_AUDIO_DATA_PROC_FUNC)(RKADK_AUDIO_STREAM_S *pStreamData);
```

Related data types and interfaces

[RKADK_AUDIO_STREAM_S](#)

6.3.9 RKADK_AUDIO_STREAM_S

Description

Define the Audio data flow structure.

Definition

```
typedef struct {
    RKADK_U8 *pStream;           /* the virtual address of stream */
    RKADK_U32 u32Len;            /* stream lenth, by bytes */
    RKADK_U64 u64TimeStamp;      /* frame time stamp */
    RKADK_U32 u32Seq;            /* frame seq, if stream is not a valid frame,u32Seq is 0 */
    RKADK_CODEC_TYPE_E enType;
} RKADK_AUDIO_STREAM_S;
```

Members

Member Name	Description
pStream	Data pointer
u32Len	Data length
u64TimeStamp	Timestamp
u32Seq	Serial number
enType	Audio data encoding type

Related data types and interfaces

6.3.10 RKADK_AUDIO_INFO_S

Description

Define the Audio information structure.

Definition

```
typedef struct {
    RKADK_CODEC_TYPE_E enCodecType;
    RKADK_U32 u32ChnCnt;
    RKADK_U32 u32SampleRate;
    RKADK_U32 u32AvgBytesPerSec;
    RKADK_U32 u32SamplesPerFrame;
    RKADK_U16 u16SampleBitWidth;
} RKADK_AUDIO_INFO_S;
```

Members

Member Name	Description
enPayloadType	Encoding type
u32ChnCntt	Number of channels
u32SampleRate	Sampling rate
u32AvgBytesPerSec	Byte rate
u32SamplesPerFrame	Number of samples per frame
u16SampleBitWidth	Number of bits per sample

Related data types and interfaces

[RKADK_CODEC_TYPE_E](#)

[RKADK_STREAM_GetAudioInfo](#)

6.3.11 RKADK_STREAM_AUDIO_ATTR_S

Description

Define the Audio task attribute structure.

Definition

```
typedef struct {  
    RKADK_U32 u32CamId;  
    RKADK_CODEC_TYPE_E enCodecType;  
    RKADK_AUDIO_DATA_PROC_FUNC pfnPcmDataCB;  
    RKADK_AUDIO_DATA_PROC_FUNC pfnAencDataCB;  
} RKADK_STREAM_AUDIO_ATTR_S;
```

Members

Member Name	Description
u32CamId	Camera ID
enCodecType	Encoding type
pfnPcmDataCB	PCM data output callback function
pfnAencDataCB	Audio encoded data output callback function

Related data types and interfaces

[RKADK_AUDIO_DATA_PROC_FUNC](#)

[RKADK_STREAM AudioInit](#)

7. Player

7.1 Overview

It provides local audio and video files, RTSP network stream playback functions, and supports basic playback control operations: play, pause, seek, and screen snapshot.

The Player function is compatible with RV1109/RV1126, RV1103/RV1103, RK3308, and RK3506 platforms. RV1109/RV1126 uses hardware decoding, and other platforms use software decoding.

7.2 API Reference

7.2.1 RKADK_PLAYER_Create

Description

Create a player.

Syntax

```
RKADK_S32 RKADK_PLAYER_Create(RKADK\_MW\_PTR *ppPlayer, RKADK\_PLAYER\_CFG\_S *pstPlayCfg);
```

Parameters

Parameter name	Description	Input/output
ppPlayer	Created player pointer	Output
pstPlayCfg	Player Properties	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

- Repeated creation of the same player is not supported.

Example

[rkadk_player_test](#)

See Also

[RKADK_PLAYER_Destroy](#)

7.2.2 RKADK_PLAYER_Destroy

Description

Destroy the player.

Syntax

```
RKADK_S32 RKADK_PLAYER_Destroy(RKADK\_MW\_PTR pPlayer);
```

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

- Repeated destruction of the same player is not supported.

Example

[rkadk_player_test](#)

See Also

[RKADK_PLAYER_Create](#)

7.2.3 RKADK_PLAYER_SetDataSource

Description

Set the path of the file to be played. When Player enables the third-party demuxer library, [RKADK_PLAYER_SetDataParam](#) should be used.

Syntax

```
RKADK_S32 RKADK_PLAYER_SetDataSource(RKADK\_MW\_PTR pPlayer, const RKADK_CHAR *pszfilePath);
```

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input
pszfilePath	The path of the file to be played	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

- The RKADK_PLAYER_SetDataSource interface can be called only after the player is created.

Example

[rkadk_player_test](#)

See Also

None

7.2.4 RKADK_PLAYER_SetDataParam

Description

Set the audio and video parameters of the file to be played. Use this interface when Player enables the third-party demuxer library, otherwise use [RKADK_PLAYER_SetDataSource](#).

Syntax

RKADK_S32 RKADK_PLAYER_SetDataParam([RKADK MW PTR](#) pPlayer, [RKADK PLAYER DATA PARAM S](#) *pstDataParam);

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input
pstDataParam	Audio and video parameters of the file to be played	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

- The RKADK_PLAYER_SetDataParam interface can be called only after the player is created.

Example

[rkadk_player_test](#)

See Also

[RKADK_PLAYER_SendAudioPacket](#)

[RKADK_PLAYER_SendVideoPacket](#)

7.2.5 RKADK_PLAYER_Prepare

Description

Ready to play.

Syntax

RKADK_S32 RKADK_PLAYER_Prepare([RKADK MW PTR](#) pPlayer);

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

- The RKADK_PLAYER_Prepare interface can only be called after creating the player and setting the playback path.

Example

[rkadk_player_test](#)

See Also

None

7.2.6 RKADK_PLAYER_GetCurrentPosition

Description

Get the current playback progress.

Syntax

```
RKADK_S64 RKADK_PLAYER_GetCurrentPosition(RKADK_MW_PTR pPlayer);
```

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input

Return value

Return value	Description
Playback progress, unit ms	Success
-1	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

None

Example

[rkadk_player_test](#)

See Also

None

7.2.7 RKADK_PLAYER_Play

Description

Start playing.

Syntax

RKADK_S32 RKADK_PLAYER_Play([RKADK_MW_PTR](#) pPlayer);

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

- The RKADK_PLAYER_Play interface can be called only after calling RKADK_PLAYER_Prepare.

Example

[rkadk_player_test](#)

See Also

[RKADK_PLAYER_Stop](#)

7.2.8 RKADK_PLAYER_Stop

Description

Stop playback and release resources.

Syntax

```
RKADK_S32 RKADK_PLAYER_Stop(RKADK MW PTR pPlayer);
```

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

None

Example

[rkadk_player_test](#)

See Also

[RKADK_PLAYER_Play](#)

7.2.9 RKADK_PLAYER_Pause

Description

Pause playback.

Syntax

```
RKADK_S32 RKADK_PLAYER_Pause(RKADK MW PTR pPlayer);
```

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

None

Example

[rkadk_player_test](#)

See Also

[RKADK_PLAYER_Play](#)

7.2.10 RKADK_PLAYER_Seek

Description

Seek.

Syntax

RKADK_S32 RKADK_PLAYER_Seek([RKADK MW PTR](#) pPlayer, RKADK_S64 s64TimeInMs);

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input
s64TimeInMs	Seek duration	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

- The RKADK_PLAYER_Seek interface can be called only after calling RKADK_PLAYER_Play.

Example

[rkadk_player_test](#)

See Also

[RKADK_PLAYER_Play](#)

7.2.11 RKADK_PLAYER_GetPlayStatus

Description

Get the current playback status.

Syntax

RKADK_S32 RKADK_PLAYER_GetPlayStatus([RKADK MW PTR](#) pPlayer, [RKADK_PLAYER_STATE E](#) *penState);

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input
penState	Current playback state	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

None

Example

[rkadk_player_test](#)

See Also

None

7.2.12 RKADK_PLAYER_GetDuration

Description

Get the duration of current playing file.

Syntax

RKADK_S32 RKADK_PLAYER_GetDuration([RKADK_MW_PTR](#) pPlayer, RKADK_U32 *pDuration);

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input
pDuration	The duration of current playing file, unit is ms	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

None

Example

[rkadk_player_test](#)

See Also

None

7.2.13 RKADK_PLAYER_Snapshot

Description

Player screenshot, calling this interface will encode the currently displayed picture into JPEG data. The application can obtain the generated JPEG data by registering the [RKADK_PPLAYER_SNAPSHOT_RECV_FN](#) callback.

Syntax

```
RKADK_S32 RKADK_PLAYER_Snapshot(RKADK\_MW\_PTR pPlayer);
```

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Example

[rkadk_player_test](#)

See Also

None

7.2.14 RKADK_PLAYER_SendAudioPacket

Description

When Player enables the third-party demuxer library, this interface is used to send de-capsulated audio data to Player for decoding and playback.

Syntax

```
RKADK_S32 RKADK_PLAYER_SendAudioPacket(RKADK\_MW\_PTR pPlayer, RKADK\_PLAYER\_PACKET *pstPacket);
```

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input
pstPacket	sent packet	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

- Before using this interface, you need to call RKADK_PLAYER_SetDataParam to set audio and video related parameters.

Example

[rkadk_player_test](#)

See Also

[RKADK_PLAYER_SendVideoPacket](#)

[RKADK_PLAYER_SetDataParam](#)

7.2.15 RKADK_PLAYER_SendVideoPacket

Description

When Player enables the third-party demuxer library, this interface is used to send de-capsulated video data to Player for decoding and playback.

Syntax

RKADK_S32 RKADK_PLAYER_SendVideoPacket([RKADK_MW_PTR](#) pPlayer, [RKADK_PLAYER_PACKET](#) *pstPacket);

Parameters

Parameter name	Description	Input/output
pPlayer	Player pointer	Input
pstPacket	sent packet	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_player.h

Library file: librkadk.so

Notice

- Before using this interface, you need to call RKADK_PLAYER_SetDataParam to set audio and video related parameters.

Example

[rkadk_player_test](#)

See Also

[RKADK_PLAYER_SendAudioPacket](#)

[RKADK_PLAYER_SetDataParam](#)

7.2.16 RKADK_PLAYER_GetSendFrameNum

Description

Retrieve the number of frames that have been successfully decoded.

Syntax

RKADK_S32 RKADK_PLAYER_GetSendFrameNum([RKADK_MW_PTR](#) pPlayer);

Parameters

Parameter Name	Description	Input/Output
pPlayer	Player pointer	Input

Return Value

Return Value	Description
Frame count	Success
-1	Failure

Requirements

Header file: rkadk_player.h

Library file: librkadk.so

Note

- The count will be reset after Pause/Stop.

Example

[rkadk_player_test](#)

Related Topics

None

7.2.17 RKADK_PLAYER_SetVdecWaterline

Description

Set the VDEC waterline.

Syntax

RKADK_S32 RKADK_PLAYER_SetVdecWaterline([RKADK_MW_PTR](#) pPlayer, RKADK_U32 u32VdecWaterline);

Parameters

Parameter Name	Description	Input/Output
pPlayer	Player pointer	Input
u32VdecWaterline	Waterline value	Input

Return Value

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_player.h

Library file: librkadk.so

Note

- After setting the VDEC waterline, playback will only start when the VDEC buffer reaches the waterline value.

Example

[rkadk_player_test](#)

Related Topics

None

7.2.18 RKADK_PLAYER_SetAoVolume

Description

Set playback volume.

Syntax

```
RKADK_S32 RKADK_PLAYER_SetAoVolume(RKADK\_MW\_PTR pPlayer, RKADK_S32 s32Volume);
```

Parameters

Parameter Name	Description	Input/Output
pPlayer	Player pointer	Output
s32Volume	Volume value	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_player.h

Library file: librkadk.so

Notes

None

Example

[rkadk_player_test](#)

Related Topics

None

7.3 Type of Data

The playback module mainly provides the following data types:

[RKADK_PLAYER_EVENT_E](#): Playback event enumeration type

[RKADK_PLAYER_EVENT_FN](#): Playback event callback function pointer

[RKADK_PLAYER_CFG_S](#): Player attribute structure

[RKADK_VO_FORMAT_E](#): Image pixel format enumeration type

[RKADK_VO_INTF_TYPE_E](#): Display interface enumeration type

[RKADK_PLAYER_FRAME_INFO_S](#): Image information structure

[RKADK_PLAYER_STATE_E](#): Playback status enumeration type

[RKADK_PLAYER_DATA_PARAM_S](#): Audio and video parameter structure

[RKADK_PLAYER_PACKET](#): Player data packet structure

[RKADK_PLAYER_RTSP_CFG_S](#): RTSP attribute structure

[RKADK_PLAYER_VDEC_CFG_S](#): VDEC attribute structure

[RKADK_PLAYER_SNAPSHOT_CFG_S](#): Screenshot attribute structure

[RKADK_PLAYER_SNAPSHOT_S](#): Screenshot data structure

[RKADK_PPLAYER_SNAPSHOT_RECV_FN](#): Screenshot data callback function pointer

7.3.1 RKADK_PLAYER_EVENT_E

Description

Defines the playback event enumeration type.

Definition

```
typedef enum {  
    RKADK_PLAYER_EVENT_STATE_CHANGED = 0x0,  
    RKADK_PLAYER_EVENT_PREPARED,  
    RKADK_PLAYER_EVENT_PLAY,  
    RKADK_PLAYER_EVENT_PAUSED,  
    RKADK_PLAYER_EVENT_STOPPED,  
    RKADK_PLAYER_EVENT_EOF,  
    RKADK_PLAYER_EVENT_SOF,  
    RKADK_PLAYER_EVENT_SEEK_END,  
    RKADK_PLAYER_EVENT_ERROR,  
    RKADK_PLAYER_EVENT_BUTT  
} RKADK_PLAYER_EVENT_E;
```

Members

Member Name	Description
RKADK_PLAYER_EVENT_STATE_CHANGED	Status change (Reserved)
RKADK_PLAYER_EVENT_PREPARED	The <code>Prepared</code> is completed
RKADK_PLAYER_EVENT_PLAY	Start playing
RKADK_PLAYER_EVENT_PAUSED	Pause playback (Reserved)
RKADK_PLAYER_EVENT_STOPPED	Stop playing
RKADK_PLAYER_EVENT_EOF	End of playback
RKADK_PLAYER_EVENT_SOF	Reserved
RKADK_PLAYER_EVENT_SEEK_END	The <code>Seek</code> is completed (Reserved)

Related data types and interfaces

[RKADK_PLAYER_EVENT_FN](#)

7.3.2 RKADK_PLAYER_EVENT_FN

Description

Define the playback event callback function pointer.

Definition

```
typedef RKADK_VOID (*RKADK_PLAYER_EVENT_FN)(RKADK_MW_PTR pPlayer, RKADK_PLAYER_EVENT_E
enEvent, RKADK_VOID *pData);
```

Members

Member Name	Description
pPlayer	Player pointer
enEvent	event type
pData	Event related parameters

Related data types and interfaces

[RKADK_PLAYER_EVENT_E](#)

[RKADK_PLAYER_CFG_S](#)

7.3.3 RKADK_PLAYER_CFG_S

Description

Define the player attribute structure.

Definition

```
typedef struct {
    RKADK_BOOL bEnableVideo;
    RKADK_BOOL bEnableAudio;
    RKADK_BOOL bEnableThirdDemuxer;
    RKADK_PLAYER_FRAME_INFO_S stFrmInfo;
    RKADK_PLAYER_RTSP_CFG_S stRtspCfg;
    RKADK_PLAYER_VDEC_CFG_S stVdecCfg;
    RKADK_PLAYER_SNAPSHOT_CFG_S stSnapshotCfg;
    RKADK_BOOL bEnableBlackBackground;
    RKADK_PLAYER_EVENT_FN pfnPlayerCallback;
} RKADK_PLAYER_CFG_S;
```

Members

Member Name	Description
bEnableVideo	Enable video playback
bEnableAudio	Enable audio playback
bEnableThirdDemuxer	Enable third-party demuxer library
pfnPlayerCallback	Player event callback function pointer
stFrmInfo	Define image information
stRtspCfg	RTSP attribute
stVdecCfg	VDEC attribute
stSnapshotCfg	Screenshot attribute
bEnableBlackBackground	Whether the screen goes black after playing

Related data types and interfaces

- [RKADK_PLAYER_EVENT_FN](#)
- [RKADK_PLAYER_FRAME_INFO_S](#)
- [RKADK_PLAYER_RTSP_CFG_S](#)
- [RKADK_PLAYER_VDEC_CFG_S](#)
- [RKADK_PLAYER_SNAPSHOT_CFG_S](#)
- [RKADK_PLAYER_Create](#)

7.3.4 RKADK_VO_FORMAT_E

Description

Defines the image pixel format enumeration type.

Definition

```
typedef enum {  
    VO_FORMAT_ARGB8888 = 0,  
    VO_FORMAT_ABGR8888,  
    VO_FORMAT_RGB888,  
    VO_FORMAT_BGR888,  
    VO_FORMAT_ARGB1555,  
    VO_FORMAT_ABGR1555,  
    VO_FORMAT_RGB565,  
    VO_FORMAT_RGB444,  
    VO_FORMAT_NV12,  
    VO_FORMAT_NV21  
} RKADK_VO_FORMAT_E;
```

Related data types and interfaces

[RKADK_PLAYER_FRAME_INFO_S](#)

7.3.5 RKADK_VO_INTF_TYPE_E

Description

Defines the display interface enumeration type.

Definition

```
typedef enum {  
    DISPLAY_TYPE_HDMI = 0,  
    DISPLAY_TYPE_EDP,  
    DISPLAY_TYPE_VGA,  
    DISPLAY_TYPE_DP,  
    DISPLAY_TYPE_HDMI_EDP,  
    DISPLAY_TYPE_MIPI,  
    DISPLAY_TYPE_DEFAULT,  
} RKADK_VO_INTF_TYPE_E;
```

Members

Member Name	Description
DISPLAY_TYPE_HDMI	The display interface is HDMI
DISPLAY_TYPE_EDP	The display interface is EDP
DISPLAY_TYPE_VGA	The display interface is VGA
DISPLAY_TYPE_MIPI	The display interface is MIPI
DISPLAY_TYPE_DP	The display interface is DP
DISPLAY_TYPE_HDMI_EDP	The display interface is HDMI EDP
DISPLAY_TYPE_DEFAULT	Internal detection, display interface is the actual connected hardware

Related data types and interfaces

[RKADK_PLAYER_FRAME_INFO_S](#)

7.3.6 RKADK_VO_SPLICE_MODE_E

Description

Defines the layer splicing method enumeration type.

Definition

```
typedef enum {
    SPLICE_MODE_RGA = 0,
    SPLICE_MODE_GPU,
    SPLICE_MODE_BYPASS
} RKADK_VO_INTF_TYPE_E;
```

Members

Member Name	Description
SPLICE_MODE_RGA	RGA splicing
SPLICE_MODE_GPU	GPU splicing
SPLICE_MODE_BYPASS	BYPASS, no splicing

Related data types and interfaces

[RKADK_PLAYER_FRAME_INFO_S](#)

7.3.7 RKADK_PLAYER_FRAME_INFO_S

Description

Define the image information structure.

Definition

```
typedef struct {
    RKADK_U32 u32FrmInfoX;
    RKADK_U32 u32FrmInfoY;
    RKADK_U32 u32DispWidth;
    RKADK_U32 u32DispHeight;
    RKADK_U32 u32ImgWidth;
    RKADK_U32 u32ImgHeight;
    RKADK_U32 u32VoLay;
    RKADK_U32 u32VoDev;
    RKADK_U32 u32VoChn;
    RKADK_U32 u32BorderColor;
    RKADK_U32 u32BorderTopWidth;
    RKADK_U32 u32BorderBottomWidth;
    RKADK_U32 u32BorderLeftWidth;
    RKADK_U32 u32BorderRightWidth;
    RKADK_BOOL bMirror;
    RKADK_BOOL bFlip;
    RKADK_U32 u32Rotation; //0: 0, 1: 90, 2: 180, 3: 270
    RKADK_VO_FORMAT_E u32VoFormat;
    RKADK_VO_INTF_TYPE_E u32EnIntfType;
    RKADK_VO_INTF_SYNC_E enIntfSync;
    RKADK_VO_SYNC_INFO_S stSyncInfo;
    RKADK_VO_SPLICE_MODE_E enVoSpliceMode;
} RKADK_PLAYER_FRAMEINFO_S;
```

Members

Member Name	Description
u32FrmInfoX	The x coordinate of the layer display area
u32FrmInfoY	The y coordinate of the layer display area
u32DispWidth	The width of the layer display area
u32DispHeight	The height of the layer display area
u32ImgWidth	Layer image width
u32ImgHeight	Layer image height
u32VoLay	Video output video layer number
u32VoDev	Display output device number
u32VoChn	Video output channel number, value range: [0, VO_MAX_CHN_NUM(128)]
u32BorderColor	Video output channel border attribute: color (Reserved)
u32BorderTopWidth	Video output channel border attribute: top border width (Reserved)
u32BorderBottomWidth	Video output channel border attribute: bottom border width (Reserved)
u32BorderLeftWidth	Video output channel border attribute: left border width (Reserved)
u32BorderRightWidth	Video output channel border attribute: right border width (Reserved)
bMirror	Enable mirror
bFlip	Enable flip
u32Rotation	Rotation, values: [0: 0, 1: 90, 2: 180, 3: 270]
u32VoFormat	Define image pixel format
u32EnIntfType	Display interface type
enIntfSync	Screen interface synchronization mode
stSyncInfo	Screen attribute structure
enVoSpliceMode	Layer splice mode

Notice

- For detailed video output related attributes, please refer to the VO chapter of the Rockit document [Rockchip_Developer_Guide_MPI.pdf](#).

Related data types and interfaces

[RKADK_VO_FORMAT_E](#)

[RKADK_VO_INTF_TYPE_E](#)

[RKADK_VO_SPLICE_MODE_E](#)

7.3.8 RKADK_PLAYER_STATE_E

Description

Defines the playback status enumeration type.

Definition

```
typedef enum {
    RKADK_PLAYER_STATE_IDLE = 0, /* The player state before init */
    RKADK_PLAYER_STATE_INIT,     /* The player is in the initial state. It changes
                                   to the initial state after being SetDataSource */
    RKADK_PLAYER_STATE_PREPARED, /* The player is in the prepared state */
    RKADK_PLAYER_STATE_PLAY,     /* The player is in the playing state */
    RKADK_PLAYER_STATE_TPLAY,    /* The player is in the trick playing state, Reserved */
    RKADK_PLAYER_STATE_PAUSE,    /* The player is in the pause state */
    RKADK_PLAYER_STATE_ERR,      /* The player is in the err state */
    RKADK_PLAYER_STATE_BUTT
} RKADK_PLAYER_STATE_E;
```

Related data types and interfaces

[RKADK_PLAYER GetPlayStatus](#)

7.3.9 RKADK_PLAYER_SNAPSHOT_S

Description

Define the screenshot data structure.

Definition

```
typedef struct {
    RKADK_U32 u32Width;
    RKADK_U32 u32Height;
    RKADK_U32 u32DataLen;
    RKADK_U8 *pu8DataBuf;
} RKADK_PLAYER_SNAPSHOT_S;
```

Members

Member Name	Description
u32Width	The width of the screenshot
u32Height	The height of the screenshot
u32DataLen	The data length of the screenshot
pu8DataBuf	The data pointer of the screenshot

Related data types and interfaces

[RKADK_PPLAYER_SNAPSHOT_RECV_FN](#)

7.3.10 RKADK_PPLAYER_SNAPSHOT_RECV_FN

Description

Defines the screenshot data callback function pointer.

Definition

```
typedef void (*RKADK_PPLAYER_SNAPSHOT_RECV_FN) (RKADK_PLAYER_SNAPSHOT_S *pstData);
```

Members

Member Name	Description
pstData	The data pointer of the screenshot

Related data types and interfaces

[RKADK_PLAYER_SNAPSHOT_S](#)

[RKADK_PLAYER_SNAPSHOT_CFG_S](#)

7.3.11 RKADK_PLAYER_SNAPSHOT_CFG_S

Description

Define the screenshot attribute structure.

Definition

```
typedef struct {
    RKADK_U32 u32VencChn;
    RKADK_U32 u32MaxWidth;    //Support snapshot max width, default 4096
    RKADK_U32 u32MaxHeight;   //Support snapshot max height, default 4096
    RKADK_PPLAYER_SNAPSHOT_RECV_FN pfnDataCallback;
} RKADK_PLAYER_SNAPSHOT_CFG_S;
```

Members

Member Name	Description
u32VencChn	JPEG encoding channel
u32MaxWidth	Maximum width of screenshot, default 4096
u32MaxHeight	Maximum height of screenshot, default 4096
pfnDataCallback	Screenshot data callback pointer

Related data types and interfaces

[RKADK_PPLAYER_SNAPSHOT_RECV_FN](#)

[RKADK_PLAYER_CFG_S](#)

7.3.12 RKADK_PLAYER_VDEC_CFG_S

Description

Define the VDEC attribute structure.

Definition

```
typedef struct {  
    RKADK_U32 u32FrameBufCnt; //frame buffer cnt(output), default: 3  
    RKADK_U32 u32StreamBufCnt; //stream buffer cnt(input), default: 3  
} RKADK_PLAYER_VDEC_CFG_S;
```

Members

Member Name	Description
u32FrameBufCnt	Number of output buffers, it is 3 by default
u32StreamBufCnt	Number of input buffers, it is 3 by default

Related data types and interfaces

[RKADK_PLAYER_CFG_S](#)

7.3.13 RKADK_PLAYER_RTSP_CFG_S

Description

Define the RTSP attribute structure.

Definition

```
typedef struct {
    const char *transport; //udp or tcp, default: udp
    RKADK_U32 u32IoTimeout; //timeout (in microseconds) of socket I/O operations
} RKADK_PLAYER_RTSP_CFG_S;
```

Members

Member Name	Description
transport	Transport protocol, it is UDP by default
u32IoTimeout	Socket I/O operation timeout duration, unit is ms, it is no timeout by default

Related data types and interfaces

[RKADK_PLAYER_CFG_S](#)

7.3.14 RKADK_PLAYER_PACKET

Description

Define the data packet structure and enable the use of the third-party demuxer library.

Definition

```
typedef struct {
    bool bEofFlag;
    RKADK_S8 *s8PacketData;
    RKADK_S32 s32PacketSize;
    RKADK_U32 u32Seq;
    RKADK_S64 s64Pts;

    //if bypass, must set pFreeCB;
    bool bBypass;
    RKADK_MPI_MB_FREE_CB pFreeCB;
} RKADK_PLAYER_PACKET;
```

Members

Member Name	Description
bEofFlag	Whether it is the last frame of data
s8PacketData	Data pointer
s32PacketSize	Data length
u32Seq	Serial number
s64Pts	Timestamp
bBypass	Data transmission method, true: pass-through, false: secondary copy
pFreeCB	The s8PacketData releases the function pointer, it must be set when bBypass is true

Related data types and interfaces

[RKADK_PLAYER_SendAudioPacket](#)

[RKADK_PLAYER_SendVideoPacket](#)

7.3.15 RKADK_PLAYER_DATA_PARAM_S

Description

Define the audio and video parameter structure, it can be used when enabling the third-party demuxer library.

Definition

```
typedef struct {
    const RKADK_CHAR *pFilePath;
    RKADK_BOOL bIsRtsp;
    RKADK_BOOL bVideoExist;
    RKADK_BOOL bAudioExist;

    //video param
    RKADK_CODEC_TYPE_E enVCodecType;
    RKADK_U32 u32Width;
    RKADK_U32 u32Height;
    RKADK_FORMAT_E enPixFmt; //output pixel format
    RKADK_U32 u32FrameRate;

    //audio param
    RKADK_CODEC_TYPE_E enACodecType;
    RKADK_S32 u32BitWidth;
    RKADK_S32 u32SampleRate;
    RKADK_S32 u32Channel;
} RKADK_PLAYER_DATA_PARAM_S;
```

Members

Member Name	Description
pFilePath	The path of the file to be played
bIsRtsp	Whether it is RTSP network stream
bVideoExist	Whether there is a video stream in the file to be played
bAudioExist	Whether there is an audio stream in the file to be played
enVCodecType	Video stream decoding format
u32Width	Video stream width
u32Height	Video stream high
u32FrameRate	Video stream frame rate
enACodecType	Audio stream decoding format
u32BitWidth	Audio stream bit width
u32SampleRate	Audio stream sample rate
u32Channel	Number of audio stream channels

Related data types and interfaces

[RKADK_PLAYER SetDataParam](#)

8. Live Streaming

8.1 Overview

Provides basic services of standard RTSP live streaming; provides RTMP live streaming services. RTSP and RTMP do not support starting at the same time.

8.2 API Reference

8.2.1 RTSP

8.2.1.1 RKADK_RTSP_Init

Description

Initialize the RTSP module.

Syntax

```
RKADK_S32 RKADK_RTSP_Init(RKADK\_U32 u32CamId, RKADK\_U32 port, const char *path, RKADK\_MW\_PTR *ppHandle);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
port	Port number	Input
path	RTSP address	Input
ppHandle	Created RTSP Handle	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_rtsp.h

Library file: librkadk.so

Notice

- Call RKADK_RTSP_Start after RKADK_RTSP_Init to start RTSP live streaming.

Example

[rkadk_rtsp_test](#)

See Also

[RKADK_RTSP_DeInit](#)

8.2.1.2 RKADK_RTSP_DeInit

Description

Deinitialize the RTSP module.

Syntax

```
RKADK_S32 RKADK_RTSP_DeInit(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Created RTSP Handle	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_rtsp.h

Library file: librkadk.so

Example

[rkadk_rtsp_test](#)

See Also

[RKADK_RTSP_Init](#)

8.2.1.3 RKADK_RTSP_Start

Description

Start RTSP live streaming.

Syntax

```
RKADK_S32 RKADK_RTSP_Start(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Created RTSP Handle	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_rtsp.h

Library file: librkadk.so

Notice

- Call this interface after RKADK_RTSP_Init.

Example

[rkadk_rtsp_test](#)

See Also

[RKADK_RTSP_Stop](#)

8.2.1.4 RKADK_RTSP_Stop

Description

Stop RTSP live streaming.

Syntax

```
RKADK_S32 RKADK_RTSP_Stop(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Created RTSP Handle	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_rtsp.h

Library file: librkadk.so

Example

[rkadk_rtsp_test](#)

See Also

[RKADK RTSP Start](#)

8.2.1.5 RKADK_RTSP_VideoReset

Description

Reconfigure the RTSP live streaming.

Syntax

RKADK_S32 RKADK_RTSP_VideoReset([RKADK MW_PTR](#) pHandle);

Parameters

Parameter name	Description	Input/output
PHandle	Created RTSP Handle	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_rtsp.h

Library file: librkadk.so

Notice

- The RKADK_RTSP_VideoReset interface can only be used after RKADK_RTSP_Init.
- When switching resolution, frame rate, bit rate, encoding type, or recording type, reset the parameters of the Live module in the ini file by using the RKADK_PARAM_SetCamParam API.
- RV1126/RV1109 and RK3576 does not support dynamic switching of resolution and encoding type. You need to RKADK_RTSP_DeInit first, then configure the new resolution or encoding type, and finally RKADK_RTSP_Init again.
- If Live and other modules share the VI channel, both the resolution of Live and multiplexing modules need to be switched simultaneously to avoid VI and VENC resolution mismatch.

8.2.2 RTMP

8.2.2.1 RKADK_RTMP_Init

Description

Initialize RTMP module.

Syntax

```
RKADK_S32 RKADK_RTMP_Init(RKADK\_U32 u32CamId, const char *path, RKADK\_MW\_PTR *ppHandle);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
path	RTMP address	Input
ppHandle	Created RTMP Handle	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_rtmp.h

Library file: librkadk.so

Example

[rkadk_rtmp_test](#)

See Also

[RKADK RTMP DeInit](#)

8.2.2.2 RKADK_RTMP_DeInit

Description

Deinitialize the RTMP module.

Syntax

```
RKADK_S32 RKADK_RTMP_DeInit(RKADK MW PTR pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Created RTMP Handle	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_rtmp.h

Library file: librkadk.so

Example

[rkadk_rtmp_test](#)

See Also

[RKADK RTMP Init](#)

8.2.2.3 RKADK_RTSP_VideoReset

Description

Reconfigure the RTSP live streaming.

Syntax

```
RKADK_S32 RKADK_RTSP_VideoReset(RKADK MW PTR pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Created RTSP Handle	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_rtsp.h

Library file: librkadk.so

Notice

- The RKADK_RTMP_VideoReset interface can only be used after RKADK_RTMP_Init.
- When switching resolution, frame rate, bit rate, encoding type, or recording type, reset the parameters of the Live module in the ini file by using the RKADK_PARAM_SetCamParam API.
- RV1126/RV1109 and RK3576 does not support dynamic switching of resolution and encoding type. You need to RKADK_RTMP_DeInit first, then configure the new resolution or encoding type, and finally RKADK_RTMP_Init again.
- If Live and other modules share the VI channel, both the resolution of Live and multiplexing modules need to be switched simultaneously to avoid VI and VENC resolution mismatch.

9. Storage

9.1 Overview

Provides basic storage functions, currently including the following functions:

- File detection, storage, acquisition, management
- Device capacity and status query
- Automatically delete files
- Format

9.2 API Reference

9.2.1 RKADK_STORAGE_Init

Description

Storage module initialization.

Syntax

```
RKADK_S32 RKADK_STORAGE_Init(RKADK\_MW\_PTR *ppHandle, RKADK\_STR\_DEV\_ATTR *pstDevAttr);
```

Parameters

Parameter name	Description	Input/output
ppHandle	Created storage module handle	Output
pstDevAttr	Mounted device attribute pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Notice

- Repeated initialization is not supported.
- If [RKADK_STR_DEV_ATTR](#) pass in NULL, default attributes are used. The default attributes are: 2 folders, named video_front and video_back, sorted by file name, automatic deletion threshold 500~1000M, limit the number of files not used, with the ratio of 50%.

Example

[rkadk_storage_test](#)

See Also

[RKADK_STORAGE_Deinit](#)

9.2.2 RKADK_STORAGE_Deinit

Description

Storage module deinitialization.

Syntax

```
RKADK_S32 RKADK_STORAGE_Deinit(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Storage module handle pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Notice

- Repeated deinitialization is not supported.

Example

[rkadk_storage_test](#)

See Also

[RKADK_STORAGE_Init](#)

9.2.3 RKADK_STORAGE_GetDevAttr

Description

Get the mounted device attribute.

Syntax

```
RKADK\_STR\_DEV\_ATTR RKADK_STORAGE_GetDevAttr(RKADK\_MW\_PTR pHandle);
```

Parameters

Parameter name	Description	Input/output
PHandle	Storage module handle pointer	Input

Return value

Return value	Description
RKADK_STR_DEV_ATTR	Mounted device attribute structure

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Notice

- The [RKADK_STORAGE_GetDevAttr](#) interface can only be used after the storage module is initialized.

Example

None

See Also

None

9.2.4 RKADK_STORAGE_GetMountStatus

Description

Get device mounting status.

Syntax

[RKADK_MOUNT_STATUS](#) RKADK_STORAGE_GetMountStatus([RKADK_MW_PTR](#) pHandle);

Parameters

Parameter name	Description	Input/output
PHandle	Storage module handle pointer	Input

Return value

Return value	Description
RKADK_MOUNT_STATUS	Mount status enumeration type

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Example

[rkadk_storage_test](#)

See Also

None

9.2.5 RKADK_STORAGE_GetCapacity

Description

Get the device capacity.

Syntax

```
RKADK_S32 RKADK_STORAGE_GetCapacity(RKADK\_MW\_PTR *ppHandle, RKADK_S32 *totalSize, RKADK_S32 *freeSize);
```

Parameters

Parameter name	Description	Input/output
ppHandle	Created storage module handle	Input/Output
totalSize	Total device capacity pointer	Output
freeSize	Device remaining capacity pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Example

[rkadk_storage_test](#)

See Also

None

9.2.6 RKADK_STORAGE_GetFileList

Description

Get a list of files.

Syntax

```
RKADK_S32 RKADK_STORAGE_GetFileList(RKADK\_FILE\_LIST *list, RKADK\_MW\_PTR pHandle, RKADK\_SORT\_TYPE sort);
```

Parameters

Parameter name	Description	Input/output
list	File list structure pointer	Input/output
PHandle	Storage module handle pointer	Input
sort	Sort type	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Notice

- Must be used together with [RKADK_STORAGE_FreeFileList](#).

Example

[rkadk_storage_test](#)

See Also

[RKADK_STORAGE_FreeFileList](#)

9.2.7 RKADK_STORAGE_FreeFileList

Description

Release file list.

Syntax

RKADK_S32 RKADK_STORAGE_FreeFileList([RKADK_FILE_LIST](#) *list);

Parameters

Parameter name	Description	Input/output
list	file list structure pointer	Input/output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Notice

- Must be used together with [RKADK_STORAGE_GetFileList](#).

Example

[rkadk_storage_test](#)

See Also

[RKADK_STORAGE_GetFileList](#)

9.2.8 RKADK_STORAGE_GetFileNum

Description

Get the number of files.

Syntax

RKADK_S32 RKADK_STORAGE_GetFileNum(RKADK_CHAR *fileListPath, [RKADK_MW_PTR](#) pHandle);

Parameters

Parameter name	Description	Input/output
fileListPath	File list path pointer	Input
PHandle	Storage module handle pointer	Input

Return value

Return value	Description
non-negative	Number of files
-1	Failure

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Example

None

See Also

None

9.2.9 RKADK_STORAGE_GetDevPath

Description

Get the path of the mounted device.

Syntax

RKADK_CHAR *RKADK_STORAGE_GetDevPath([RKADK MW PTR](#) pHandle);

Parameters

Parameter name	Description	Input/output
PHandle	Storage module handle pointer	Input

Return value

Return value	Description
RKADK_CHAR *	Mount device path pointer

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Notice

- The [RKADK_STORAGE_GetDevPath](#) interface can only be used after the storage module is initialized.

Example

[rkadk_storage_test](#)

See Also

None

9.2.10 RKADK_STORAGE_Format

Description

Device formatting.

Syntax

```
RKADK_S32 RKADK_STORAGE_Format(RKADK\_MW\_PTR pHandle, RKADK_CHAR *cFormat);
```

Parameters

Parameter name	Description	Input/output
PHandle	Storage module handle pointer	Input
cFormat	File system type	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_storage.h

Library file: librkadk.so

Example

None

See Also

None

9.3 Type of Data

The storage module mainly provides the following data types:

[RKADK_MOUNT_STATUS](#): Mount status enumeration type

[RKADK_SORT_TYPE](#): Sort type enumeration

[RKADK_SORT_CONDITION](#): Sort condition enumeration type

[RKADK_STR_FOLDER_ATTR](#): Folder attribute structure

[RKADK_STR_DEV_ATTR](#): Device attribute structure

[RKADK_FILE_INFO](#): File information structure

[RKADK_FILE_LIST](#): File list structure

[RKADK_FILE_LIST_ARRAY](#): File list group structure

9.3.1 RKADK_MOUNT_STATUS

Description

Defines the mount status enumeration type.

Definition

```
typedef enum {
    DISK_UNMOUNTED = 0,
    DISK_NOT_FORMATTED,
    DISK_FORMAT_ERR,
    DISK_SCANNING,
    DISK_MOUNTED,
    DISK_MOUNT_BUTT,
} RKADK_MOUNT_STATUS;
```

Members

Member Name	Description
DISK_UNMOUNTED	The disk is not mounted
DISK_NOT_FORMATTED	The disk is not formatted
DISK_FORMAT_ERR	Disk format error
DISK_SCANNING	The disk is being scanned
DISK_MOUNTED	The disk is mounted

Related data types and interfaces

[RKADK_STORAGE_GetMountStatus](#)

9.3.2 RKADK_SORT_TYPE

Description

Defines the sorting type enum.

Definition

```
typedef enum {  
    LIST_ASCENDING = 0,  
    LIST_DESCENDING,  
    LIST_BUTT,  
} RKADK_SORT_TYPE;
```

Members

Member Name	Description
LIST_ASCENDING	Sort the list in ascending order
LIST_DESCENDING	Sort the list in descending order

Related data types and interfaces

[RKADK_STORAGE_GetFileList](#)

9.3.3 RKADK_SORT_CONDITION

Description

Defines the sorting condition enumeration type.

Definition

```
typedef enum {  
    SORT_MODIFY_TIME = 0,  
    SORT_FILE_NAME,  
    SORT_BUTT,  
} RKADK_SORT_CONDITION;
```

Members

Member Name	Description
SORT_MODIFY_TIME	The list is sorted by file modification time
SORT_FILE_NAME	List sorted by file name

Related data types and interfaces

[RKADK_STR_FOLDER_ATTR](#)

9.3.4 RKADK_STR_FOLDER_ATTR

Description

Define the folder attribute structure.

Definition

```
typedef struct {
    RKADK_CHAR cFolderPath[RKADK_MAX_FILE_PATH_LEN];
    RKADK_SORT_CONDITION s32SortCond;
    RKADK_BOOL bNumLimit;
    RKADK_S32 s32Limit;
} RKADK_STR_FOLDER_ATTR;
```

Members

Member Name	Description
cFolderPath	Folder path
s32SortCond	Sorting conditions
bNumLimit	Option: Whether to set the upper limit based on the number of files
s32Limit	Maximum folder capacity (ratio/number)

Related data types and interfaces

[RKADK_SORT_CONDITION](#)

[RKADK_STR_DEV_ATTR](#)

9.3.5 RKADK_STR_DEV_ATTR

Description

Define the device attribute structure.

Definition

```
typedef struct {
    RKADK_CHAR cDevPath[RKADK_MAX_FILE_PATH_LEN];
    RKADK_CHAR cMountPath[RKADK_MAX_FILE_PATH_LEN];
    RKADK_S32 s32FreeSizeDelMin;
    RKADK_S32 s32FreeSizeDelMax;
    RKADK_S32 s32AutoDel;
    RKADK_S32 s32FolderNum;
    RKADK_CHAR cFormatId[RKADK_MAX_FORMAT_ID_LEN];
    RKADK_CHAR cVolume[RKADK_MAX_VOLUME_LEN];
    RKADK_S32 s32CheckFormatId;
    RKADK_STR_FOLDER_ATTR *pstFolderAttr;
} RKADK_STR_DEV_ATTR;
```

Members

Member Name	Description
cDevPath	Device name (device path)
cMountPath	Device mount path
s32FreeSizeDelMin	Automatically delete the lower limit of the threshold
s32FreeSizeDelMax	Automatically delete the upper limit of the threshold
s32AutoDel	Automatic deletion option
s32FolderNum	Number of folders
cFormatId	Format ID
cVolume	Volume label
s32CheckFormatId	Check whether the format ID matches
pstFolderAttr	Folder attribute structure pointer

Related data types and interfaces

[RKADK_STR_FOLDER_ATTR](#)

[RKADK_STORAGE_Init](#)

[RKADK_STORAGE_GetDevAttr](#)

9.3.6 RKADK_FILE_INFO

Description

Define the file information structure.

Definition

```
typedef struct {
    RKADK_CHAR filename[RKADK_MAX_FILE_PATH_LEN];
    off_t stSize;
    time_t stTime;
    void *thumb;
} RKADK_FILE_INFO;
```

Members

Member Name	Description
filename	File name
stSize	File size
stTime	File modification time
thumb	Thumbnail pointer

Related data types and interfaces

[RKADK_FILE_LIST](#)

9.3.7 RKADK_FILE_LIST

Description

Define the file list structure.

Definition

```
typedef struct {
    RKADK_CHAR path[RKADK_MAX_FILE_PATH_LEN];
    RKADK_S32 s32FileNum;
    RKADK_FILE_INFO *file;
} RKADK_FILE_LIST;
```

Members

Member Name	Description
path	File list (folder) path
s32FileNum	Number of files
file	File information structure pointer

Related data types and interfaces

[RKADK_FILE_INFO](#)

[RKADK_FILE_LIST_ARRAY](#)

9.3.8 RKADK_FILE_LIST_ARRAY

Description

Define the file list group structure.

Definition

```
typedef struct {  
    RKADK_S32 s32ListNum;  
    RKADK_FILE_LIST *list;  
} RKADK_FILE_LIST_ARRAY;
```

Members

Member Name	Description
s32ListNum	Number of file lists (folders)
list	File list structure pointer

Related data types and interfaces

[RKADK_FILE_LIST](#)

10. Display

10.1 Overview

Provides local preview function.

Provide the display function of horizontal and vertical splicing for two streams.

Provide multi-camera stream picture-in-picture display function, supporting the switching of display content between the main screen and the picture-in-picture area.

Provides local preview and third-party H264/H265 stream picture-in-picture display functions, supporting the switching of display content between the main screen and the picture-in-picture area.

Supports up to two channels of picture-in-picture (PIP) streams display.

10.2 API Reference

10.2.1 RKADK_DISP_Init

Description

Initialize the local preview module.

Syntax

```
RKADK_S32 RKADK_DISP_Init(RKADK\_U32 u32CamId);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_disp.h

Library file: librkadk.so

Example

[rkadk disp test](#)

See Also

[RKADK_DISP_DeInit](#)

10.2.2 RKADK_DISP_DeInit

Description

Deinitialize the local preview module.

Syntax

RKADK_S32 RKADK_DISP_DeInit([RKADK_U32](#) u32CamId);

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_disp.h

Library file: librkadk.so

Example

[rkadk_disp_test](#)

See Also

[RKADK_DISP_Init](#)

10.2.3 RKADK_DISP_SetAttr

Description

Set preview properties.

Syntax

```
RKADK_S32 RKADK_DISP_SetAttr(RKADK_U32 u32CamId, RKADK\_DISP\_ATTR\_S *pstAttr);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
pstAttr	preview attributes	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_disp.h

Library file: librkadk.so

10.2.4 RKADK_DISP_InitEx

Description

Initialize local preview and sub-stream.

Syntax

```
RKADK_S32 RKADK_DISP_InitEx(RKADK\_DISP\_CFG\_S *pstAttr, RKADK_MW_PTR *ppHandle) ;
```

Parameters

Parameter Name	Description	Input/Output
pstAttr	Pointer to configuration parameters for preview and sub-stream	Input
ppHandle	Pointer to the created preview task	Output

Return Values

Return Value	Description
0	Success
Other value	Failure

Notes

- When the sub-stream type is RKADK_STREAM_TYPE_DISP, the initialization parameters are read from ini.

Requirements

Header file: rkadk_disp.h

Library file: librkadk.so

Example

[rkadk_disp_test](#)

Related Topics

[RKADK_DISP_DeInitEx](#)

10.2.5 RKADK_DISP_DeInitEx

Description

Deinitialize local preview and sub-stream.

Syntax

```
RKADK_S32 RKADK_DISP_DeInitEx(RKADK_MW_PTR pHandle);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Preview task pointer	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_disp.h

Library file: librkadk.so

Example

[rkadk_disp_test](#)

Related Topics

[RKADK_DISP_InitEx](#)

10.2.6 RKADK_DISP_SetAttrEx

Description

Set the attributes of the preview and sub-stream.

Syntax

RKADK_S32 RKADK_DISP_SetAttrEx([RKADK_DISP_ATTR_S](#) *pstAttr, RKADK_MW_PTR pHandle);

Parameters

Parameter Name	Description	Input/Output
pstAttr	Attributes of the preview and sub-stream	Input
pHandle	Pointer to the preview task	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_disp.h

Library file: librkadk.so

10.2.7 RKADK_DISP_SendVideoStream

Description

When enabling sub-stream display, this interface is used to send sub-stream data to VDEC.

Syntax

```
RKADK_S32 RKADK_DISP_SendVideoStream(RKADK_MW_PTR pHandle, RKADK_U32 u32VdecChn,  
RKADK\_DISP\_DATA\_S *pstData);
```

Parameters

Parameter Name	Description	Input/Output
pHandle	Preview task pointer	Input
u32VdecChn	VDEC channel	Input
pstData	Pointer to sub-stream data	Input

Return Values

Return Value	Description
0	Success
Other value	Failure

Requirements

Header file: rkadk_disp.h

Library file: librkadk.so

10.3 Type of Data

The display module primarily offers the following data types:

[RKADK_DISP_SUB_STREAM_NUM](#): Number of sub-stream

[RKADK_DISP_CFG_S](#): Configuration structure for preview and sub-stream stream parameters

[RKADK_DISP_STREAM_CFG_S](#): Configuration structure for sub-stream stream parameters

[RKADK_DISP_VDEC_CFG_S](#): Configuration structure for VDEC parameters of sub-stream

[RKADK_DISP_VO_CFG_S](#): Configuration structure for VO parameters of sub-stream

[RKADK_DISP_ATTR_S](#): Attribute structure for preview and sub-stream

[RKADK_DISP_STREAM_ATTR_S](#): Attribute structure for sub-stream

[RKADK_DISP_VDEC_ATTR_S](#): Attribute structure for VDEC parameters of sub-stream

[RKADK_DISP_DATA_S](#): Data structure for sub-stream

10.3.1 RKADK_DISP_SUB_STREAM_NUM

Description

The number of sub-stream.

Definition

```
#define RKADK_DISP_SUB_STREAM_NUM 2
```

10.3.2 RKADK_DISP_CFG_S

Description

Defines the structure for configuring parameters of preview and sub-stream.

Definition

```
typedef struct {
    RKADK_U32 u32CamId;
    RKADK_DISP_STREAM_CFG_S stSubStream[RKADK_DISP_SUB_STREAM_NUM];
} RKADK_DISP_CFG_S;
```

Members

Member Name	Description
u32CamId	Camera ID
stSubStream	Parameters for sub-stream

10.3.3 RKADK_DISP_STREAM_CFG_S

Description

Defines the structure for configuring the parameters of the sub-stream.

Definition

```
typedef struct {
    RKADK_BOOL bEnable; /* enable subwindow */
    RKADK_S32 s32CamId; /* subwindow camera id, set to -1 when
RKADK_STREAM_TYPE_THIRD_STREAM */
    RKADK_STREAM_TYPE_E enStreamType; /* subwindow stream type */
    RKADK_DISP_VO_CFG_S stVoCfg; /* VO configuration read from ini when
RKADK_STREAM_TYPE_DISP */
    RKADK_DISP_VDEC_CFG_S stVdecCfg; /* stream must set stVdecCfg when
RKADK_STREAM_TYPE_THIRD_STREAM */
} RKADK_DISP_STREAM_CFG_S;
```

Members

Member Name	Description
bEnable	Whether to enable the sub-stream
s32CamId	Sub-stream camera id, set to -1 when the sub-stream is a third-party stream
enStreamType	Type of the sub-stream
stVoCfg	Sub-stream VO configuration parameters, VO parameters are read from ini when the stream type is RKADK_STREAM_TYPE_DISP
stVdecCfg	Sub-stream VDEC configuration parameters, VDEC parameters must be configured when the stream type is RKADK_STREAM_TYPE_THIRD_STREAM

10.3.4 RKADK_DISP_VDEC_CFG_S

Description

Defines the structure for configuring VDEC parameters of the sub-stream.

Definition

```
typedef struct {
    RKADK_U32 u32VdecChn;
    RKADK_U32 u32SrcWidth;
    RKADK_U32 u32SrcHeight;
    RKADK_CODEC_TYPE_E enCodecType;
    RKADK_U32 u32StreamBufCnt; /* stream(input) buffer count, default: 8 */
    RKADK_U32 u32FrameBufCnt; /* frame(output) buffer count, default: 3 */
    RKADK_U32 u32FrameBufSize; /* if not set, calculated internally */
    VIDEO_MODE_E u32DecodeMode; /* decoding mode */
    VIDEO_OUTPUT_ORDER_E enOutputOrder; /* frames output order */
} RKADK_DISP_VDEC_CFG_S;
```

Members

Member Name	Description
u32VdecChn	VDEC channel
u32SrcWidth	Width of the sub-stream
u32SrcHeight	Height of the sub-stream
enCodecType	Encoding type of the sub-stream (H264/H265)
u32StreamBufCnt	Number of VDEC input buffers, default is 8
u32FrameBufCnt	Number of VDEC output buffers, default is 3
u32FrameBufSize	Size of VDEC buffer, if set to 0, calculated internally by VDEC
u32DecodeMode	Method of stream dispatching
enOutputOrder	Decoding output order, for streams with B frames, set to display order, otherwise set to decoding order

10.3.5 RKADK_DISP_VO_CFG_S

Description

Defines the structure for configuring the VO parameters of the sub-stream.

Definition

```
typedef struct {
    RKADK_U32 u32VoChn;
    RKADK_RECT_S stVoRect;
    RKADK_U32 rotation;      /* Range:[0,3], 0:0, 1:90, 2:180, 3:270 */
} RKADK_DISP_VO_CFG_S;
```

Members

Member Name	Description
u32VoChn	VO Channel
stVoRect	Sub-stream Output Display Area
rotation	Sub-stream rotated

10.3.6 RKADK_DISP_ATTR_S

Description

Define the preview and sub-stream attribute structure.

Definition

```
typedef struct {
    RKADK_RECT_S stVpssCropRect;
    RKADK_RECT_S stVoRect;
    RKADK_S32 s32Priority; /* Overlay priority, higher value, higher priority, -1 is not
change */
    RKADK_DISP_STREAM_ATTR_S stSubStreamAttr[RKADK_DISP_SUB_STREAM_NUM];
} RKADK_DISP_ATTR_S;
```

Members

Member Name	Description
stVpssCropRect	Input display area
stVoRect	Output display area
s32Priority	Vo channel priority, the larger the value, the higher the priority, -1 means not set (use default priority)
stSubStreamAttr	Sub-stream attributes

10.3.7 RKADK_DISP_STREAM_ATTR_S

Description

Defines the structure of the sub-stream attributes.

Definition

```
typedef struct {
    RKADK_RECT_S stVpssCropRect;
    RKADK_RECT_S stVoRect;
    RKADK_S32 s32Priority; /* Overlay priority, higher value, higher priority, -1 is not
change */
    RKADK_DISP_VDEC_ATTR_S stVdecAttr;
} RKADK_DISP_STREAM_ATTR_S;
```

Members

Member Name	Description
stVpssCropRect	The input display area for the sub-stream, only effective when the stream type is RKADK_STREAM_TYPE_DISP
stVoRect	The output display area for the sub-stream
s32Priority	The priority of the vo channel, the larger the value, the higher the priority, -1 means not set (use default priority)
stVdecAttr	The VDEC attributes for the sub-stream, only effective when the stream type is RKADK_STREAM_TYPE_THIRD_STREAM

10.3.8 RKADK_DISP_VDEC_ATTR_S

Description

Defines the VDEC attribute structure for sub-stream.

Definition

```
typedef struct {
    RKADK_U32 u32SrcWidth;
    RKADK_U32 u32SrcHeight;
    RKADK_CODEC_TYPE_E enCodecType; // RKADK_CODEC_TYPE_BUTT is not change
} RKADK_DISP_VDEC_ATTR_S;
```

Members

Member Name	Description
u32SrcWidth	Width of the sub-stream
u32SrcHeight	Height of the sub-stream
enCodecType	Encoding type of the sub-stream (H264/H265)

10.3.9 RKADK_DISP_DATA_S

Description

Defines the data structure for sub-stream.

Definition


```
typedef struct {
    bool bEofFlag;
    char *data;
    RKADK_U32 u32Len;
    RKADK_U64 u64Pts;
    RKADK_U32 u32Seq;
    bool bBypass;           /* if bypass, must set pFreeCB; */
    RKADK_DISP_MB_FREE_CB pFreeCB;
} RKADK_DISP_DATA_S;
```

Members

Member Name	Description
bEofFlag	Indicates if it is the last frame of data
data	Pointer to the data
u32Len	Length of the data
u32Seq	Sequence number
u64Pts	Timestamp
bBypass	Data transfer method, true: bypass, false: copy
pFreeCB	Pointer to the data release function, must be set when bBypass is true

11. OSD

11.1 Overview

The OSD module provides basic watermark functionality

11.2 API Reference

11.2.1 RKADK_OSD_Init

Description

Initialize the watermark task.

Syntax

```
RKADK_S32 RKADK_OSD_Init(RKADK\_U32 u32OsdId, RKADK\_OSD\_ATTR\_S *pstOsdAttr);
```

Parameters

Parameter name	Description	Input/output
u32OsdId	Watermark ID	Input
pstOsdAttr	Watermark task attribute pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_osd.h

Library file: librkadk.so

Notice

- Repeated initialization is not supported.

11.2.2 RKADK_OSD_Deinit

Description

Deinitialize the watermark task.

Syntax

```
RKADK_S32 RKADK_OSD_Deinit(RKADK\_U32 u32OsdId);
```

Parameters

Parameter name	Description	Input/output
u32OsdId	Watermark ID	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_osd.h

Library file: librkadk.so

Notice

- Repeated deinitialization is not supported.

11.2.3 RKADK_OSD_UpdateBitMap

Description

Watermark content updated.

Syntax

```
RKADK_S32 RKADK_OSD_UpdateBitMap(RKADK\_U32 u32OsdId, RKADK\_OSD\_ATTR\_S *pstOsdAttr);
```

Parameters

Parameter name	Description	Input/output
u32OsdId	Watermark ID	Input
pstOsdAttr	Watermark task attribute pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_osd.h

Library file: librkadk.so

Notice

- Must be used after the de-initialization task is completed.

11.2.4 RKADK_OSD_AttachToStream

Description

Attach watermark to the target stream.

Syntax

```
RKADK_S32 RKADK_OSD_AttachToStream(RKADK\_U32 u32OsdId, RKADK\_U32 u32CamId,
RKADK\_STREAM\_TYPE\_E enStrmType, RKADK\_OSD\_STREAM\_ATTR\_S *pstOsdStreamAttr);
```

Parameters

Parameter name	Description	Input/output
u32OsdId	Watermark ID	Input
u32CamId	Camera ID	Input
enStrmType	Target stream type	Input
pstOsdStreamAttr	Watermark position information pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_osd.h

Library file: librkadk.so

Notice

- The same watermark cannot be attached repeatedly on the same stream type.

11.2.5 RKADK_OSD_DettachFromStream

Description

Remove watermark from the target stream.

Syntax

```
RKADK_S32 RKADK_OSD_DettachFromStream(RKADK\_U32 u32OsdId, RKADK\_U32 u32CamId,  
RKADK\_STREAM\_TYPE\_E enStrmType);
```

Parameters

Parameter name	Description	Input/output
u32OsdId	Watermark ID	Input
u32CamId	Camera ID	Input
enStrmType	Target stream type	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_osd.h

Library file: librkadk.so

11.2.6 RKADK_OSD_UpdateOsdSize

Description

Update watermark size.

Syntax

```
RKADK_S32 RKADK_OSD_UpdateOsdSize(RKADK\_U32 u32OsdId, RKADK\_OSD\_ATTR\_S *pstOsdAttr);
```

Parameters

Parameter name	Description	Input/output
u32OsdId	Watermark ID	Input
pstOsdAttr	Watermark task attribute pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_osd.h

Library file: librkadk.so

11.2.7 RKADK_OSD_UpdateDisplayAttr

Description

Update the watermark display area.

Syntax

RKADK_S32 RKADK_OSD_UpdateDisplayAttr(RKADK_U32 u32OsdId, RKADK_U32 u32CamId, [RKADK_STREAM_TYPE_E](#) enStrmType, [RKADK_OSD_STREAM_ATTR_S](#) *pstOsdStreamAttr);

Parameters

Parameter name	Description	Input/output
u32OsdId	Watermark ID	Input
u32CamId	Camera ID	Input
enStrmType	Stream type	Input
pstOsdStreamAttr	Watermark location information	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_osd.h

Library file: librkadk.so

11.3 Type of Data

The watermark module mainly provides the following data types:

[RKADK_OSD_ATTR_S](#): Watermark attribute structure

[RKADK_OSD_STREAM_ATTR_S](#): Watermark location information structure

[RKADK_OSD_TYPE_E](#): Watermark overlay type

11.3.1 RKADK_OSD_ATTR_S

Description

Define watermark attributes.

Definition

```
typedef struct {
    RKADK_U32 Width;
    RKADK_U32 Height;
    RKADK_VOID *pData;
    RKADK_FORMAT_E Format;
    RKADK_OSD_TYPE_E enOsdType;
} RKADK_OSD_ATTR_S;
```

Members

Member Name	Description
Width	Watermark width
Height	Watermark height
pData	Watermark content
Format	Watermark format
enOsdType	Watermark overlay type

Related data types and interfaces

[RKADK_OSD_ATTR_S](#)

[RKADK_OSD_TYPE_E](#)

11.3.2 RKADK_OSD_STREAM_ATTR_S

Description

Define watermark location information.

Definition

```
typedef struct {
    RKADK_BOOL bEnableShow;
    RKADK_U32 Origin_X;
    RKADK_U32 Origin_Y;
} RKADK_OSD_STREAM_ATTR_S;
```

Members

Member Name	Description
Origin_X	Watermark starting position X offset
Origin_Y	Watermark starting position Y offset
bEnableShow	Whether to display watermark

Related data types and interfaces

[RKADK_OSD_STREAM_ATTR_S](#)

11.4 RKADK_OSD_TYPE_E

Description

Define the watermark overlay type.

Definition

```
typedef enum {
    RKADK_OSD_TYPE_NORMAL = 0, //use encoder do osd
    RKADK_OSD_TYPE_EXTRA,      //use rga do osd
    RKADK_OSD_TYPE_BUTT
} RKADK_OSD_TYPE_E;
```

Members

Member Name	Description
RKADK_OSD_TYPE_NORMAL	Encoder OSD overlay
RKADK_OSD_TYPE_EXTRA	RGA overlay

Notice

- RV1109/RV1126 JPEG encoding does not support the encoder OSD overlay watermark, and needs to be configured to RKADK_OSD_TYPE_EXTRA.

12. UI Overlay

12.1 Overview

Provides UI overlay function for overlaying UI and video images on single-layer VOP platforms such as RV1103/RV1106.

12.2 API Reference

12.2.1 RKADK_UI_Create

Description

Initialize the UI overlay module

Syntax

```
RKADK_S32 RKADK_UI_Create(RKADK\_UI\_ATTR\_S *pstUiAttr, RKADK\_MW\_PTR *ppUi);
```

Parameters

Parameter name	Description	Input/output
pstUiAttr	UI attributes	Input
ppUi	Created UI task pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_ui.h

Library file: librkadk.so

Example

[rkadk ui test](#)

See Also

[RKADK UI Destroy](#)

12.2.2 RKADK_UI_Destroy

Description

Deinitialize UI overlay module

Syntax

```
RKADK_S32 RKADK_UI_Destroy(RKADK MW PTR pUi);
```

Parameters

Parameter name	Description	Input/output
pUi	UI task pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_ui.h

Library file: librkadk.so

Example

[rkadk ui test](#)

See Also

[RKADK UI Create](#)

12.2.3 RKADK_UI_Update

Description

Refresh UI data.

Syntax

```
RKADK_S32 RKADK_UI_Update(RKADK MW PTR pUi, RKADK UI FRAME INFO *pstUiFrameInfo);
```

Parameters

Parameter name	Description	Input/output
pUi	UI task pointer	Input
pstUiFrameInfo	UI data pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_ui.h

Library file: librkadk.so

Example

[rkadk ui test](#)

12.3 Type of Data

[RKADK_UI_ATTR_S](#): UI attribute structure

[RKADK_UI_FRAME_INFO](#): UI data structure

12.3.1 RKADK_UI_ATTR_S

Description

Define the UI attribute structure.

Definition

```
typedef struct {
    RKADK_U32 u32DispX;
    RKADK_U32 u32DispY;
    RKADK_U32 u32DispWidth;
    RKADK_U32 u32DispHeight;
    RKADK_U32 u32DispFrmRt;
    RKADK_U32 u32ImgWidth;
    RKADK_U32 u32ImgHeight;
    RKADK_U32 u32VoLay;
    RKADK_U32 u32VoDev;
    RKADK_U32 u32VoChn;
    RKADK_U32 u32Rotation; //0: 0, 1: 90, 2: 180, 3: 270
    RKADK_BOOL bMirror;
```

```

RKADK_BOOL bFlip;
RKADK_VO_FORMAT_E enUiVoFormat;
RKADK_VO_INTF_TYPE_E enUiVoIntfTye;
RKADK_VO_SPLICE_MODE_E enVoSpliceMode;
} RKADK_UI_ATTR_S;

```

Members

Member Name	Description
u32DispX	Layer display area x coordinate
u32DispY	Layer display area y coordinate
u32DispWidth	Layer display area width
u32DispHeight	Layer display area height
u32ImgWidth	Layer image width
u32ImgHeight	Layer image height
u32DispFrmRt	Refresh frame rate
u32VoLay	Video output video layer number
u32VoDev	Display output device number
u32VoChn	Video output channel number, value range: [0, VO_MAX_CHN_NUM(128)]
u32Rotation	Rotation, values: [0: 0, 1: 90, 2: 180, 3: 270]
bMirror	Enable mirror
bFlip	Enable flip
enUiVoFormat	Image pixel format
enUiVoIntfTye	Display interface type
enVoSpliceMode	Layer composition mode

Related data types and interfaces

[RKADK_VO_FORMAT_E](#)

[RKADK_VO_INTF_TYPE_E](#)

[RKADK_VO_SPLICE_MODE_E](#)

[RKADK_UI_Create](#)

12.3.2 RKADK_UI_FRAME_INFO

Description

Define UI data information.

Definition

```
typedef struct {
    RKADK_U32 u32Width;
    RKADK_U32 u32Height;
    RKADK_FORMAT_E Format;
    RKADK_VOID *pMblk;
    RKADK_S32 s32MilliSec; //update timeout in millisecond, default: 1000ms
} RKADK_UI_FRAME_INFO;
```

Members

Member Name	Description
u32Width	UI data width
u32Height	UI data height
Format	UI data format
pMblk	UI data pointer
s32MilliSec	UI update timeout, default 1000ms, -1 is block

Related data types and interfaces

[RKADK_FORMAT_E](#)

[RKADK_UI_Update](#)

12.3.3 RKADK_FORMAT_E

Description

Define the pixel format.

Definition

```
typedef enum {
    RKADK_FMT_ARGB1555, /* 16-bit RGB */
    RKADK_FMT_ABGR1555, /* 16-bit RGB */
    RKADK_FMT_RGBA5551, /* 16-bit RGB */
    RKADK_FMT_BGRA5551, /* 16-bit RGB */
    RKADK_FMT_ARGB4444, /* 16-bit RGB */
    RKADK_FMT_ABGR4444, /* 16-bit RGB */
    RKADK_FMT_RGBA4444, /* 16-bit RGB */
    RKADK_FMT_BGRA4444, /* 16-bit RGB */
}
```

```

RKADK_FMT_BGRA4444,          /* 16-bit RGB      */
RKADK_FMT_ARGB8888,          /* 32-bit RGB      */
RKADK_FMT_ABGR8888,          /* 32-bit RGB      */
RKADK_FMT_RGBA8888,          /* 32-bit RGB      */
RKADK_FMT_BGRA8888,          /* 32-bit RGB      */
RKADK_FMT_2BPP,
RKADK_FMT_YUV420SP,
RKADK_FMT_YUV420SP_10BIT,
RKADK_FMT_YUV422SP,
RKADK_FMT_BUTT,
} RKADK_FORMAT_E;

```

Related data types and interfaces

[RKADK UI FRAME INFO](#)

13. Parameter Settings

13.1 Overview

The parameter setting module is strongly related to the product form. By combining and using common component data structures, a data structure suitable for the product form is defined.

This module supports obtaining specified parameters, saving specified parameters, and restoring parameters to default.

To facilitate editing, parameters are stored in the form of ini files.

You can specify the default ini path by setting the environment variable `rkadk_default_ini_path`. The default path is `/oem/usr/etc`.

```
export rkadk_default_ini_path=/oem/usr/etc
```

13.2 API Reference

13.2.1 RKADK_PARAM_Init

Description

Initialization parameter module

Syntax

```
RKADK_S32 RKADK_PARAM_Init(char *globalSetting, char **sesnorSettingArray);
```

Parameters

Parameter name	Description	Input/output
globalSetting	Global ini configuration file path	Input
sesnorSettingArray	Sensor ini configuration file path	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_param.h

Library file: librkadk.so

Notice

- Before starting any module, RKADK_PARAM_Init should be called firstly to initialize the parameter module.
- If globalSetting is not set, the default path [RKADK_PARAM_PATH](#) is used.
- If sesnorSettingArray is not set, the default path [RKADK_PARAM_PATH_SENSOR_PREFIX](#) is used. The sensor configuration file prefix defaults to rkadk_setting_sensor_n.ini, _n is the sensor camera ID, and the serial number starts from 0.

Example

[rkadk record test](#)

See Also

None

13.2.2 RKADK_PARAM_GetCamParam

Description

Get Camera related parameters.

Syntax

```
RKADK_S32 RKADK_PARAM_GetCamParam(RKADK_S32 s32CamID, RKADK\_PARAM\_TYPE\_E enParamType, RKADK_VOID *pvParam);
```

Parameters

Parameter name	Description	Input/output
s32CamID	Camera ID	Input
enParamType	Parameter type	Input
pvParam	Obtained parameter pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_param.h

Library file: librkadk.so

Notice

- This interface can be called only after calling RKADK_PARAM_Init to initialize the parameter module.

Example

[rkadk_record_test](#)

See Also

[RKADK_PARAM_SetCamParam](#)

13.2.3 RKADK_PARAM_SetCamParam

Description

Set Camera related parameters.

Syntax

```
RKADK_S32 RKADK_PARAM_SetCamParam(RKADK_S32 s32CamID, RKADK\_PARAM\_TYPE\_E enParamType, const RKADK_VOID *pvParam);
```

Parameters

Parameter name	Description	Input/output
s32CamID	Camera ID	Input
enParamType	Parameter type	Input
pvParam	Set parameter pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_param.h

Library file: librkadk.so

Notice

- This interface can be called only after calling RKADK_PARAM_Init to initialize the parameter module.

Example

[rkadk_record_test](#)

See Also

[RKADK_PARAM_GetCamParam](#)

13.2.4 RKADK_PARAM_GetCommParam

Description

Get common parameters.

Syntax

RKADK_S32 RKADK_PARAM_GetCommParam([RKADK_PARAM_TYPE_E](#) enParamType, RKADK_VOID *pvParam);

Parameters

Parameter name	Description	Input/output
enParamType	Parameter type	Input
pvParam	Obtained parameter pointer	Output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_param.h

Library file: librkadk.so

Notice

- This interface can be called only after calling RKADK_PARAM_Init to initialize the parameter module.

Example

[rkadk record test](#)

See Also

[RKADK_PARAM_SetCommParam](#)

13.2.5 RKADK_PARAM_SetCommParam

Description

Set common parameters.

Syntax

```
RKADK_S32 RKADK_PARAM_SetCommParam(RKADK\_PARAM\_TYPE\_E enParamType, const RKADK_VOID *pvParam);
```

Parameters

Parameter name	Description	Input/output
enParamType	Parameter type	Input
pvParam	Set parameter pointer	Input

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_param.h

Library file: librkadk.so

Notice

- This interface can be called only after calling RKADK_PARAM_Init to initialize the parameter module.

Example

[rkadk record test](#)

See Also

13.2.6 RKADK_PARAM_SetDefault

Description

Restore default configuration.

Syntax

```
RKADK_S32 RKADK_PARAM_SetDefault(RKADK_VOID);
```

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_param.h

Library file: librkadk.so

13.2.7 RKADK_PARAM_GetResolution

Description

RKADK_PARAM_RES_E is used to convert to specific resolution.

Syntax

```
RKADK_S32 RKADK_PARAM_GetResolution(RKADK\_PARAM\_RES\_E type, RKADK_U32 *width, RKADK_U32 *height);
```

Parameters

Parameter name	Description	Input/output
type	Resolution type	Input
width	Converted resolution width	output
height	Converted resolution high	output

Return value

Return value	Description
0	Success
Other value	Failure

Requirement

Header file: rkadk_param.h

Library file: librkadk.so

Notice

- This interface can be called only after calling RKADK_PARAM_Init to initialize the parameter module.

Example

None

See Also

[RKADK_PARAM_GetResType](#)

13.2.8 RKADK_PARAM_GetResType

Description

Convert resolution to RKADK_PARAM_RES_E.

Syntax

[RKADK_PARAM_RES_E](#) RKADK_PARAM_GetResType(RKADK_U32 width, RKADK_U32 height);

Parameters

Parameter name	Description	Input/output
width	Resolution width	Input
height	Resolution height	Input

Return value

Return value	Description
Corresponding RKADK_PARAM_RES_E	Success
RKADK_RES_BUTT	Failure

Requirement

Header file: rkadk_param.h

Library file: librkadk.so

Notice

- This interface can be called only after calling RKADK_PARAM_Init to initialize the parameter module.

Example

None

See Also

[RKADK_PARAM_GetResolution](#)

13.2.9 RKADK_PARAM_GetVencChnId

Description

Get the VENC channel number corresponding to Record, Photo, and Stream.

Syntax

```
RKADK_S32 RKADK_PARAM_GetVencChnId(RKADK_U32 u32CamId, RKADK\_STREAM\_TYPE\_E enStrmType);
```

Parameters

Parameter name	Description	Input/output
u32CamId	Camera ID	Input
enStrmType	Stream type	Input

Return value

Return value	Description
Corresponding VENC channel number	Success
-1	Failure

Requirement

Header file: rkadk_param.h

Library file: librkadk.so

Notice

- This interface can be called only after calling RKADK_PARAM_Init to initialize the parameter module.

Example

None

See Also

None

13.3 Type of Data

The parameter module mainly provides the following data types:

[RKADK_DEFPARAM_PATH](#): Default global ini configuration file path

[RKADK_DEFPARAM_PATH_SENSOR_PREFIX](#): Default Sensor ini configuration file path

[RKADK_PARAM_PATH](#): Global ini configuration file path

[RKADK_PARAM_PATH_SENSOR_PREFIX](#): Sensor ini configuration file path

[RKADK_PARAM_TYPE_E](#): Parameter type enumeration

[RKADK_PARAM_RES_E](#): Resolution type enumeration

[RKADK_STREAM_TYPE_E](#): Data stream type enumeration

[RKADK_PARAM_CODEC_CFG_S](#): Coding type configuration structure

[RKADK_PARAM_BITRATE_S](#): Bit rate configuration structure

[RKADK_PARAM_REC_TIME_S](#): Recording duration configuration structure

[RKADK_PARAM_GOP_S](#): VENC GOP configuration structure

[RKADK_VQE_MODE_E](#): Audio input sound quality enhancement enumeration

[RKADK_MIC_TYPE_E](#): Audio device channel mode type enumeration

13.3.1 RKADK_DEFPARAM_PATH

Description

The default global ini configuration file path stores the configuration shared by each sensor and is used to restore the default configuration.

Definition

```
#define RKADK_DEFPARAM_PATH "/oem/usr/etc/rkadk_defsetting.ini"
```

13.3.2 RKADK_DEFPARAM_PATH_SENSOR_PREFIX

Description

The default sensor ini configuration file path stores the unique configuration of each sensor and is used to restore the default configuration.

Definition

```
#define RKADK_DEFPARAM_PATH_SENSOR_PREFIX "/oem/usr/etc/rkadk_defsetting_sensor"
```

Notice

- The sensor configuration file prefix defaults to rkadk_defsetting_sensor_n.ini, _n is the sensor camera ID, and the serial number starts from 0.

13.3.3 RKADK_PARAM_PATH

Description

Global ini configuration file path, which stores common configurations of all sensors.

Definition

```
#define RKADK_PARAM_PATH "/data/rkadk/rkadk_setting.ini"
```

13.3.4 RKADK_PARAM_PATH_SENSOR_PREFIX

Description

Sensor ini configuration file path, which stores the unique configuration of each sensor. Used to save new configurations when switching recording resolution, Codec type and other operations.

Definition

```
#define RKADK_PARAM_PATH_SENSOR_PREFIX "/data/rkadk/rkadk_setting_sensor"
```

Notice

- The sensor configuration file prefix defaults to rkadk_setting_sensor_n.ini, _n is the sensor camera ID and the serial number starts from 0.

13.3.5 RKADK_PARAM_TYPE_E

Description

Define parameter type enumeration type.

Definition

```
typedef enum {
    /* Cam Dependent Param */
    RKADK_PARAM_TYPE_FPS,          /* framerate */
    RKADK_PARAM_TYPE_GOP,          /* gop */
    RKADK_PARAM_TYPE_RES,          /* specify RKADK_PARAM_RES_E(record) */
    RKADK_PARAM_TYPE_PHOTO_RES,    /* specify RKADK_PARAM_RES_E(photo) */
    RKADK_PARAM_TYPE_STREAM_RES,    /* specify RKADK_PARAM_RES_CFG_S(record_main,
record_sub, photo, stream, live) */
    RKADK_PARAM_TYPE_CODEC_TYPE,    /* specify RKADK_PARAM_CODEC_CFG_S(record) */
    RKADK_PARAM_TYPE_BITRATE,       /* encode bitrate,specify RKADK_PARAM_BITRATE_S */
    RKADK_PARAM_TYPE_FLIP,          /* bool */
    RKADK_PARAM_TYPE_MIRROR,        /* bool */
}
```

```

RKADK_PARAM_TYPE_LDC,          /* ldc level [0,255] */
RKADK_PARAM_TYPE_ANTIFOG,      /* antifog value, [0,10] */
RKADK_PARAM_TYPE_WDR,          /* wdr level, [0,10] */
RKADK_PARAM_TYPE_HDR,          /* 0: normal, 1: HDR2, 2: HDR3, [0,2] */
RKADK_PARAM_TYPE_RECORD_TYPE,  /* specify RKADK_REC_TYPE_E */
RKADK_PARAM_TYPE_RECORD_TIME,  /* specify RKADK_PARAM_REC_TIME_S, record time(s) */
RKADK_PARAM_TYPE_PRE_RECORD_TIME, /* pre record time, unit in second(s) */
RKADK_PARAM_TYPE_PRE_RECORD_MODE, /* pre record mode, specify MUXER_PRE_RECORD_MODE_E */
RKADK_PARAM_TYPE_SPLITTIME,    /* specify RKADK_PARAM_REC_TIME_S, manual splite time(s)
*/
RKADK_PARAM_TYPE_FILE_CNT,      /* record file count, maximum RECORD_FILE_NUM_MAX */
RKADK_PARAM_TYPE_LAPSE_INTERVAL, /* specify RKADK_PARAM_REC_TIME_S, lapse interval(s) */
RKADK_PARAM_TYPE_LAPSE_MULTIPLE, /* lapse multiple */
RKADK_PARAM_TYPE_JPEG_SLICE,    /* enable/disable JPEG slice */
RKADK_PARAM_TYPE_SLICE_HEIGHT,  /* set JPEG slice height */
RKADK_PARAM_TYPE_INPUT_FMT,     /* set vi input format */
RKADK_PARAM_TYPE_INPUT_BUFCNT,  /* set vi input buffer count */
RKADK_PARAM_TYPE_ENABLE_AUDIO,  /* enable record audio */
RKADK_PARAM_TYPE_MUTE,          /* mute specifies sensor, bool */

/* COMM Dependent Param */
RKADK_PARAM_TYPE_REC_MUTE,       /* record audio mute, bool */
RKADK_PARAM_TYPE_VOLUME,        /* speaker volume, [0,100] */
RKADK_PARAM_TYPE_MIC_VOLUME,    /* mic volume, [0,100] */
RKADK_PARAM_TYPE_BUTT
} RKADK_PARAM_TYPE_E;

```

Members

Member Name	Description
RKADK_PARAM_TYPE_FPS	Frame rate
RKADK_PARAM_TYPE_GOP	I frame interval, RKADK_PARAM_GOP_S
RKADK_PARAM_TYPE_RES	Video resolution, RKADK_PARAM_RES_E
RKADK_PARAM_TYPE_PHOTO_RES	Photo resolution, RKADK_PARAM_RES_E
RKADK_PARAM_TYPE_STREAM_RES	Sets the resolution of the stream enumeration specified by RKADK_STREAM_TYPE_E
RKADK_PARAM_TYPE_CODEC_TYPE	Video encoding type, RKADK_PARAM_CODEC_CFG_S
RKADK_PARAM_TYPE_BITRATE	Bitrate, RKADK_PARAM_BITRATE_S
RKADK_PARAM_TYPE_FLIP	Flip up and down
RKADK_PARAM_TYPE_MIRROR	Mirror left and right
RKADK_PARAM_TYPE_LDC	Distortion correction[0,255]
RKADK_PARAM_TYPE_ANTIFOG	Dehaze[0,10]
RKADK_PARAM_TYPE_WDR	Wide dynamic range[0,10]
RKADK_PARAM_TYPE_HDR	High dynamic range imaging[0,10]
RKADK_PARAM_TYPE_RECORD_TYPE	Recording type, RKADK_REC_TYPE_E
RKADK_PARAM_TYPE_RECORD_TIME	Recording duration, recording main stream and sub-stream support setting different durations, RKADK_PARAM_REC_TIME_S
RKADK_PARAM_TYPE_PRE_RECORD_TIME	Pre-recording duration
RKADK_PARAM_TYPE_PRE_RECORD_MODE	Pre-recording mode, 0: no pre-recording, 1: manually split the pre-recording, 2: first file pre-recording, 3: all files pre-recording
RKADK_PARAM_TYPE_SPLITTIME	Manually split the recording duration. The main video stream and sub-stream of the video support setting different durations, RKADK_PARAM_REC_TIME_S
RKADK_PARAM_TYPE_FILE_CNT	Number of simultaneous recording files, the maximum is 2
RKADK_PARAM_TYPE_LAPSE_INTERVAL	Time-lapse recording duration, recording main stream and sub-stream support setting different durations, RKADK_PARAM_REC_TIME_S
RKADK_PARAM_TYPE_LAPSE_MULTIPLE	The multiple relationship between the playback duration of the time-lapse video file and the actual screen content time

Member Name	Description
RKADK_PARAM_TYPE_JPEG_SLICE	Whether to enable JPEG Slice
RKADK_PARAM_TYPE_SLICE_HEIGHT	JPEG Slice high
RKADK_PARAM_TYPE_INPUT_FMT	VI input format
RKADK_PARAM_TYPE_INPUT_BUFCNT	VI buffer count
RKADK_PARAM_TYPE_ENABLE_AUDIO	Whether to enable specifies sensor's recording audio channel
RKADK_PARAM_TYPE_MUTE	Whether to enable specifies sensor's recording mute
RKADK_PARAM_TYPE_REC_MUTE	Whether to enable all recording mute
RKADK_PARAM_TYPE_VOLUME	Speaker volume[0,100]
RKADK_PARAM_TYPE_MIC_VOLUME	Microphone volume[0,100]

Notice

- Antifog, WDR, HDR and other camera hardware related settings, in addition to calling RKADK_PARAM_SetCamParam to set the ini, you also need to call the ISP corresponding interface to make it actually take effect.
- RKADK_PARAM_TYPE_LAPSE_MULTIPLE: the relationship between the playback duration of the time-lapse video file and the actual screen content time is related to the frame rate. For example, the frame rate of ordinary video is 30fps, and the time-lapse video is 1fps, then the multiple is 30.
- When RV1126/RV1109 switches resolutions and the photo resolution is not set to the maximum supported resolution of the sensor, it needs to be consistent with the Record main stream resolution.
- RKADK_PARAM_TYPE_REC_MUTE: Should be used together with RKADK_RECORD_GetAencChn and RK_MPI_AENC_SetMute.

Related data types and interfaces

[RKADK_PARAM_GetCamParam](#)

[RKADK_PARAM_SetCamParam](#)

[RKADK_PARAM_GetCommParam](#)

[RKADK_PARAM_SetCommParam](#)

13.3.6 RKADK_PARAM_RES_E

Description

Defines the playback event enumeration type.

Definition

```
typedef enum {
```

```

RKADK_RES_480P = 0, /* 848*480 */
RKADK_RES_720P,    /* 1280*720 */
RKADK_RES_1080P,   /* 1920*1080 */
RKADK_RES_1296P,   /* 2304*1296 */
RKADK_RES_1440P,   /* 2560*1440 */
RKADK_RES_1520P,   /* 2688*1520 */
RKADK_RES_1600P,   /* 2560*1600 */
RKADK_RES_1620P,   /* 2880*1616, height 8 alignment */
RKADK_RES_1944P,   /* 2592*1944 */
RKADK_RES_2160P,   /* 3840*2160 */
RKADK_RES_3456P,   /* 4608*3456 */
RKADK_RES_4000P,   /* 6000*4000 */
RKADK_RES_4480P,   /* 6720*4480 */
RKADK_RES_4275P,   /* 7600*4275 */
RKADK_RES_4320P,   /* 7680*4320 */
RKADK_RES_3672P,   /* 6528*3672 */
RKADK_RES_BUTT,
} RKADK_PARAM_RES_E;

```

Related data types and interfaces

[RKADK_PARAM_GetResolution](#)

[RKADK_PARAM_GetResType](#)

13.3.7 RKADK_STREAM_TYPE_E

Description

Define the stream enumeration type.

Definition

```

typedef enum {
    RKADK_STREAM_TYPE_SENSOR,
    RKADK_STREAM_TYPE_VIDEO_MAIN,
    RKADK_STREAM_TYPE_VIDEO_SUB,
    RKADK_STREAM_TYPE_SNAP,
    RKADK_STREAM_TYPE_PREVIEW,
    RKADK_STREAM_TYPE_LIVE,
    RKADK_STREAM_TYPE_DISP,
    RKADK_STREAM_TYPE_BUTT
} RKADK_STREAM_TYPE_E;

```

Members

Member Name	Description
RKADK_STREAM_TYPE_VIDEO_MAIN	Video main stream
RKADK_STREAM_TYPE_VIDEO_SUB	Video sub-stream
RKADK_STREAM_TYPE_SNAP	Take photos
RKADK_STREAM_TYPE_PREVIEW	Remote preview
RKADK_STREAM_TYPE_LIVE	Live broadcast
RKADK_STREAM_TYPE_DISP	Local Preview
RKADK_STREAM_TYPE_SENSOR	Sensor

Related data types and interfaces

[RKADK_PARAM_GetVencChnId](#)

13.3.8 RKADK_PARAM_CODEC_CFG_S

Description

Define the encoding type configuration structure.

Definition

```
typedef struct {
    RKADK_STREAM_TYPE_E enStreamType;
    RKADK_CODEC_TYPE_E enCodecType;
} RKADK_PARAM_CODEC_CFG_S;
```

Members

Member Name	Description
enStreamType	stream type
enCodecType	encoding type

Related data types and interfaces

[RKADK_CODEC_TYPE_E](#)

[RKADK_STREAM_TYPE_E](#)

13.3.9 RKADK_PARAM_BITRATE_S

Description

Define the bitrate configuration structure.

Definition

```
typedef struct {
    RKADK_STREAM_TYPE_E enStreamType;
    RKADK_U32 u32Bitrate;
} RKADK_PARAM_BITRATE_S;
```

Members

Member Name	Description
enStreamType	stream type
u32Bitrate	Bitrate

Related data types and interfaces

[RKADK_STREAM_TYPE_E](#)

13.3.10 RKADK_PARAM_REC_TIME_S

Description

Define the recording duration configuration structure.

Definition

```
typedef struct {
    RKADK_STREAM_TYPE_E enStreamType;
    RKADK_U32 time;
} RKADK_PARAM_REC_TIME_S;
```

Members

Member Name	Description
enStreamType	Stream type
time	Recording duration

Related data types and interfaces

[RKADK_STREAM_TYPE_E](#)

13.3.11 RKADK_PARAM_GOP_S

Description

Define the VENC I frame interval configuration structure.

Definition

```
typedef struct {
    RKADK_STREAM_TYPE_E enStreamType;
    RKADK_U32 u32Gop;
} RKADK_PARAM_GOP_S;
```

Members

Member Name	Description
enStreamType	stream type
u32Gop	I frame interval

Related data types and interfaces

[RKADK_STREAM_TYPE_E](#)

13.3.12 RKADK_VQE_MODE_E

Description

Defines the audio input sound quality enhancement enumeration type

Definition

```
typedef enum {
    RKADK_VQE_MODE_AI_TALK = 0,
    RKADK_VQE_MODE_AI_RECORD,
    RKADK_VQE_MODE_BUTT
} RKADK_VQE_MODE_E;
```

Members

Member Name	Description
RKADK_VQE_MODE_AI_TALK	Enable AEC, ANR, AGC
RKADK_VQE_MODE_AI_RECORD	Enable ANR

13.3.13 RKADK_MIC_TYPE_E

Description

Define the audio device channel mode type

Definition

```
typedef enum {
    RKADK_MIC_TYPE_LEFT = 0,
    RKADK_MIC_TYPE_RIGHT,
    RKADK_MIC_TYPE_BOTH,
    RKADK_MIC_TYPE_BUTT
} RKADK_MIC_TYPE_E;
```

Members

Member Name	Description
RKADK_MIC_TYPE_LEFT	Left channel sound
RKADK_MIC_TYPE_RIGHT	Right channel sound
RKADK_MIC_TYPE_BOTH	Dual-channel

13.4 INI File Introduction

13.4.1 Global INI Configuration File

```
[version]
version                = 2.2.0      /* Version */

/* common parameters */
[common]
sensor_count           = 2          /* Number of Sensors*/
rec_mute               = FALSE      /* Whether to enable video mute */
speaker_volume         = 80         /* Speaker volume,[0,100] */
mic_volume             = 80         /* Microphone volume,[0,100] */
vpss_devcie           = 1          /* VPSS hardware device type, 0:GPU, 1:RGA */

/* Audio parameters */
[audio]
ai_audio_node          = hw:0,0     /* AI device node */
ao_audio_node          = hw:0,0     /* AO device node */
ai_depth              = 1          /* AI depth */
bit_width             = 1          /* Sampling accuracy */
channels              = 1          /* Channels */
mic_type              = 0          /* Audio device channel mode, specifically
RKADK_MIC_TYPE_E, 0: left channel, 1: right channel, 2: dual channel*/
```

```

samplerate          = 16000      /* Sample rate */
samples_per_frame   = 576        /* Number of samples per frame*/
bitrate             = 64000      /* Bitrate */
vqe_mode            = 1          /* Configure audio input sound quality
enhancement, specifically RKADK_VQE_MODE_E*/
vqe_config_path     = /oem/usr/share/vqefiles/config_aivqe.json /*vqe
configuration file path */
codec_type          = 8          /* Record and Live Audio encoding types, adapted
to MP3 by default, specifically RKADK_CODEC_TYPE_E */

```

13.4.2 Sensor INI Configuration Files

```

[sensor]
used_isp            = TRUE        /* Has the Sensor used ISP? */
max_width           = 2688        /* Max width */
max_height          = 1520        /* Max height */
framerate           = 30          /* Framerate*/
flip                = FALSE       /* Flip up and down*/
mirror              = FALSE       /* Mirror left and right */
ldc                 = 0           /* Lens distortion correction, [0,255] */
wdr                 = 0           /* Wide dynamic range, [0,10] */
hdr                 = 0           /* High dynamic range imaging, [0,10] */
antifog             = 0           /* Remove fog, [0,10] */
enable_wrap         = FALSE       /* Whether the VI enables wrap */
wrap_buf_line       = 1620        /* The line height of the wrap buffer */

/* VI channel configuration parameters */
[vi.0]
chn_id              = 0           /* Channel ID */
device_name         = rkispp_m_bypass /* Video node path*/
buf_cnt             = 4           /* The total number of buffer blocks in
the output channel */
depth               = 0           /* VI depth depth */
width               = 2688        /* Video width */
height              = 1520        /* Video height */
pix_fmt             = FBC0        /* VI output format*/
module              = RECORD_MAIN|PHOTO /* The usage module of this VI,Options:
NONE/RECORD_MAIN/RECORD_SUB/PREVIEW/PHOTO/LIVE/DISP */

[vi.1]
chn_id              = 1
device_name         = rkispp_scale0
buf_cnt             = 4
depth               = 0
width               = 0
height              = 0
pix_fmt             = NV12
module              = RECORD_MAIN|PHOTO

[vi.2]
chn_id              = 2

```



```

device_name          = rkispp_scale1
buf_cnt              = 2
depth                = 0
width                = 0
height               = 0
pix_fmt              = NV12
module                = NONE

[vi.3]
chn_id                = 3
device_name           = rkispp_scale2
buf_cnt               = 4
depth                 = 0
width                 = 848
height                = 480
pix_fmt                = NV12
module                 = RECORD_SUB|PREVIEW|LIVE|DISP

/* Record parameters */
[record]
record_type            = 0          /* Recording type, specifically
RKADK_REC_TYPE_E*/
file_type              = 0          /* Video file type, specifically
RKADK_MUXER_FILE_TYPE_E */
pre_record_time        = 0          /* Pre-recording duration */
pre_record_mode        = 0          /* Pre-recorded mode */
lapse_multiple         = 30         /* The multiple relationship between the
playback duration of a time-lapse video file and the actual screen content duration */
file_num                = 1          /* Number of files recorded simultaneously,
maximum 2 */
switch_res             = TRUE        /* Whether to switch resolution */
enable_audio           = TRUE        /* Whether to enable recording */

/* Record 0 VENC parameters of Main stream */
[record.0]
record_time            = 60          /* Recording duration*/
splite_time            = 60          /* Manually divide video duration */
lapse_interval         = 60          /* Time-lapse recording duration */
width                  = 2688        /* Video width */
height                 = 1520        /* Video height */
bufsize                = 10379776    /* The buffer size of the code stream */
framerate              = 30          /* Venc framerate */
bitrate                = 8294400     /* Bitrate */
gop                    = 30          /* I frame interval */
profile                = 100         /* Encoder profile */
codec_type             = 0          /* Encoding type, specificallyRKADK_CODEC_TYPE_E
*/
venc_chn                = 0          /* VENC channel ID */
vpss_grp               = 0          /* VPSS GROUP ID*/
vpss_chn                = 0          /* VPSS channel ID */
post_aiisp             = FALSE       /* Whether to enable Post AI ISP */
rc_mode                = CBR         /* Encoding protocol type, supports CBR, VBR,
AVBR*/

```

```
/* The following are advanced encoding parameters. If you need to adjust the encoder effect,
please add them according to your actual needs. For specific instructions, please refer to
the Rokit and MPP documents */
```

```
min_qp                = 10
max_qp                = 51
min_i_qp              = 10
max_i_qp              = 51
frame_min_i_qp        = 25
frame_min_qp          = 26
frame_max_i_qp        = 45
frame_max_qp          = 48
full_range            = 1
scalinglist           = 1
hier_qp_delta         = -2,0,0,0
hier_frame_num        = 3,0,0,0
enable_motion_deblur  = 1
motion_deblur_strength = 0
enable_motion_static_switch = 0
enable_debreath_effect = 0
debreath_effect_strength = 16
thrd_i                = 0,0,0,0,3,3,5,5,8,8,8,15,15,20,25,25
thrd_p                = 0,0,0,0,3,3,5,5,8,8,8,15,15,20,25,25
aq_step_i             = -8,-7,-6,-5,-4,-3,-2,-1,0,1,2,3,4,7,8,9
aq_step_p             = -8,-7,-6,-5,-4,-3,-2,-1,0,1,2,3,4,7,8,9
qbias_enable          = 1
qbias_i               = 171
qbias_p               = 85
flt_str_i             = 2
flt_str_p             = 2
cu_dqp                = 1
anti_ring             = 3
anti_line             = 3
lambda                = 4
lambda_i              = 7
atf_str               = 2
tmvp_en               = 0
static_frm_num        = 5
madp16_th             = 15
skip16_wgt            = 6
skip32_wgt            = 6
qbias_arr              = 3,6,13,144,144,144,144,3,6,13,144,144,171,144,85,85,85,85
aq_rnge_arr           = 8,8,12,12,12,8,8,12,12,12
lgt_chg_lvl           = 0
sao_str_i             = 0
sao_str_p             = 0
speed                 = 1
```

```
/* VENC parameter of the substream Record 1, when file_num = 1, rec.1 does not need to be
configured*/
```

```
[record.1]
record_time           = 60
splite_time           = 60
lapse_interval        = 60
```

```

width                = 848
height              = 480
bufsize             = 2367488
bitrate             = 407040
framerate           = 30
gop                 = 30
profile             = 100
codec_type          = 0
venc_chn            = 1
vpss_grp            = 0          /* VPSS GROUP ID*/
vpss_chn            = 0          /* VPSS channel ID */
post_aiisp          = FALSE      /* Whether to enable Post AI ISP */
rc_mode             = VBR

/* Photo VENC parameters */
[photo]
image_width          = 3840      /* Image width */
image_height         = 2160      /* Image_height */
venc_chn            = 2          /* VENC channel ID */
vpss_grp            = 0          /* VPSS GROUP ID*/
vpss_chn            = 0          /* VPSS channel ID */
post_aiisp          = FALSE      /* Whether to enable Post AI ISP */
enable_combo         = FALSE      /* Enable the Combo attribute of the encoding
channel */
combo_venc_chn       = 0          /* Combo data source channel */
qfactor              = 50          /* For the detailed meaning, please refer to the
RFC2435 protocol. The system default value is 70 and the value range is [1, 99] */
switch_res           = TRUE       /* Whether to switch resolution */
jpeg_slice           = FALSE      /* Whether to enable JPEG Slice */
slice_height         = 0          /* The height of JPEG Slice must not be greater
than max_slice_height*/
max_slice_width      = 0          /* Maximum width of JPEG Slice */
max_slice_height     = 0          /* Maximum height of JPEG Slice*/

/* Remote preview of VENC parameters */
[preview]
width                = 848        /* Video width */
height              = 480        /* Video height */
bufsize             = 2367488
bitrate             = 407040      /* Bitrate */
framerate           = 30          /* Venc framerate */
gop                 = 30          /* I frame interval */
profile             = 100         /* Encoder profile */
codec_type          = 0          /* Coding type, specifically RKADK_CODEC_TYPE_E
*/
venc_chn            = 1          /* Venc channel ID */
vpss_grp            = 0          /* VPSS GROUP ID */
vpss_chn            = 0          /* VPSS channel ID */
post_aiisp          = FALSE      /* Whether to enable Post AI ISP */
rc_mode             = VBR         /* Encoding protocol type, supports CBR, VBR,
AVBR */

/* Live VENC parameters */

```

```

[live]
width                = 1280
height               = 720
bufsize              = 2367488
bitrate               = 4194304
framerate             = 30
gop                   = 30
profile               = 100
codec_type            = 0
venc_chn              = 1
vpss_grp              = 0
vpss_chn              = 0
post_aiisp            = FALSE
rc_mode               = VBR

/* Local preview parameters */
[display]
x                    = 0                /* Display X coordinate */
y                    = 0                /* Display y coordinate */
width                = 720              /* Display the width */
height               = 1280             /* Display the height */
rotation              = 90              /* Degrees of rotation, Options: 0:0,
1:90, 2:180, 3:270 */
vpss_grp              = 0                /* VPSS GROUP ID */
vpss_chn              = 0                /* VPSS channel ID */
img_type              = RGB888           /* Video output format */
vo_device              = 0                /* Display output device number */
vo_layer              = 0                /* Video output video layer number */
vo_chn                = 0                /* VO channel ID */
frame_rate            = 30               /* VO frame rate */
intf_type              = default         /* Show interface type, Options: MIPI,
HDMI, EDP, VGA, DP, HDMI_EDP, LCD, default*/
splice_mode           = RGA              /* Splice mode, Options: RGA, GPU, BYPASS
*/

```

13.4.3 INI Configuration Precaution

- Configure the default INI file path through environment variables, for example: export rkadk_default_ini_path=/oem/usr/etc.
- Set the INI file path through RKADK_PARAM_Init API.
- The versions in rkadk_defsetting.ini and rkadk_setting.ini must be consistent, otherwise version detection will fail and the default INI configuration will be used. When the SDK is updated, the ini parameters may increase or decrease, so you need to pay attention at this time.
- The sensor_count represents the actual number of sensors used. It is set according to actual use and cannot be greater than RKADK_MAX_SENSOR_CNT. Currently, 3 sensors have been actually debugged.
- If the sensor uses ISP, `used_isp` must be configured to TRUE, and scaling is achieved directly by configuring the ISP node resolution. There is no need to configure the VPSS channel. `vpss_grp` and `vpss_chn` are both configured to 0; if the sensor does not use ISP, `used_isp` must be configured to FALSE, and configured the corresponding `vpss_grp` and `vpss_chn`, VPSS is used internally for scaling.
- When the resolution of recording, remote preview, live broadcast, etc. are the same, it is recommended to reuse VENC (VENC parameters are configured to be the same) to improve bandwidth and memory utilization.
- When VENC is reused or the VENC resolution is the same, it is recommended to reuse VPSS channels to improve bandwidth utilization.
- The gop is recommended to be configured the same as framerate to ensure that there is one I frame every second.

14. Examples

Function examples are provided below, and precautions for use are as follows:

- Before running the examples, make sure that no other application occupies the node used by the example, such as mediaserver and ispserver.
- The default parameters of the examples are adapted to RK EVBs. When the hardware are different from our EVB, customers need to specify command parameters themselves or adjust the code.

14.1 rkadk_record_test

Description

Record test.

Code path

rkadk/examples/rkadk_record_test.c

Quick use

```
./rkadk_record_test
```

Option

Options	Description	Default
-a	Enable the built-in ISP function. Enter this option to enable the built-in ISP function. If there are no parameters, the default value will be used. The parameter is the path to the folder where the aiq file is located.	/etc/iqfiles
-I	Camera ID	0
-m	Enable dual sensor test, options: 0(isp sensor), 1(all isp sensors), 2(isp+ahd sensors)	0
-p	The ini configuration file directory path	/data/rkadk
-k	Whether the video file is sliced into I frames	Not sliced
-P	Enable picture-in-picture record	Disable
-c	AVS buffer count	2
-t	Get thumbnail delay time(ms) when enable file cache	3000ms
-e	Enable EIS	Disable

14.2 rkadk_photo_test

Description

Photo testing.

Code path

/rkadk/examples/rkadk_photo_test.c

Quick use

```
./rkadk_photo_test
```

Option

Options	Description	Default
-a	Enable the built-in ISP function. Enter this option to enable the built-in ISP function. If there are no parameters, the default value will be used. The parameter is the path to the folder where the aiq file is located.	/etc/iqfiles
-I	Camera ID	0
-p	The ini configuration file directory path	/data/rkadk
-t	Data type of the obtained JPG image	NV12
-m	Enable dual sensor test, options: 0(isp sensor), 1(all isp sensors), 2(isp+ahd sensors)	0
-o	The osd file path	NULL
-W	The osd width	0
-H	The osd high	0

14.3 rkadk_stream_test

Description

Get the audio stream, encode it, and output it to a file; get the video stream, encode it, and output it to a file.

Code path

/rkadk/examples/rkadk_stream_test.c

Quick use

```
./rkadk_stream_test
```

Option

Options	Description	Default
-a	Enable the built-in ISP function. Enter this option to enable the built-in ISP function. If there are no parameters, the default value will be used. The parameter is the path to the folder where the aiq file is located.	/etc/iqfiles
-I	Camera ID	0
-M	Test mode: audio, video	audio
-e	Encoding type	pcm
-o	Output file path	/tmp/ai.pcm
-p	The ini configuration file directory path	/data/rkadk
-m	Enable dual Sensor test, options: 0(isp sensor), 1(all isp sensors), 2(isp+ahd sensors)	0

14.4 rkadk_player_test

Description

Local file playback test.

Code path

/rkadk/examples/rkadk_player_test.c

Quick use

```
./rkadk_player_test
```

Option

Options	Description	Default
-i	Playback file path	/etc/bsa_file/8k8bpsMono.wav
-x	Video display starting x coordinate	0
-y	Video display starting y coordinate	0
-W	Video display width	Screen physical width
-H	Video display height	Screen physical height
-r	Video rotation angle, option: 0, 90, 180, 270	0
-p	The ini configuration file directory path	/data/rkadk
-m	Video mirror	disable
-f	Video flip	disable
-a	Whether to enable audio playback, option: 0 (disable), 1 (enable)	1
-v	Whether to enable Video playback	disable
-s	Set layer synthesis method, option: 0(RGA), 1(GPU), 2(ByPass)	0
-P	Screen display pixel format, option: 0(RGB888), 1(NV12), 2(RGB565)	0
-I	Display interface type, option: 0(DEFAULT), 1(MIPI), 2(LCD)	1106: 0, other platforms: 1
-F	Refresh frame rate	30
-t	RTSP transmission protocol, option: 0(udp), 1(tcp)	0
-b	Enable black screen after playing	disable
-T	RTSP socket I/O operation timeout exit time, unit ms	Blocking, no timeout
-l	VO layer ID	0
-O	Vdec output buffer number	3 [1, 8]
-D	Enable third-party demuxer library	disable

Notice

- When playing video files, -v is required to enable Video playback.
- Mirror/flip cannot be set at the same time as rotation.

14.5 rkadk_thumb_test

Get file thumbnail test.

Code path

/rkadk/examples/rkadk_thumb_test.c

Quick use

```
Get MP4 thumbnail: ./rkadk_thumb_test -i test_file.mp4
Get JPG thumbnail: ./rkadk_thumb_test -i test_file.jpg -f jpg -t MPF1
```

Option

Options	Description	Default
-i	Test file path	None
-f	File format: mp4, jpg	mp4
-t	JPG thumbnail types: DCF, MPF1, MPF2	DCF
-T	Output thumbnail type: JPG, NV12, RGB565, RGB888	JPG
-W	Thumbnail width	Get from ini
-H	Thumbnail height	Get from ini

14.6 rkadk_rtsp_test

RTSP live test.

Code path

/rkadk/examples/rkadk_rtsp_test.c

Quick use

1. Start wifi on the board end
2. Run the board end. /rkadk_rtsp_test
3. Open VLC on PC -> Media -> Open network streaming -> Enter the network URL: rtsp://board end ip address/live/main_stream

Option

Options	Description	Default
-a	Enable the built-in ISP function. Enter this option to enable the built-in ISP function. If there are no parameters, the default value will be used. The parameter is the path to the folder where the aiq file is located.	/etc/iqfiles
-I	Camera ID	0
-p	The ini configuration file directory path	/data/rkadk
-o	The osd file path	/userdata/rkadk_ARGB8888

14.7 rkadk_rtmp_test

RTMP live test.

Code path

/rkadk/examples/rkadk_rtmp_test.c

Quick use

1. Start wifi on the board
2. Run ./rkadk_rtmp_test on the board
3. Open VLC on the PC -> Media -> Open network streaming -> Enter the network URL:
rtmp://The ip address of the board::1935/live/substream

Option

Options	Description	Default
-a	Enable the built-in ISP function. Enter this option to enable the built-in ISP function. If there are no parameters, the default value will be used. The parameter is the path to the folder where the aiq file is located.	/etc/iqfiles
-I	Camera ID	0
-p	The ini configuration file directory path	/data/rkadk

14.8 rkadk_storage_test

Description

Storage module testing.

Code path

/rkadk/examples/rkadk_storage_test.c

Quick use

```
./rkadk_storage_test
```

Option

None

Notice

- This test generates an mp4 file with all 0s written in it to test functions and interfaces such as automatic deletion and file list obtaining. The mp4 file has no actual data and cannot be played.

14.9 rkadk_disp_test

Local preview testing.

Code path

/rkadk/examples/rkadk_disp_test.c

Quick use

```
./rkadk_disp_test
```

Option

Options	Description	Default
-a	Enable the built-in ISP function. Enter this option to enable the built-in ISP function. If there are no parameters, the default value will be used. The parameter is the path to the folder where the aiq file is located.	/etc/iqfiles
-I	Camera ID	0
-p	The ini configuration file directory path	/data/rkadk

14.10 rkadk_ui_test

UI overlay testing.

Code path

/rkadk/examples/rkadk_ui_test.c

Quick use

```
./rkadk_ui_test
```

Option

Options	Description	Default
-a	Enable the built-in ISP function. Enter this option to enable the built-in ISP function. If there are no parameters, the default value will be used. The parameter is the path to the folder where the aiq file is located.	/etc/iqfiles
-I	Camera ID	0
-p	The ini configuration file directory path	/data/rkadk
-W	Display area width	720
-H	Display area height	1280
-f	Screen display pixel format, option: 0(RGB888), 1(NV12), 2(RGB565), 3(RGB444)	0

14.11 rkadk_muxer_test

Muxer testing.

Code path

/rkadk/examples/rkadk_muxer_test.c

Quick use

```
./rkadk_muxer_test
```

Options

Options	Description	Default
-a	Enable the built-in ISP function. Enter this option to enable the built-in ISP function. If there are no parameters, the default value will be used. The parameter is the path to the folder where the aiq file is located.	/etc/iqfiles
-W	Video width	1920
-H	Video height	1080
-f	Framerate	30
-C	Codec type, option: 0(H264), 1(H265)	H264
-d	Audio device node	hw:0,0
-k	Key frame fragment	Disable
-c	Stream count, options: 1(main stream), 2(main + sub stream)	1
-t	Process third-party stream	Enable
-A	Enable audio	Enable
-p	Pre-record time(s)	0
-I	Third-party I frame file	null
-P	Third-party P frame file	null
-n	Write stream number	-1