



# MIG-EC100 Event controller

## User manual V1.1

⚠ Before using the event controller, please read this manual carefully and keep it for future reference.

# MAGNIMAGE

| Statement                                                                                                          | True or False?           |
|--------------------------------------------------------------------------------------------------------------------|--------------------------|
| The following are all true:                                                                                        |                          |
| • The number of people who have been infected by COVID-19 has increased exponentially since it was first reported. | <input type="checkbox"/> |
| • The number of deaths from COVID-19 has increased linearly since it was first reported.                           | <input type="checkbox"/> |
| • The number of people who have recovered from COVID-19 has increased logarithmically since it was first reported. | <input type="checkbox"/> |
| • The number of people who have died from COVID-19 has increased cubically since it was first reported.            | <input type="checkbox"/> |
| • The number of people who have recovered from COVID-19 has increased quadratically since it was first reported.   | <input type="checkbox"/> |
| • The number of people who have died from COVID-19 has increased exponentially since it was first reported.        | <input type="checkbox"/> |
| • The number of people who have recovered from COVID-19 has increased linearly since it was first reported.        | <input type="checkbox"/> |
| • The number of people who have died from COVID-19 has increased logarithmically since it was first reported.      | <input type="checkbox"/> |
| • The number of people who have recovered from COVID-19 has increased cubically since it was first reported.       | <input type="checkbox"/> |
| • The number of people who have died from COVID-19 has increased quadratically since it was first reported.        | <input type="checkbox"/> |

Without the written permission of Magnimage, any organization or individual can not reproduce, copy, transcribe, or translate part or all of the contents of this Manual without authorization. The Manual can not be distributed as a commodity or used for any commercial or profit-making purposes in any form or by any means (electronic, mechanical, photocopying, recording, or other possible means).

The product specifications and information mentioned in this manual are for reference only. This manual is only used as a guide to use, and all statements and information in this manual do not constitute any form of guarantee.

## Revision History

[illegible]

# CONTENT

|                                      |          |
|--------------------------------------|----------|
| <b>BRIEF INTRODUCTION .....</b>      | <b>5</b> |
| TRADEMARK CREDIT .....               | 5        |
| ABOUT SOFTWARE .....                 | 5        |
| <b>PRODUCT FEATURES .....</b>        | <b>6</b> |
| SAFETY NOTICE .....                  | 7        |
| MACHINE SPECIFICATIONS .....         | 1        |
| <b>FUNCTION INTRODUCTION .....</b>   | <b>2</b> |
| OVERVIEW .....                       | 2        |
| KEYBOARD INTRODUCTION .....          | 3        |
| INTERFACE INTRODUCTION .....         | 4        |
| TECHNICAL PARAMETER .....            | 5        |
| <b>MENU USAGE .....</b>              | <b>6</b> |
| INITIAL INTERFACE INTRODUCTION ..... | 6        |
| MENU INTRODUCTION .....              | 8        |
| Menu .....                           | 9        |
| Image Settings .....                 | 10       |
| Bright LVL: .....                    | 10       |
| Main Layers Picture Setting .....    | 10       |
| Output .....                         | 11       |
| Main Resolution .....                | 11       |
| Advanced .....                       | 11       |
| Main Window .....                    | 11       |
| Size .....                           | 11       |
| AUX Output Window .....              | 12       |
| Size .....                           | 12       |
| Layout: Switcher Mode .....          | 12       |
| AUX Output Mode .....                | 12       |
| HDMI Output .....                    | 13       |
| Input .....                          | 14       |
| Input Sources List .....             | 14       |
| Image Crop .....                     | 14       |
| HDMI/DP RGB Range .....              | 14       |
| Input Configuration .....            | 15       |
| Layer Settings .....                 | 16       |
| MAIN Layer .....                     | 16       |
| Size/Position .....                  | 16       |
| Layer Crop .....                     | 17       |
| Color Key .....                      | 18       |
| Text Mode .....                      | 18       |
| Layer effects .....                  | 18       |
| Line Border .....                    | 18       |
| Feather .....                        | 18       |
| Mirror Clone .....                   | 20       |
| AUX Layer: .....                     | 20       |
| Size/Position .....                  | 20       |

|                                             |    |
|---------------------------------------------|----|
| Layer Cropping .....                        | 21 |
| Save and Load .....                         | 22 |
| Save Preset .....                           | 22 |
| Load Preset .....                           | 22 |
| Clear All Presets .....                     | 22 |
| Save Preset Channel .....                   | 23 |
| Background .....                            | 23 |
| Save Main Output Preset .....               | 23 |
| Preview .....                               | 24 |
| Layout Template .....                       | 24 |
| Custom Layout .....                         | 24 |
| Rename Layout .....                         | 24 |
| Communication Settings .....                | 25 |
| IP Settings .....                           | 25 |
| Edit .....                                  | 25 |
| Function options .....                      | 25 |
| Status information .....                    | 26 |
| Test pattern .....                          | 26 |
| Color .....                                 | 26 |
| Black and White Flash .....                 | 26 |
| Checkerboard Pattern .....                  | 27 |
| Synchronization Source Selection .....      | 27 |
| Ambient Light .....                         | 28 |
| Touch Screen .....                          | 29 |
| T-Bar .....                                 | 29 |
| Restore Factory Settings .....              | 29 |
| Language .....                              | 30 |
| INTRODUCTION TO MULTI-PREVIEW WINDOWS ..... | 31 |

## **BUTTON USAGE ..... 32**

|                                 |    |
|---------------------------------|----|
| BUTTON USAGE INSTRUCTIONS ..... | 32 |
| MENU .....                      | 33 |
| NUMPAD .....                    | 33 |
| LAYER .....                     | 33 |
| INPUT .....                     | 34 |
| PRESET .....                    | 34 |
| BACKGROUND .....                | 36 |
| TRANSITION .....                | 37 |

## **WARRANTY STATEMENT ..... 38**

|                               |    |
|-------------------------------|----|
| MACHINE WARRANTY PERIOD ..... | 38 |
| NON-WARRANTY .....            | 38 |



# Brief Introduction

Thank you for purchasing our MIG-EC100 event controller. We hope you can fully enjoy the excellent performance of this product. This video switcher is designed in accordance with international and industry standards, but improper operation may still cause personal injury and property damage. To avoid potential dangers associated with the equipment and maximize its advantages, please follow the relevant instructions in this manual when installing and operating the switcher.

## Trademark Credit

---

- VGA and XGA are registered trademarks of IBM.
- VESA is a trademark of the Video Electronics Standards Association.
- HDMI, HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- Even if the company or product trademark is not specifically stated, the trademark has been fully recognized.

## About Software

---

The software installed on this product can not be modified, decompiled, decrypted, or reverse engineered. All the above behaviors are illegal.

## Product Features

- Supports 4 main 4K outputs, 4 auxiliary 2K AUX outputs, and 1 multi-preview output.
- Main outputs support 2 independent custom resolutions
- AUX supports two working modes: splicing and switching; AUX outputs can be spliced together
- Supports 10G OPT optical output
- Supports HDMI 2.0 & DP 1.2, 12G SDI, and HDMI 1.4 Inputs
- Supports 10 channels of 4K×2K/60Hz input, 2 channels of 4K×1K/60Hz input
- Supports HDCP 1.4 & 2.2
- Supports input EDID configuration
- Main output supports 14 4K layers
- Supports layer crop, image capture, and layer zoom functions
- Supports virtual output settings
- Supports 8 background captures and recalls
- Supports layer borders, shadows, feathering, and mirroring effects
- Supports color key, with 4 color key layers for the entire unit
- Supports PGM editing mode
- Supports quick saving and loading of 60 user presets
- Supports touchscreen, knob, and T-Bar switching
- Supports custom editing of the preview interface and renaming of input signals
- Supports input source echo in the preview interface
- Supports control of button brightness, button backlight, front and rear illumination, and left and right logo lights
- Equipped with a 21.5-inch preview monitor and a 7-inch touch menu display

## Safety Notice

---

- The input voltage range of this product's power supply is 100~240 VAC, 50/60 Hz. Please use the correct power supply.
- When you want to connect or remove any signal line or control line, make sure that all power lines have been unplugged in advance.
- When you want to add hardware devices to this product or remove hardware devices from this product, make sure that all signal lines and power lines have been unplugged in advance.
- Before performing any hardware operations, turn off the power of the MIG-EC100 event controller and release your static electricity by touching the ground surface.
- Please use in a clean, dry, and ventilated environment. Do not put this product in high temperature, humidity, and other environments for use.
- This product is an electronic product. Please keep away from fire sources, water sources, and inflammable and explosive dangerous goods.
- There are high-pressure components in this product. Please do not open the chassis or repair this equipment by yourself.
- If you find smoke, odor, and other abnormal conditions, please immediately turn off the power switch, and contact the dealer.

# Machine Specifications

---

| Machine Specification |                           |
|-----------------------|---------------------------|
| Input Power           | 100 ~ 240V AC, 50/60Hz    |
| Working Temperature   | 0~45°C                    |
| Working Humidity      | 5%RH-75%RH                |
| Power Consumption     | 130W                      |
| Size (mm)             | 739.5×441.8×497.1 (L×W×H) |
| Weight                | 22.15KG                   |

# Function Introduction

## Overview


---

The MIG-EC100 is an event controller integrating 4K input/output, multi-layer processing, and control. Internally, it utilizes 4K/60Hz 4:4:4 image processing technology and features a built-in 4K matrix, supporting fade-in/fade-out switching among multiple 4K inputs.

The MIG-EC100 is equipped with a 7-inch touchscreen display, supporting quick menu navigation and parameter adjustment. Knobs allow for precise adjustment of input/output and layer parameters. Compact in size, powerful in function, and easy to use, this console is an indispensable tool for video switching.


Rich input interfaces: DP1.2 & HDMI 2.0×8, 12G SDI×2, HDMI 1.4×2;  
Output interfaces: Main output HDMI 2.0×8+10G OPT×8, AUX output HDMI 1.3×4, multiple preview output HDMI 1.3×1.

# Keyboard Introduction

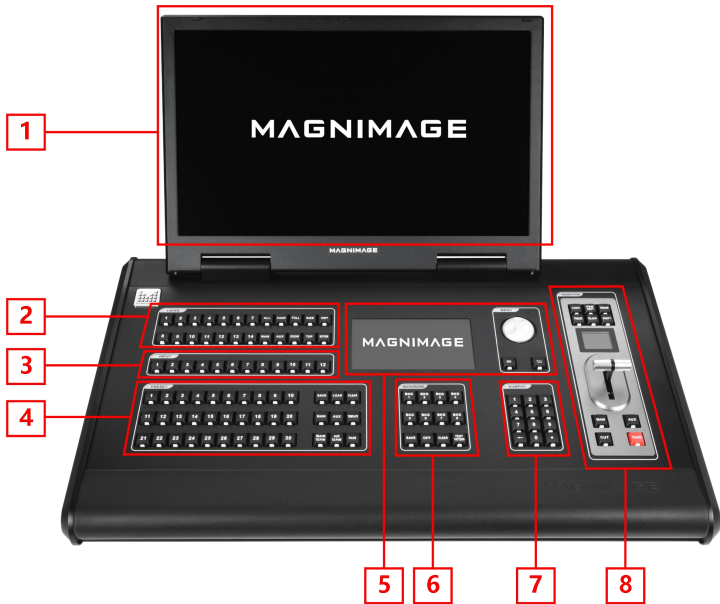

| Key area description |            |                                                                                                                                                                               |
|----------------------|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                    | LCD SCREEN | Multi-view monitor.                                                                                                                                                           |
| 2                    | LAYER      | Layer selection and operation area.                                                                                                                                           |
| 3                    | INPUT      | Input signal selection area.                                                                                                                                                  |
| 4                    | PRESET     | Preset selection operation area.                                                                                                                                              |
| 5                    | MENU       | Includes a touchscreen display, knobs, an OK button, and a back button for menu operations and parameter adjustments.                                                         |
| 6                    | BACKGROUND | User BKG and Black Background Selection and Operation Area.                                                                                                                   |
| 7                    | NUMPAD     | The numeric keypad is used to adjust parameters.                                                                                                                              |
| 8                    | TRANSITION | Includes a T-Bar slider, CUT and TAKE buttons for switching between PGM and PVW screens, button lock, black screen, freeze, PGM screen editing, and device operation buttons. |

# Interface Introduction

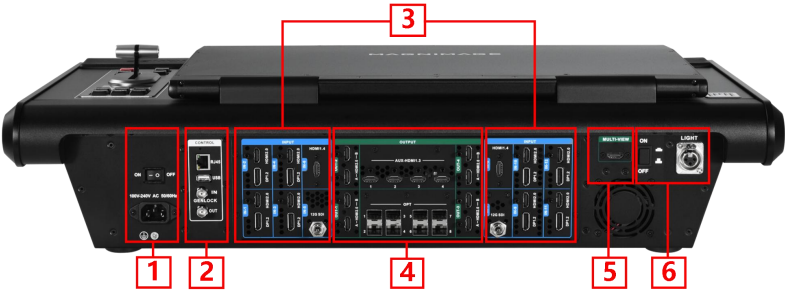

| Interface |                                                                                                |
|-----------|------------------------------------------------------------------------------------------------|
| 1         | Power interface and power switch, ground interface.                                            |
| 2         | RJ45 is used for communication control, USB upgrade interface, and Genlock in & out interface. |
| 3         | 12 input interfaces: 8 HDMI 2.0 & DP 1.2 (selectable), 2 12G SDI, and 2 HDMI 1.4.              |
| 4         | 8 main HDMI 2.0 outputs (4 main and 4 backup) + 10G OPT, 4 auxiliary HDMI 1.3 outputs.         |
| 5         | HDMI 1.3 multi-preview window output interface.                                                |
| 6         | Gooseneck lamp interface and switch.                                                           |

# Technical Parameter

| Input           |          |                                                                                                                                                                                                        |
|-----------------|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface       | Quantity | Resolution                                                                                                                                                                                             |
| HDMI 2.0/DP 1.2 | 8/8      | Each port can use either HDMI 2.0 or DP 1.2.<br>Supports 7680×1080/60Hz, 3840×2160/60Hz, 3840×2400/60Hz, and custom resolutions.<br>Horizontal maximum: 7680 pixels,<br>vertical maximum: 3840 pixels. |
| 12G SDI         | 2        | Supports 3840×2160/60Hz (backward compatible).                                                                                                                                                         |
| HDMI 1.4        | 2        | Supports 3840×1080/60Hz and custom resolution.<br>Horizontal maximum: 4094 pixels,<br>vertical maximum: 3840 pixels.                                                                                   |

| Output         |                  |          |                                                                                                                                          |
|----------------|------------------|----------|------------------------------------------------------------------------------------------------------------------------------------------|
| Interface Type | Interface        | Quantity | Resolution                                                                                                                               |
| Main Output    | HDMI 2.0+10G OPT | 8+8      | 3840×2400/60Hz, 7680×1200/60Hz;<br>Single-port maximum horizontal 7680 pixels,<br>maximum vertical 3840 pixels;<br>Refresh rate 23~241Hz |
| AUX Output     | HDMI 1.3         | 4        | 1920×1080/60Hz                                                                                                                           |
| Preview Output | HDMI 1.3         | 1        | 1920×1080/60Hz                                                                                                                           |

Note:

- Main outputs HDMI1/HDMI2 have the same resolution, and HDMI3/HDMI4 have the same resolution.
- OPT optical port output data can be directly supplied to Magnimage Video Controller and DC20 devices, but does not support direct connection to OPT inputs of other brands of devices.
- AUX Switcher Mode: Supports 2 independent or spliced AUX outputs. AUX1/AUX2 can copy each other, and AUX3/AUX4 can copy each other. Switching is supported via T-bar, TAKE, or CUT.
- AUX Mosaic Mode: Supports 4 independent or spliced AUX outputs. AUX image selection signals are directly output for on-screen display without T-bar, TAKE, or CUT switching.


| Control Interface |                                                                                         |
|-------------------|-----------------------------------------------------------------------------------------|
| RJ45×1            | Network cable interface, used for communication control                                 |
| USB×1             | The USB upgrade port allows for upgrading the MIG-EC100 by inserting a USB flash drive. |
| GENLOCK IN&OUT    | External synchronization signal input and loop output interface.                        |




# Menu usage

## Initial Interface Introduction

When running the MIG-EC100 console, the startup logo will be displayed on the LCD screen on the front panel during system startup. After startup is complete, the main interface of the current machine will be displayed, as shown in the figure

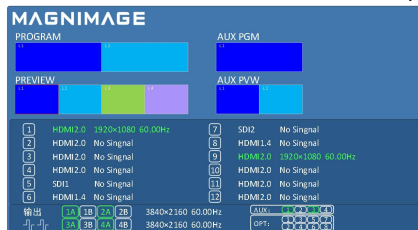

AUX switcher mode

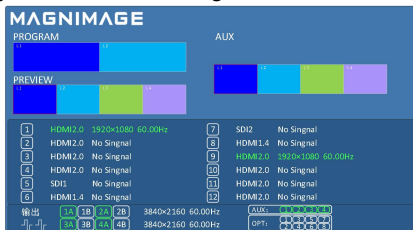

AUX Mosaic mode

The information in the above image is explained as follows:

| Window          | illustration                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                   |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PROGRAM         | Displays the number and position status of layers in the main output PROGRAM port;                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                   |
| PREVIEW         | The window displays the number and position status of layers in the preview operation. The red box indicates the currently selected layer. When no layers are displayed, the window is black. The L1~L14 color blocks correspond to the on/off status of layers 1~14 in the preview. |                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                   |
| AUX             | Switcher                                                                                                                                                                                                                                                                             | AUX PGM                                                                                                                                                                                                                                                          | Displays the number and position status of layers output by AUX;                                                                                                                                                                                                  |
|                 |                                                                                                                                                                                                                                                                                      | AUX PVW                                                                                                                                                                                                                                                          | Displays the number and position status of layers in the AUX preview. The red box indicates the currently selected layer. When no layers are displayed, the window is black. The L1~L2 color blocks correspond to the on/off status of layers 1~2 in the preview. |
|                 | Mosaic                                                                                                                                                                                                                                                                               | Displays the number and position status of layers in the AUX output. The red box indicates the currently selected layer. When no layers are displayed, the window is black. The L1~L4 color blocks correspond to the on/off status of layers 1~4 in the preview. |                                                                                                                                                                                                                                                                   |
| Input 1~12      | Displays the interface type and current input status of the 12 inputs;                                                                                                                                                                                                               |                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                   |
| Main Output 1~4 | Displays the connection status, resolution, and refresh rate of the four main output channels;                                                                                                                                                                                       |                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                   |
| AUX1~4          | Displays the connection status of the 4 AUX outputs; white indicates not connected, green indicates connected.                                                                                                                                                                       |                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                   |
| OPT1~8          | Displays the connection status of 8 OPT outputs; white indicates not connected, and                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                   |

|                                                                                   |                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                   | green indicates connected.                                                                                                                                                       |
|  | The synchronization icons are as follows: the left icon indicates the synchronization of main outputs 1-2, and the right icon indicates the synchronization of main outputs 3-4. |

# Menu Introduction


The main menu will display the semicolons listed in the table below. Please see the table for their specific meanings:

| Semicolons                                                                        | Illustration                                                                    |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
|  | Press the back button or tap to return to the main screen or the previous menu. |

In the main menu, users can select and adjust items using the "OK," "↷," and knob buttons, or by touching the corresponding menu items. The operation modes are shown in the table below:

| Operation                                 | Button                                                                                                                                                                                                                                                                     |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Open the main menu                        | Press the "OK" button in the default state.                                                                                                                                                                                                                                |
| Select Item                               | Rotate the knob to select items or tap the corresponding menu.                                                                                                                                                                                                             |
| Adjust the parameters                     | When the right side of the item displays a number or option parameter, press the OK button to select that parameter and rotate the knob, or tap "◀" "▶" to decrease or increase the parameter, or tap the parameter and adjust it in the pop-up numeric keypad input area. |
| Enter the next level menu                 | When the right side of the project displays a "▶" symbol, press the "OK" button or tap the menu.                                                                                                                                                                           |
| Implement                                 | Use the knob to select the item to be performed, then press the "OK" button or tap the function.                                                                                                                                                                           |
| Return to the previous menu               | Press the "↷" key or tap the back icon.                                                                                                                                                                                                                                    |
| Confirm                                   | To avoid accidental operation when performing reset or other similar procedures, you need to confirm the operation with the "OK" button or by touching the screen.                                                                                                         |
| The menu button is highlighted in yellow. | This indicates that the menu has been selected via the knob, and you can proceed to the next step.                                                                                                                                                                         |
| Function menu text is yellow              | This indicates that the function of this menu item is no longer in use.                                                                                                                                                                                                    |
| Function menu text is white               | This indicates that the function in this menu is no longer in use.                                                                                                                                                                                                         |

Numeric Keypad Instructions: To modify any parameter, in addition to pressing the OK button, rotating, and tapping the left and right arrow keys, you can also tap the corresponding parameter to bring up the numeric keypad on the screen. 0 to 9 represent numbers,  represents the decimal point,  exits numeric keypad mode,  confirms the parameter modification, and  backspaces to delete the entered number. The numeric keypad is shown in the image on the right.

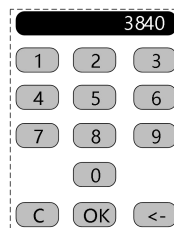

## Menu


In the default state, pressing the "OK" button or lightly touching the knob will enter the main menu state, as shown in the following figure on the LCD screen:




The main menu has 9 menu items. You can use the knob to select the 9 menu titles listed above. The font color of the unselected menu icon is cyan, and the font color of the selected menu icon is yellow. After selection, press the "OK" button to enter the selected item, press the "" button to return to the previous menu, or use touch to enter the corresponding menu.

Image Settings


Bright LVL:

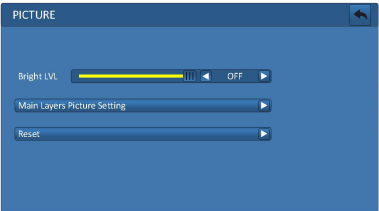

Main Layers Picture Setting:

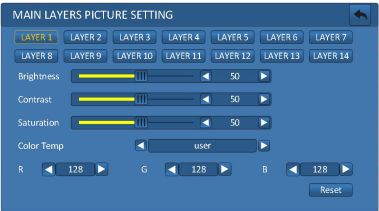

Reset:

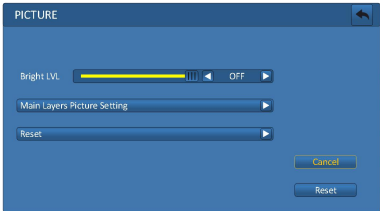

|                               |                                                                                                                                                |  |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Bright LVL                    | The device's output brightness level adjustment is off by default, with a range of 0-16 levels.                                                |  |
| Layer1~14<br>Picture Settings | Brightness: Parameter range 0~100, default parameter 50.                                                                                       |  |
|                               | Contrast ratio: Parameter range 0~100, default parameter 50.                                                                                   |  |
|                               | Saturation: Parameter range 0~100, default parameter 50.                                                                                       |  |
|                               | The default color temperature is 6500K, and there are 9 options: "4000K", "5000K", "6500K", "7500K", "8200K", "9300K", "10000K", and "11500K". |  |
|                               | The red parameter range is 0~255, and the default parameter is 128.                                                                            |  |
| Layer1~14<br>Picture Settings | The green parameter range is 0~255, and the default parameter is 128.                                                                          |  |
|                               | The blue parameter range is 0~255, and the default parameter is 128.                                                                           |  |
|                               | Reset                                                                                                                                          |  |
| Reset                         | Restore all layer image parameters and brightness levels set by the user to their default settings.                                            |  |

## Output



Main Resolution:




Main Customized Resolution:




Advanced:




Main Window:

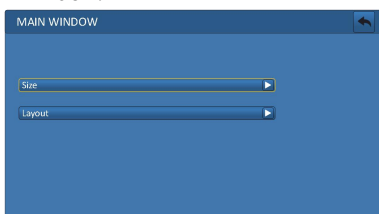

Size:

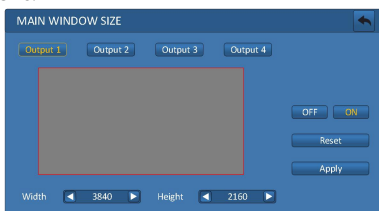



Layout:

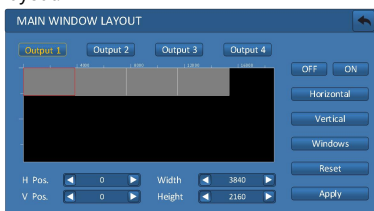


|                        |        |                                                                                                                                                                                                                                |
|------------------------|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Main Output Resolution |        | Supports user-defined output and 18 fixed resolution options; single-port width up to 7680 pixels, maximum 3840 pixels.<br>overall splicing width up to 30720 pixels, maximum 15360 pixels.<br>refresh rate 23~241Hz.          |
| Main Output Window     | Size   | Set the main output window size and window on/off settings.                                                                                                                                                                    |
|                        | Layout | The main output window size is set to the corresponding LED display pixel size for convenient window opening without the need for scaling.<br>The main output splicing supports horizontal, vertical, and herringbone layouts. |

### AUX Output Window:


Size:

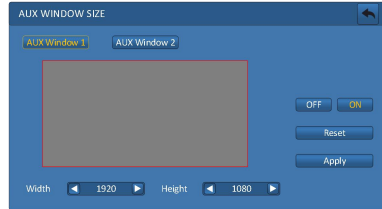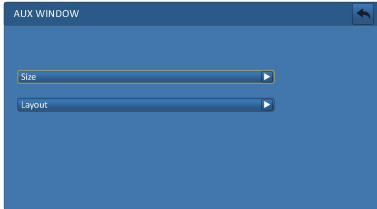

Layout: Switcher Mode

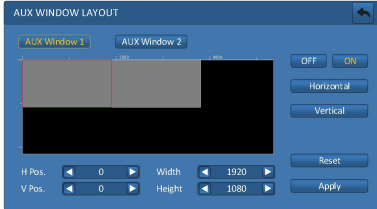

Layout: Mosaic Mode

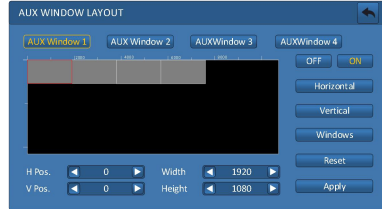

### AUX Output Mode:



|                   |          |                                                                                                                                                                                                                                                                          |
|-------------------|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AUX Output Window | Size     | Configure AUX output window size and open or close settings.                                                                                                                                                                                                             |
|                   | Layout   | AUX output splicing supports horizontal and vertical layouts;                                                                                                                                                                                                            |
| AUX Output Mode   | Switcher | It can use two independent or spliced AUX outputs, and supports multiple preview windows to display the PGM and PVW images of the AUX. Switching can be done by the CUT and TAKE buttons or the T-Bar. AUX1/AUX2 can copy each other, and AUX3/AUX4 can copy each other. |

It can use 4 independent or spliced AUX outputs and supports multiple preview windows to monitor the AUX output screen.

HDMI Output:

DVI/HDMI Mode:



RGB Color Range:



Color Space:



|             |                 |                                                                                                                      |
|-------------|-----------------|----------------------------------------------------------------------------------------------------------------------|
| HDMI Output | DVI/HDMI        | The output formats DVI and HDMI have been adjusted to provide greater compatibility with backend processing devices. |
|             | RGB Color Range | The output color gradation range can be set to 16~235 or 0~255.                                                      |
|             | Color Space     | The main output color space can be adjusted to RGB, YUV422, or YUV444. The default is RGB.                           |


Note:

- When the screen is not completely black (it has a dim or bright state), the user may encounter a black screen. This can be resolved by modifying the RGB range of the input source or the output RGB range of the MIG-EC100 device.





## Input

### Input Sources List:

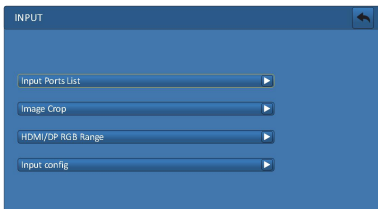

### Image Crop:

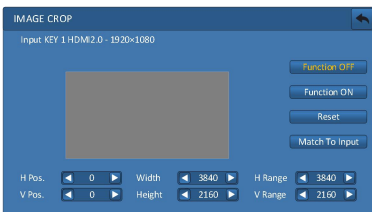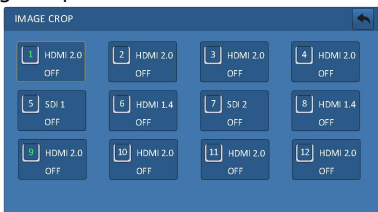


|                    |                                                                                                 |                                                                                                                                                                             |
|--------------------|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Input Sources List | Displays the status and resolution information of all inputs on the MIG-EC100 event controller. |                                                                                                                                                                             |
| Image Crop         | Enable, disable, or reset the input source interception function.                               |                                                                                                                                                                             |
|                    | Matching input signal                                                                           | Match the image cropping parameters and baseline parameters with the resolution of the input to be cropped.                                                                 |
|                    | Horizontal/Vertical Reference                                                                   | The reference parameters can be set to the input resolution or the LED screen size, making it easy to set the width, height, and position parameters of the captured image. |
|                    | Horizontal width/vertical height                                                                | Set the horizontal width and vertical height in pixels to be captured.                                                                                                      |
|                    | Horizontal/Vertical Position                                                                    | Set the horizontal/vertical position pixels of the desired image to be captured,;                                                                                           |

### Note:

- When image cropping is enabled for the input signal, all layers that call the signal will display the cropped image.


### HDMI/DP RGB Range:

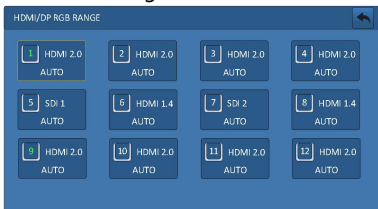

HDMI/DP RGB Range

Sets the RGB range for the HDMI/DP input. The default is automatic, but options of 0~255 and 16~235 are available to match the input color range.

Input Configuration:

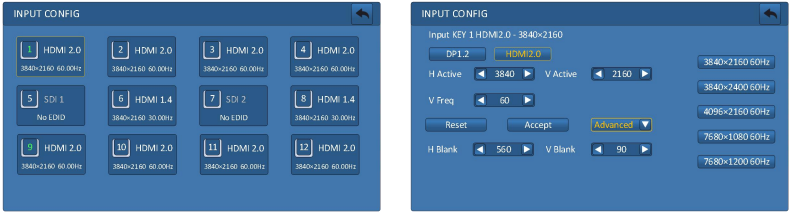


EDID configuration is available for DP and HDMI inputs. The input configuration interfaces for DP1.2/HDMI 2.0 and HDMI 1.4 each offer 5 configuration resolutions for quick selection.

|                     |                                |                                                                                                                                           |  |
|---------------------|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|--|
| Input Configuration | Input KEY 1 HDMI2.0            | The input for the current EDID configuration.                                                                                             |  |
|                     | DP1.2/HDMI2.0                  | Use the DP1.2 or HDMI 2.0 input interface switch button to select either DP1.2 or HDMI 2.0 input interfaces for input groups 1~4 or 9~12. |  |
|                     | Horizontal/Vertical Resolution | Set the horizontal/vertical resolution parameters as needed by the user.                                                                  |  |
|                     | Reset                          | Reset the input EDID configuration parameters.                                                                                            |  |
|                     | Use                            | Write the input EDID configuration parameters.                                                                                            |  |
| Advanced            | H Blank                        | Modify the H Blank parameter in the input EDID configuration.                                                                             |  |
|                     | V Blank                        | Modify the V Blank parameter in the input EDID configuration.                                                                             |  |



Notes:

- SDI does not support EDID input configuration.
- When configuring input, the computer's display mode must be set to extended mode.
- After setting up the input, different computers and graphics cards may require restarting the computer, or selecting the corresponding output resolution in the computer's display settings.


# Layer Settings

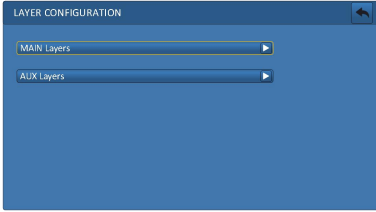


MAIN Layer:

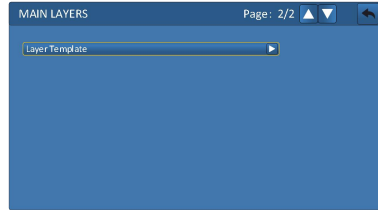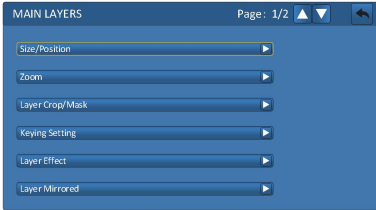

Size/Position:

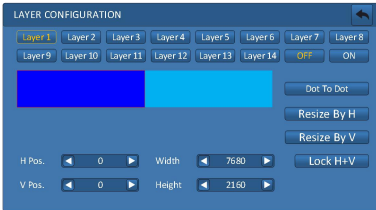

Zoom:

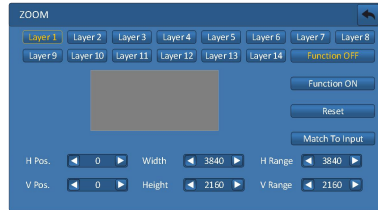


|            |                   |                                  |                                                                                                                                                                                            |
|------------|-------------------|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MAIN Layer | Size/<br>Position | Layer 1 ~14                      | Select the layer to adjust                                                                                                                                                                 |
|            |                   | Off/On                           | Select Layer 1 ~14 to turn the layer off or on                                                                                                                                             |
|            |                   | Pixel to Pixel                   | Quickly set the layer size to match the resolution of the selected input.                                                                                                                  |
|            |                   | Original aspect ratio (H)        | Modify the layer width value, and the system will automatically calculate and generate a proportional height value based on the selected input resolution ratio of the layer;              |
|            |                   | Original Aspect Ratio (V)        | Modify the layer height value, and the system will automatically calculate and generate the proportional width value of the selected input according to the resolution ratio of the layer. |
|            |                   | Horizontal/Vertical Position     | Sets the horizontal and vertical positions of the current layer.                                                                                                                           |
|            | zoom              | Horizontal width/vertical height | Sets the horizontal width and vertical height of the current layer.                                                                                                                        |
|            |                   | Layer 1~14                       | Select the layer that needs adjustment.                                                                                                                                                    |
|            |                   | Off/On                           | Turn the layer zoom function on or off.                                                                                                                                                    |
|            |                   | Reset                            | Reset the zoom level of the currently selected layer.                                                                                                                                      |

|                                  |                                                                                                                                                                             |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Matching input signal            | Match the base parameters of the layer to the input signal selected for that layer.                                                                                         |
| Horizontal/Vertical Position     | Set the horizontal and vertical positions of the selected layer.                                                                                                            |
| Horizontal width/vertical height | Set the horizontal width and vertical height of the selected layer.                                                                                                         |
| Horizontal/Vertical Reference    | The reference parameters can be set to the input resolution or the LED screen size, making it easy to set the width and height position parameters for image magnification. |

Note:

- The device supports 14 layers of display. The main output HDMI1/2 (Group 1) and the main output HDMI3/4 (Group 2) each support 7 layers of display. When a single layer is output across Group 1 and Group 2, it will occupy one layer channel of each output group.

Magnified effect illustration:

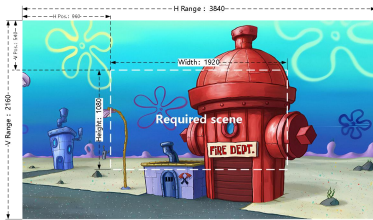


Before magnification




After magnification

Layer Crop:

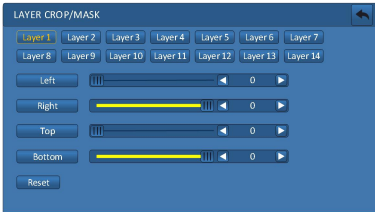

|            |            |                       |                                                                            |
|------------|------------|-----------------------|----------------------------------------------------------------------------|
| MAIN Layer | Layer Crop | Layer 1 ~14           | Select the layer that needs adjustment.                                    |
|            |            | Left, right, up, down | Choose one of the four directions as the starting point to crop the layer. |
|            |            | Reset                 | Reset layer clipping parameters.                                           |

Layer cropping effect illustration:

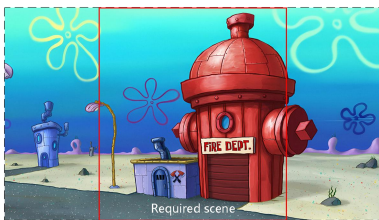

Before cutting




After cutting

## Color Key:

### Text Mode:




### Image Mode:

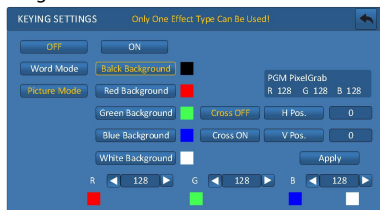

## Layer effects:


### Line Border:

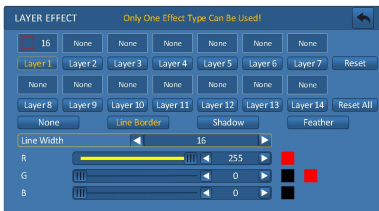

### Shadow:



### Feather:

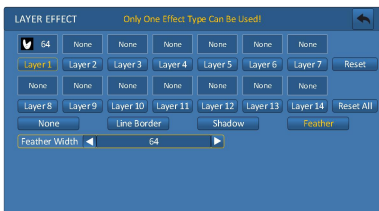

MAIN  
Layer

Color  
Key

Two color key layers can be enabled within the Main Output HDMI1/2 (Group 1) and Main Output HDMI3/4 (Group 2) ranges. When a single color key layer outputs across both Group 1 and Group 2, it will occupy one color key layer in each of the two groups.

Text  
Mode



Applicable for color key with solid color backgrounds or solid color text, allowing selection of the material's background or foreground color performs color key with five selectable colors: black, red,

|               |             |                                                                                                                                                                                                                                                                                                                                                                       |
|---------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|               |             | green, blue, and white;                                                                                                                                                                                                                                                                                                                                               |
|               | Image Mode  | Suitable for keying images such as portraits, which differ from text types. Select the background color of the image for keying; five colors are available: black, red, green, blue, and white.<br>Alternatively, switch the image to output (PGM) display and enable PGM EDIT. Then, move the cursor to read the image's red, green, and blue parameters for keying. |
|               |             | Layers 1 through 14 can enable or disable line border, shadow, and feathering effects; only one effect can be applied per layer.                                                                                                                                                                                                                                      |
| Layer Effects | Line Border | Line width parameter range: 1 to 255; red, green, and blue parameters for the line border each range from 0 to 255.                                                                                                                                                                                                                                                   |
|               | Shadow      | Shadow width parameter range: 32~255. Supports bottom-right or bottom-left shadow display. Shadow red, green, and blue parameters all range from 0~255.                                                                                                                                                                                                               |
|               | Feather     | Feather width parameter range: 32~255.                                                                                                                                                                                                                                                                                                                                |


Note:

- The cursor function in the color key menu and image mode requires PGM EDIT to be enabled. If you need to save the image to a preset after keying is complete, you also need to save it with PGM EDIT enabled.


Illustrations of border, shadow, and feather effects:

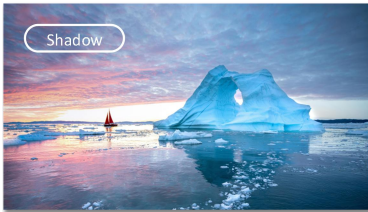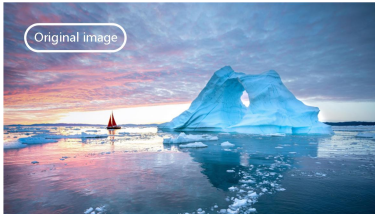

Mirror Clone:

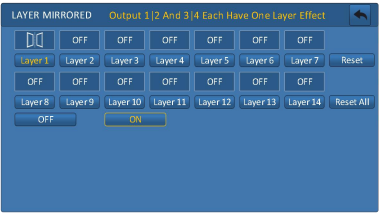


Layer Template:

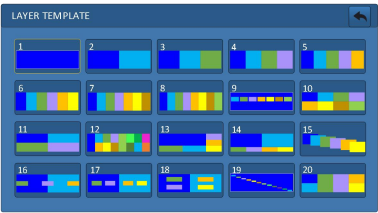


|               |                |                                                                                                                                          |
|---------------|----------------|------------------------------------------------------------------------------------------------------------------------------------------|
| MAIN<br>Layer | Mirror Clone   | One mirror layer can be used within the Main Output HDMI1/2 and Main Output HDMI3/4 ranges.                                              |
|               | Layer Template | The device features 20 built-in fixed layer templates, which can be loaded for preview with a single key according to user requirements. |

Mirror effect illustration:

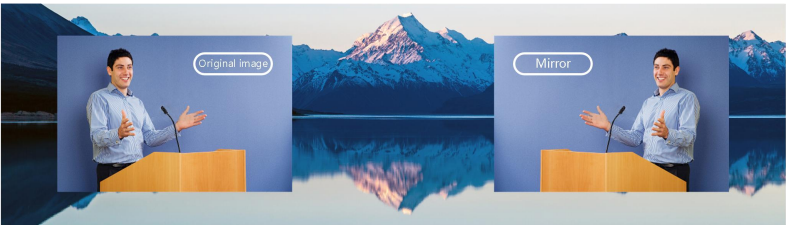

AUX Layer:

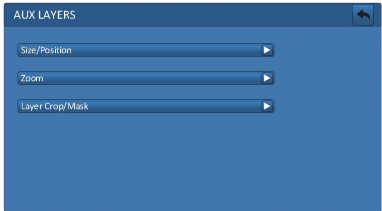


Size/Position:



Zoom:



Layer Cropping:

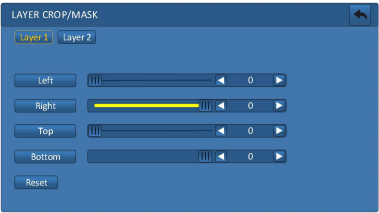




|              |                                                                                                                                        |                                                                                                                                                                                                               |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AUX<br>Layer | Switcher Mode: supports 2 layers; select the layer to be adjusted.<br>Mosaic Mode: supports 4 layers; select the layer to be adjusted. |                                                                                                                                                                                                               |
|              | Off/On                                                                                                                                 | Select layers 1 to 4 to enable or disable them.                                                                                                                                                               |
|              | Pixel to Pixel                                                                                                                         | Quickly set the layer size to match the selected input resolution.                                                                                                                                            |
|              | Size/Position:                                                                                                                         | Original Aspect Ratio (H)<br>Modify the layer width value; the system automatically calculates and generates the proportional height value based on the resolution ratio of the input selected for the layer. |
|              |                                                                                                                                        | Original Aspect Ratio (V)<br>Modify the layer height value, the system automatically calculates and generates the proportional width value based on the resolution ratio of the input selected for the layer. |
|              |                                                                                                                                        | Horizontal/Vertical Position<br>Sets the horizontal and vertical positions of the current layer.                                                                                                              |
|              |                                                                                                                                        | Horizontal Width/Vertical Height<br>Sets the horizontal width and vertical height of the current layer.                                                                                                       |
|              | Layers 1~4                                                                                                                             | Select the layer that needs adjustment.                                                                                                                                                                       |
|              | Off/On                                                                                                                                 | Turn the layer zoom function on or off.                                                                                                                                                                       |
|              | Reset                                                                                                                                  | Reset the zoom parameters of the currently selected layer.                                                                                                                                                    |
|              | Zoom                                                                                                                                   | Matching Input Signal<br>Match the base parameters of the layer's magnification with the input signal selected for that layer.                                                                                |
|              |                                                                                                                                        | Horizontal/Vertical Position<br>Set the horizontal and vertical positions of the selected layer.                                                                                                              |
|              |                                                                                                                                        | Horizontal Width/Vertical Height<br>Set the horizontal width and vertical height of the selected layer.                                                                                                       |
|              |                                                                                                                                        | Horizontal/Vertical Reference<br>The reference parameters can be set to the input resolution or the LED screen size, making it easy to set the width and height position parameters for image magnification.  |
|              | Layer                                                                                                                                  | Layer1~4<br>Select the layer that needs adjustment.                                                                                                                                                           |
|              | Cropping                                                                                                                               | Left, Right, Up,<br>Choose one of the four directions as the starting point to                                                                                                                                |





|       |                                  |
|-------|----------------------------------|
| Down  | crop the layer.                  |
| Reset | Reset layer clipping parameters. |

# Save and Load

## Save Preset:

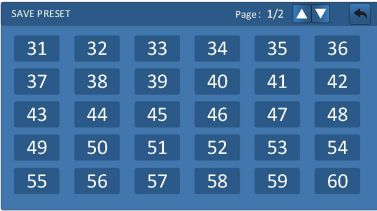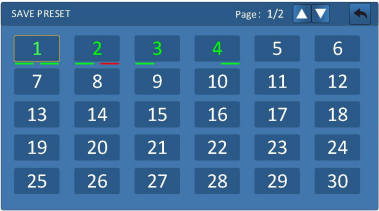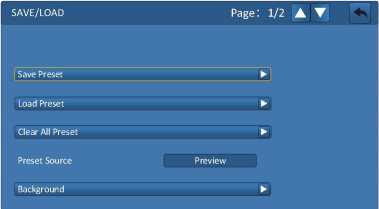

## Load Preset:

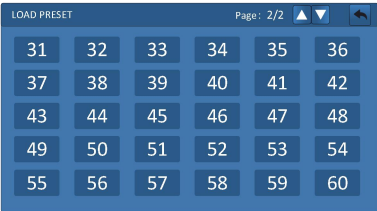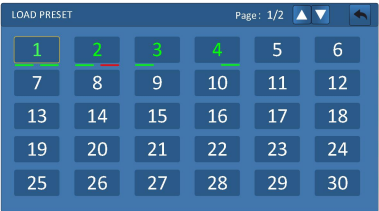


|             |             |                                                                                                                                |
|-------------|-------------|--------------------------------------------------------------------------------------------------------------------------------|
| Save Preset | Figure 1~60 | The device can save 60 presets, and users can turn pages by touching the up and down page buttons or pressing the PAGE button. |
| Load Preset | Figure 1~60 | The device can save 60 presets, and users can turn pages by touching the up and down page buttons or pressing the PAGE button. |


## Clear All Presets:





## Save Preset Channel:

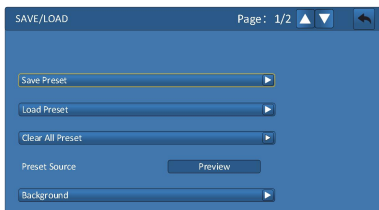


## PGM EDIT Enabled:

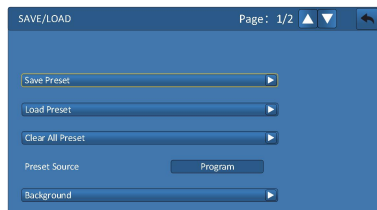


## Background:

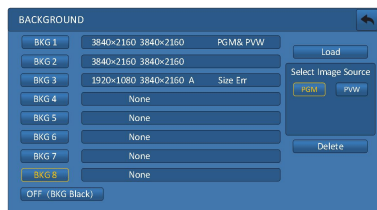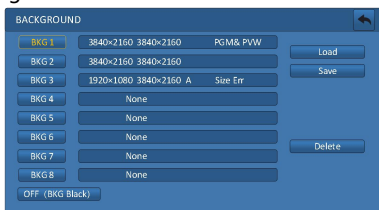

## Save Main Output Preset:

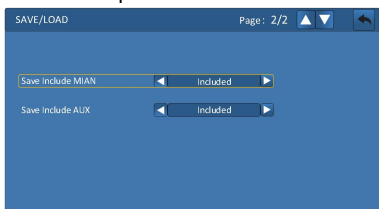

## Save Auxiliary Output Preset:

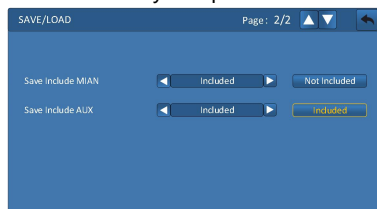



|                         |                                                                                                        |
|-------------------------|--------------------------------------------------------------------------------------------------------|
| Clear All Preset        | Clear all user-saved presets.                                                                          |
| Save Preset Channel     | Save the default Preview channel as a preset. In PGM EDIT mode, save the preset as a Program channel.  |
| Background              | Save                                                                                                   |
|                         | Background1~8                                                                                          |
|                         | PGM / PVW                                                                                              |
|                         | Start Saving/Cancel                                                                                    |
|                         | Choose whether to save BKG                                                                             |
|                         | Save                                                                                                   |
|                         | Jump to the progress bar menu for saving the BKG file.                                                 |
|                         | Load                                                                                                   |
|                         | Load                                                                                                   |
|                         | Select the currently selected background and load it into the preview display.                         |
|                         | Delete                                                                                                 |
|                         | Delete                                                                                                 |
|                         | Delete the currently selected background.                                                              |
| Save Main Output Preset | Choose to save/not save the main output to a preset. Saving to a preset allows you to load and use it. |
| Save AUX Output Preset  | Choose to save/not save auxiliary output to a preset. Saved presets can be loaded and used later.      |

Note:


- The "Loading Error" message for a saved background indicates a mismatch between the saved background and the current device's output resolution.

# Preview


Layout Template:

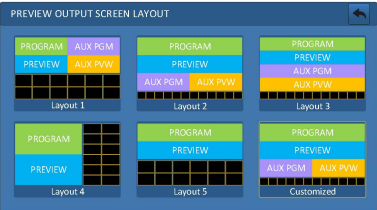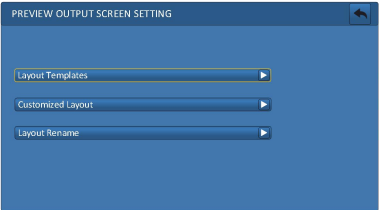

Custom Layout:

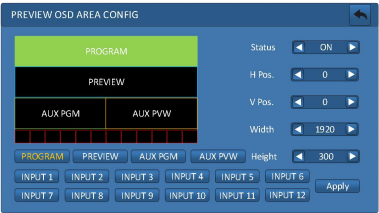



Rename Layout:

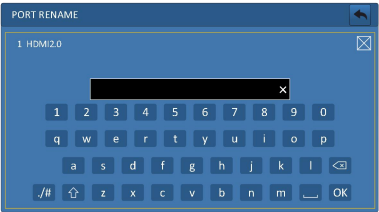


|                        |                                                                                                                                                                                                                                                                     |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Layout Template        | The device provides 5 fixed preview layouts and custom layouts available for user selection.                                                                                                                                                                        |
| Custom Layout          | Users can configure the window size, position, and enable/disable the PGM, PVW, and INPUT windows for both Main Output and Auxiliary Output independently. After completing the custom layout, select the custom option in the layout template menu to activate it. |
| Rename Preview Windows | Rename the input window, PGM, and PVW window labels displayed on the preview window, Main Output, and Auxiliary Output.                                                                                                                                             |

## Communication Settings


IP Settings:

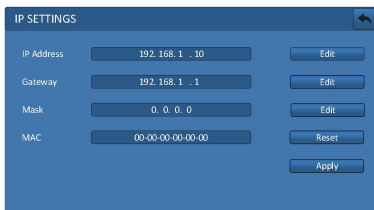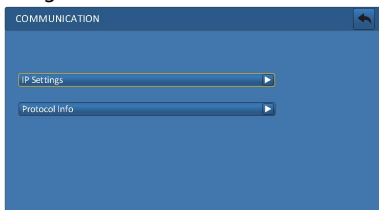

Edit:

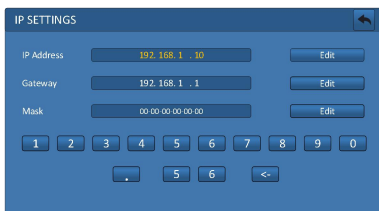

Communication Protocol Information:

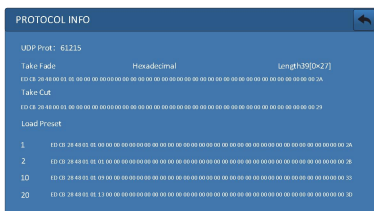

|             |                  |                                                                                                                                                                                            |
|-------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IP Settings | IP Address       | To display or modify the device's IP address, you can select numbers using the knob or OK button, or click the edit button on the right and enter the numbers using the number keys below. |
|             | Gateway          | To display or modify the device gateway, you can select a number to edit using the knob or the OK button, or click the edit button on the right and enter the number keys below.           |
|             | Physical Address | Displays the device's physical address.                                                                                                                                                    |
|             | Reset            | Reset the user-defined IP address and gateway.                                                                                                                                             |
|             | Apply            | The application uses the IP address and gateway set by the user.                                                                                                                           |



Communication

Protocol




Display the device's communication protocol information.

Information


## Function options

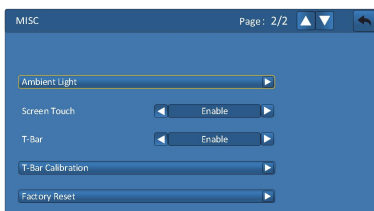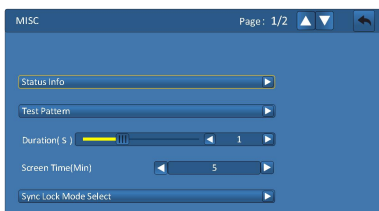


Status information:

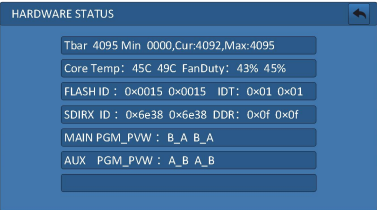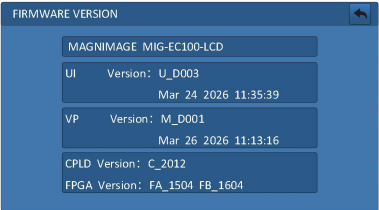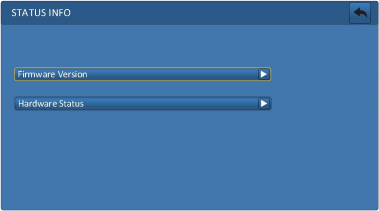

Test pattern:

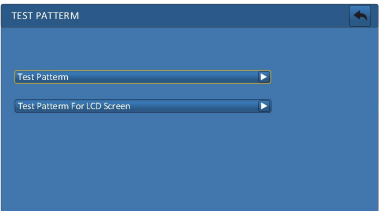

LCD panel test pattern:

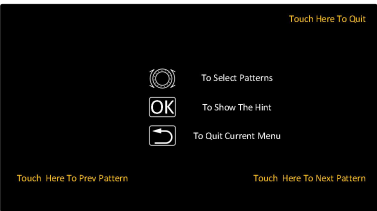

Color:



Grayscale:




Black and White Flash:



Color Bars:




Checkerboard Pattern::

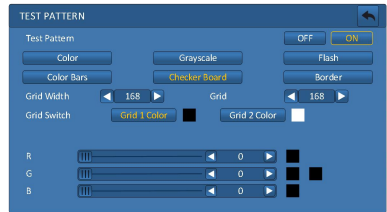

Border:




Synchronization Source Selection:

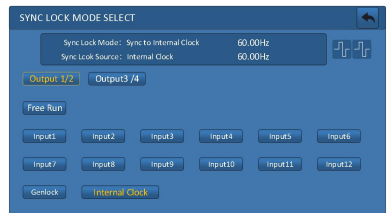

|                                  |                                                                                                                                                                                                      |                                                                                                                                         |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Status Information               | Firmware Version                                                                                                                                                                                     | Displays the video control console' s UI and hardware firmware versions.                                                                |
|                                  | Electrical Status                                                                                                                                                                                    | Displays the electrical status of the video control console hardware.                                                                   |
| Switching Speed                  | Adjust the TAKE button' s switching speed. Parameter range: 0 to 3 seconds; default is 0.5 seconds, with 0.1-second adjustment increments.                                                           |                                                                                                                                         |
| Screen Saver Timeout             | By default, after 5 minutes of inactivity, the LCD display enters screen saver mode. In screen saver mode, all buttons, including touch controls, are disabled except for the Return and OK buttons. |                                                                                                                                         |
| Test Pattern                     | Test Pattern                                                                                                                                                                                         | Supports six test patterns: color, grayscale, black-and-white flashing, color bars, checkerboard, and border.                           |
|                                  | LCD Panel Test Pattern                                                                                                                                                                               | Verify the device' s LCD panel display functionality by operating using the rotary knob or the on-screen menu prompts on the LCD panel. |
| Synchronization Source Selection | Select the synchronization mode for the video control console. The default is free run; synchronization can be set to Input 1~12, Genlock, or the internal clock.                                    |                                                                                                                                         |


Test Pattern Effect Illustration:

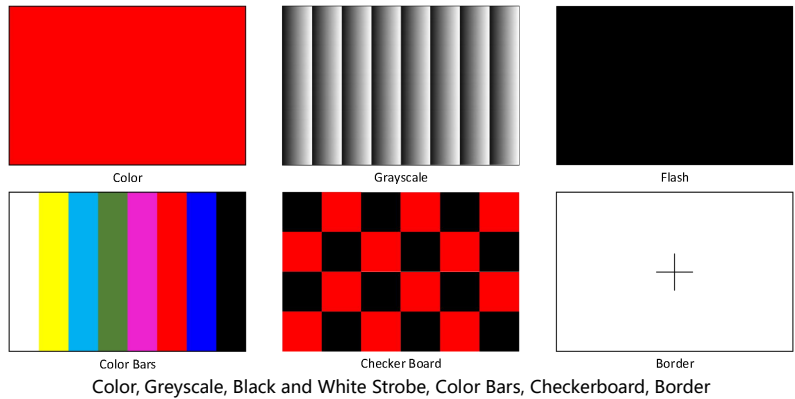

Ambient Light:




Touch Screen:

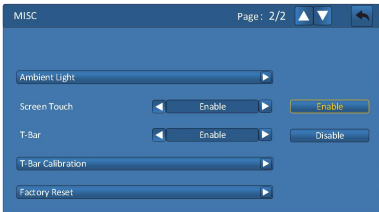


|               |                                                                               |                                                                                                                                                                         |
|---------------|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ambient Light | Button Backlight                                                              | Enable or disable the button backlight. Adjust the backlight color using the red, green, and blue parameters, each ranging from 0 to 255.                               |
|               | Button Brightness                                                             | Set the display brightness for buttons. The parameter range is 0 to 255.                                                                                                |
|               | Function Indicator Light                                                      | Set the function indicator light ON or OFF. The color of the function indicator light can be configured via red, green, and blue parameters, each ranging from 0 to 255 |
|               | Left and Right Logo Lights                                                    | Set the left and right logo lights ON or OFF. The color of the logo lights can be configured via red, green, and blue parameters, each ranging from 0 to 255.           |
|               | Front/Rear Illumination Light                                                 | The front and rear illumination lights can be independently set ON or OFF.                                                                                              |
| Touch Screen  | Default enabled state; touch screen functionality can be enabled or disabled. |                                                                                                                                                                         |


T-Bar:

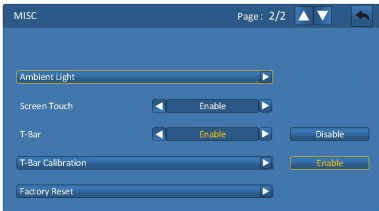

T-Bar Calibration:

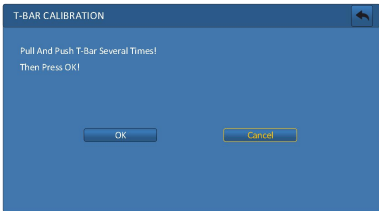

Restore Factory Settings:

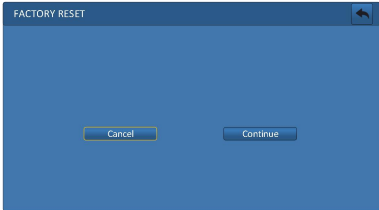


|       |                                                                                                     |  |
|-------|-----------------------------------------------------------------------------------------------------|--|
| T-Bar | The T-Bar switching function is enabled by default; it can be configured to be disabled or enabled. |  |
|-------|-----------------------------------------------------------------------------------------------------|--|



|                          |                                                                                                                                                                 |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| T-Bar Calibration        | Calibrate the T-Bar by moving it fully to the upper and lower limits multiple times, then click OK to complete the calibration.                                 |
| Restore Factory settings | Restore the Video Control Console to factory settings. Upon confirmation, a prompt 'A.C. Restart!!!' will appear; power off the device and restart to complete. |

## Language

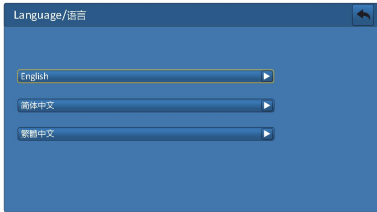

|                     |                                                              |
|---------------------|--------------------------------------------------------------|
| English             | Set the menu system display language to Traditional Chinese. |
| Simplified Chinese  | Set the menu system display language to Simplified Chinese.  |
| Traditional Chinese | Set the menu system display language to Traditional Chinese. |


# Introduction to Multi-Preview Windows

At startup of the MIG-EC100 Series 4K Video Control Console, the built-in LCD monitor and the MULTI-VIEW output display device present the Multi Preview Windows interface as shown below:

AUX Switcher  
Mode:



AUX Mosaic  
Mode:

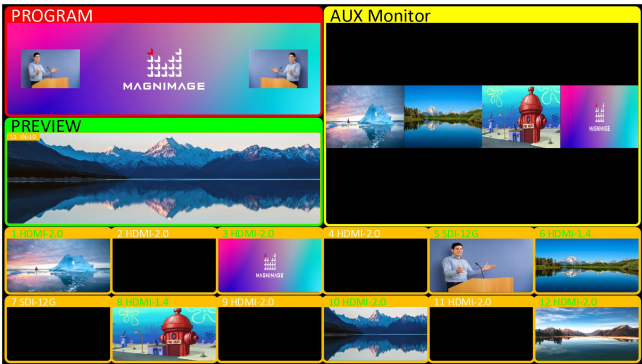

## Multi-Preview Window Information:

| Window  | Illustration                                                                                                                                                                                                                                                                                                                |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PROGRAM | Displays the size, position, and real-time image of the PROGRAM (output) layer.                                                                                                                                                                                                                                             |
| PREVIEW | Displays the size, position, and real-time image of the PREVIEW Layer. In MAIN channel mode, the yellow box indicates the currently selected Layer, with the Layer' s index number and input source are shown in the top-left corner. If the Layer has no signal or no Layer exists, the corresponding area displays black. |
| AUX PGM | Switcher Mode: Displays the size and real-time image of the AUX PGM (auxiliary output) layer.                                                                                                                                                                                                                               |
| AUX PVW | Switcher Mode: Displays the size and real-time image of the AUX PVW (auxiliary preview) layer. A yellow box highlights the currently selected layer, with the serial                                                                                                                                                        |

|             |                                                                                                                                                                                                                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|             | number and input source shown at the Layer' s upper-left corner. If the Layer is absent or lacks signal, the corresponding area is displayed in black.                                                                                                                                                   |
| AUX Monitor | Mosaic Mode: Displays the size and real-time image of the AUX output Layer. A yellow box highlights the currently selected Layer, with the serial number and input source shown in the Layer' s upper-left corner. If the Layer is absent or lacks signal, the corresponding area is displayed in black. |
| INPUT 1~12  | Displays the input interface type, real-time image, and renaming. Green font indicates a signal present; white font indicates no signal.                                                                                                                                                                 |

## Button usage


The product's menu system allows for convenient and intuitive device configuration to meet user requirements.

The MIG-EC100 series event controller uses a full-color single-point touch LCD screen to display the user menu. When the user is not operating the device, the LCD screen displays the default settings. When settings are made using the device's buttons, the LCD screen will display the corresponding menu based on the user's actions.

The following will provide a detailed introduction to the button functions of the MGI-EC100 event controller.


## Button usage instructions

The front panel buttons of the MIG-EC100 series event controller are divided into 7 zones: LAYER, INPUT, PRESET, BACKGROUND, MENU, NUMPAD, and TRANSITION.

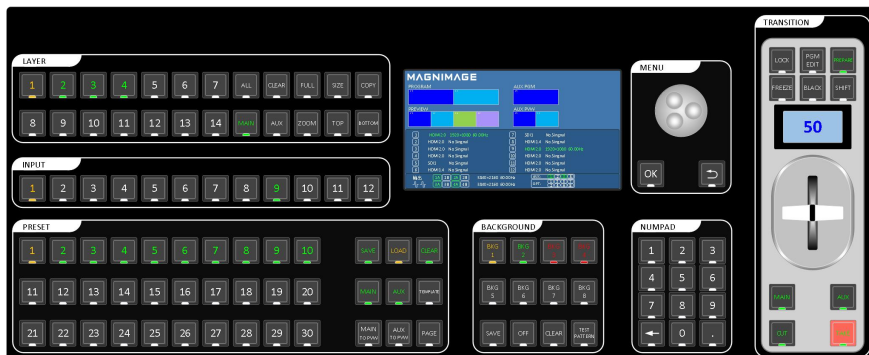

## MENU

It includes an OK button, a back button, and a knob.

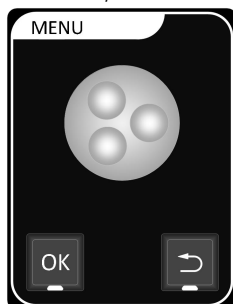

A short press of the OK button enters the device menu; the knob navigates through device functions; a short press of the back button returns to the previous menu; several short presses of the back button return to the previous menu until returning to the main interface; or a long press of the back button for 3 seconds returns directly to the main interface.

## NUMPAD




Number  
Keys 0-9

Functions that require modification of some parameters can be adjusted using the 0-9 number keys. Functions that cannot be modified using the number keys require adjustment of the parameter value using the knob.



Press the left arrow key repeatedly to delete each entered parameter one by one. The decimal point is only used when editing IP settings;

## LAYER

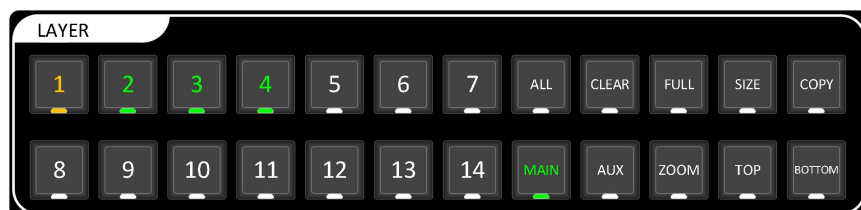

|                     |                                                                                                                                                                                                                                         |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Number<br>Keys 1–14 | For layers 1 to 14 on the corresponding device, a green button light indicates that the layer is enabled, an off button light indicates that it is disabled, and a yellow light indicates that the currently selected layer is enabled. |
| CLEAR               | Combine CLEAR with the keys 1 through 14 to delete the selected layers.                                                                                                                                                                 |
| ALL                 | Press CLEAR+ALL to delete all enabled layers.                                                                                                                                                                                           |
| FULL                | The currently selected layer can be filled to the entire screen with a single click.                                                                                                                                                    |
| SIZE                | Quickly access the layer configuration size/position interface to adjust the layer size/position parameters.                                                                                                                            |
| COPY                | Create symmetrical replicas of layers of the same size with the same input source.                                                                                                                                                      |
| MAIN                | The MAIN indicator shows a green light, indicating that the main output channel layer parameters are currently editable.                                                                                                                |
| AUX                 | The AUX output channel is currently displaying a green light, indicating that the auxiliary output channel layer parameters are currently editable.                                                                                     |
| ZOOM                | Quickly access the layer zoom-in interface.                                                                                                                                                                                             |
| TOP                 | The currently selected layer can be brought to the top with a single click.                                                                                                                                                             |
| BOTTOM              | The currently selected layer is brought to the bottom with one click.                                                                                                                                                                   |


## INPUT



Number Keys 1–12

A button that is not lit indicates no input signal; green indicates that the button has an input signal; yellow indicates the currently selected layer, and red indicates that the currently selected layer has no input signal.

## PRESET

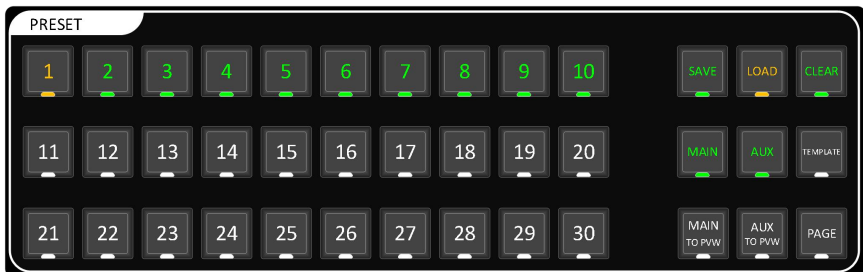


|                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Number Keys 1–30 | <p>The device contains 60 presets, which can be scrolled up and down using the PAGE button.</p> <p>Presets 1–30: A button without an illuminated light indicates the preset is not saved; green indicates it is saved; yellow indicates the currently selected preset; red indicates the button with the selected preset is not saved.</p> <p>Presets 31–60: A button without an illuminated light indicates the preset is not saved; blue indicates it is saved; purple indicates the currently selected preset; red indicates the button with the selected preset is not saved.</p> |
| SAVE             | <p>When the PAGE button is off, combining it with the SAVE button (1–30) will save the corresponding preset. When the PAGE button is green, combining it with the SAVE button (1–30) will save presets 31–60.</p>                                                                                                                                                                                                                                                                                                                                                                     |
| LOAD             | <p>Pressing the LOAD button (yellow) allows you to load presets 1–60 into the preview display; the button is off, preventing preset loading. When the PAGE button is off, presets 1–30 are loaded; when the PAGE button is green, presets 31–60 are loaded.</p>                                                                                                                                                                                                                                                                                                                       |
| CLEAR            | <p>When the PAGE button is off, pressing CLEAR + 1~30 will delete the corresponding presets 1~30. When the PAGE button is green, pressing CLEAR + 1~30 will delete the corresponding presets 31~60.</p>                                                                                                                                                                                                                                                                                                                                                                               |
| MAIN             | <p>The default setting is to save the MAIN channel image. A green light on the button indicates that the MAIN channel will be saved; otherwise, the button will not be saved.</p>                                                                                                                                                                                                                                                                                                                                                                                                     |
| AUX              | <p>The AUX channel image is saved by default. A green light on the button indicates that the AUX channel image will be saved; a black light indicates that the image will not be saved.</p>                                                                                                                                                                                                                                                                                                                                                                                           |
| TEMPLATE         | <p>The device has 20 built-in fixed layer templates, which users can easily access with a single click.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| MAIN TO PVW      | <p>Copy the display image from the main output PGM to the PVW.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| AUX TO PVW       | <p>Copy the display image of the auxiliary output PGM to the auxiliary output PVW.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| PAGE             | <p>Preset page turning buttons.</p> <p>The PAGE button is off, displaying presets 1–30, which can be saved or loaded.</p> <p>The PAGE button is green, displaying presets 31–60; presets 31–60 can be saved or loaded.</p>                                                                                                                                                                                                                                                                                                                                                            |

## BACKGROUND



|              |                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BKG1~8       | Background buttons 1~8: A button not lit indicates the background has not been saved; green indicates the background has been saved; yellow indicates the currently selected background is loaded into the preview display; red indicates the saved background resolution is inconsistent with the current device's output resolution and cannot be loaded, and the background menu will display "Loading Error". |
| SAVE         | Quickly access the background menu interface.                                                                                                                                                                                                                                                                                                                                                                     |
| OFF          | Quickly turn off the background.                                                                                                                                                                                                                                                                                                                                                                                  |
| CLEAR        | Press CLEAR + BKG1~8 keys to delete the background of the corresponding BKG1~8 keys.                                                                                                                                                                                                                                                                                                                              |
| TEST PATTERN | Quickly access the output test chart interface.                                                                                                                                                                                                                                                                                                                                                                   |

## TRANSITION

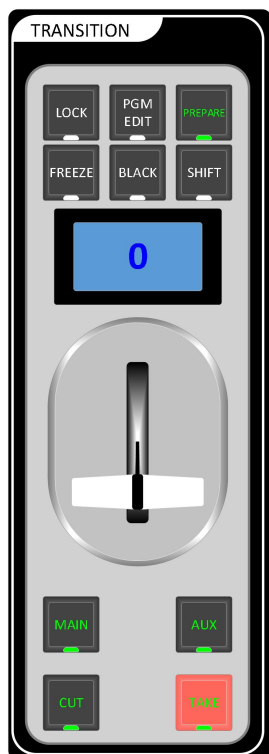

|                                |                                                                                                                                                                                                                            |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PREPARE                        | A constantly lit button indicates that the device is working normally; a button that is not lit indicates a malfunction or that the push rod has not reached its full position.                                            |
| PGM EDIT                       | Combine SHIFT+PGM EDIT for real-time editing of the main output. In PGM EDIT mode, saving a preset saves the Program channel.                                                                                              |
| LOCK                           | Combining SHIFT+LOCK locks all control panel buttons, including T-Bar; combining them again unlocks them.                                                                                                                  |
| FREEZE                         | Combining SHIFT+FREEZE freezes the main output, causing it to freeze at a specific frame. Combining it again unfreezes the main output.                                                                                    |
| BLACK                          | Combining SHIFT and BLACK turns the main output into a black signal; combining them again removes the black signal.                                                                                                        |
| SHIFT                          | Combination keys.                                                                                                                                                                                                          |
| Switch Progress Display Screen | The numbers 0 and 100 indicate that the switch is complete. When 1 to 99 are displayed, the switch is not complete. At this time, the PREPARE button is off and other functions of the device cannot be operated normally. |
| MAIN                           | The MAIN channel image will not switch if the button is not lit, but it can be switched if it is green.                                                                                                                    |
| AUX                            | The AUX channel will not switch images if the button is not lit, but it will switch images if it is green. The Mosaic mode is unaffected.                                                                                  |
| T-Bar                          | A slider allows for manual control of the switching speed and fade-in/fade-out effects.                                                                                                                                    |
| CUT                            | Switch the PVW image instant cut effect to PGM.                                                                                                                                                                            |
| TAKE                           | Switch the PVW image fade-in/fade-out effect to PGM. The default effect duration is 0.5 seconds. You can adjust the TAKE switching speed in the function options menu.                                                     |



# Warranty Statement

## Machine Warranty Period

---

- 12 months from the date of the purchase invoice.
- If the user loses the purchase invoice, the warranty starts on the 60th day after the production date of the product.

## Non-warranty

---

- Faults or damages caused by abnormal use, such as stains or surface scratches caused by machine immersion, collision, or use.
- Disassembly and modification without the consent of our company.
- Failure or damage caused by use in the working environment specified by the non-product (such as high or low temperature or unstable voltage, etc.).
- Failure or damage caused by force majeure (such as fire, earthquake, etc.) or natural disasters (such as lightning strike, etc.).
- The product has exceeded the warranty period.

