mode indicator

Torso|Head|Sensor-Ring


USB

safety override

SRing yaw left head yaw left SRing yaw right head yaw right

torso roll/pitch

next mode

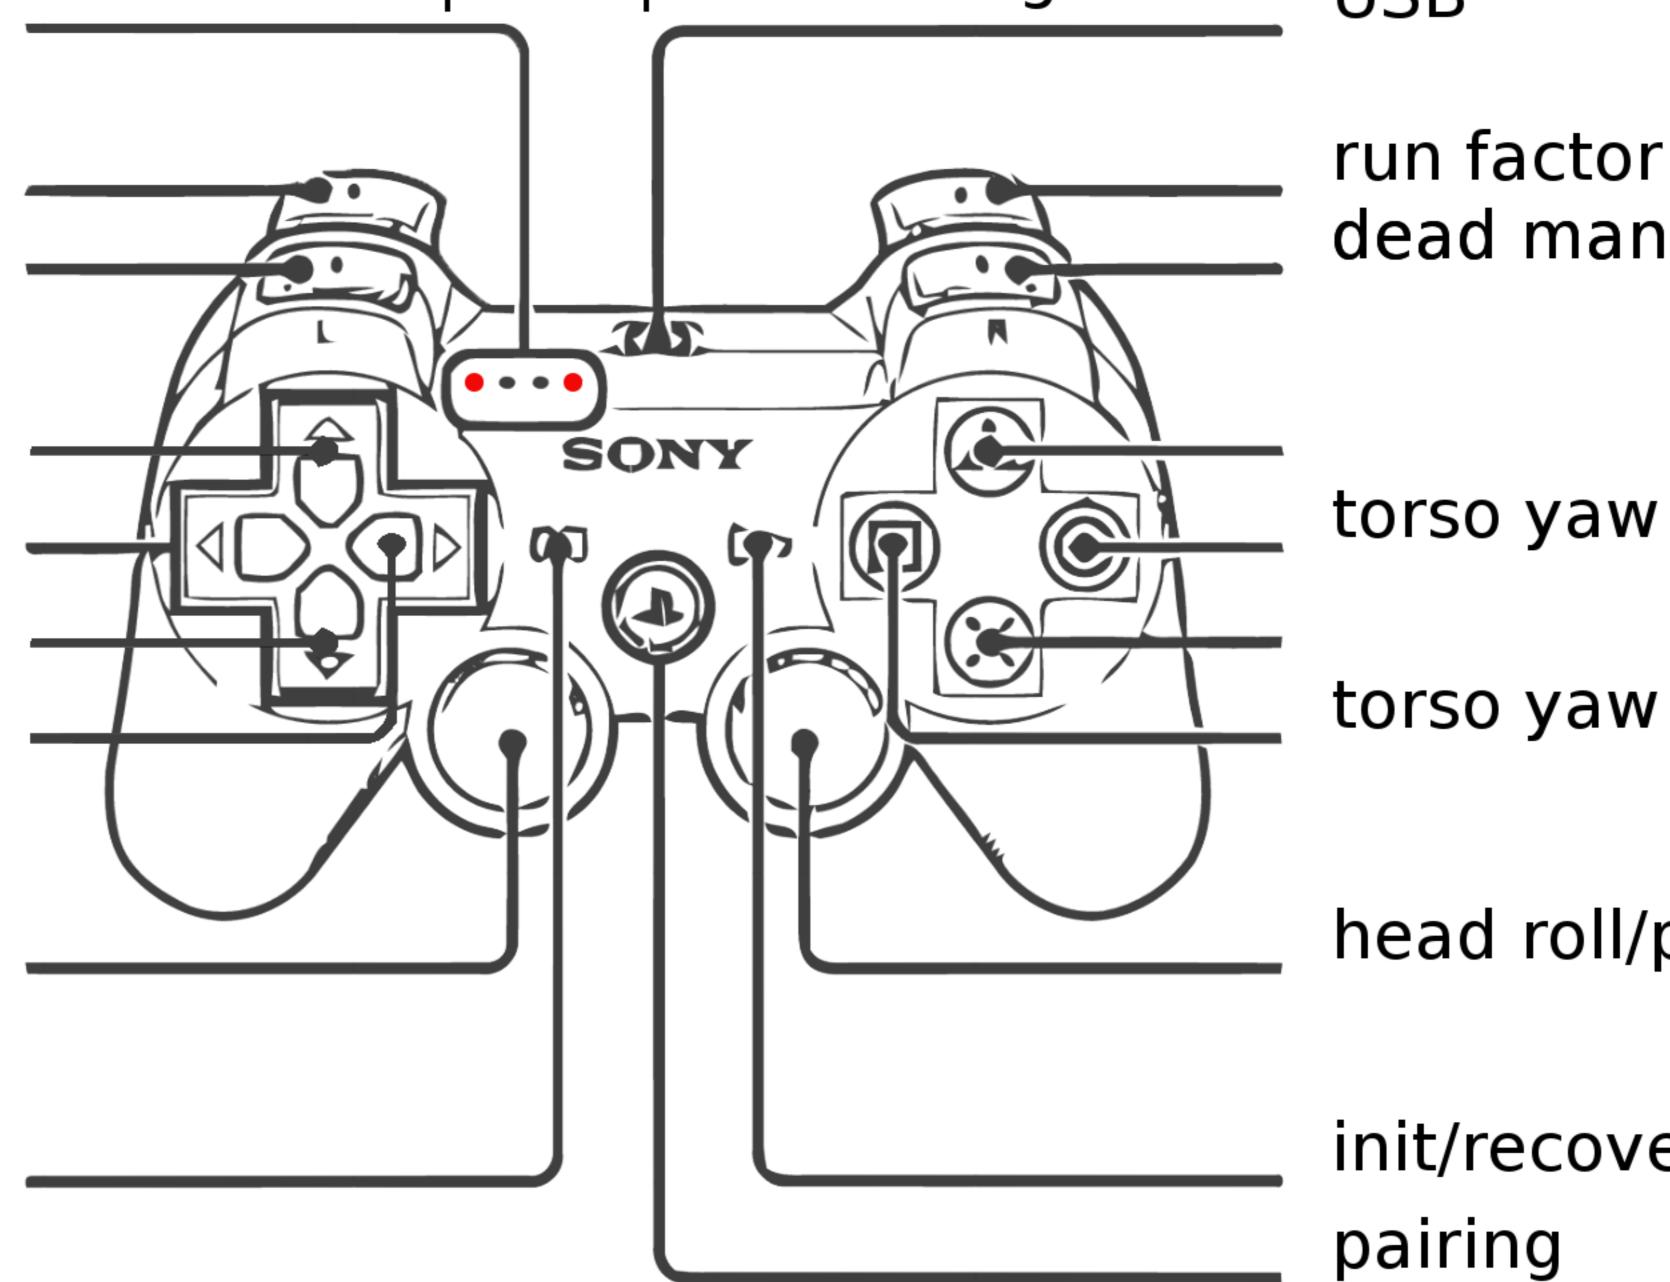

torso yaw right

torso yaw left

head roll/pitch

init/recover pairing