


Thermal Printer

1 Reading First


Your printer package include the following parts:

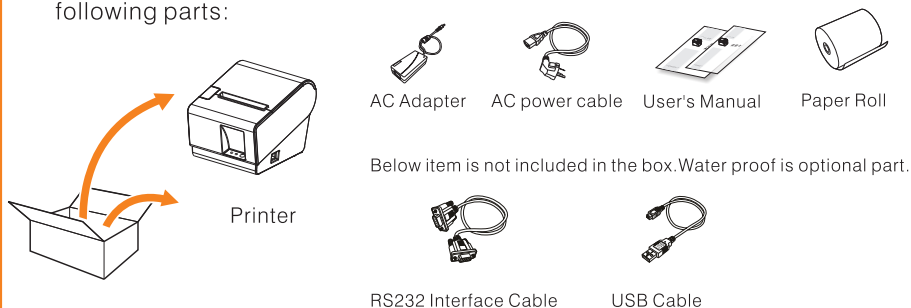

Note:

The pictures are only for reference, please refer to the actual product as standard. Please keep the packing material well in order to be used in the next transport.

2 Connecting Cables

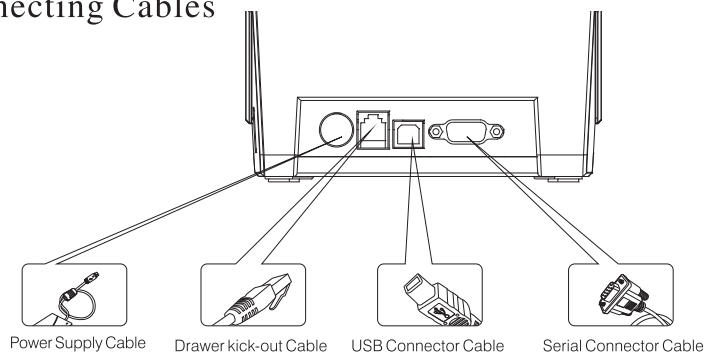

3 Control Panel

- **Power (Blue)**
Power on the printer, power lights; power off, light off.
- **ERROR (Red)**
The light is on when the printer is lack of paper; the light will flash when the printer cover installs not well or Online error.
- **FEED**
Press the FEED button once to advance paper one line. You can also hold down the FEED button to feed paper continuously.

4 Installing Roll Paper


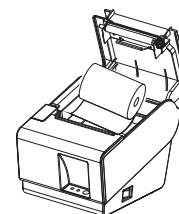


Diagram of the direction of roll paper:

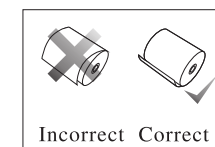

Put the paper roll in the cabinet with the right direction. (Easy paper load architecture).

5 Self-Test and DUMP Mode

Self-Test mode: Press "FEED" button and hold on when powering on the printer, the printer will perform self-test.

DUMP mode: Power off the printer and take out the paper roll. Then press "FEED" button and hold on and power on the printer. Then put in the paper roll and close the printer cover. The printer will print out "DUMP". That means the printer enters in DUMP mode. All data will be printed out in raw hex format.

Back to normal mode: restart the printer could put the printer in normal mode.

6 DIP Switch Function

DIP1	DIP2	Baud rate
OFF	OFF	9600BPS(default)
OFF	ON	19200BPS
ON	OFF	38400BPS
ON	ON	115200BPS

DIP5	Buzzer
OFF	Enable(default)
ON	Disable

DIP7	Printing speed
OFF	Fast(default)
ON	Slow

DIP3	DIP4	Print mode
OFF	OFF	42Characters
OFF	ON	48Characters(default)
ON	OFF	-
ON	ON	-

DIP6	Density
OFF	Light(default)
ON	Dark

DIP8	Language
OFF	Chinese(default)
ON	Other