

MY FOOD

Installer Guide

with pictures

How to connect the tills, printers, kitchen screens and customer display at **Chefelisha Restaurant**.

You need:


- Internet in the restaurant (Wi-Fi or cable)
- The owner or a manager, signed in to MY FOOD on their phone or laptop
- Each till / screen with **Google Chrome** or **Microsoft Edge**
- One Windows PC at the counter for printing (it can be a till)
- Printers switched on, with paper

Address: **www.chefelisha.cc**

Follow the pages in order. Red boxes and arrows show exactly what to press.
Pictures are from the MY FOOD test system: names and numbers on your screen will be slightly different.

BEFORE YOU START


How it fits together

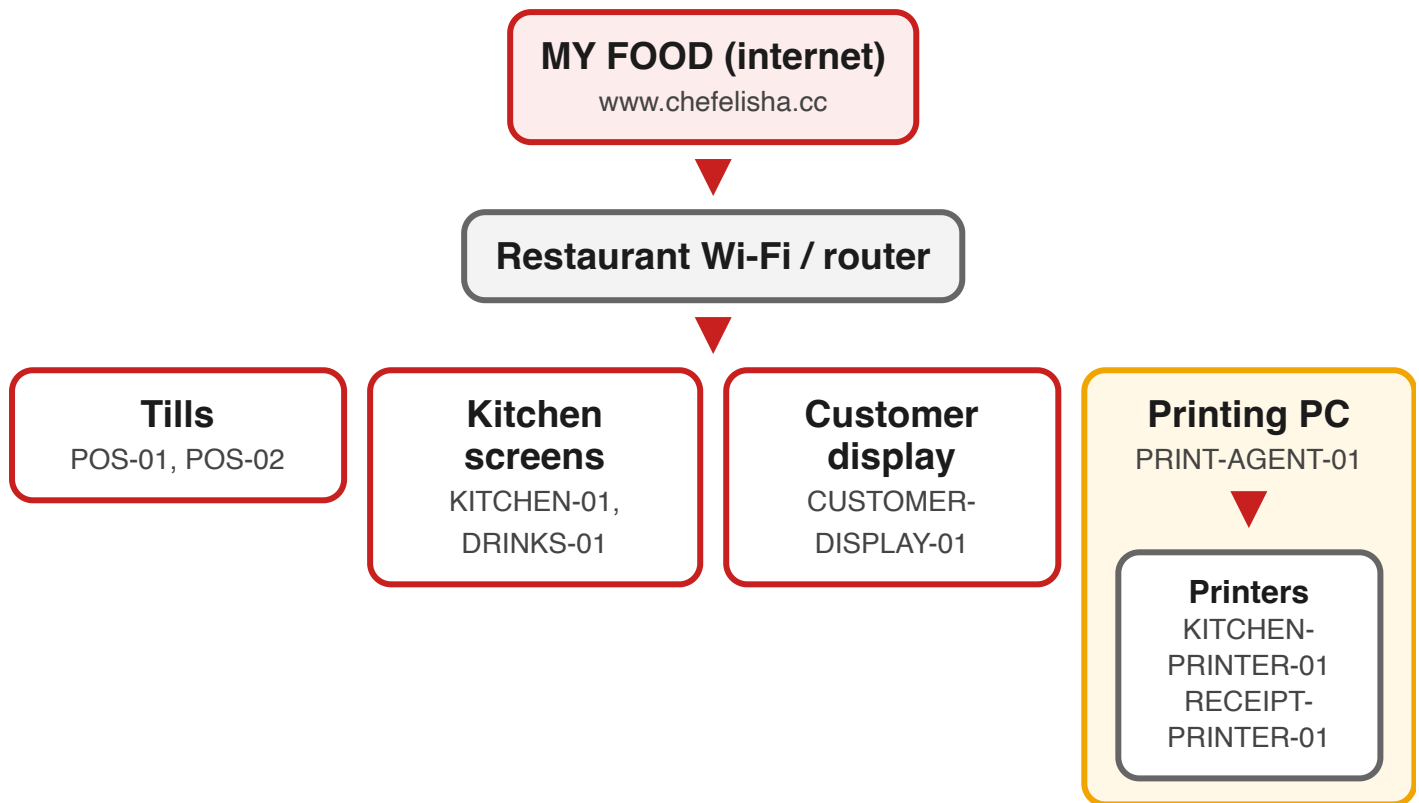

Use these names. Each device already has a row with its name in MY FOOD → **Devices & printing**. Stick a label with the name on each device so you always pair the right one.

1 On the till: open the pairing page

Open Chrome on the till and go to **www.chefelisha.cc/pair**. The till shows a code. Leave it on the screen.

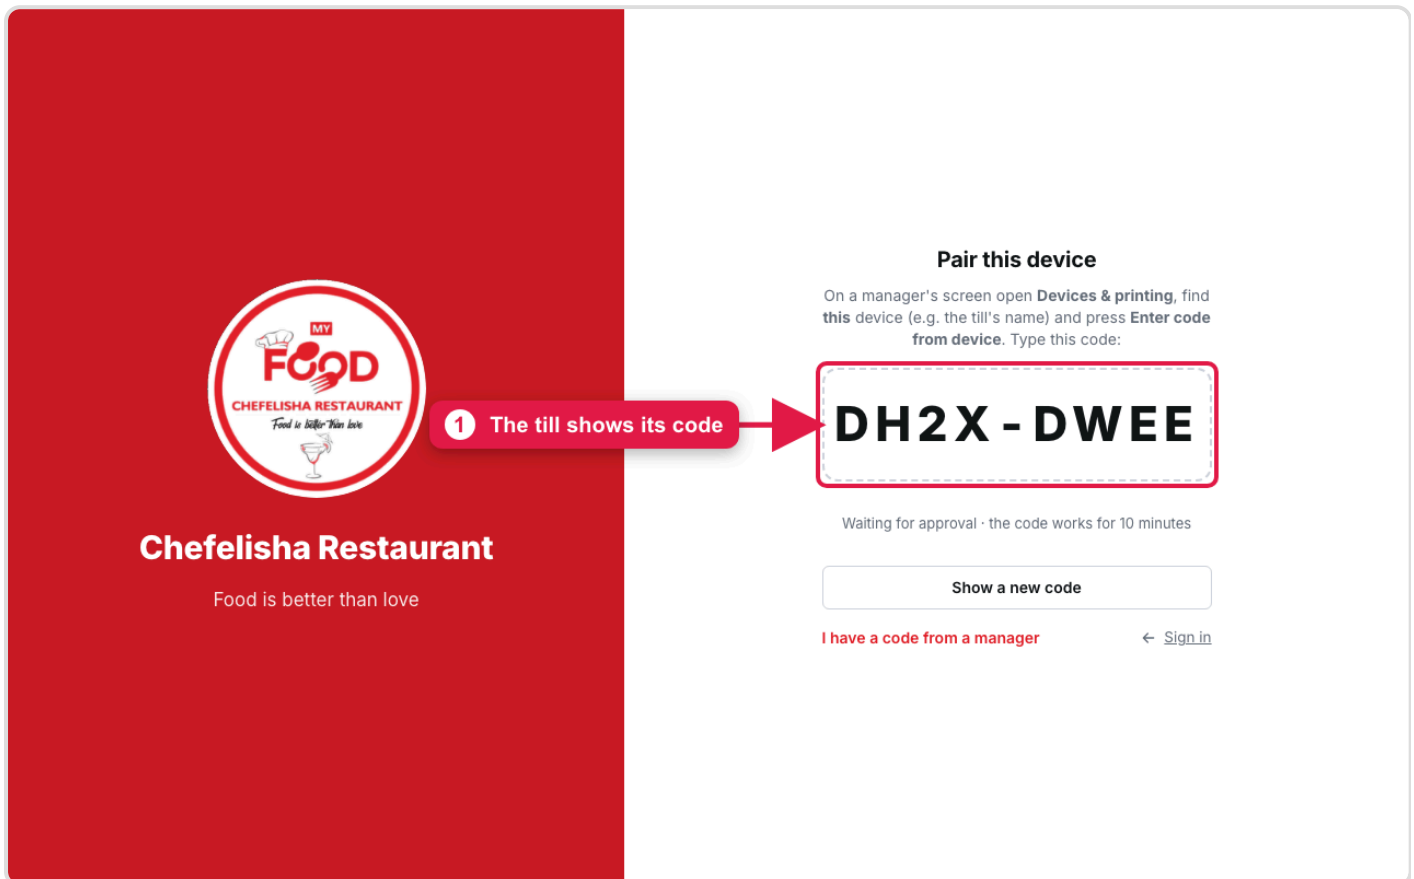

The code works for 10 minutes. **Do not press “Show a new code”.**

2 On the manager's phone: find the till's row

Open MY FOOD → **Devices & printing**. Find the row with this till's name (e.g. POS-01) and press **Enter code from device** on that row.

Printing is not running yet. A browser cannot send to receipt printers by itself: one PC in the restaurant runs **MY FOOD Printing** and prints for everyone.

1. On a Windows PC at the counter that stays on during service, download and install [MY FOOD Printing](#).
2. It shows a code. Press **Enter code from device** on **PRINT-AGENT-01** and type it.
3. In MY FOOD Printing, use "Search the network" to find each printer, then Edit the printer here with that address.

35 print jobs are waiting and will print as soon as printing runs.


DEVICE	TYPE	STATUS	LAST SEEN	DETAILS
Akosua device 1	POS till	Not sent	—	paired
Ama device 1	POS till	Not sent	—	paired
POS-01	POS till	Offline	7:09:28 AM	paired
DRINKS-01	Kitchen screen	Offline	7:09:30 AM	paired
		Offline	7:09:31 AM	paired
KITCHEN-01	Kitchen screen	Offline	7:09:29 AM	paired
PASTRY-01	Kitchen screen	Offline	7:09:34 AM	paired
DRINKS-PRINTER-01	Printer	Not sent	—	192.168.1.54:9100 16 waiting
GRILL-PRINTER-01	Printer	Not sent	—	192.168.1.52:9100 2 waiting

1 Find the till's name

2 Press on THAT row


3 Type the code, press Pair device

Type the code exactly as the till shows it, then press **Pair device**.

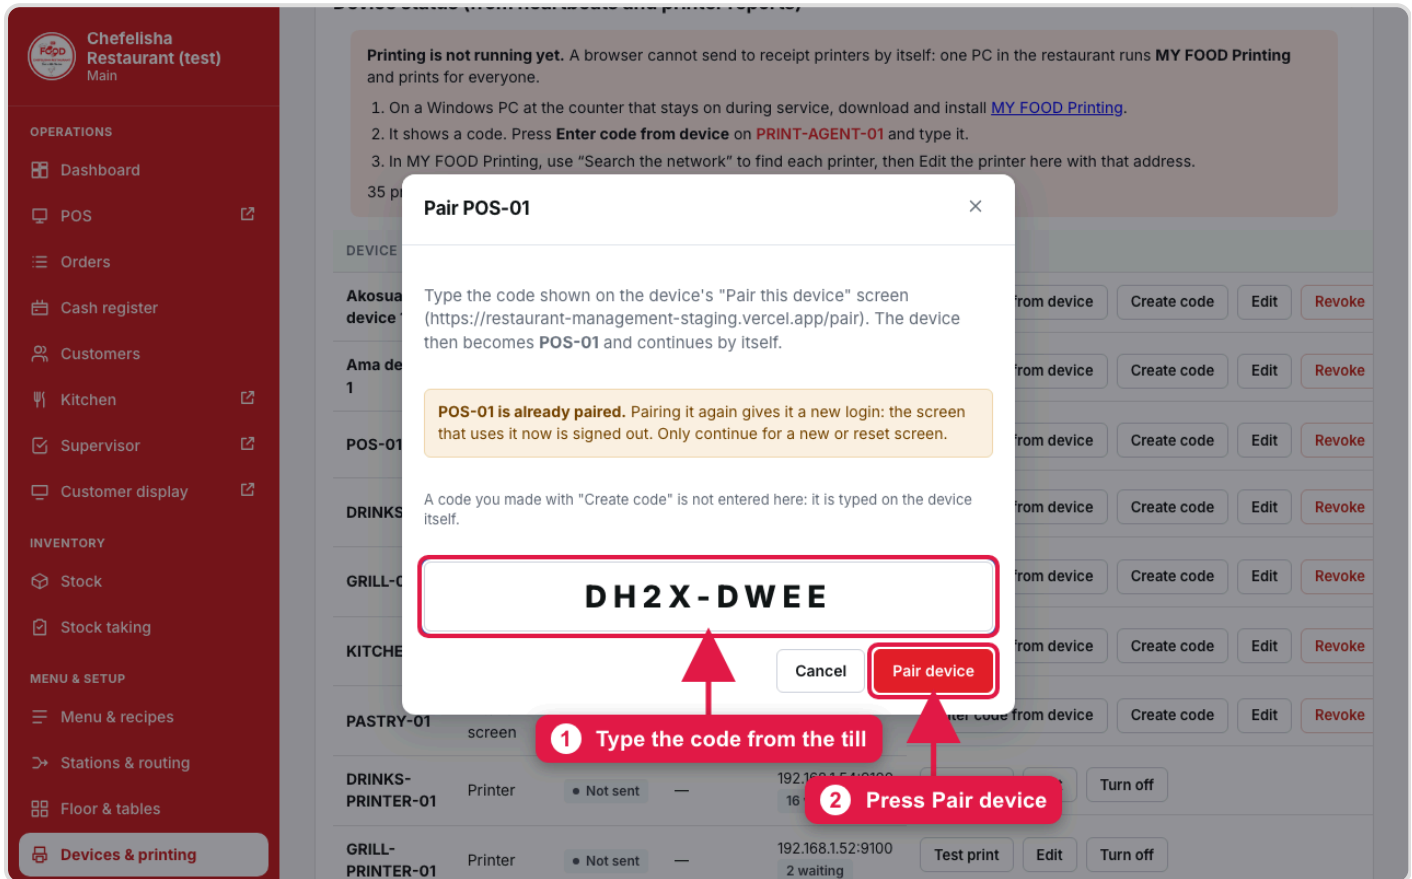

4 Done: the till shows the PIN pad

Within a few seconds the till continues by itself and shows **Enter your staff PIN**. Repeat steps 1–4 for every till, each on its own row.

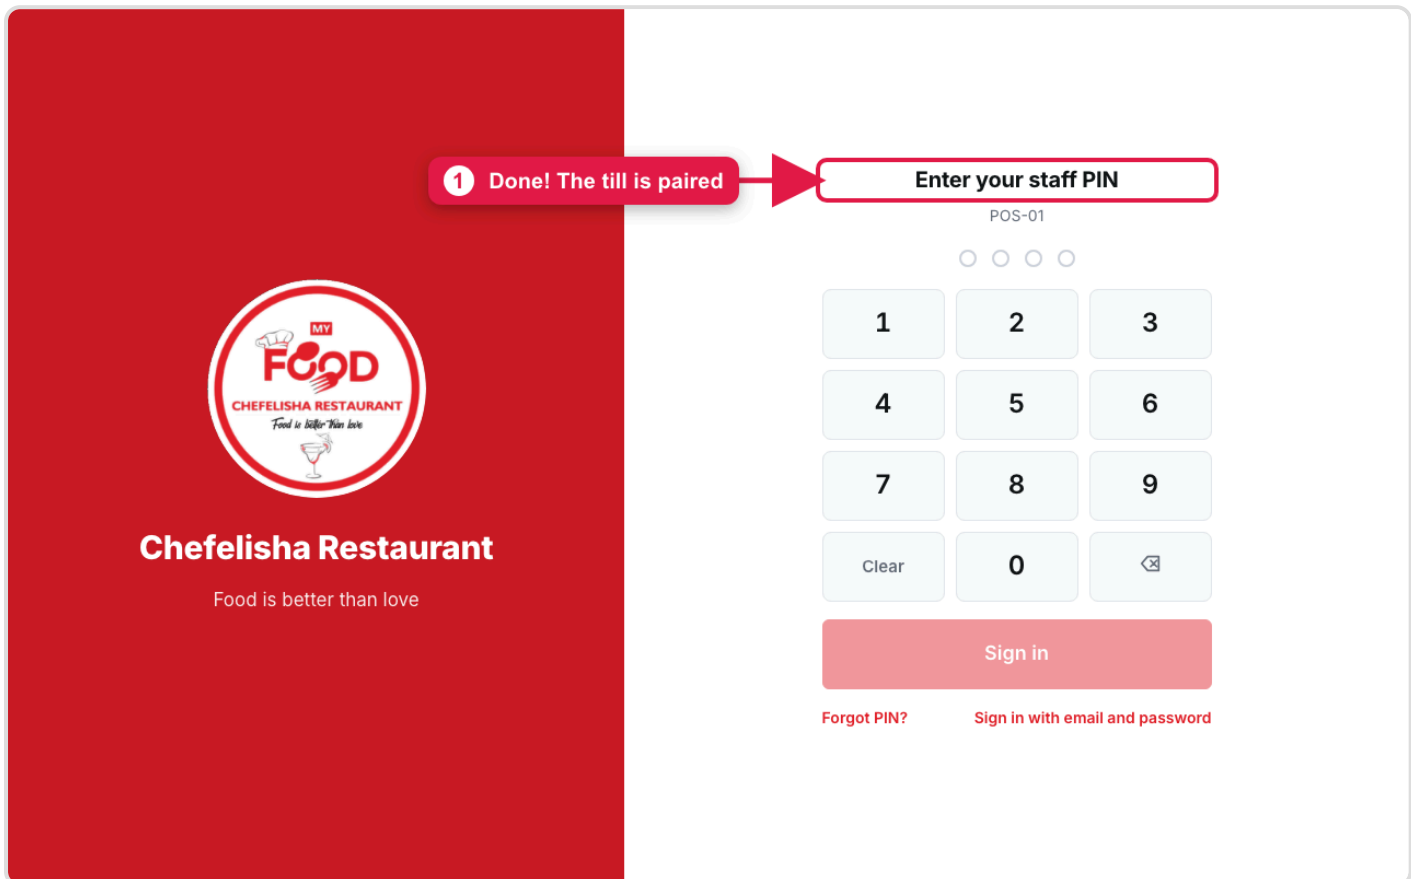

Restarting the till is fine. It stays paired.

5 On the printing PC: download MY FOOD Printing

On the Windows PC at the counter, sign in to MY FOOD, open **Devices & printing** and click **MY FOOD Printing** to download it.


Chefelisha Restaurant (test)
Main

OPERATIONS
Dashboard
POS
Orders
Cash register
Customers
Kitchen
Supervisor
Customer display
INVENTORY
Stock
Stock taking
MENU & SETUP
Menu & recipes
Stations & routing
Floor & tables
Devices & printing

Devices & printing

Tills, kitchen screens, customer display and printers. Hardware can be connected at any time.

Device status (from heartbeats and printer reports) ● Live

Printing is not running yet. A browser cannot send to receipt printers by itself: one PC in the restaurant runs **MY FOOD Printing** and prints for everyone.

- On a Windows PC at the counter that stays on during service, download and install [MY FOOD Printing](#)
- It shows a code. Press **Enter code from device** on **PRINT-AGENT-01** and type it.
- In MY FOOD Printing, use "Search the network" to find each printer, then Edit the printer with that address.

35 print jobs are waiting and will print as soon as printing runs.


DEVICE	TYPE	STATUS	LAST SEEN	DETAILS
Akosua device 1	POS till	● Not sent	—	paired
Ama device 1	POS till	● Not sent	—	paired
POS-01	POS till	● Offline	7:09:28 AM	paired
DRINKS-01	Kitchen screen	● Offline	7:09:30 AM	paired
GRILL-01	Kitchen screen	● Offline	7:09:31 AM	paired
KITCHEN-01	Kitchen screen	● Offline	7:09:29 AM	paired
PASTRY-01	Kitchen screen	● Offline	7:09:34 AM	paired

1 Download MY FOOD Printing here (on the printing PC)

Enter code from device Create code Edit Revoke

6 Install it (Windows warning)

Open the downloaded file **MY-FOOD-Printing-Setup.exe**. Windows may show a blue warning. Click **More info**. A **Run anyway** button then appears: click it.

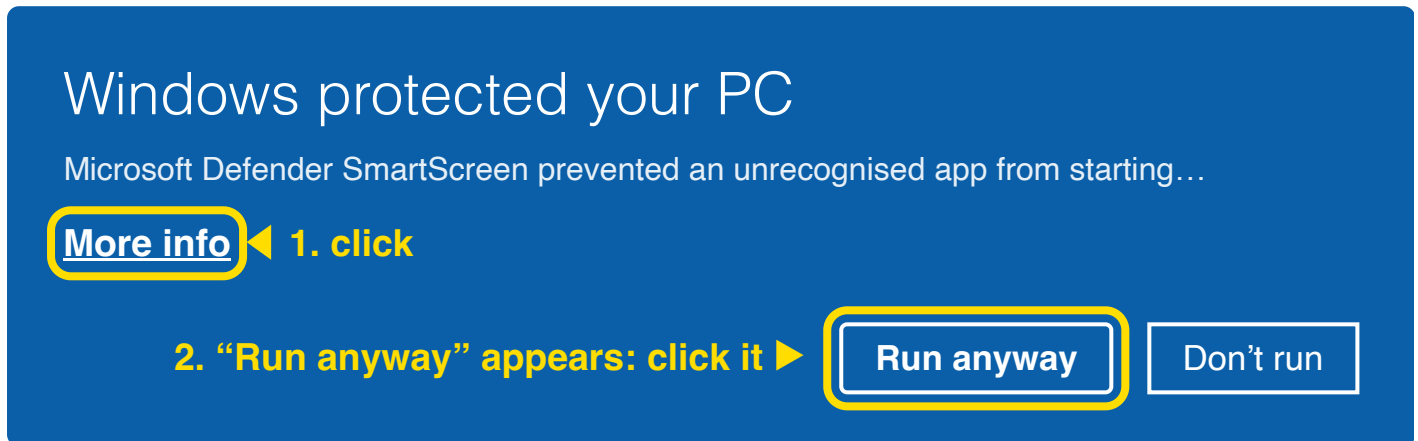

Drawing: the real window may look a little different.

This warning appears because the app is new, not because something is wrong. MY FOOD Printing then opens by itself and starts with Windows every day.

7 MY FOOD Printing shows a code

The window says **Connect this PC to MY FOOD** and shows a code.

**MY FOOD Printing**
Chefelisha Restaurant

Not connected yet

Connect this PC to MY FOOD

1. On a phone or computer, open MY FOOD and go to **Devices & printing**.
2. On the print agent (for example **PRINT-AGENT-01**), press **Enter code from device**.
3. Type this code:

H 4 T W - 9 K P D

1 MY FOOD Printing shows a code

Waiting for the code to be entered... (the code works for about 9 more minutes; a new one then appears)

Enter it on the **print agent** row only, not on a till: this PC then prints for all tills.

Show a new code

Find printers

Find the address of a network printer, or the name of a USB printer plugged into this PC, then enter it in MY FOOD → Devices & printing → Edit printer.

Search the network

USB printers on this PC

Paper80 mm ▾

Recent activity

Nothing yet.

8

Enter that code ONLY on PRINT-AGENT-01

On the manager's phone: **Devices & printing** → the **PRINT-AGENT-01** row → **Enter code from device** → type the code → **Pair device**.

1 Only the **PRINT-AGENT-01** row

2 Press here, type the code, **Pair device**

Name	Type	Status	IP Address	Waiting	Actions
DRINKS-PRINTER-01	Printer	Not sent	192.168.1.54:9100	16 waiting	Test print, Edit, Turn off
GRILL-PRINTER-01	Printer	Not sent	192.168.1.52:9100	2 waiting	Test print, Edit, Turn off
KITCHEN-PRINTER-01	Printer	Not sent	192.168.1.51:9100	10 waiting	Test print, Edit, Turn off
PASTRY-PRINTER-01	Printer	Not sent	192.168.1.53:9100	3 waiting	Test print, Edit, Turn off
RECEIPT-PRINTER-01	Printer	Not sent	192.168.1.54:9100	2 waiting	Test print, Edit, Turn off
PRINT-AGENT-01	Print agent	Not sent	not paired		Enter code from device, Create code, Rename
CUSTOMER-DISPLAY-01	Customer display	Offline	7:09:32 AM	paired	Enter code from device, Create code, Rename, Revert

Add device

Name (e.g. PASTRY-KDS-01) Type Station (KDS) Printer connected by

Printer IP address, or Windows printer name for USB Printer driven by agent Receipt printer (POS)

Add device

Print jobs not yet printed Live

Never enter this code on a till's row. MY FOOD will refuse it, and nothing changes.

9 Printing is on. Find the printers.

The window says **Printing is on**. Press **Search the network** to see each printer's address. **Print test page** checks each printer.

MY FOOD Printing
Chefelisha Restaurant

Printing is on · PRINT-AGENT-01
Connected to MY FOOD · checked 08:48 AM. Keep this PC switched on during service.

PRINTER	CONNECTED BY	ADDRESS	STATUS
KITCHEN-PRINTER-01	Network		Ready
RECEIPT-PRINTER-01	Network	192.168.1.51:9100	Ready

Find printers
Find the address of a network printer, or the name of a USB printer plugged into this PC, then enter it in MY FOOD → Devices & printing → Edit printer.


Recent activity
Nothing yet.

Version 1.1.1 · <https://www.chefelisha.cc> [Disconnect this PC](#)

Printer address tip: hold the printer's FEED button while switching it on, and it prints its address.

10 Put each printer's address in MY FOOD

In **Devices & printing**, press **Edit** on each printer. Choose Network or USB, type the address, set **Printed by** to PRINT-AGENT-01, then **Save**.

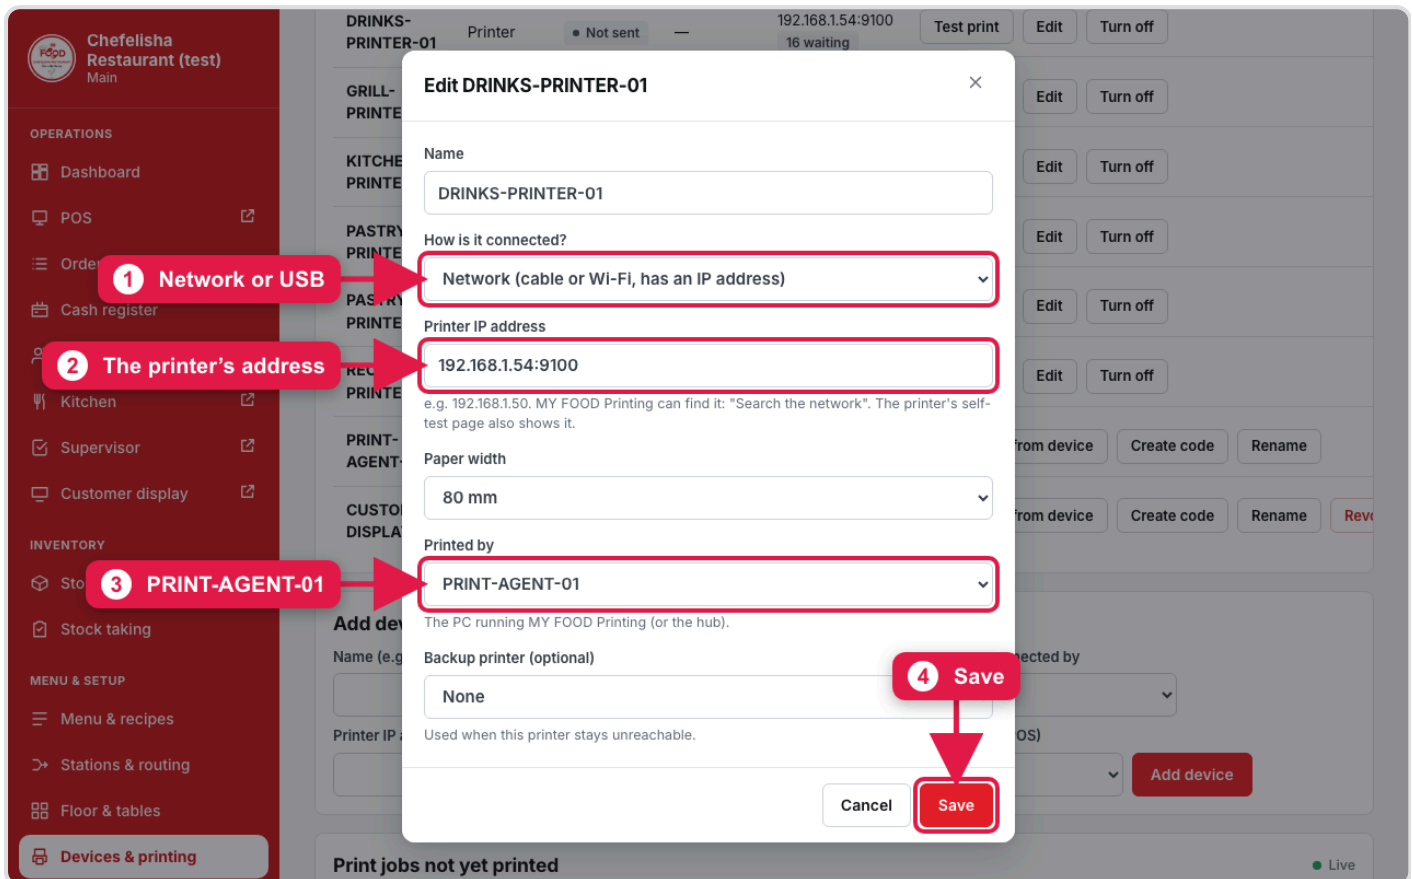

An address ending in .1 (like 192.168.1.1) is usually the Wi-Fi router, not a printer.

11 Test print from MY FOOD

Press **Test print** on each printer's row. MY FOOD must say it **printed**.


Chefellsha Restaurant (test)
Main

OPERATIONS

- Dashboard
- POS
- Orders
- Cash register
- Customers
- Kitchen
- Supervisor
- Customer display

INVENTORY

- Stock
- Stock taking

MENU & SETUP

- Menu & recipes
- Stations & routing
- Floor & tables
- Devices & printing**

Ama device 1	POS till	Not sent	—	paired	Enter code from device	Create code	Edit	Revoke
POS-01	POS till	Offline	7:09:28 AM	paired	Enter code from device	Create code	Edit	Revoke
DRINKS-01	Kitchen screen	Offline	7:09:30 AM	paired	Enter code from device	Create code	Edit	Revoke
GRILL-01	Kitchen screen	Offline	7:09:31 AM	paired	Enter code from device	Create code	Edit	Revoke
KITCHEN-01	Kitchen screen	Offline	7:09:29 AM	paired	Enter code from device	Create code	Edit	Revoke
PASTRY-01	Kitchen screen	Offline	7:09:34 AM	paired	Enter code from device	Create code	Edit	Revoke
DRINKS-PRINTER-01	Printer	Not sent	7:09:35 AM	paired	Test print	Edit	Turn off	
GRILL-PRINTER-01	Printer	Not sent	—	192.168.1.52:9100 2 waiting	Test print	Edit	Turn off	
KITCHEN-PRINTER-01	Printer	Not sent	—	192.168.1.51:9100 10 waiting	Test print	Edit	Turn off	
PASTRY-PRINTER-01	Printer	Not sent	—	192.168.1.53:9100 3 waiting	Test print	Edit	Turn off	
PASTRY-PRINTER-02	Printer	Not sent	—	192.168.1.55:9100 2 waiting	Test print	Edit	Turn off	
RECEIPT-PRINTER-01	Printer	Not sent	—	192.168.1.60:9100 2 waiting	Test print	Edit	Turn off	
PRINT-AGENT-01	Print agent	Not sent	—	not paired	Enter code from device	Create code	Rename	

1 Test print: it must say "printed"

12 Kitchen printers: connect to their station

In **Stations & routing**, choose the **Station** (e.g. Main Kitchen), the **printer** and the role **Main**, then press **Connect screen or printer**.


Chefellsha Restaurant (test)
Main

OPERATIONS

- Dashboard
- POS
- Orders
- Cash register
- Customers
- Kitchen
- Supervisor
- Customer display

INVENTORY

- Stock
- Stock taking

MENU & SETUP

- Menu & recipes
- Stations & routing**
- Floor & tables
- Devices & printing

STATION	CODE	SCREENS AND PRINTERS	
Main Kitchen	KIT	Printer: KITCHEN-PRINTER-01 ✗	Screen: KITCHEN-01 ✗
Grill	GRL	Printer: GRILL-PRINTER-01 ✗	Screen: GRILL-01 ✗
Pastry	PAS	Printer: PASTRY-PRINTER-01 ✗	Screen: PASTRY-01 ✗
Drinks	DRK	Printer: DRINKS-PRINTER-01 ✗	Screen: DRINKS-01 ✗

Name Code (e.g. GRL) Add station

Station Screen or printer Role

Connect screen or printer

Routing rules (product > category > default)

		STATION	PRIORITY	
product	Birthday Cake	Pastry	0	Delete
category	Food	Main Kitchen	0	Delete
category	Grills	Grill	0	Delete
category	Pastries	Pastry	0	Delete

1 Connect the kitchen printer to its station

13 Each till: choose its receipt printer

In **Devices & printing**, press **Edit** on each till, choose its **Receipt printer** and press **Save**. The till then also prints the customer's **order number** slip.

Chefellsha Restaurant (test) Main

OPERATIONS

- Dashboard
- POS
- Orders
- Cash register
- Customers
- Kitchen
- Supervisor
- Customer display

INVENTORY

- Stock
- Stock taking

MENU & SETUP

- Menu & recipes
- Stations & routing
- Floor & tables
- Devices & printing**

Devices & printing

Tills, kitchen screens, customer display and printers. Hardware can be connected at any time.

Device status (from heartbeats and printer reports) Live

Printing is not running yet. A browser cannot send to receipt printers by itself: one PC in the restaurant runs **MY FOOD Printing** and prints for everyone.

- Open Windows PC at the counter that stays on during service, download and install **MY FOOD Printing**.
- It will ask you to enter the IP address of the PC that runs MY FOOD Printing.
- Enter the IP address here with that address.

Edit POS-01

Name: POS-01

Receipt printer: RECEIPT-PRINTER-01

Receipts and bills from this till print here.

1 Choose the till's receipt printer

2 Save

Save

Device	Type	Status	Time	Action
AKOSUA-01	Kitchen screen	Offline	7:09:31 AM	paired
GRILL-01	Kitchen screen	Offline	7:09:29 AM	paired
KITCHEN-01	Kitchen screen	Offline	7:09:34 AM	paired
PASTRY-01	Kitchen screen	Offline	7:09:34 AM	paired

14 Same as the tills

On each kitchen screen and on the customer display, open www.chefelisha.cc/pair. Enter the code on **its own row** (KITCHEN-01, DRINKS-01, CUSTOMER-DISPLAY-01...). It opens its screen by itself.

Chefelisha Restaurant (test) Main

OPERATIONS

- Dashboard
- POS
- Orders
- Cash register
- Customers
- Kitchen
- Supervisor
- Customer display

INVENTORY

- Stock
- Stock taking

MENU & SETUP

- Menu & recipes
- Stations & routing
- Floor & tables
- Devices & printing**

DEVICE	TYPE	STATUS	LAST SEEN	DETAILS
Akosua device 1	POS till	Not sent	—	paired
Ama device 1	POS till	Not sent	—	paired
POS-01	POS till	Offline	7:09:28 AM	paired
DRINKS-01	Kitchen screen	Offline	7:09:30 AM	paired
GRILL-01	Kitchen screen	Offline	7:09:31 AM	paired
KITCHEN-01	Kitchen screen	Offline	7:09:29 AM	paired
PASTRY-01	Kitchen screen	Offline	7:09:34 AM	paired
GRILL-PRINTER-01	Printer	Not sent	—	192.168.1.54:16 waiting
KITCHEN-PRINTER-01	Printer	Not sent	—	192.168.1.51:9100 10 waiting
PASTRY-PRINTER-01	Printer	Not sent	—	192.168.1.53:9100 3 waiting
PASTRY-PRINTER-02	Printer	Not sent	—	192.168.1.55:9100 2 waiting

1 Kitchen screen: its own row

2 Same steps as the till

15 How the kitchen uses its screen

Every new order arrives as **NEW ORDER**. The kitchen presses **ACCEPT** (“we have it”), then **START** when cooking begins, **READY** when the food is ready, and **DONE** to clear it.

Main Kitchen 5 open

Sound off Alerts Live Sign out

#5006 ACCEPTED 1h 46m
Dining · Table 10 LATE · ACCEPTED · 07:02 AM
Sent by Esi (Waiter) · Waiter
Accepted by Owner · Owner · 07:02 AM
1 x Fried Rice GHS 40.00
1 x GHS 40.00 = GHS 40.00
Total GHS 40.00
START

#5016 WAITING 1h 37m
Takeaway · Ama LATE · NEW ORDER · 07:10 AM
Sent by Kofi (Cashier) · Cashier
1 x JOLLOF GHS 45.00
1 x GHS 45.00 = GHS 45.00
Total GHS 45.00
ACCEPT

#5017 WAITING 1h 36m
Takeaway · Test LATE · NEW ORDER · 07:11 AM
Sent by Kofi (Cashier) · Cashier
1 x JOLLOF GHS 45.00
1 x GHS 45.00 = GHS 45.00
Total GHS 45.00
ACCEPT

#5018 WAITING 1h 35m
Takeaway · Test LATE · NEW ORDER · 07:13 AM
Sent by Kofi (Cashier) · Cashier
1 x JOLLOF GHS 45.00
1 x GHS 45.00 = GHS 45.00
Total GHS 45.00
ACCEPT

#5019 WAITING 0:03
Takeaway · Test NEW ORDER · 08:48 AM
Sent by Kofi (Cashier) · Cashier
1 x JOLLOF GHS 45.00
1 x GHS 45.00 = GHS 45.00
Total GHS 45.00
ACCEPT

1 NEW ORDER: press ACCEPT (“we have it”), then START, READY, DONE

NEW ORDER

ACCEPT

START

READY

DONE

A red **VOIDED · STOP PREPARATION** means the customer cancelled it: do not make it.

16 Make a test order

On a till, sign in with a staff PIN → **Takeaway** → **+ New takeaway order** → tap a product → **Send to kitchen**. The kitchen screen shows it, the kitchen ticket prints, and the till prints the order number for the customer.

Chefellsha Restaurant (test)

Dining Takeaway Bills Completed Customer screen **Open register** Orders **Kofi (Cashier)** PIN Sign out

← Back Search products

All Food Pastries Drinks

Birthday Cake
Cakes
GHS 250.00 +

Chicken Sandwich
Sandwiches
GHS 35.00 +

Coke
Drinks
GHS 10.00 +

Fried Rice
Rice Dishes
GHS 40.00 +

Grilled Chicken
Grills
GHS 60.00 +

Jollof Rice
Rice Dishes
GHS 45.00 +

Malt
Drinks
GHS 12.00 +

Meat Pie
Pastries
GHS 15.00 +

New takeaway order

Phone number Test

J Jollof Rice GHS 45.00

- 1 + Note for the kitchen

1 Tap a product


2 Send to kitchen: the ticket must print

New Items (estimate) GHS 45.00

Send to kitchen


17 Take payment

Press **Take payment** → **CASH** → type the money received → **Complete payment**.

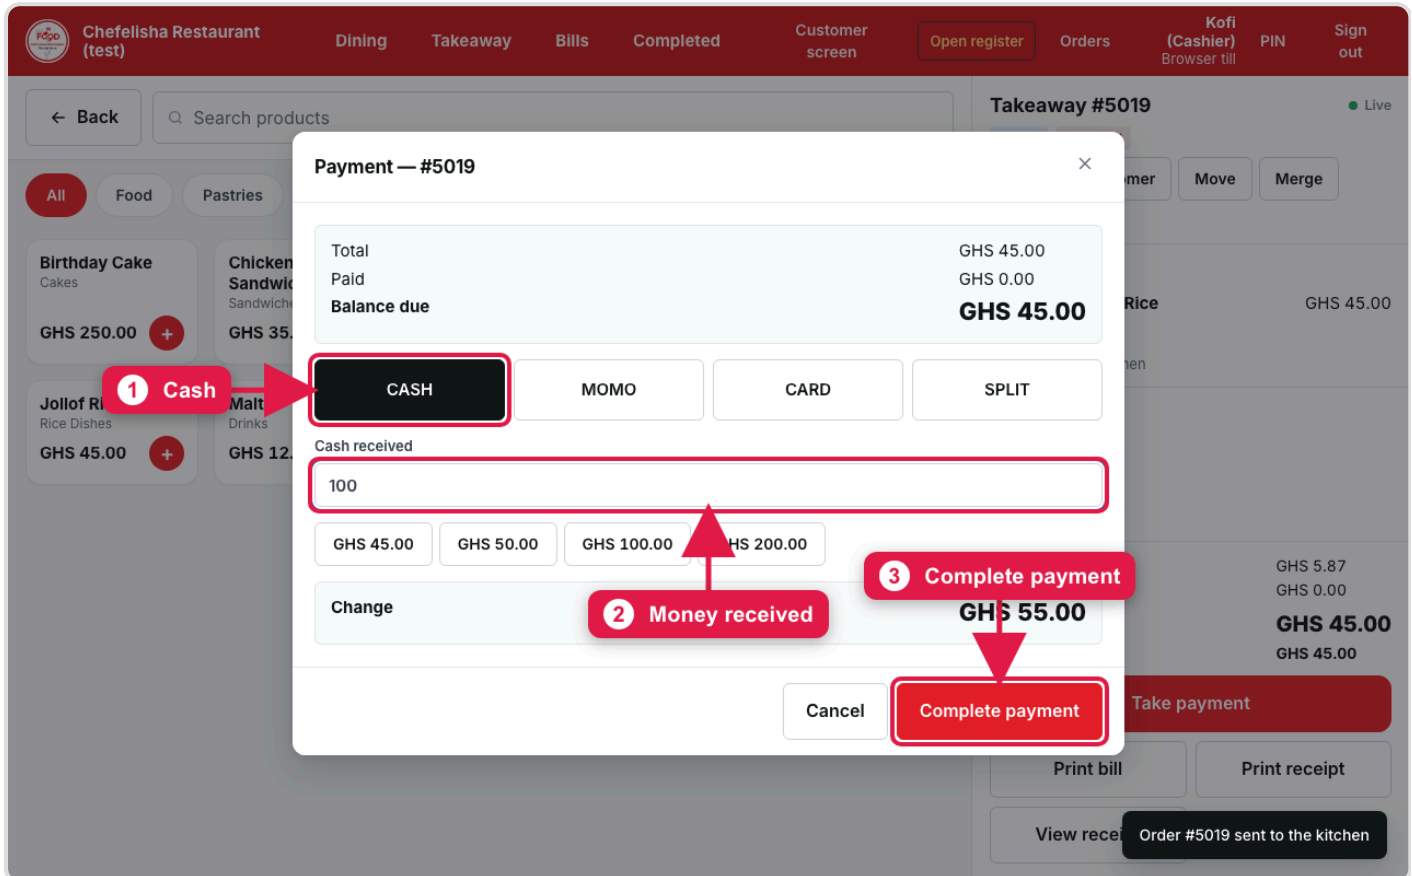

18 Print the receipt

Press **Print receipt**. It prints on the till's receipt printer. Then restart every device once and check it still works.

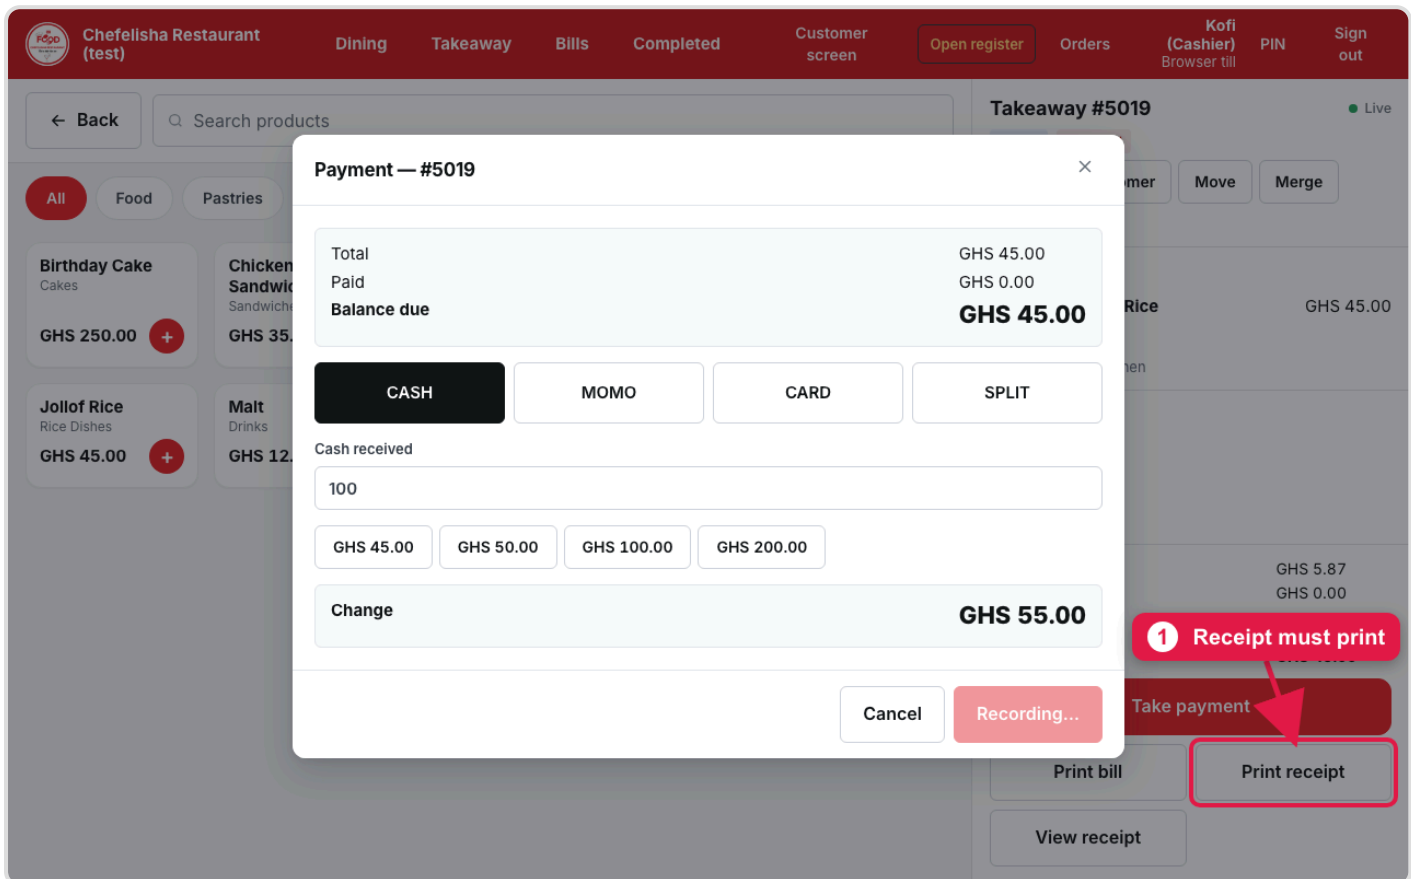

REMEMBER

Pairing rules

✓ DO

- Enter a device's code on **that device's row**
- Use the code that is on the screen **now**
- Printing code → only **PRINT-AGENT-01**
- Wait up to 10 seconds after **Pair device**
- Read the message if a code is refused

✗ DON'T

- Don't keep pressing **Show a new code** or **Create code**
- Don't enter one device's code on another device's row
- Don't pair a device that already shows the PIN pad
- Don't send codes or PINs on WhatsApp

“**Create code**” is the other way round: that code is typed **on the device**, after pressing **I have a code from a manager**. You normally don't need it.

Quick fixes

You see	Do this
"That pairing code has expired"	Use the new code the device shows now.
"This code comes from MY FOOD Printing..."	You used a till's row. Enter it on PRINT-AGENT-01 .
"That is a code created here in MY FOOD"	Type it on the device ("I have a code from a manager").
Red box on Devices & printing: "Printing has stopped"	Switch on the printing PC and check its internet. MY FOOD Printing must be running (icon near the clock).
Printer "Not reachable" / did not print	Power, paper, cable. Search the network again and fix the address with Edit .
Ticket prints in the wrong place	Stations & routing : check which printer is connected to that station.
Receipt shows on screen instead of printing	Edit the till → choose its Receipt printer .
Kitchen screen: "Press ACCEPT first"	Press ACCEPT , then START , then READY .

Still stuck? Stop making new codes. Take a photo of the screen (no PINs) and call:

MY FOOD support: _____ Manager: _____