Limen

User manual

For operators and administrators. How to use Limen's web interface, step by step.

1 Getting started


Limen controls who can go through which door, and when. You use it from a web browser: open the address your administrator gave you (it looks like **https://server-address:8443**) and sign in.

- **First sign-in:** the administrator account is **admin / admin**. A warning stays on screen until you change that password.
- **Change your password:** open `System properties` (operators: `My account`) and use `Change your password`.
- **Language:** the `Language` button at the top right of the same page. Each person chooses their own; the sign-in page has a selector too.
- `Sign out` is at the bottom left.

Two kinds of users

Operator	People, visitors, groups, gates, time windows, access rules, monitoring, alerts, system info. Can change only their own password.
Administrator	Everything an operator does, plus `System properties` (users, backup, restart, data retention, API accounts), creating gates and pairing devices.


2 The screen at a glance

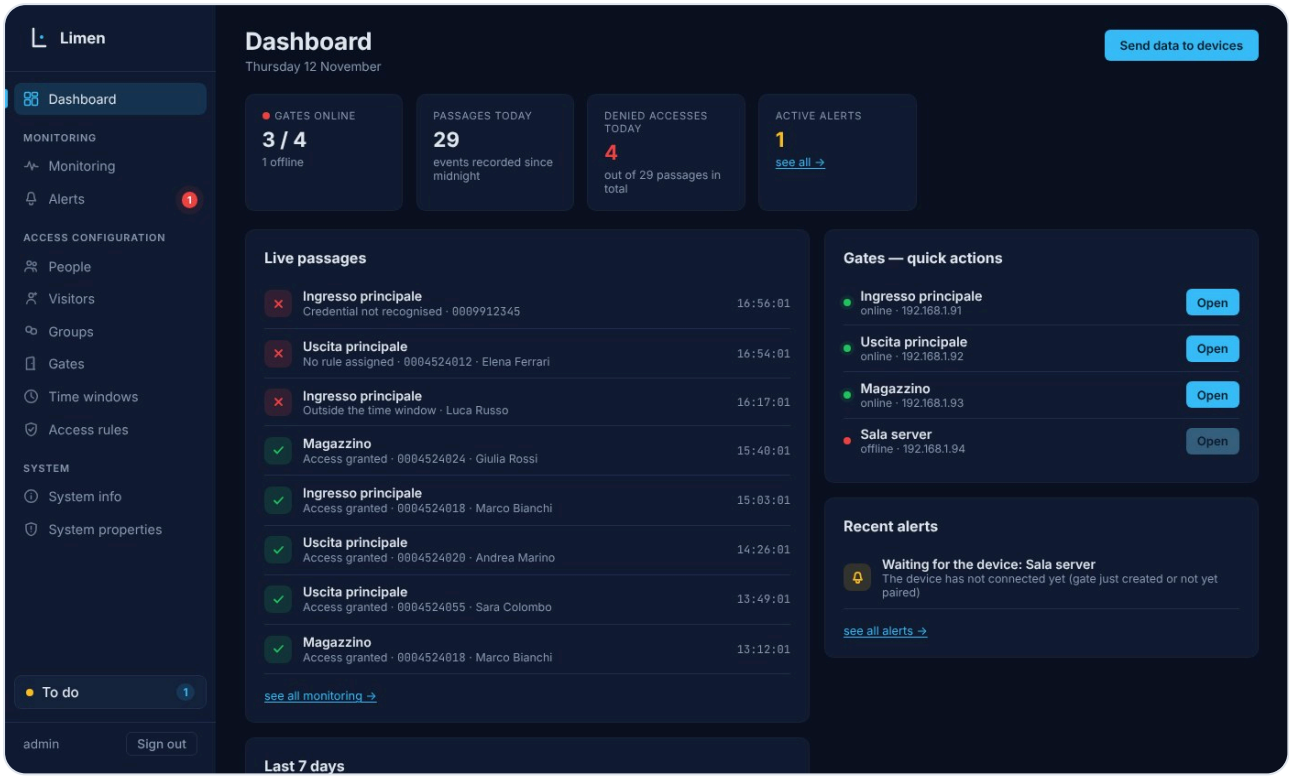

The Dashboard: gates online, today's passages, denied accesses, active alerts, live passages and quick opening.

- **Left menu.** *Monitoring*: Dashboard, Monitoring, Alerts. *Access configuration*: People, Visitors, Groups, Gates, Time windows, Access rules. *System*: System info and System properties.
- **The ⓘ icon** next to a title or a field gives a one-sentence explanation: hover or tap it.
- **Send data to devices** (top right) sends your changes to the gates. See step 5 of section 4.
- **To do** (left menu) lists what needs attention: data to send and, for administrators, new devices to pair.

3 Everyday use

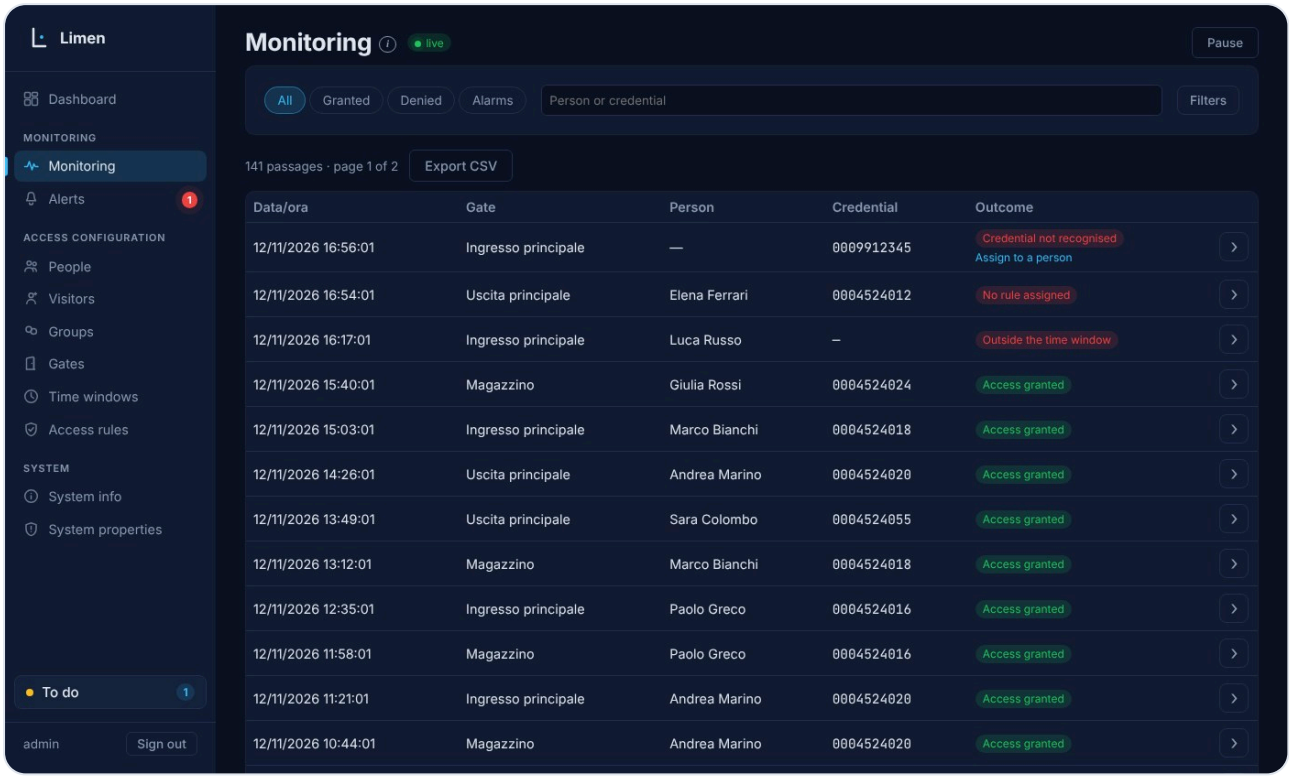

Monitoring: live list of passages, with filters and CSV export.

Monitoring

Every passage at every gate, live. Use **Pause** to freeze the list. Filter by outcome (All, Granted, Denied, Alarms), by exact outcome, by dates, by gate, or by person or credential. Choosing dates shows the history. **Export CSV** downloads what you see. The **›** button on a row opens the details, including the exact reason for a denied access.

Alerts

Devices that are offline and door alarms (for example a door left open). An alarm stays until someone presses **Take over**. A phone paired in the last 24 hours is listed here as a notice.

Opening a door by hand

On the Dashboard press **Open** next to the gate, or open the gate in **Gates** and press **Open now**. It works only if the gate is online, and opens it once.


Pairing a phone (administrators)

A phone is never typed in by hand. In the person's **Access credentials**, under **Phone**, choose the gate where the person is standing and press **Invite a phone**: a code appears once and is valid for 10 minutes, only at that gate. The person types it in the Limen app in front of the gate and presses Pair: the phone shows up in their credentials and works right away, with no further step. Give the code only to that person. A lost phone: delete its credential and invite a new one.

4 Setting up access

Access works with **rules**. A rule says *which gates* and *when* (a time window). People receive rules directly or through groups. Five steps, in this order:


1. **Gates** (administrator). `Gates` → `New gate` : name, gate no. and the IP address of its device → `Create gate` . When the device connects it appears in `To do` : press `Pair` . The gate turns *online*.
2. **Time windows.** `Time windows` → `New time window` : give it a name, then choose days and hours. `Holidays →` lists the days that windows set to exclude holidays skip.
3. **People.** `People` → `New person` → `Add` , or `Import from CSV` . Press `Properties ›` on a person to see three tabs: `Access` (groups and direct rules), `Access credentials` (badges, PIN) and `Presence` . For guests use `Visitors` : they have an end date and lose access after it. In `Access credentials` , `Deactivate` and `Delete` take effect at once: the data goes to the gates automatically.
4. **Groups and rules.** `Groups` → `New group` to gather people. `Access rules` → `New rule` : choose one or more gates and a time window (or `Always (24 hours a day)`). Then add the rule to a group or to a person.
5. **Send data.** Press `Send data to devices` . Changes reach the doors only after this.

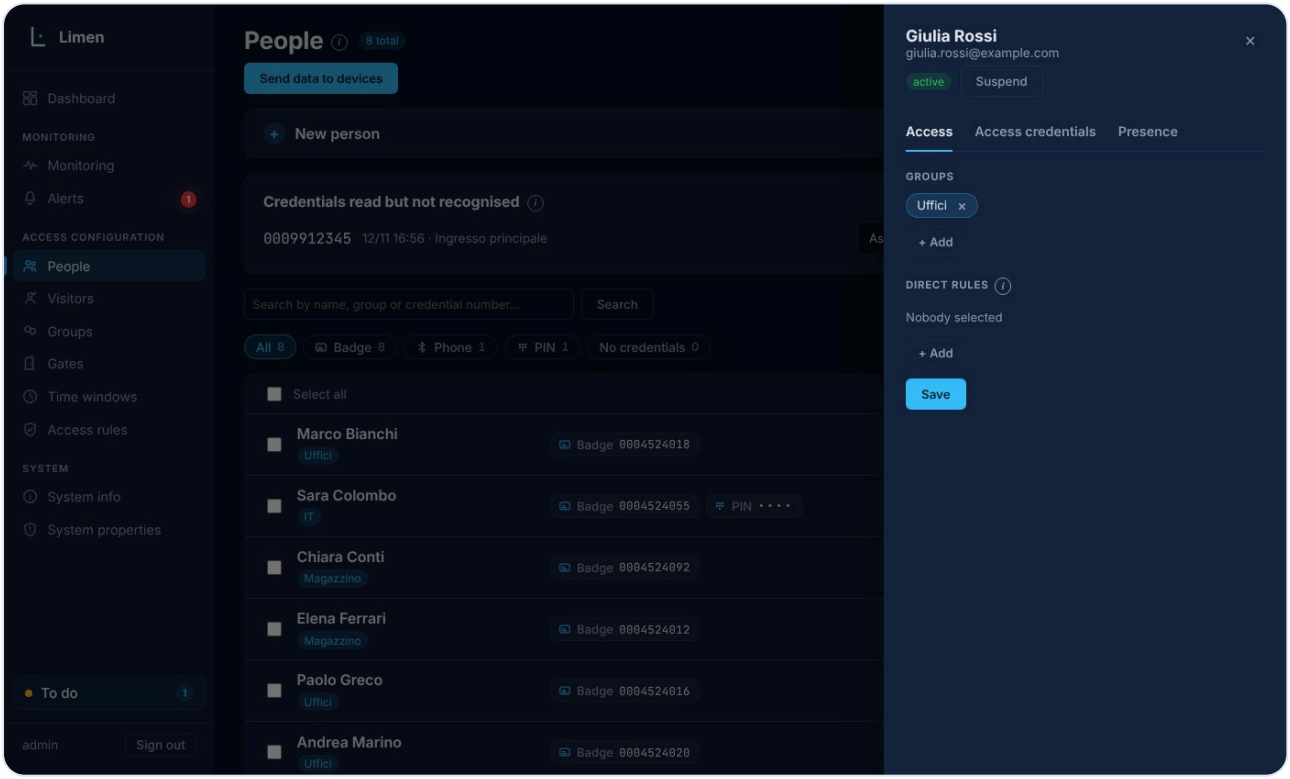

A person's properties: groups, direct rules and effective permissions.

> **Unknown badge?** A badge read at a gate but not assigned appears in People, under `Credentials read but not recognised` : press `Assign to...` and choose the person, or `Ignore` (`Ignore all` clears the list). In Monitoring a phone is shown as `BLE` : its full code is in the passage detail.


Check before you trust it. **See effective permissions** in a person's properties shows what that person can really do. A rule with no gate or no time window is marked *incomplete* and grants nothing.

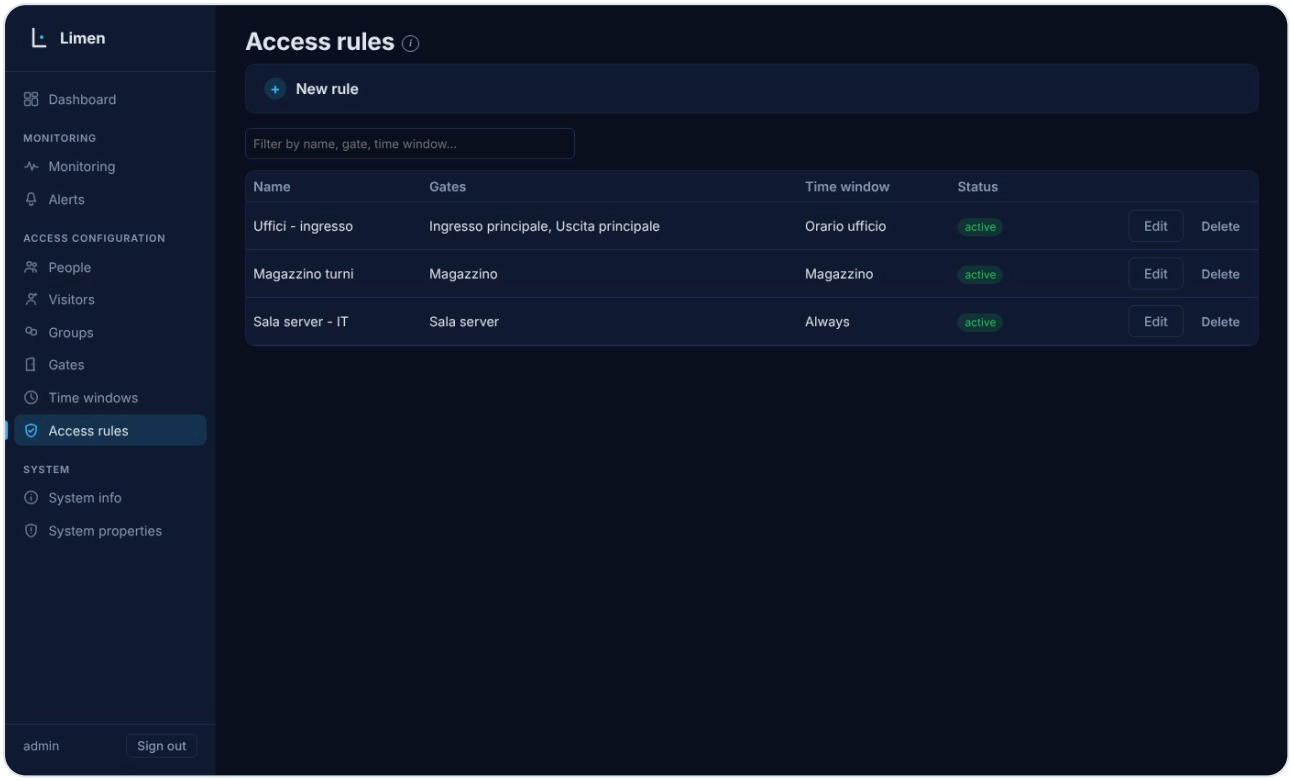

Access rules: gates, time window and status.

Do not forget step 5. After any change to people, rules, time windows or gates, press **Send data to devices**. Gates also receive data automatically every 6 hours, but do not wait for it. The exception is deactivating or deleting a credential, which is sent at once.

5 Controlling a gate

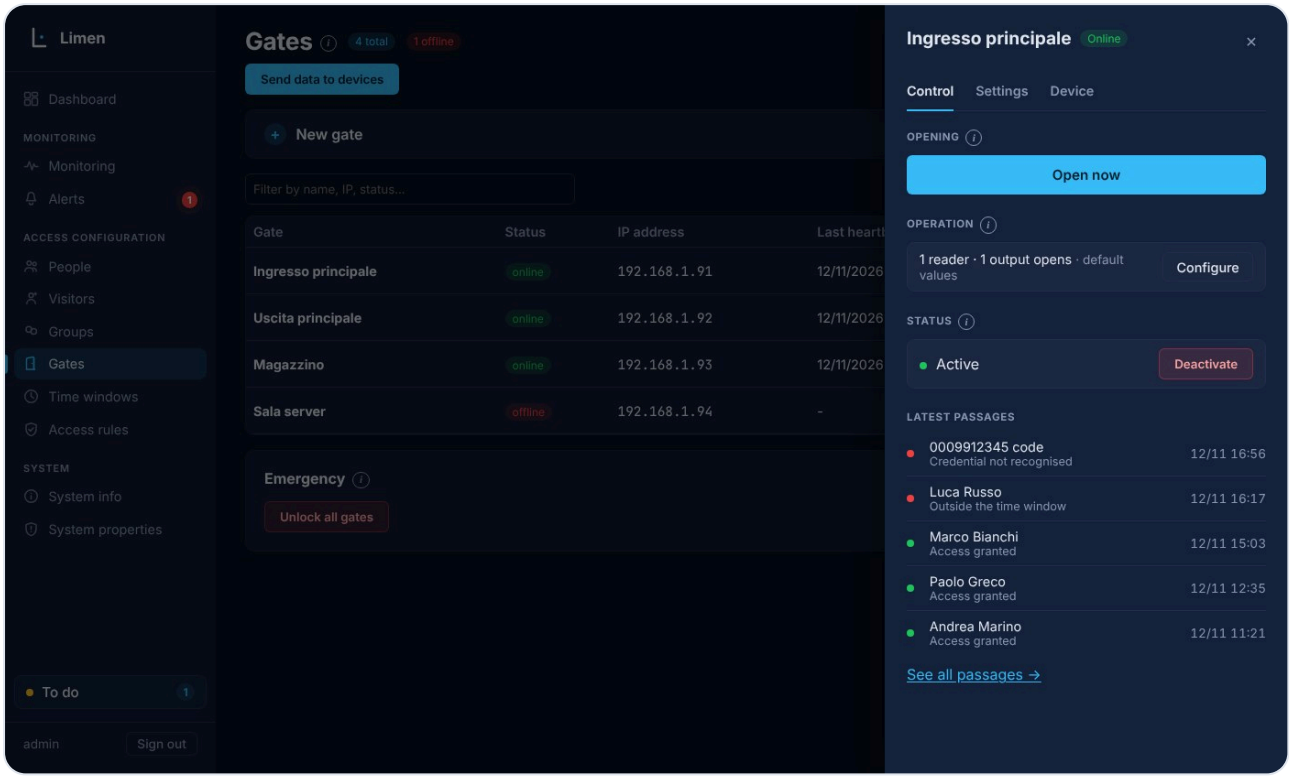

A gate's panel: open now, operation, status and latest passages.

Click a gate in **Gates** to open its panel, with three tabs.

- **Control**: **Open now**; **Operation** with **Configure** (mode, readers, outputs, inputs); **Status**, where **Deactivate** makes the gate deny everyone until you reactivate it; latest passages.
- **Settings**: description, *Counts presence* (needed to know who is inside) and *anti-passback* (someone already inside cannot enter again until they have left).
- **Device**: connection status of the gate's device.


Gate modes

Normal	Badges open the door according to the rules.
Scheduled unlock	The door is free (no badge needed) during a chosen time window.
Maintenance	Badges do not open the door.
Emergency	The door is free for everyone until you go back to normal.

The mode is chosen in **Configure** and takes effect immediately. To unlock **all** gates at once, use the **Emergency** box in **Gates** → **Unlock all gates**.

> Limen does not replace the legally required emergency-exit release or an intrusion alarm panel.

6 Administration

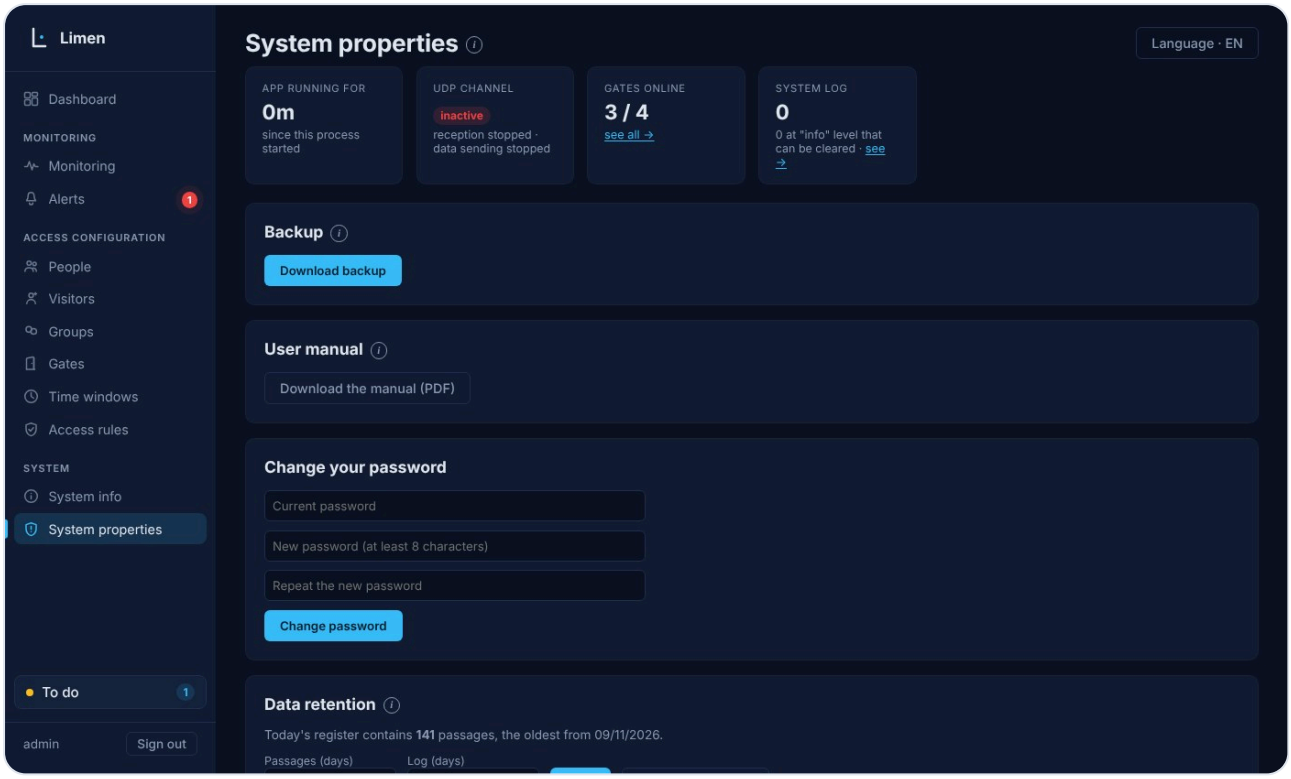

System properties (administrators): backup, restart, data retention, API and users.

- **Users.** Create users, make them operator or administrator, reset a password, delete. There must always be at least one administrator.
- **Backup.** `Download backup` saves a copy of the database. Keep it somewhere safe: it contains the keys of the gates and of the phones.
- **Phone key.** If a gate device is stolen, press `Regenerate phone key`: all phones stop opening and must be invited again. Badges are not affected.
- **Data retention.** How many days passages and log are kept (0 = forever). `Save and apply now` applies it immediately. Alerts still to be handled are never deleted.
- **Log cleanup.** `Clean` removes old information lines from the system log; passages and warnings are not touched.
- **App restart.** Works only when the app runs as a service.
- **API.** Accounts for other programs, and the link to the API documentation (PDF, English).
- **Language.** The default language for people who have not chosen one.
- **System info** (everyone): a health check of the server and of every gate.

7 When something is wrong

A gate is offline, or "Waiting for the device"	Check power and network cable, and the IP address in the **Gates** table. A new device needs **Pair** (administrator).
A change does not work at the door	Press **Send data to devices**.
Someone is denied	Open Monitoring, press › on the row: the reason is explained. See the table below.
An alarm will not go away	Press **Take over** in Alerts. If the door is still open, close it first.
Password forgotten	Another administrator resets it in **System properties** → Users.

Reasons for a denied access

Outside the time window	The rule is valid at other hours: check the time window.
No rule assigned	The person has no group and no direct rule.
Not authorised on this gate	The person has rules, but not for this gate.
Rule disabled	Enable the rule in **Access rules**.
Gate data not up to date	Press **Send data to devices**.
Credential deactivated / expired or not yet valid	Check the credential in the person's properties.
Credential not recognised	The badge is not assigned to anyone: assign it in People.
Gate disabled / in maintenance	Check the gate's status and mode.
Blocked by anti-passback	The person is recorded as already inside.