


NOVIO ELD

User Manual

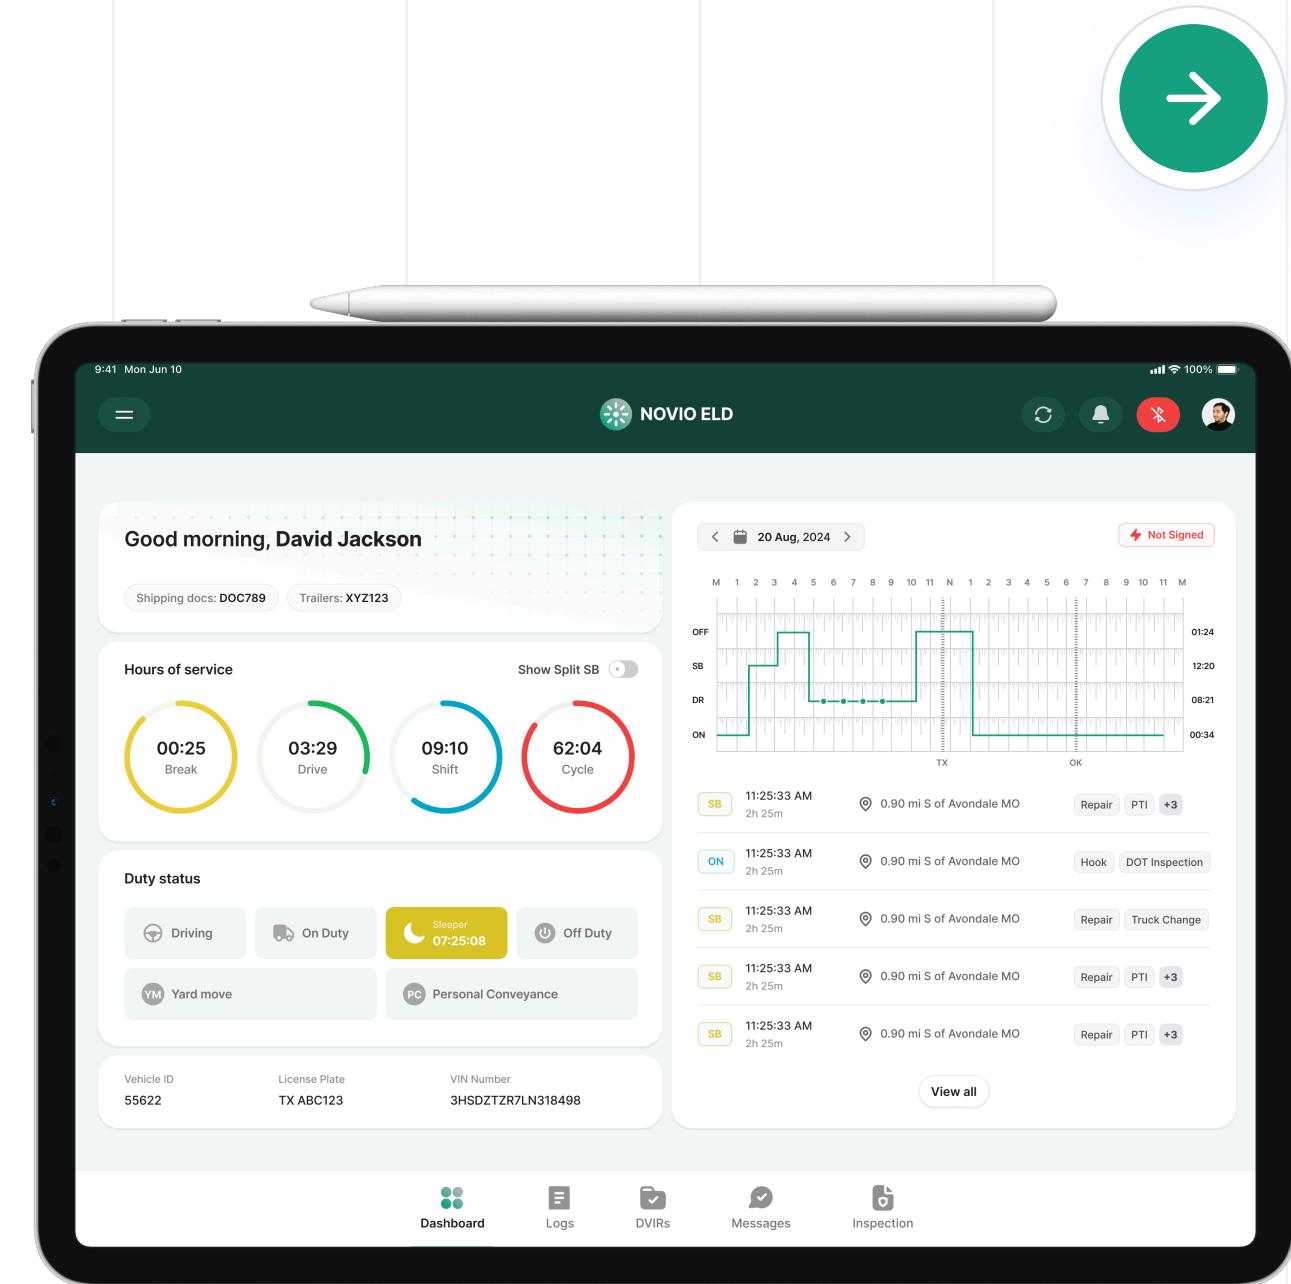

Content

01 Downloading the App

02 Login into the app

03 Forgot password

04 Change password

05 Select vehicle

06 ELD Connection

07 Start Your Shift

08 Status Change

09 Showing Logs to Officers

10 Inspection Preview

11 Transfer ELD records

12 Send Logs


13 Send Logs by Email

14 Email Logs

15 ELD Malfunctions

Downloading the App 01


Download the NOVIO ELD app from the Google Play Store for Android phones and tablets, or from the App Store for iPhones and iPads.

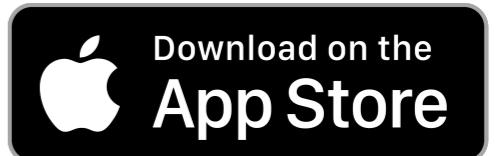


Logging into the App 02

Log in to application using your username and password.

If you don't have an NOVIO ELD account, please, contact your carrier.

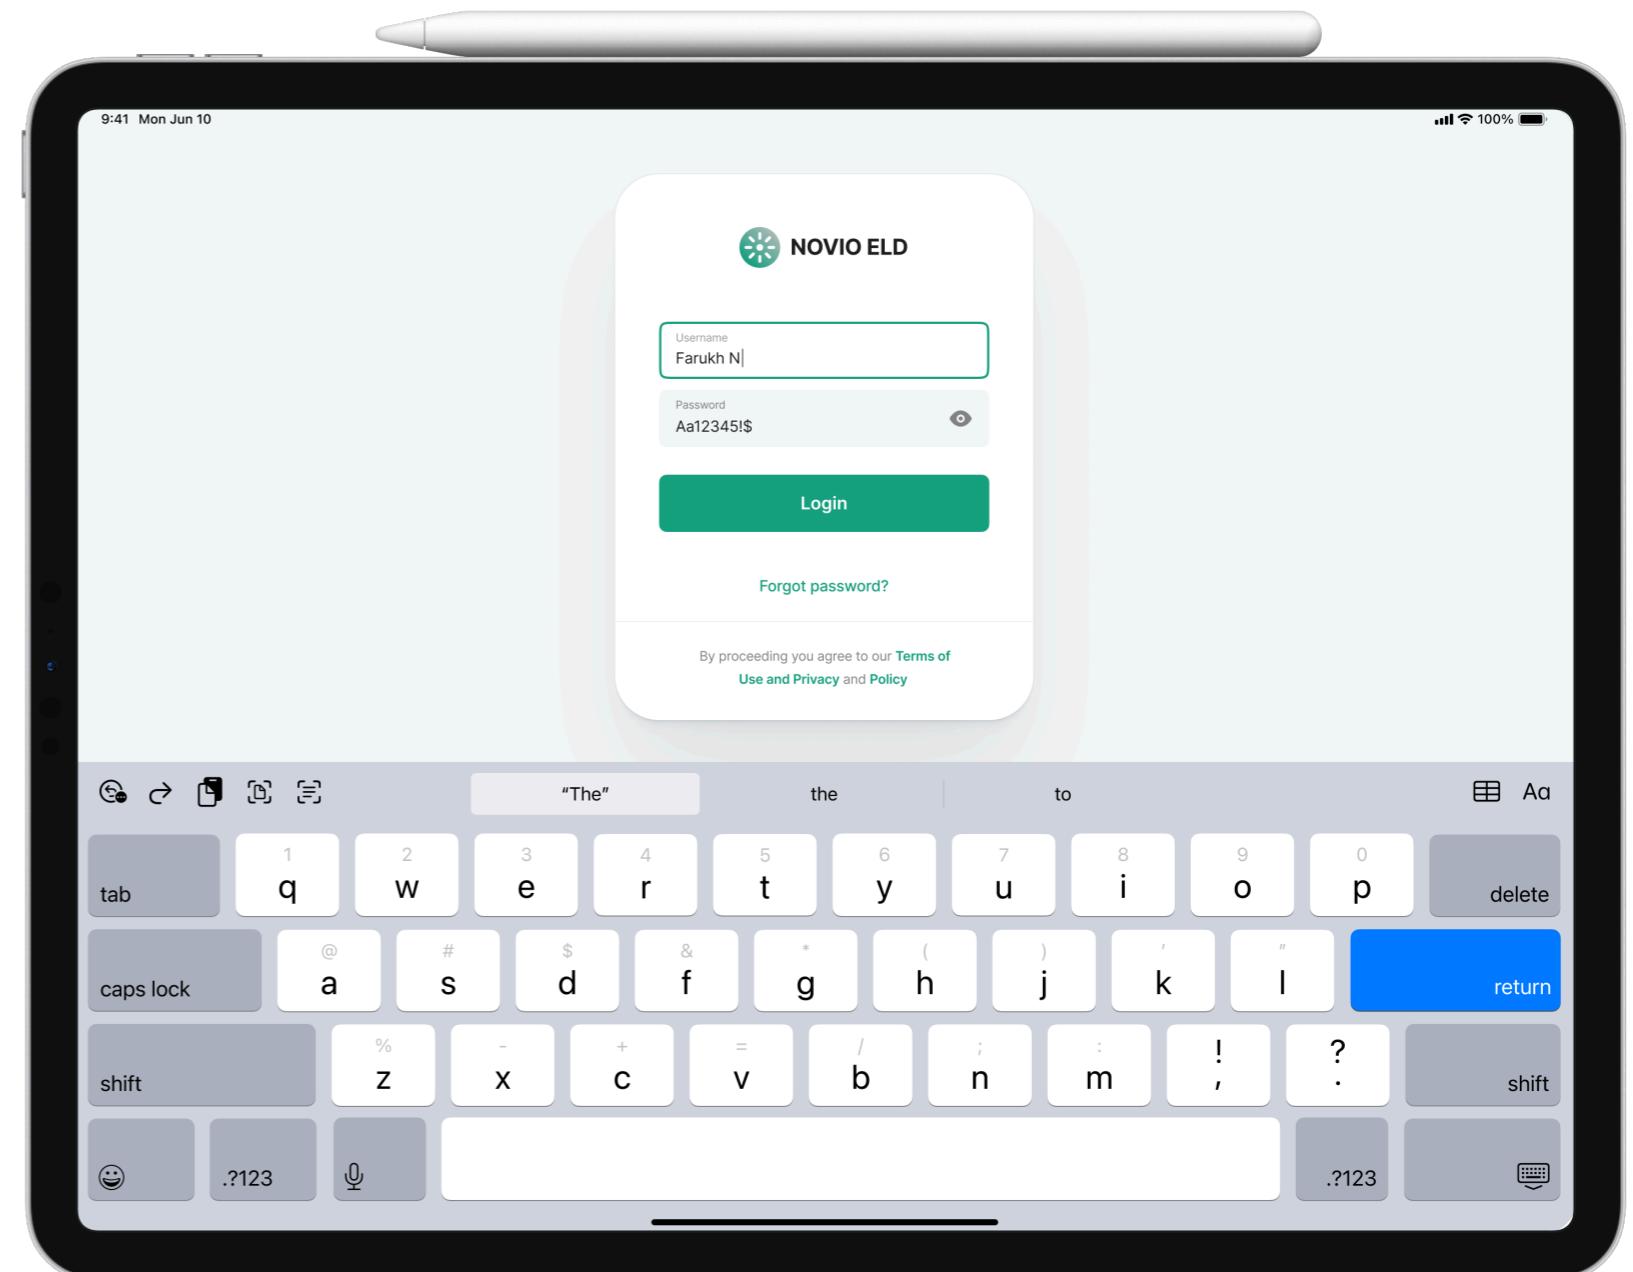


Forgot Password 03

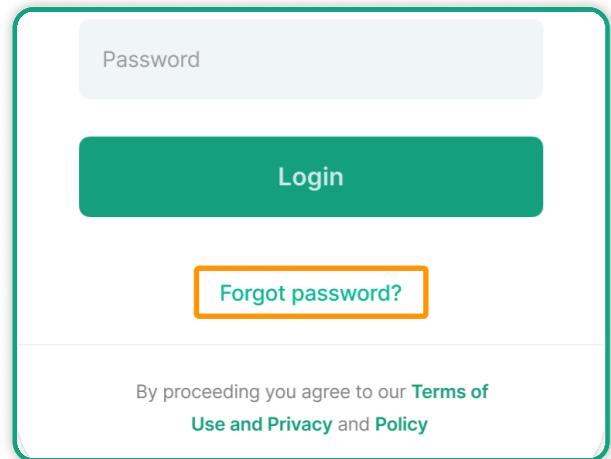

- Click the "Forgot Password" link below the Login button.

- Enter your email address
- Then click "Send link" button

Check your email — we've sent you a link to update your password

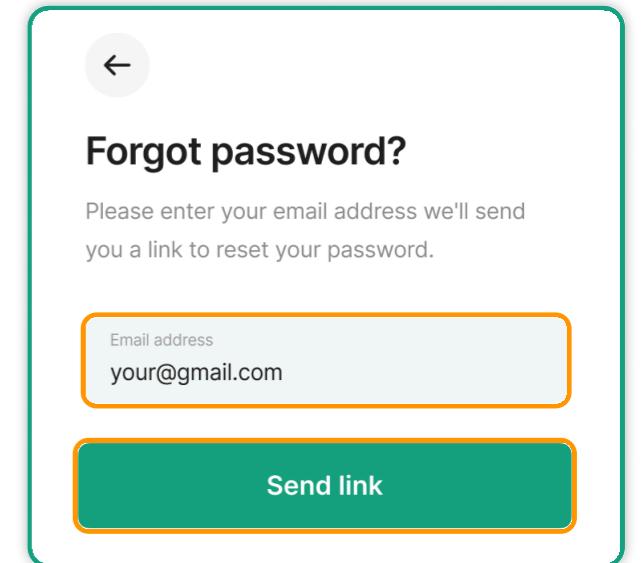

Change Password 04

Set up a new password

Create a strong password with at least 8 characters, including uppercase, lowercase, numbers, and special symbols.

New Password

Confirm New Password

Set new password

- **Enter your new password and confirm it**

- **Clicking "Set New Password" will save and activate your new password**

Set up a new password

Create a strong password with at least 8 characters, including uppercase, lowercase, numbers, and special symbols.

New Password
Aa12345!\$


New Password
Aa12345!\$

Set new password


Select Vehicle 05

Select your vehicle

Select your vehicle by matching the Vehicle number or VIN number. You can search for your vehicle by the Vehicle number or VIN number.

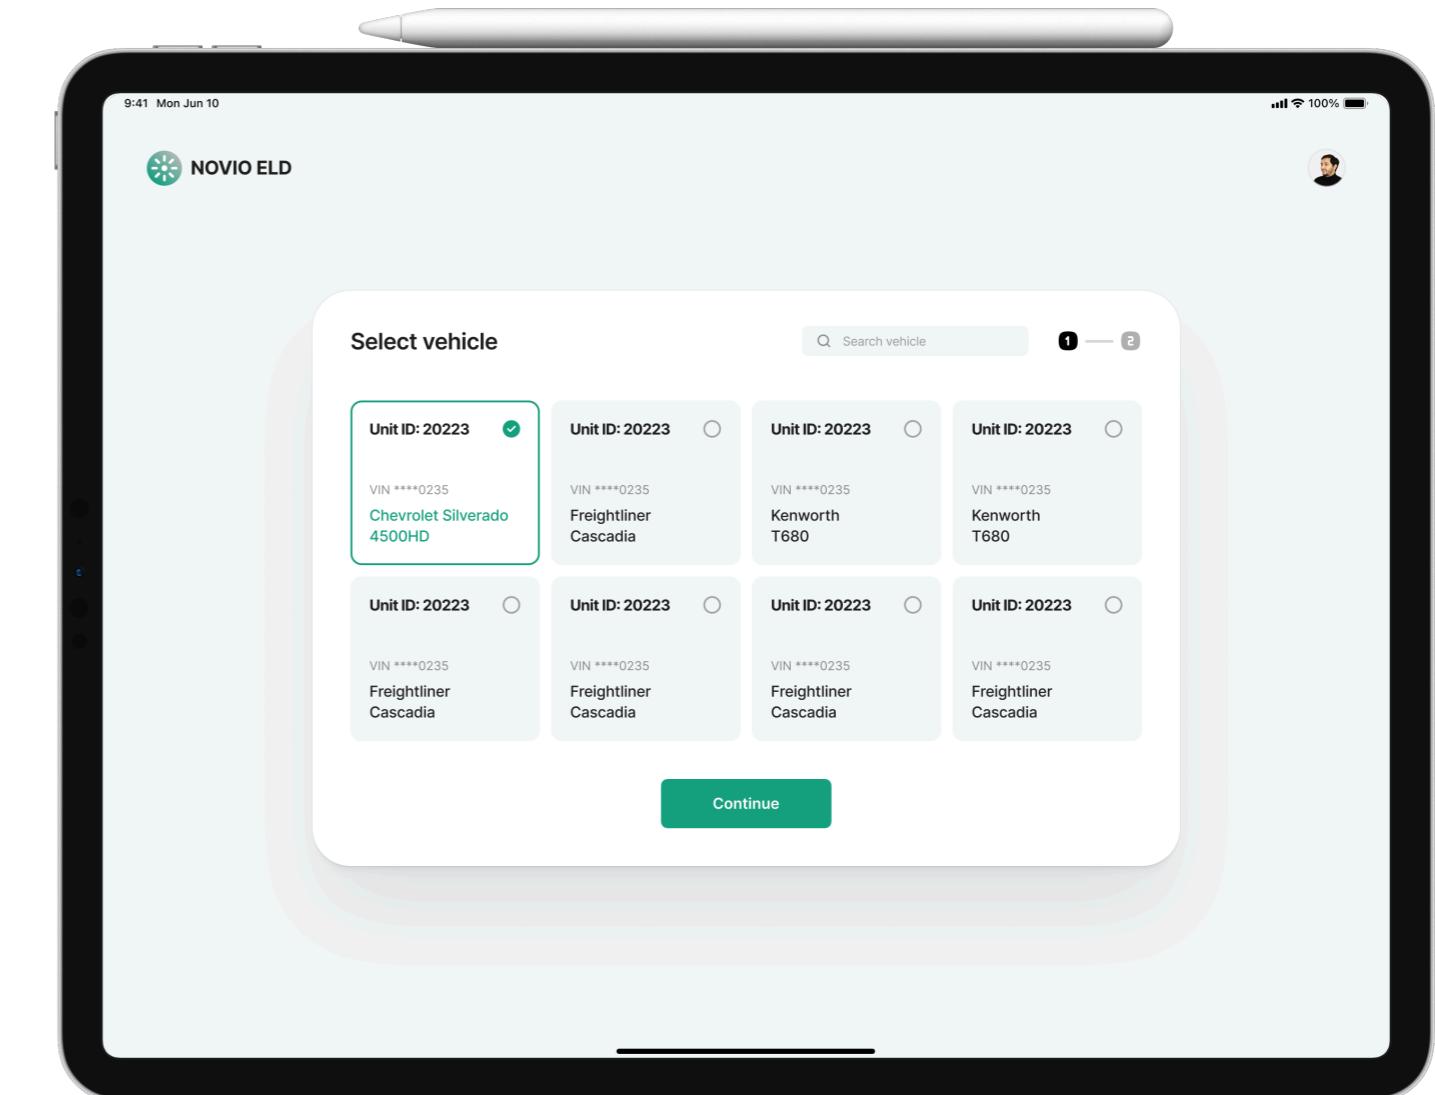

ELD connection 06

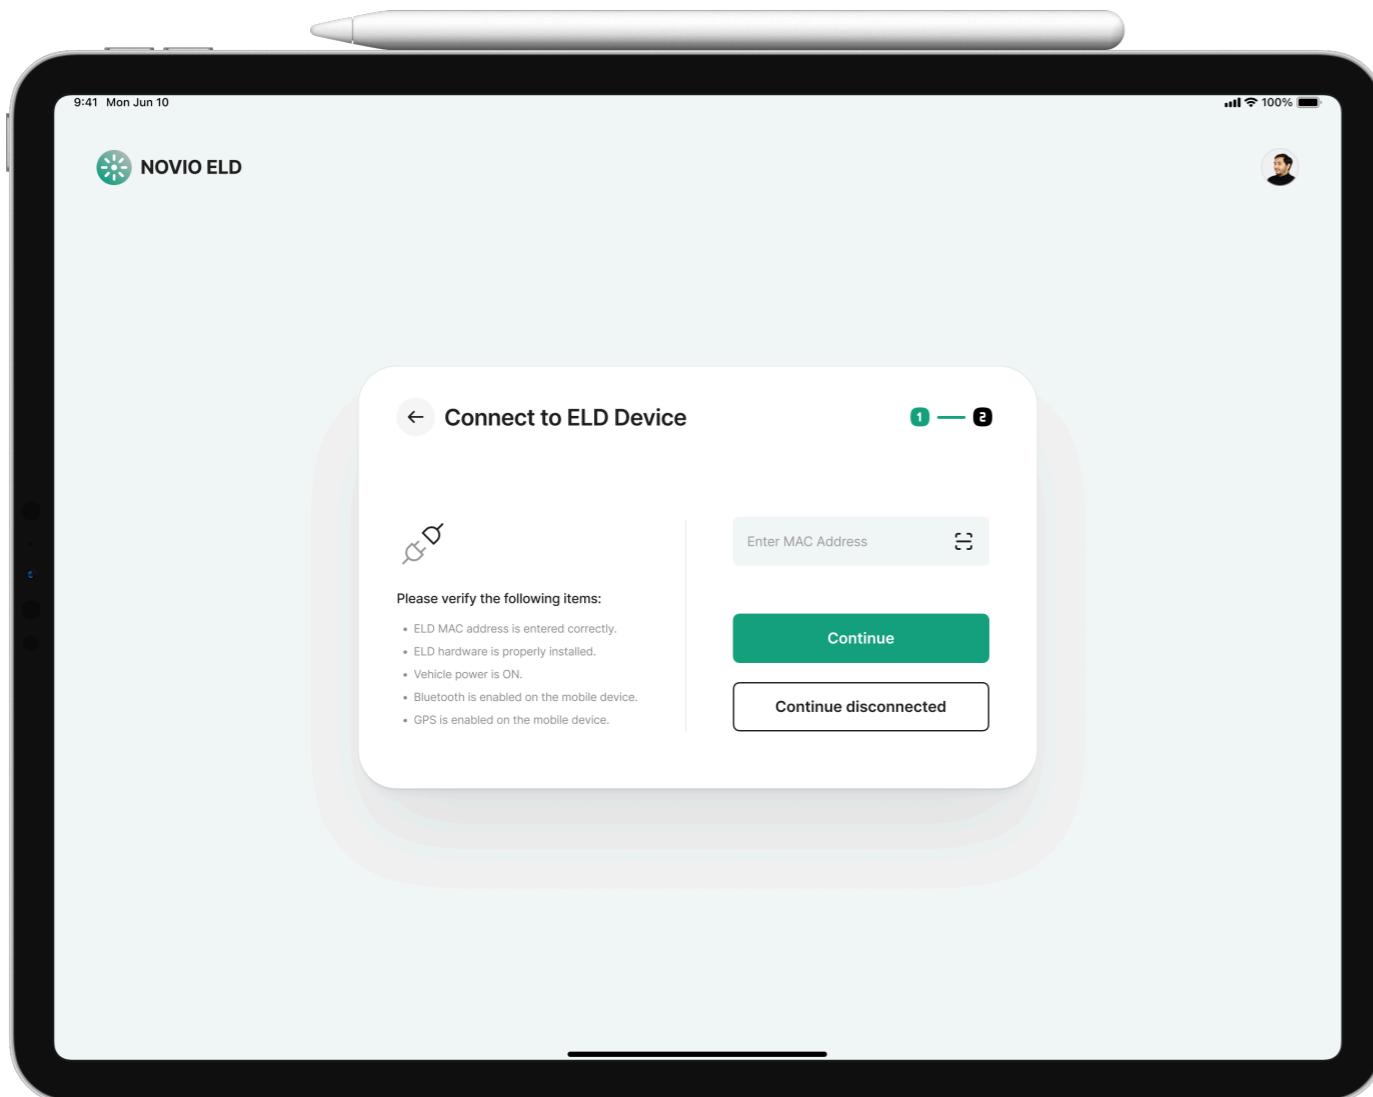


Enter ELD device MAC Address


Select your ELD device to connect. If the connection fails, troubleshooting instructions will appear. Once connected, the app will confirm visually and take you to the dashboard

Start your shift 07

When your vehicle is moving 5 mph or more, NOVIO ELD will automatically update your current duty status to DRIVING and switch the app window to Driving mode.

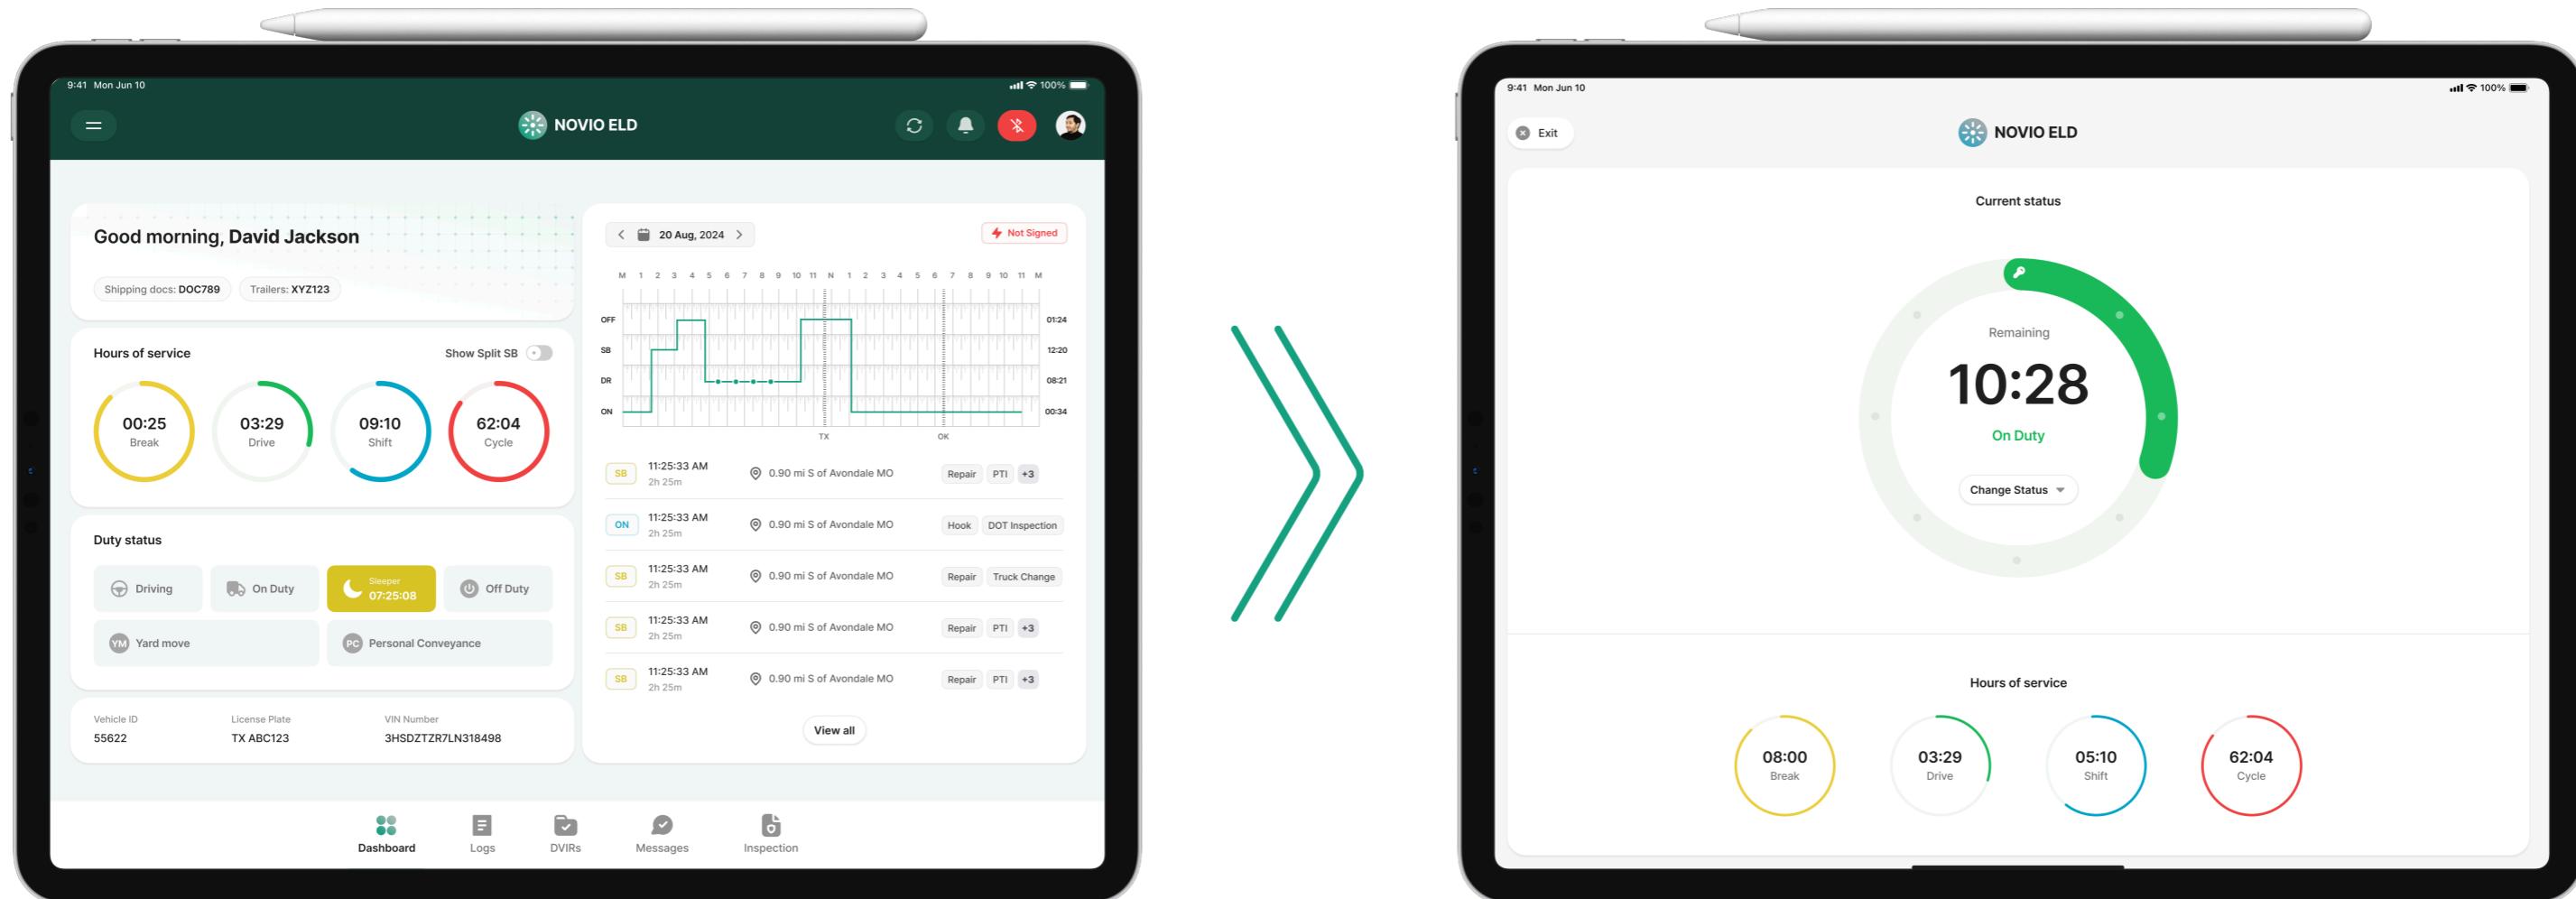

Status change 08

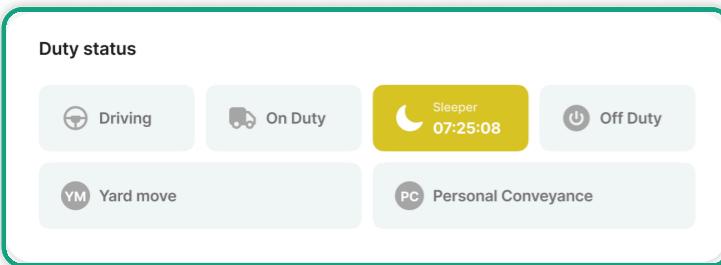


You can choose another status depending on your situation

Fill out the form and click "Update"

A screenshot of a mobile application interface showing the 'Status notes' section. It includes fields for Notes, Location, Trailers, and Document. At the bottom are 'Cancel' and 'Update' buttons.


Showing Logs to Officers 09

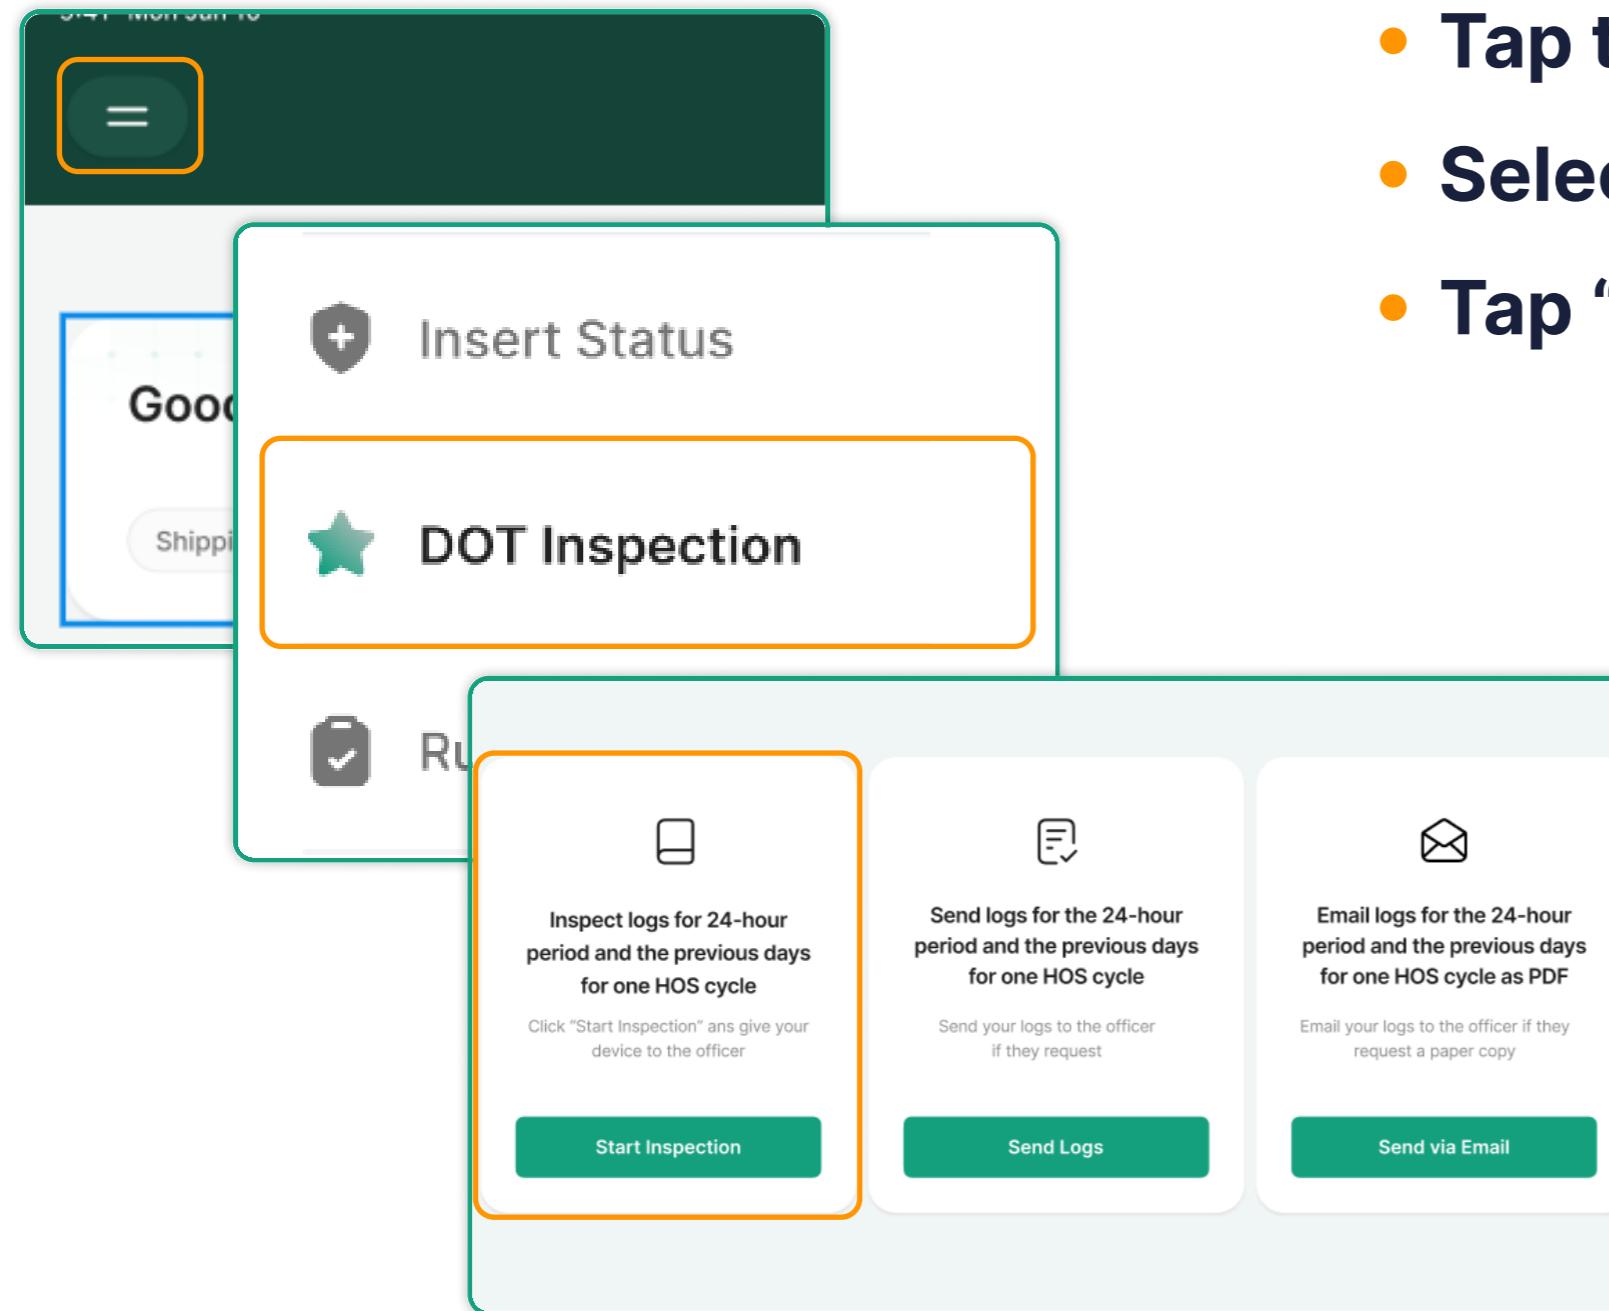


- Tap the burger menu in the top left corner
- Select “DOT Inspection”
- Tap “Start Inspection”

Inspection Preview 10

Show your 8 day summary logs to the officers

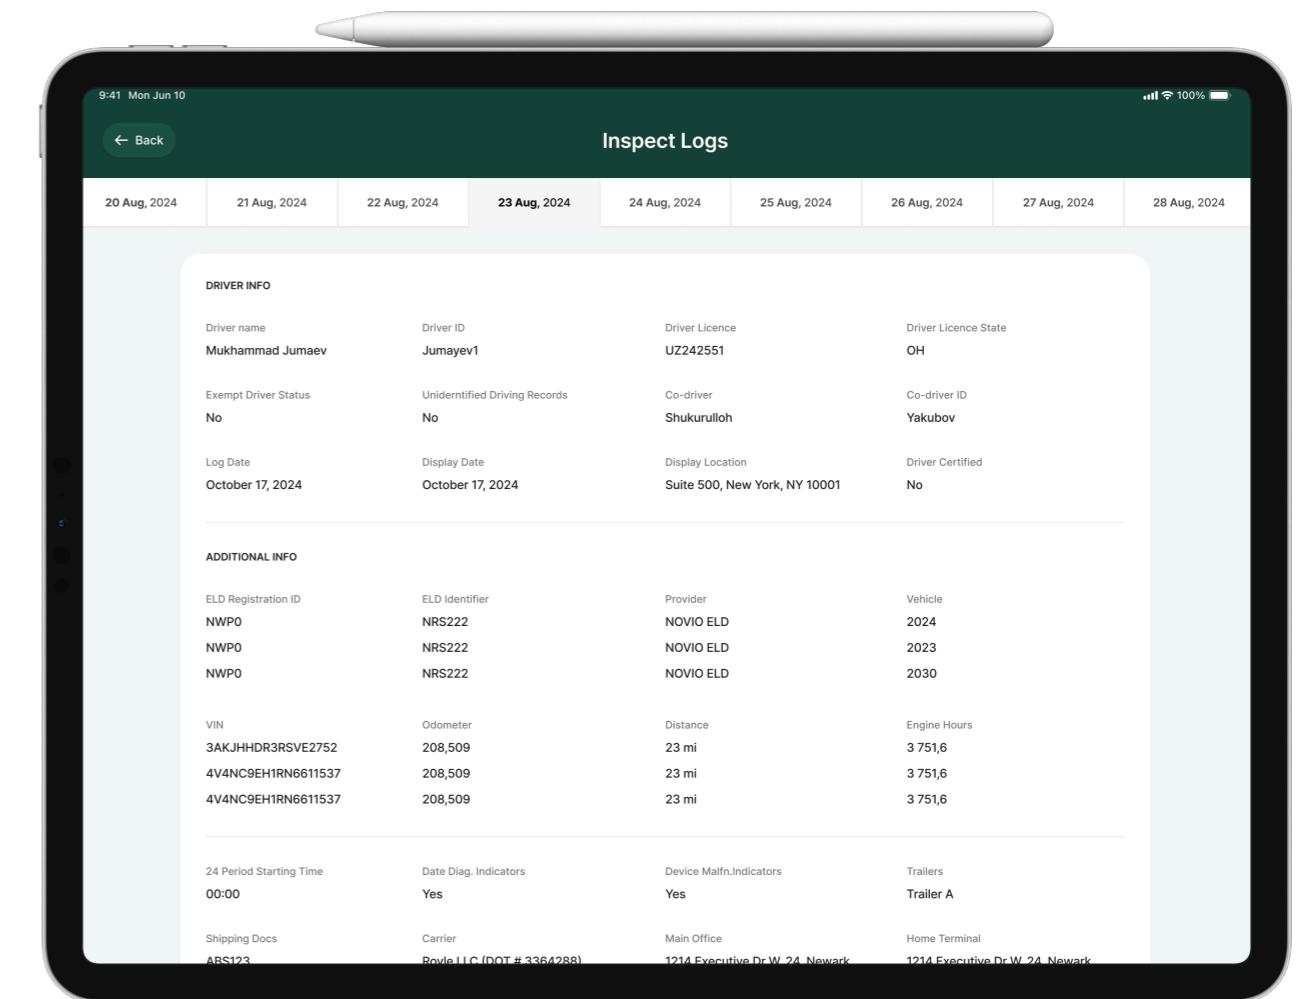


Transfer ELD records 11

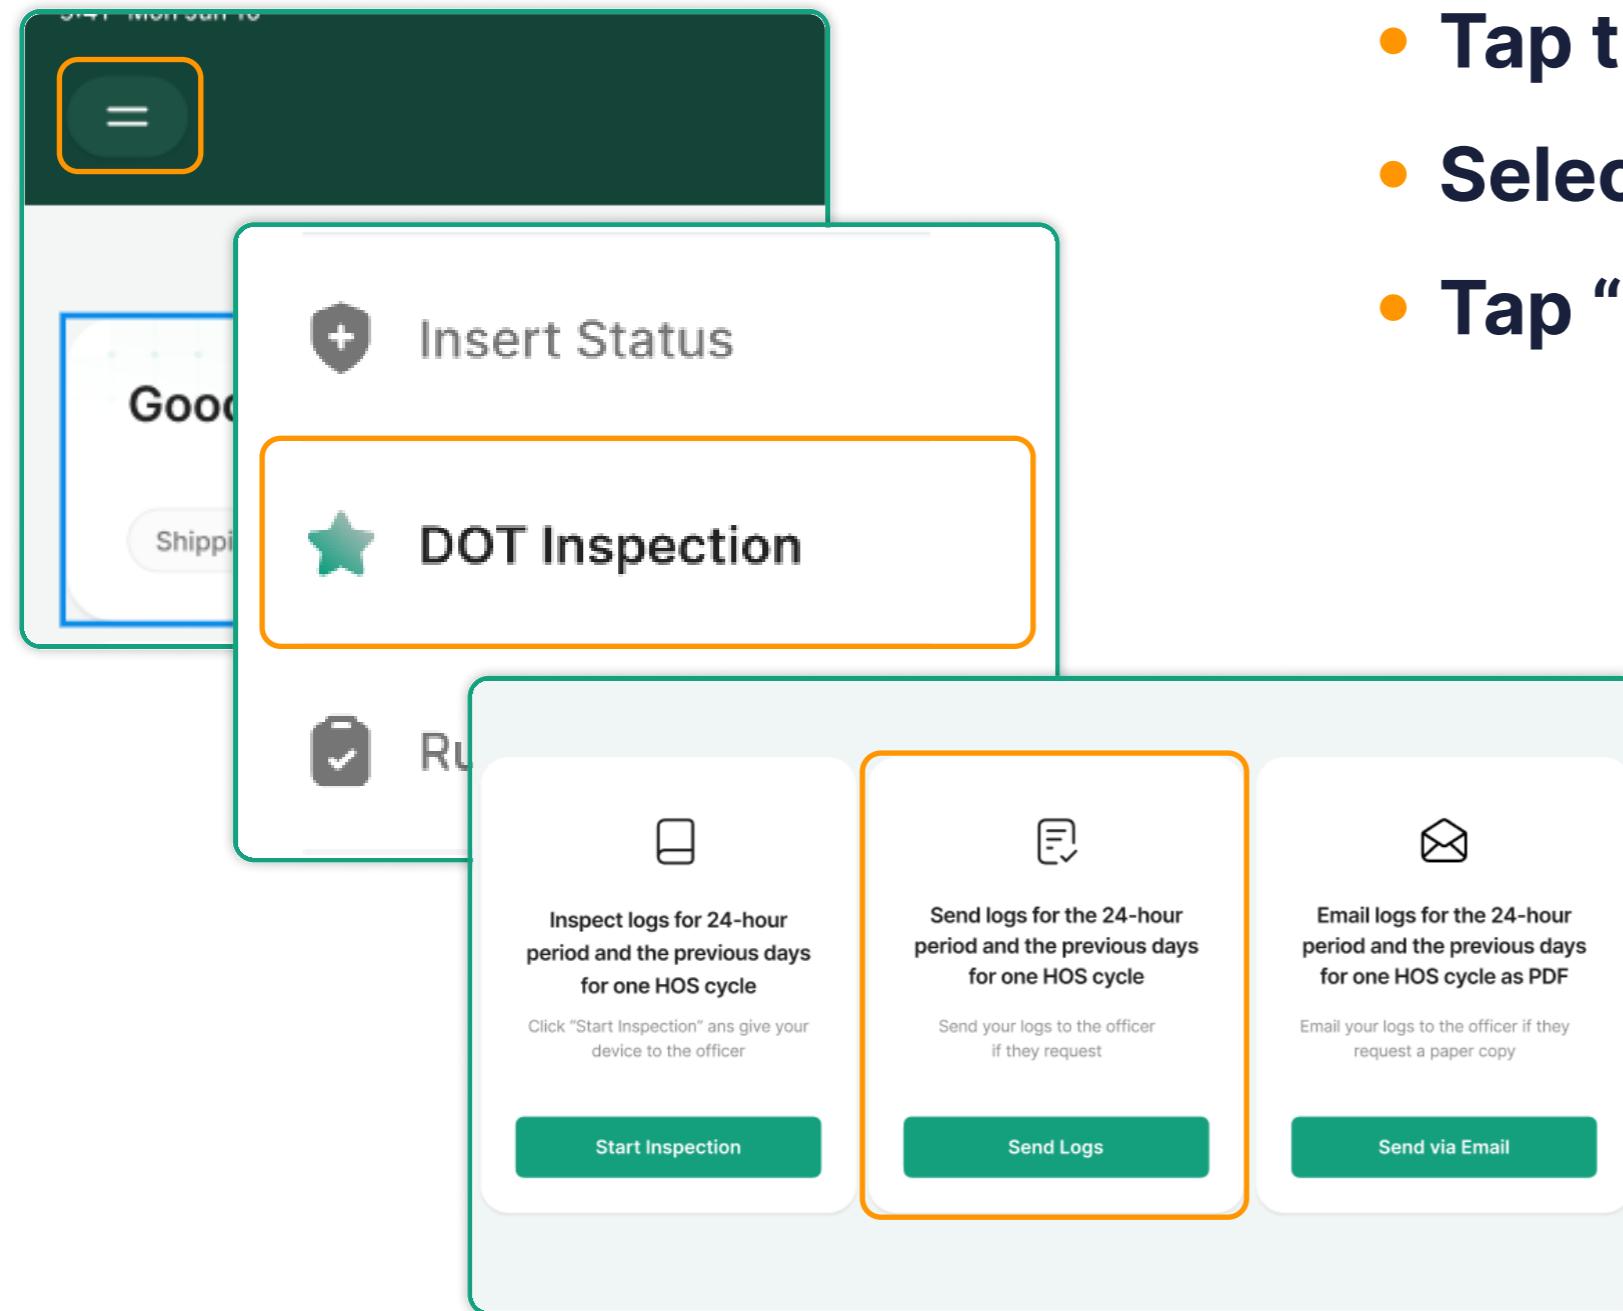


- Tap the burger menu in the top left corner
- Select “DOT Inspection”
- Tap “Send Logs”

Send Logs 12

Select transfer type and write your comment and tap “Send”

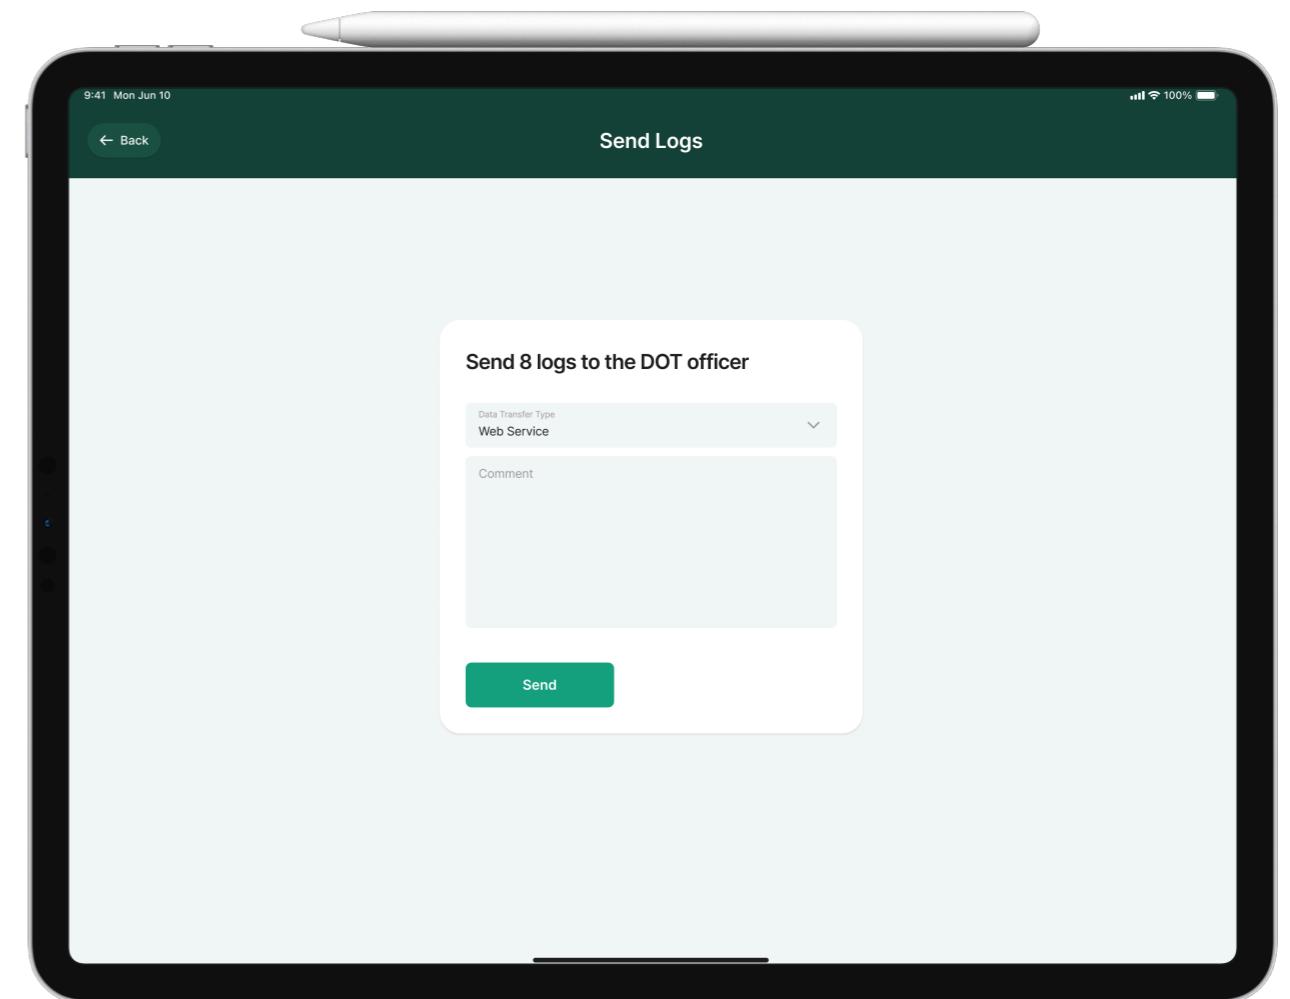


Send Logs by Email 13

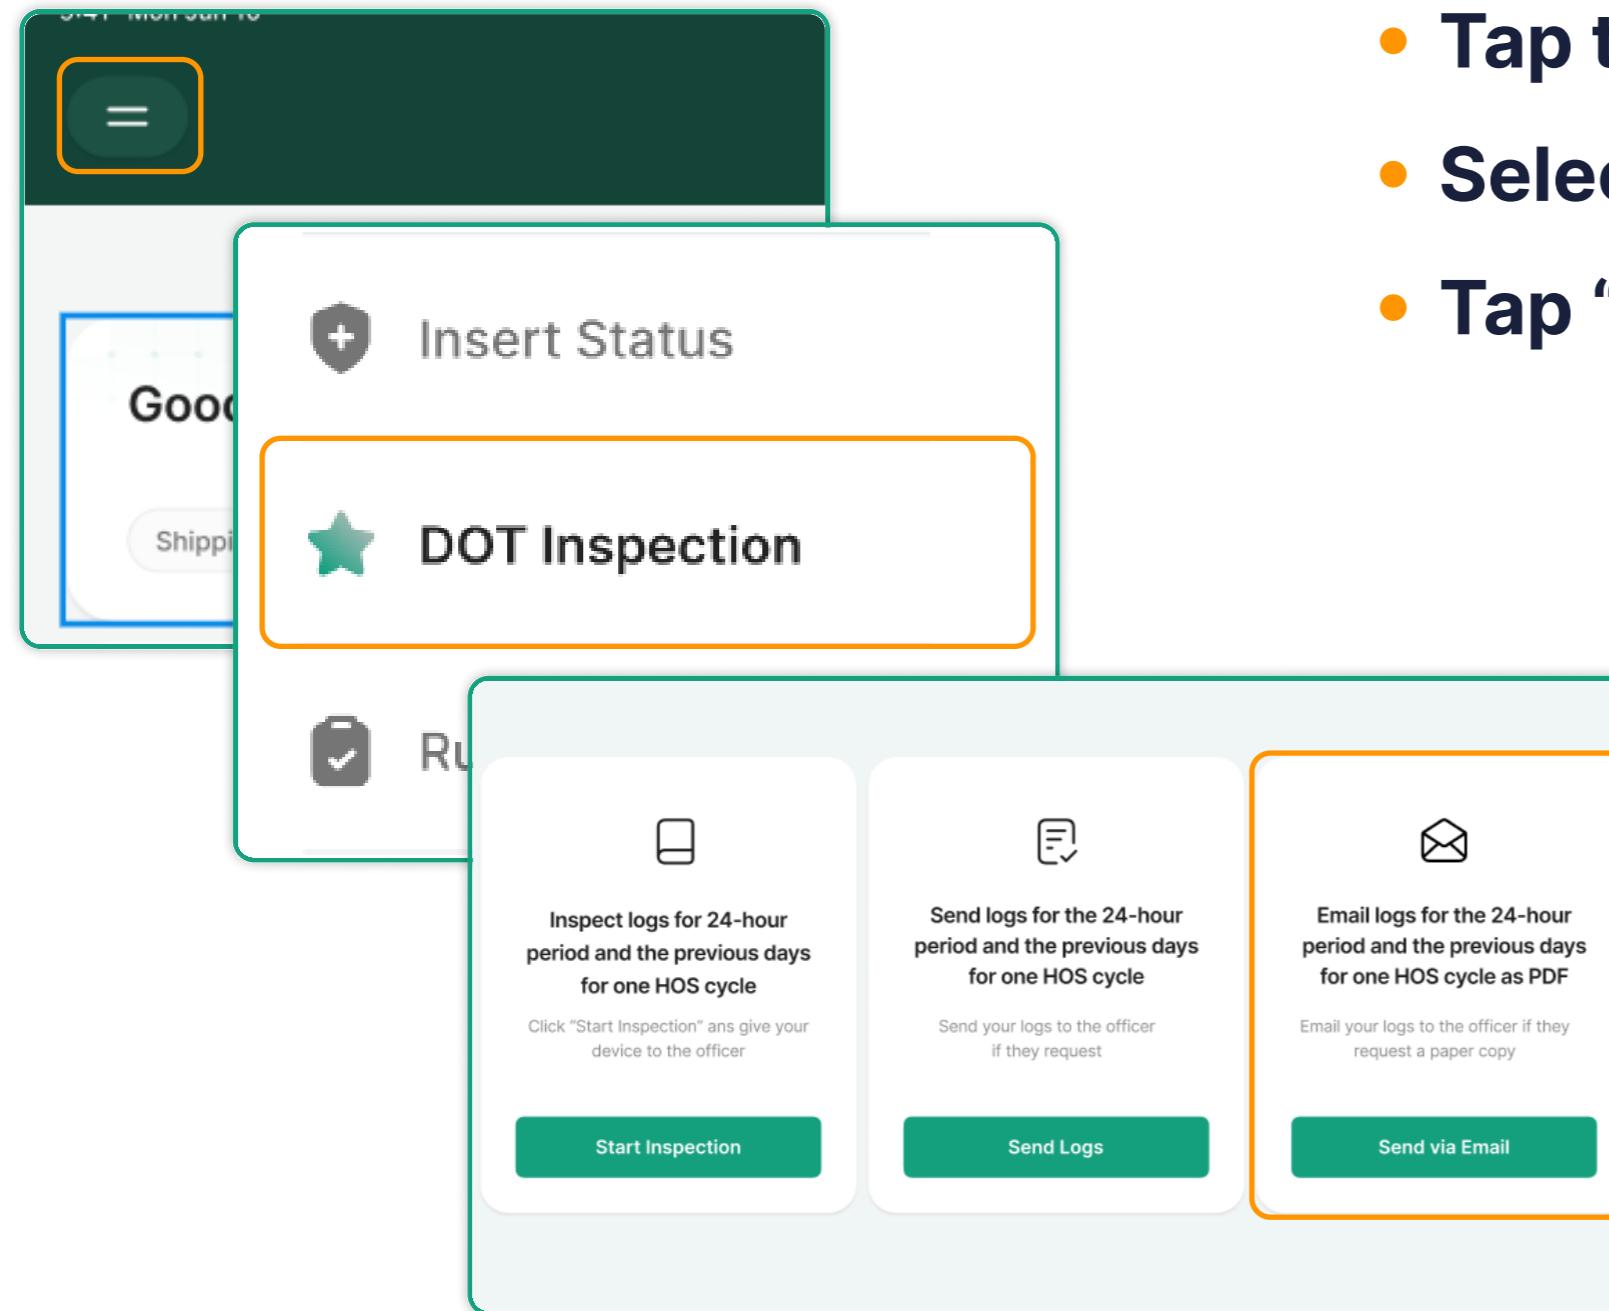

- Tap the burger menu in the top left corner
- Select “DOT Inspection”
- Tap “Send via Email”

Email Logs 14

Enter recipient's Email end tap “Send Logs” button

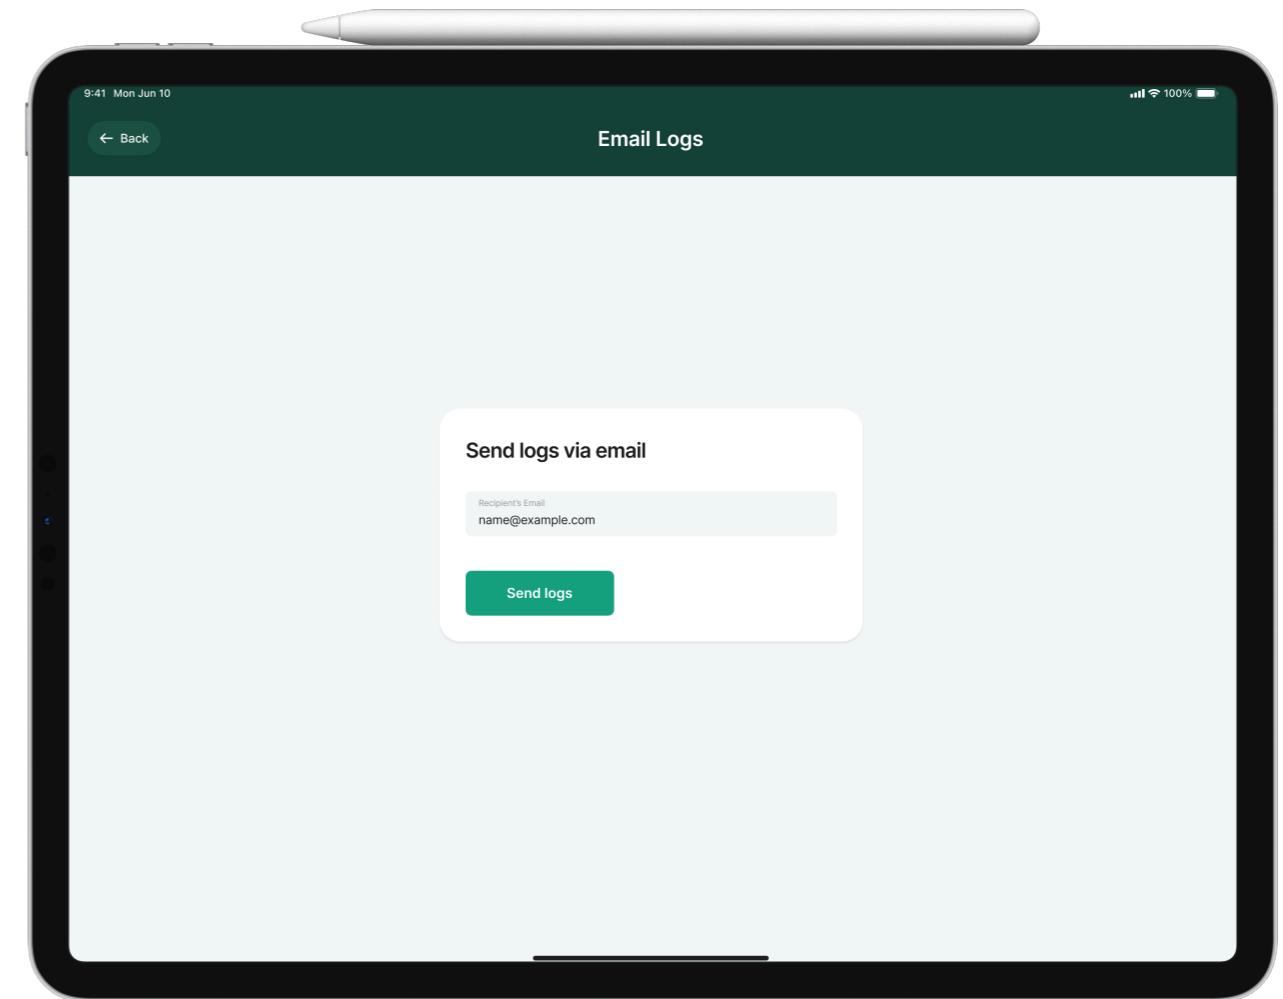

ELD Malfunctions 15

395.22 Motor carrier Responsibilities

A motor carrier must ensure that its drivers possess onboard a commercial motor vehicle and an ELD information packet containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions. The following instructions are in accordance with the guidelines set forth in 395-34

The following instructions are in accordance with the guidelines set forth in 395-34

NOVIO ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions", table 4:

- P** – “Power compliance” malfunction,
- E** – “Engine synchronization compliance” malfunction,
- T** – “Timing compliance” malfunction,
- L** – “Positioning compliance” malfunction,
- R** – “Data recording compliance” malfunction,
- S** – “Data transfer compliance” malfunction,
- O** – “Other” ELD detected malfunction.