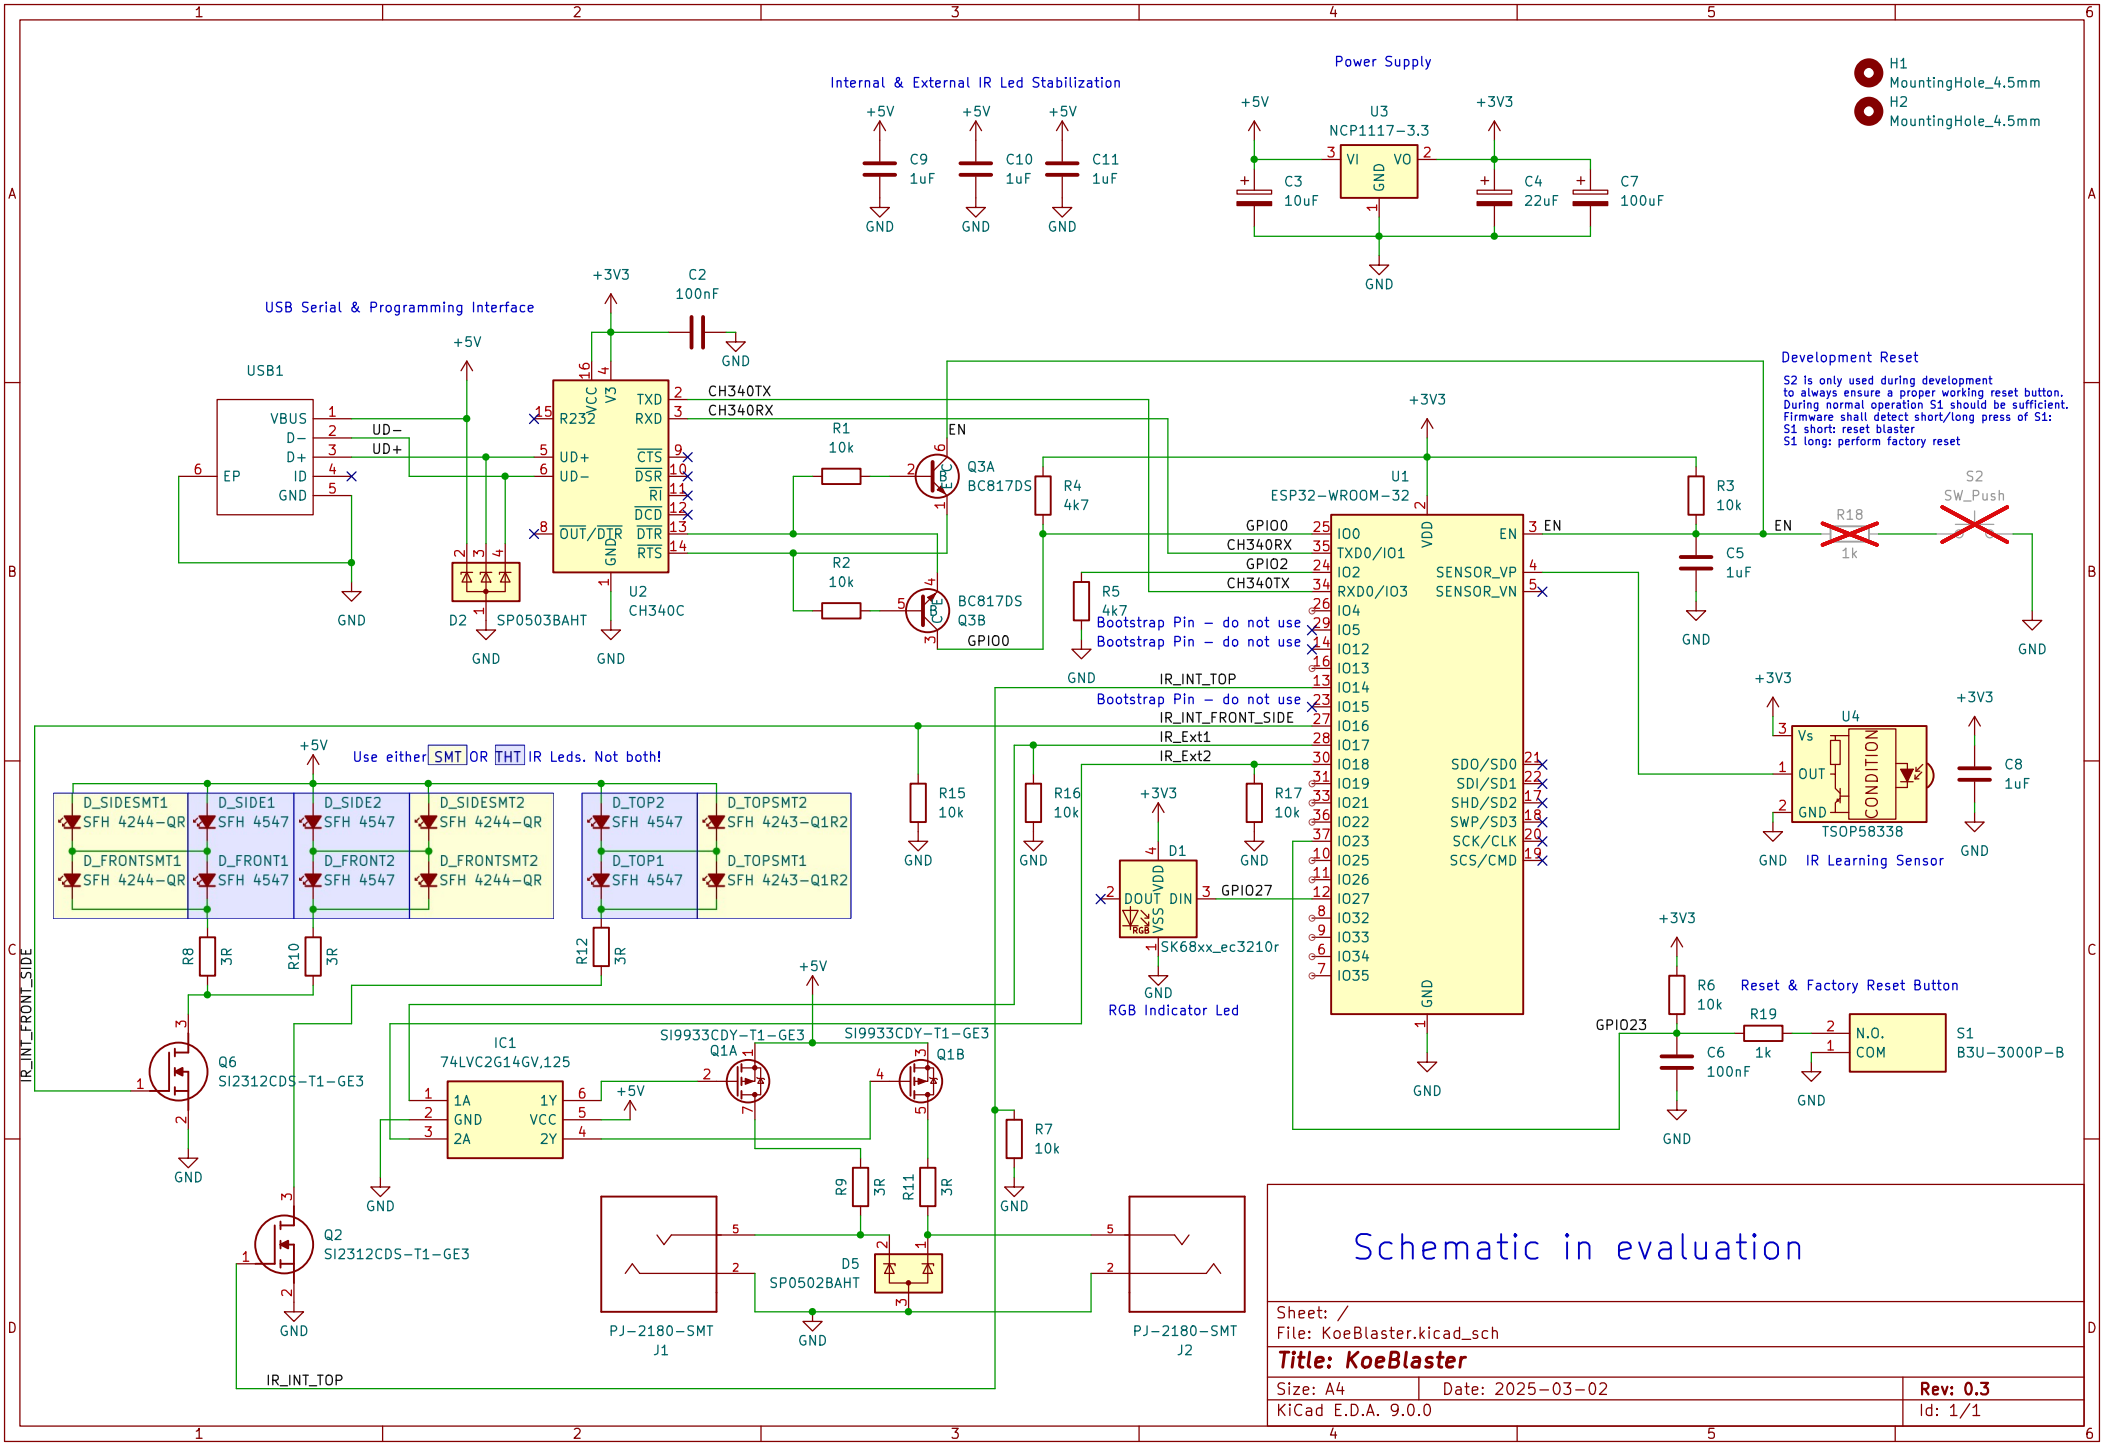

Internal & External IR Led Stabilization
Power Supply
H1
MountingHole_4.5mm
H2
MountingHole_4.5mm
USB Serial & Programming Interface
USB1
U2
CH340C
SP0503BAHT
U3
NCP1117-3.3
U1
ESP32-WROOM-32
Development Reset
S2 is only used during development
to always ensure a proper working reset button.
During normal operation S1 should be sufficient.
Firmware shall detect short/long press of S1:
S1 short: reset blaster
S1 long: perform factory reset
Use either SMT OR THT IR Leds. Not both!
D_SIDESMT1
D_SIDE1
D_SIDE2
D_SIDESMT2
D_TOP2
D_TOPSMT2
D_FRONTSMT1
D_FRONT1
D_FRONT2
D_FRONTSMT2
D_TOP1
D_TOPSMT1
SFH 4244-QR
SFH 4547
SFH 4243-Q1R2
Q6
SI2312CDS-T1-GE3
Q2
IC1
74LVC2G14GV,125
SI9933CDY-T1-GE3
Q1A
Q1B
D5
SP0502BAHT
D1
SK68xx_ec3210r
RGB Indicator Led
U4
TSOP58338
IR Learning Sensor
Reset & Factory Reset Button
S1
B3U-3000P-B
PJ-2180-SMT
J1
PJ-2180-SMT
J2
Bootstrap Pin – do not use
IR_INT_TOP
IR_INT_FRONT_SIDE
IR_Ext1
IR_Ext2
CH340TX
CH340RX
GPIO0
GPIO2
GPIO23
GPIO27
EN
Schematic in evaluation
Sheet: /
File: KoeBlaster.kicad_sch
Title: KoeBlaster
Size: A4
Date: 2025-03-02
Rev: 0.3
KiCad E.D.A. 9.0.0
Id: 1/1