HOW THE MACHINE WORKS

Large overview for the operator - fabric path and five simple operating steps

FABRIC PATH - SIDE VIEW

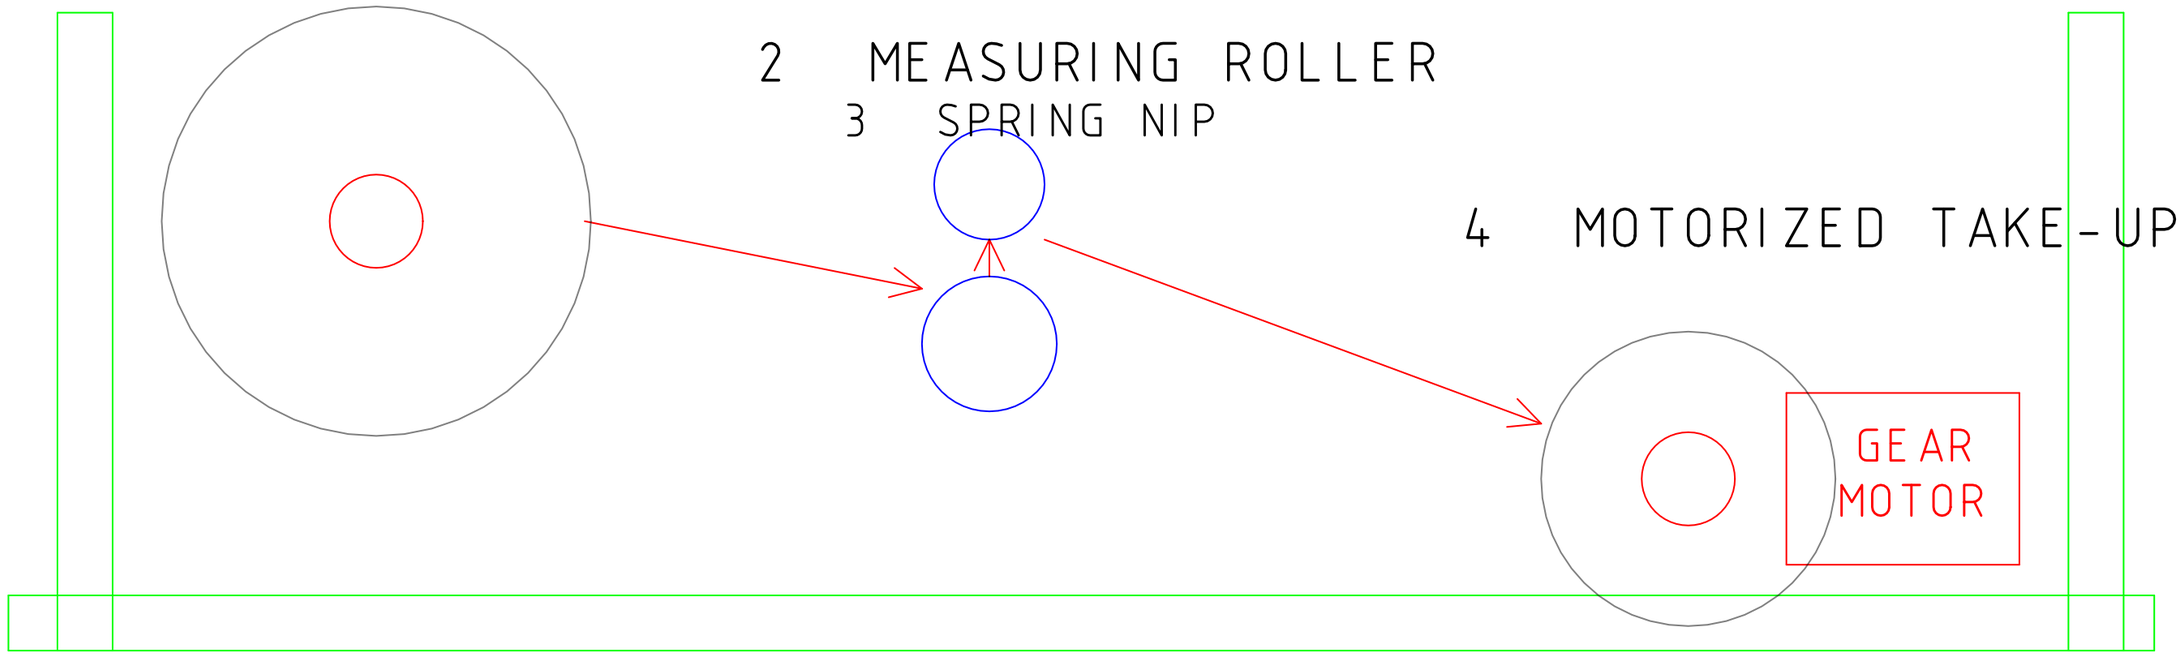

The encoder measures fabric on the rubber roller.
Roll diameter and GSM do not affect the metre reading.

1 LOAD
Full roll on supply shaft

2 THREAD
Fabric between the two rollers

3 FIX
Attach fabric to empty tube

4 RUN
Reset; hold pedal set safe speed

5 STOP
Release pedal read metres

	FABRIC METER S1 / 4	REV C A3 1:5	PROVISIONAL VERIFY FIRST