

aggj

David Coster, ...

- in which we learn how to use aggj to generate JET meshes

Probably need to do once

```
cd $SOLPSTOP/src
gtdr aggj
cd aggj
gmake clean
```

Each time:

```
--> cd $SOLPSTOP/src/aggj
--> ./aggj -s 54000 -t 60 -nx 96 -ny 36 -rx 2 -ry 1
```

..Carre executing

..Plotting mesh

Do you want to archive this mesh ? (y/n) ==>

y

..Archiving mesh

Enter a comment for the log

```
./aggj -s 54000 -t 60 -nx 96 -ny 36 -rx 2 -ry 1
```

Mesh file /home/dcoaster/solps5.0_whatever/data/meshes/jet.54000.60000.v3.96x36.geo has

```
--> plot_mesh jet.54000.60000.v3.96x36.geo
```

```
--> plot_cps jet.54000.60000.v3.96x36.ps
```


Usage: aggj -i

or

```
aggj <-s [SHOT]> <-t [TIME]> <-uid [JETUID]> <-dda [DDA]> <-depth [WIDTH]>  
    <-nx [POL.GRID]> <-ny [RAD.GRID]> <-rx [RATIOX]> <-ry [RATIOY]>
```

where

-i	= Use interactive mode to control processing
-s [SHOT]	= Shot number
-t [TIME]	= Shot time (secs)
-uid [JETUID]	= Userid name for equilibrium data
-dda [DDA]	= DDA name for equilibrium data
-nseq [NSEQ]	= Sequence number
-depth [WIDTH]	= Core width (cm) along X point to mag.axis
-nx [POL.GRID]	= Poloidal grid size
-ny [POL.GRID]	= Radial grid size
-rx [RATIOX]	= Ratio of number rows in divertor regions to number of rows in main SOL
-ry [RATIOY]	= Ratio of number of rings in private region or core to SOL

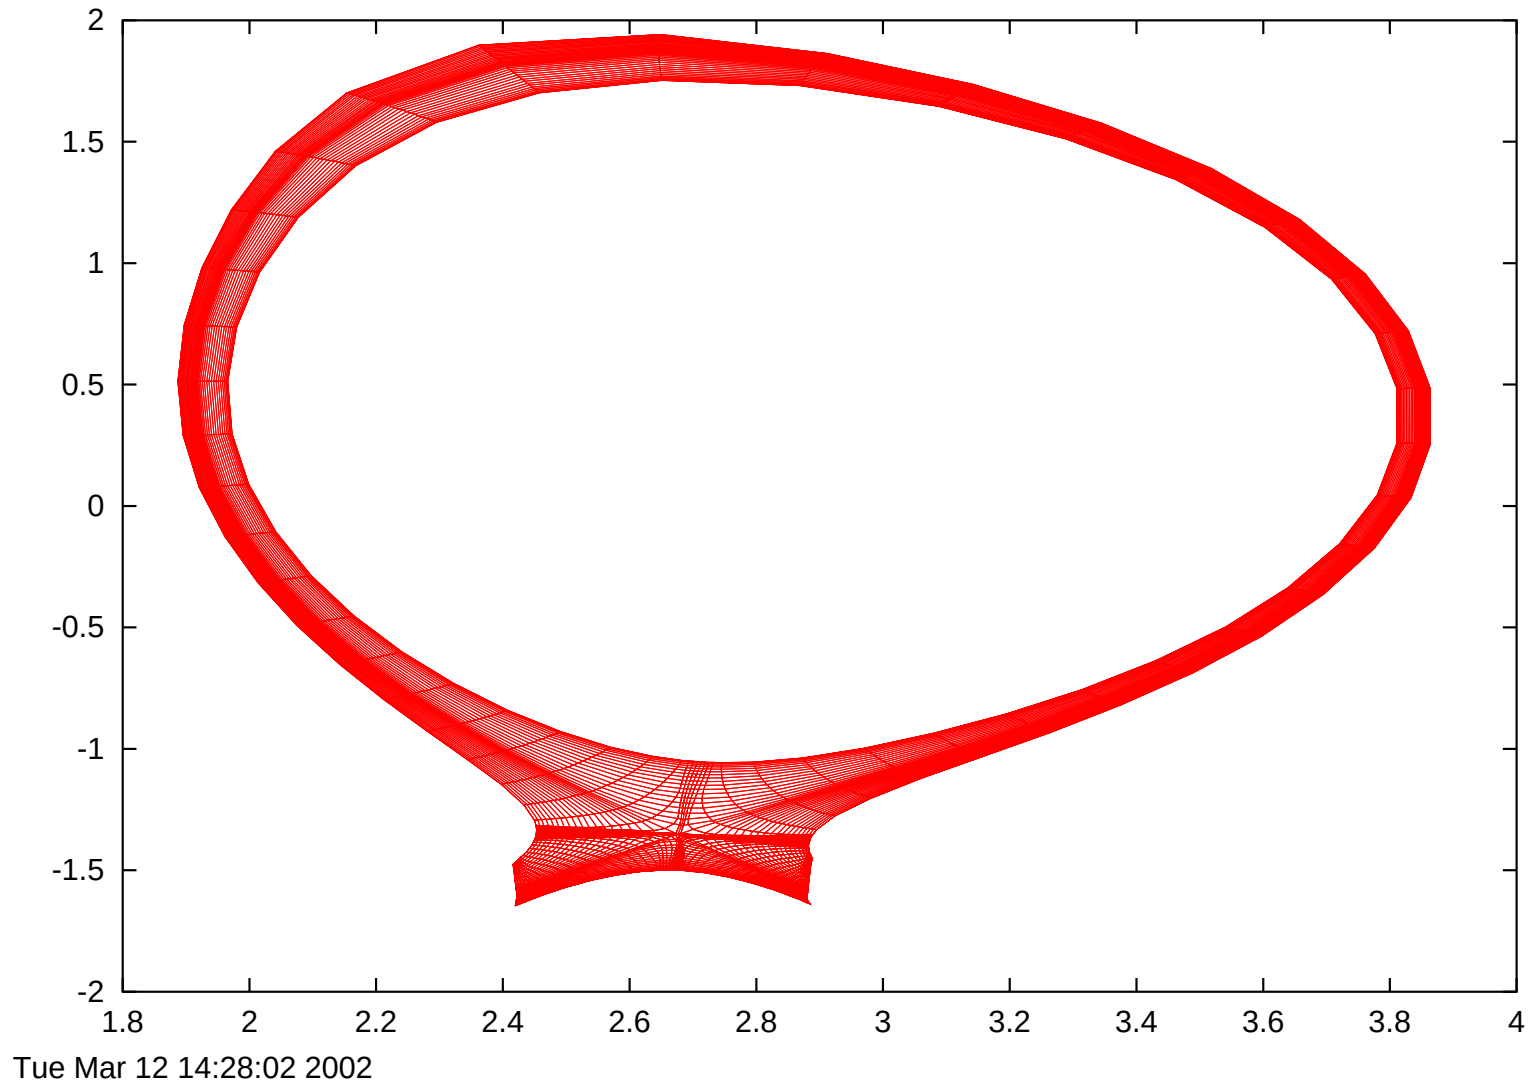

- need to use the Fujitsu compiled version of Carre
 - Portland Group version crashes [need to fix]
- supplied plot program reports error, hence need to use `plot_mesh`
 - which scales x and y independently
- can also use GRID2D to produce the grid