Raspberry Pi Bullseye Getting Started

Contents

Raspberry Pi Bullseye Getting Started 1
Raspberry Pi Install 1
RealVNC Viewer 3
TigerVNC Viewer 3
Disable Onboard Wi-Fi 4
Update Raspberry Pi OS 5
Configure Raspberry Pi OS 5
Email IP on Boot 6
Run startup_mailer.py Script on Startup 6
Wi-Fi Signal Strength 7
Signal Strength 7
Link Quality 8
Frequency 8
Find Ports with ls dev/tty 8
Filesystem Checks and Repair 8
Install Orange Pi Lite Armbian 9
Setup Armbian 10
Install Kali Linux 2.0 10
Motorola LapDock 13
Fastest Cards 13
Static IP 13

Raspberry Pi Install

1. Use Raspberry Pi Imager to Create a MicroSD card image.
    a. Choose OS: Raspberry Pi OS Bullseye
    b. Choose Storage: MicroSD adapter

c. Click the Gear at the bottom right.

d. Set hostname

e. Enable SSH → Use password authentication

f. Set username and password: pi Password01

g. Configure wireless LAN

h. Set local settings.

i. Write file to MicroSD card

2. Insert MicroSD card → turn on Pi.

3. Use an IP scanner to find the IP address.

You will need an SSH client to connect the first time.

4. Go to https://www.chiark.greenend.org.uk/~sgtatham/putty/latest.html

5. Download the **PuTTY** client.

6. Start the **PuTTY** client. Type in the **IP address** of the Pi → Click **Open**.

7. **Accept** the **PuTTY Security Alert**.

8. Login as: **pi** Password: **Password01**

9. Type: **sudo raspi-config**

    a. **Display Options** → **VNC Resolution** (Set resolution for monitor and RealVNC)

        i. **1280x1024** (pi)

        ii. **1024x768** (pi zero)

    b. **Interface Options** → **VNC** → Select **Yes.**

    c. **Interface Options** → **I2C** → Select **Yes.**

    d. **Interface Options** → **Legacy Camera Enable** → Select **Yes** (for opencv support)

    e. **Advanced Options** → **A1 Expand Filesystem**

10. Select **Finish** to reboot and resize disk.

RealVNC Viewer

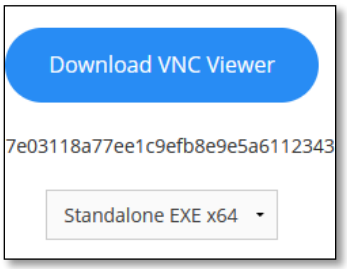

RealVNC viewer allows us to remotely control the Pi in headless mode over the network. Headless mode is when there isn't a keyboard, video, or mouse.

1. Go to https://www.realvnc.com/en/connect/download/viewer/
2. Download the VNC Viewer Standalone EXE anywhere you want to run the program from. You don't have to install it.
3. Double Click **VNC Viewer**.
4. Type in the IP address of your Pi → Click **Connect**.

Uncomment the following:

```
# Edit the config.txt file
sudo nano /boot/config.txt

hdmi_force_hotplug=1
hdmi_group=2
hdmi_mode=51
```

Add **video=HDMI-A-1:1280x720@60D** followed by a single space to the beginning of sudo nano /boot/cmdline.txt (keep everything all on 1 line).

```
# Edit the cmdlilne.txt file
sudo nano /boot/cmdline.txt

video=HDMI-A-1:1280x720 @60D
```

If RealVNC doesn't work, try TigerVNC.

TigerVNC Viewer

You can remote control the GoPiGo3 in headless mode.

1. https://sourceforge.net/projects/tigervnc/
2. Download the latest vncviewer64 exe.
3. This is a self executing program, it does not need an installation
4. Double Click the downloaded file.

5. Type in the IP address of your robot → Click **Connect**.
6. If the desktop is not display, you may need to connect with PuTTY. Use **sudo reboot** to restart the Pi.

Uncomment the following in your /boot/config.txt file.

```
# Edit the config.txt file
sudo nano /boot/config.txt

hdmi_force_hotplug=1
hdmi_group=2
hdmi_mode=51
```

Add **video=HDMI-A-1:1280x720@60D** followed by a single space to the beginning of /boot/cmdline.txt (keep everything all on 1 line).

```
# Edit the cmdline.txt file
sudo nano /boot/cmdline.txt

video=HDMI-A-1:1280x720@60D
```

Disable Onboard Wi-Fi

Any external Wi-Fi antenna will have better signal strength and range. To use an external Wi-Fi antenna only, disable the internal Wi-Fi.

```
# Edit this file with nano
sudo nano /boot/config.txt
# Add this line to the end of the file and save it
dtoverlay=disable-wifi
```

After you have disabled the on-board Wi-Fi, you must always plug a Wi-Fi adapter into a USB port.

Edit the following file if you wish to setup more than one wifi SSID. If there is more than SSID in range, priority=5 sets 'YourSSID' over priority=4 for 'YourOtherSSID' If they are not in range of each other, make them both 1.

sudo nano /etc/wpa_supplicant/wpa_supplicant.conf

```
ctrl_interface=DIR=/var/run/wpa_supplicant GROUP=netdev
update_config=1
country=US

network={
      ssid="YourSSID"
      psk="YourPSK"
      priority=1
}
network={
      ssid="YourOtherSSID"
      psk="YourOtherPSK"
      priority=1
}
```

1. **CTRL+O** (Writes the file)
2. **Enter** to finish saving the file.
3. **CTRL+X** (Exit nano)

The pi will automatically connect to whichever wireless network is closer and has better signal. You can add as many wireless networks to this file as you wish.

Update Raspberry Pi OS

At a terminal:

```
# Update the apt package list
sudo apt update
# Upgrade all packages -y no prompt
sudo apt dist-upgrade -y
# Remove any packages that are not needed
sudo apt autoremove
```

Configure Raspberry Pi OS

1. Right Click Desktop → **Desktop Preferences** → **Layout**: No image
    a. Colour: Choose a colour you like.
2. **Change Clock Display:** Right Click Clock, Digital Clock Settings
    a. Clock Format: **%I:%M %p**

3. **Add Temperature Monitor:** Right Click Task Bar → Panel Settings → Panel Applets tab.
    a. **Add** → **Temperature Monitor** → **Add**.
    b. Click **Up** to move the Temperature Monitor to the left on the taskbar.
    c. Click **Preferences**.
        i. **Normal color**: **#00008b** (Dark blue)
        ii. **Warning1 temperature**: 70
        iii. **Warning2 temperature**: 90

Email IP on Boot

1. Create a Code folder → **home/pi/Code**
2. Copy **startup_mailer.py** to this folder
3. Open a terminal.
4. Type in the following to make the script executable.

```
sudo chmod 733 /home/pi/Code/startup_mailer.py
```

5. There should not be any errors if the command was successful.
6. Test the script with the following command.

```
python3 /home/pi/Code/startup_mailer.py
```

7. In a few moments, you should receive an email with your Raspberry Pi IP address.

Run startup_mailer.py Script on Startup

1. At the terminal, type in the following command to access the Raspbian scheduler. (Don't add sudo)

```
crontab -e
```

2. Press **Enter** to edit the file with nano.
3. Cursor to the bottom of the file. (The mouse will not work.)
4. Enter the following information. (**sleep 15** waits 15 seconds after startup to run the script.)

```
@reboot sleep 15 && python3 /home/pi/Code/startup_mailer.py
```

5. Type **CTRL+S** to Save the file.
6. Press **CTRL+X** to Exit nano.
7. Type **sudo reboot**
8. You should receive an email with your IP address.

Wi-Fi Signal Strength

The **iwconfig** command will give you a snapshot of Wi-Fi quality.

wavemon will monitor Wi-Fi signal strength in real time.

```
# Install wavemon
sudo apt install wavemon -y
# Run wavemon
wavemon
# Quit wavemon
q
```

iwconfig

sudo iwlist wlan0 scan | egrep "Cell|ESSID|Signal|Rates"

Signal Strength

The higher the signal strength, the more reliable the connection and higher speeds are possible. The signal strength is specified as -dBm (decibels related to one milliwatt).

Values between 0 and -100 are possible, with more being better. -51 dBm is a better signal strength than -60 dBm.

The value 0 is not realistic. Even -30 dBm is hard to reach, and you must stand almost directly next to the access point.

Some guidance on how to read the results:

- -50 dBm is considered an excellent signal strength.
- -67 dBm is said to be the minimum signal strength for reliable and relatively fast packet delivery.
- -70 dBm is the minimum signal strength for reliable packet delivery.

- -80 dBm is the minimum value for a basic connection. However, packet delivery is no longer necessarily reliable.
- -90 dBm is already very close to the basic noise. Here a connection probably does not work anymore.

Link Quality

A network can have very good signal strength without good link quality.

This is how much of the data you send and receive will make it to the destination in good condition.

The quality indicator includes data like Bit Error Rate (BER), i.e., the number of bit errors in received bits that have been altered due to noise, interference, distortion, or bit synchronization errors. Others are Signal-to-Noise and Distortion Ratio (SINAD).

It is measured in percentage or on a scale of up to 70. So you will see a value like "60/70".

Unlike signal strength, it is somewhat harder to say which values are still considered to be ok.

If the value is low and your signal strength is high, you may have interference from, e.g., kitchen appliances or other electronic devices. Moving them further away may improve the link quality.

Frequency

Another interesting indicator is the Wi-Fi frequency.

This shows if your Raspberry Pi connects to the slower and longer range 2.4 GHz network, or the faster but shorter range 5 GHz version, provided, of course, that your router offers both networks.

Find Ports with ls dev/tty

Pi serial port is ttyAMA0

```
sudo ls /dev/tty*
```

This will list all of the terminal interfaces

Filesystem Checks and Repair

The Linux filesystem can be damaged under various circumstances, e.g., system crash, power loss, disconnected disk, accidentally overwritten i-node, etc. Thus it is a good idea to check the integrity of the filesystem regularly to minimize the risk of filesystem corruption.

The Linux filesystem can be damaged under various circumstances, e.g., system crash, power loss, disconnected disk, accidentally overwritten i-node, etc. It is a good idea to check the integrity of the filesystem regularly to minimize the risk of filesystem corruption. Add the following to `/boot/cmdline.txt`:

```
fsck.mode=force
```

Make sure that file remains all one line. Parameters should be separated with spaces.

You'll probably notice `fsck.repair=yes` is already there; these are not the same thing. From `man systemd-fsck` (these are parameters that are passed on by the kernel to init, i.e., systemd):

fsck.mode=

One of "auto", "force", "skip". Controls the mode of operation. The default is "auto", and ensures that file system checks are done when the file system checker deems them necessary. "force" unconditionally results in full file system checks. "skip" skips any file system checks.

fsck.repair=

One of "preen", "yes", "no". Controls the mode of operation. The default is "preen", and will automatically repair problems that can be safely fixed. "yes " will answer yes to all questions by fsck and "no" will answer no to all questions.

To do a filesystem check on the next reboot, do the following

```
sudo touch /forcefsck
```

Once you create an empty file named `forcefsck` in the root directory, it will force filesystem check the next time you boot up. After successful booting, `/forcefsck` will automatically be removed.

An alternative is to shut down the system with the `-F` option like this:

```
sudo shutdown -r -F now
```

Install Orange Pi Lite Armbian

http://www.armbian.com/orange-pi-lite/ Install image

https://docs.armbian.com/ Documentation

To connect, use USB Ethernet adapter

1. Download armbian Buster desktop

2. Logon: root Password: 1234
3. Change root password: Password01
4. Choose bash shell
5. Create new account: pi Password01
6. sudo apt update
7. sudo apt dist-upgrade -y

Setup Armbian

To Install VNC

```
sudo apt install x11vnc
```

To create a password file

```
x11vnc -storepasswd
```

The service script : /lib/systemd/system/x11vnc.service

```
[Unit]
Description="x11vnc"
Requires=display-manager.service
After=lightdm.service

[Service]
ExecStart=/usr/bin/x11vnc -auth guess -loop -forever -safer -shared -
ultrafilexfer -bg -o /var/log/x11vnc.log
ExecStop=/usr/bin/killall x11vnc

[Install]
WantedBy=multi-user.target
```

Enable the service script

```
sudo systemctl daemon-reload
sudo systemctl enable x11vnc
sudo systemctl start x11vnc
```

Connect to Wlan0

Install Kali Linux 2.0

1. Install gparted: apt-get install gparted
2. Enter gparted at the command line. Use gparted to expand the partition to the whole drive.

3. **Install package:**
    a. apt update
    b. apt install kali-linux-full
4. **Normal update:**
    a. apt update
    b. sudo apt upgrade
5. Remove unneeded packages: apt autoremove
6. Fix update: apt-get update –fix-missing

kali-linux-full

When you download a Kali Linux ISO, you are essentially downloading an installation that has the ***kali-linux-full*** metapackage installed. This package includes all of the tools you are familiar with in Kali.
Installation Size: 9.0 GB

kali-linux

The ***kali-linux*** metapackage is a completely bare-bones installation of Kali Linux and includes various network services such as Apache and SSH, the Kali kernel, and a number of version control applications like git, svn, etc. All of the other metapackages listed below also contain ***kali-linux***.
Installation Size: 1.5 GB

kali-linux-all

In order to keep our ISO sizes reasonable, we are unable to include every single tool that we package for Kali and there are a number of tools that are not able to be used depending on hardware, such as various GPU tools. If you want to install every available Kali Linux package, you can install the ***kali-linux-all*** metapackage.
Installation Size: 15 GB

kali-linux-top10

In Kali Linux, we have a sub-menu called "Top 10 Security Tools". The ***kali-linux-top10*** metapackage will install all of these tools for you in one fell swoop.
Installation Size: 3.5 GB

kali-linux-forensic

If you are doing forensics work, you don't want your analysis system to contain a bunch of unnecessary tools. To the rescue comes the ***kali-linux-forensic*** metapackage, which only contains the forensics tools in Kali.
Installation Size: 3.1 GB

kali-linux-gpu

GPU utilities are very powerful but need special hardware in order to function correctly. For this reason, they are not included in the default Kali Linux installation but you can install them all at once with ***kali-linux-gpu*** and get cracking.
Installation Size: 4.8 GB

kali-linux-pwtools

The ***kali-linux-pwtools*** metapackage contains over 40 different password cracking utilities as well as the GPU tools contained in ***kali-linux-gpu***.
Installation Size: 6.0 GB

kali-linux-rfid

For our users who are doing RFID research and exploitation, we have the ***kali-linux-rfid*** metapackage containing all of the RFID tools available in Kali Linux.
Installation Size: 1.5 GB

kali-linux-sdr

The ***kali-linux-sdr*** metapackage contains a large selection of tools for your Software Defined Radio hacking needs.
Installation Size: 2.4 GB

kali-linux-voip

Many people have told us they use Kali Linux to conduct VoIP testing and research so they will be happy to know we now have a dedicated ***kali-linux-voip*** metapackage with 20+ tools.
Installation Size: 1.8 GB

kali-linux-web

Web application assessments are very common in the field of penetration testing and for this reason, Kali includes the ***kali-linux-web*** metapackage containing dozens of tools related to web application hacking.
Installation Size: 4.9 GB

kali-linux-wireless

Like web applications, many penetration testing assessments are targeted towards wireless networks. The ***kali-linux-wireless*** metapackage contains all the tools you'll need in one easy to install package.
Installation Size: 6.6 GB

Motorola LapDock

Default resolution for Motorola LapDock: 1366x768

Connect to the IP address with VNC Viewer. Username: pi Password: raspberry

Insert HDMI cable with lid open to power up Pi.

Fastest Cards

Samsung Evo+, SanDisk Extreme

Static IP

We now need to plug this information into the Pi's network configuration file using a text editor. I always use nano text editor. . .

sudo nano /etc/network/interfaces

Simply change the line that reads:

iface eth0 inet dhcp to **iface eth0 inet static**

Then directly below this line enter the following (Please Note. **You will need your own addresses we gathered in Part B, more details below**). . . .

address 192.168.9.30
netmask 255.255.255.0
network 192.168.9.0
broadcast 192.168.9.255
gateway 192.168.9.1

CTRL X to save and exit