

RELION® PROTECTION AND CONTROL

REX615

Quick installation guide



Copyright

ABB is the owner of the copyright in this document. This document or any parts thereof must not be reproduced or copied without the written permission from ABB and the contents thereof must not be used to any unauthorized purpose.

The software or hardware described in this document is furnished under a license and may be used, copied, or disclosed only in accordance with the terms of such license.

Trademarks

ABB and Relion are registered trademarks of the ABB Group. All other brand or product names mentioned in this document may be trademarks or registered trademarks of their respective holders.

Open Source Software

This product contains open source software. For license information refer to product documentation at www.abb.com.

Warranty

Please inquire about the terms of warranty from your nearest ABB representative.
www.abb.com/mediumvoltage

Note

The equipment can be opened by authorized personnel only. If this practice is not followed, the warranty expires.

<http://www.abb.com/mediumvoltage>

Disclaimer

The data, examples and diagrams in this manual are included solely for the concept or product description and are not to be deemed as a statement of guaranteed properties. All persons responsible for applying the equipment addressed in this manual must satisfy themselves that each intended application is suitable and acceptable, including that any applicable safety or other operational requirements are complied with. In particular, any risks in applications where a system failure and/or product failure would create a risk for harm to property or persons (including but not limited to personal injuries or death) shall be the sole responsibility of the person or entity applying the equipment, and those so responsible are hereby requested to ensure that all measures are taken to exclude or mitigate such risks.

This product has been designed to be connected and communicate data and information via a network interface which should be connected to a secure network. It is the sole responsibility of the person or entity responsible for network administration to ensure a secure connection to the network and to take the necessary measures (such as, but not limited to, installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product and the network, its system and interface included, against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. ABB is not liable for any such damages and/or losses.


This document has been carefully checked by ABB but deviations cannot be completely ruled out. In case any errors are detected, the reader is kindly requested to notify the manufacturer. Other than under explicit contractual commitments, in no event shall ABB be responsible or liable for any loss or damage resulting from the use of this manual or the application of the equipment.

In case of discrepancies between the English and any other language version, the wording of the English version shall prevail.

Conformity

This product complies with the directive of the Council of the European Communities on the approximation of the laws of the Member States relating to electromagnetic compatibility (EMC Directive 2014/30/EU) and concerning electrical equipment for use within specified voltage limits (Low-voltage directive 2014/35/EU). This conformity is the result of tests conducted by ABB in accordance with the product standard EN 60255-26 for the EMC directive, and with the product standards EN 60255-1 and EN 60255-27 for the low voltage directive. The product is designed in accordance with the international standards of the IEC 60255 series.





Document validity

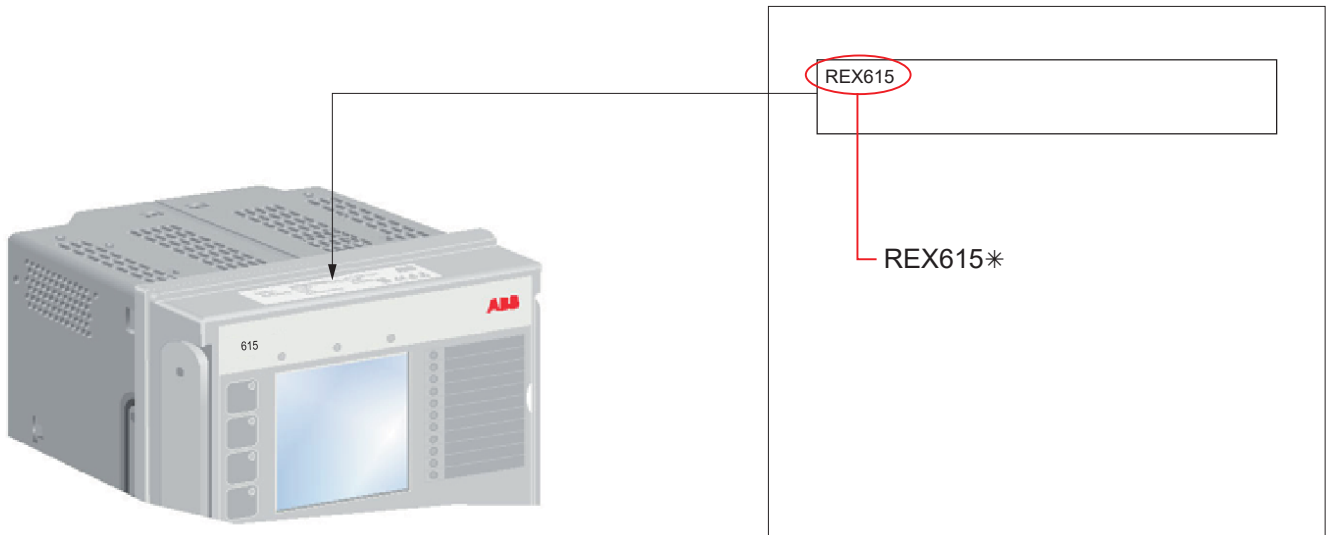



Contents

- 2 Copyright**
- 3 Document validity**
- 5 Loose parts**
- 6 Attaching the protective film**
- 7 Withdrawing the plug-in unit from the case**
- 8 Flush mounting the standard size relay**
- 10 Flush mounting the wide size relay**
- 12 19" Rack mounting**
- 16 Semi-flush mounting the standard size relay**
- 18 Semi-flush mounting the wide size relay**
- 20 Inclined semi-flush mounting the standard size relay**
- 22 Inclined semi-flush mounting the wide size relay**
- 24 Wall mounting the standard size relay**
- 26 Wall mounting the wide size relay**
- 28 Swinging out the wall mounting frame**
- 29 Inserting the plug-in unit into the case**
- 30 Locking the handle**
- 31 Sealing the handle**

Loose parts

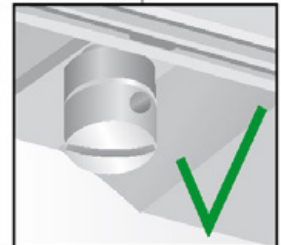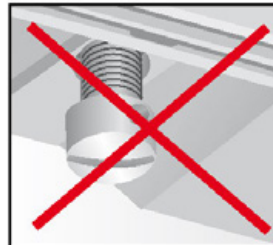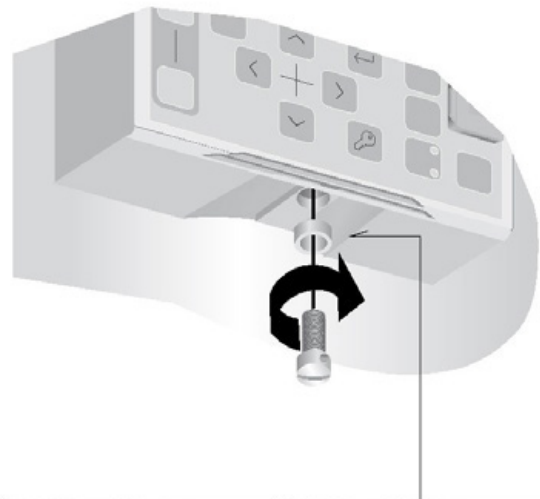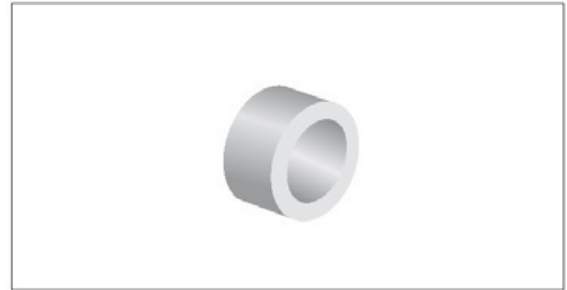

Attaching the protective film

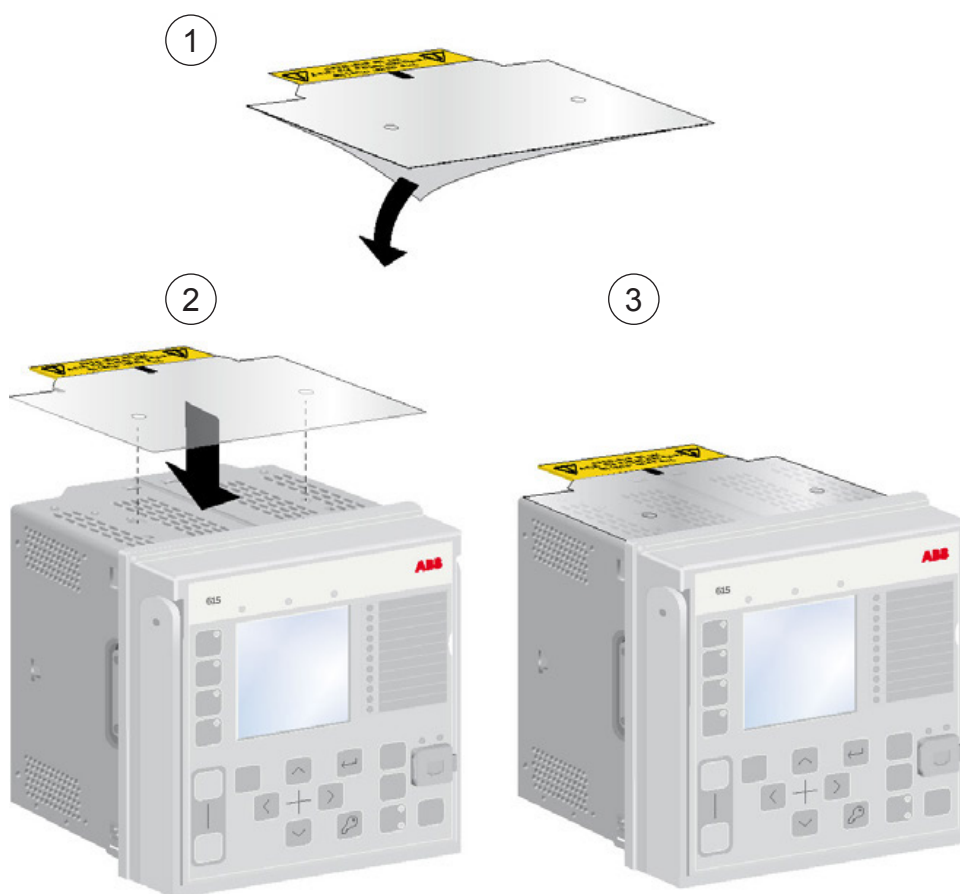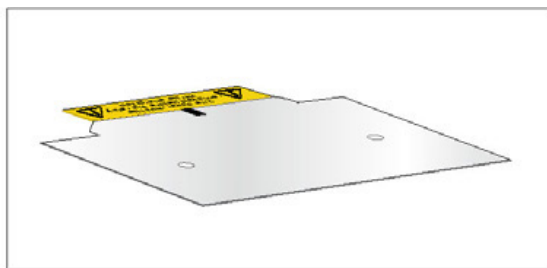


Withdrawing the plug-in unit from the case

1




Power OFF before
detaching the plug-in unit.



2

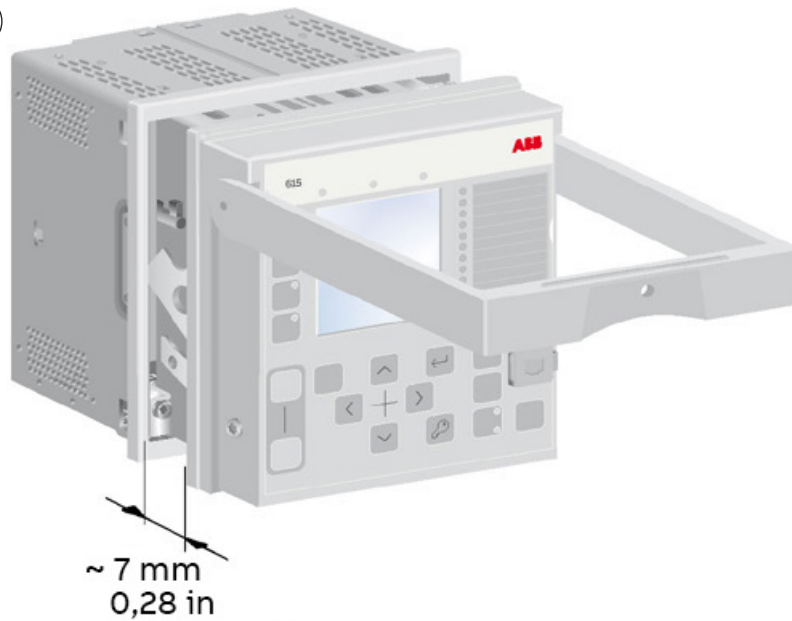


3

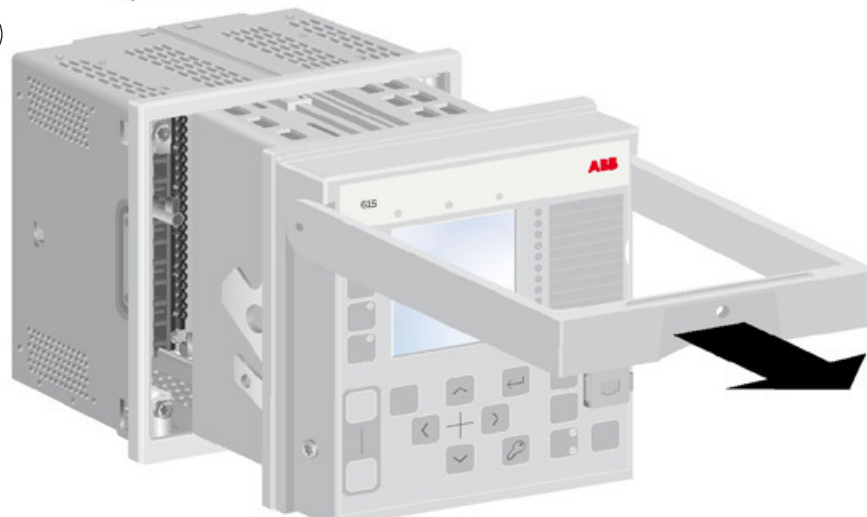

Flush mounting the standard size relay

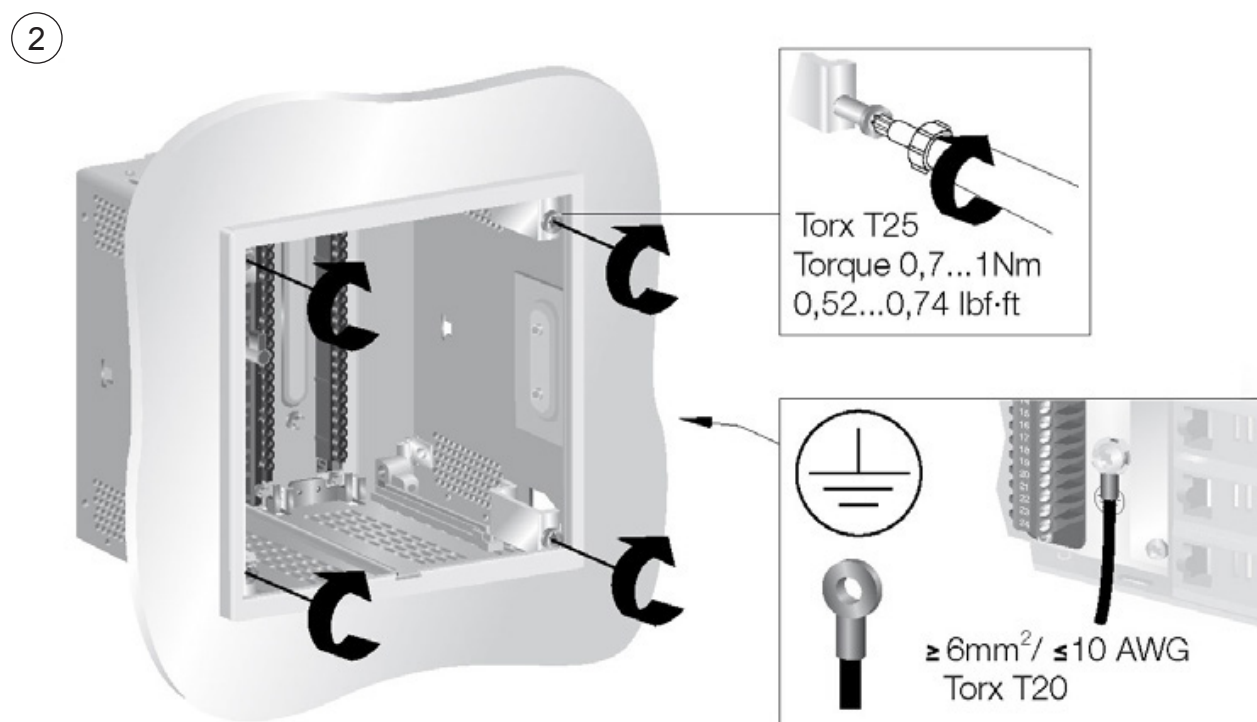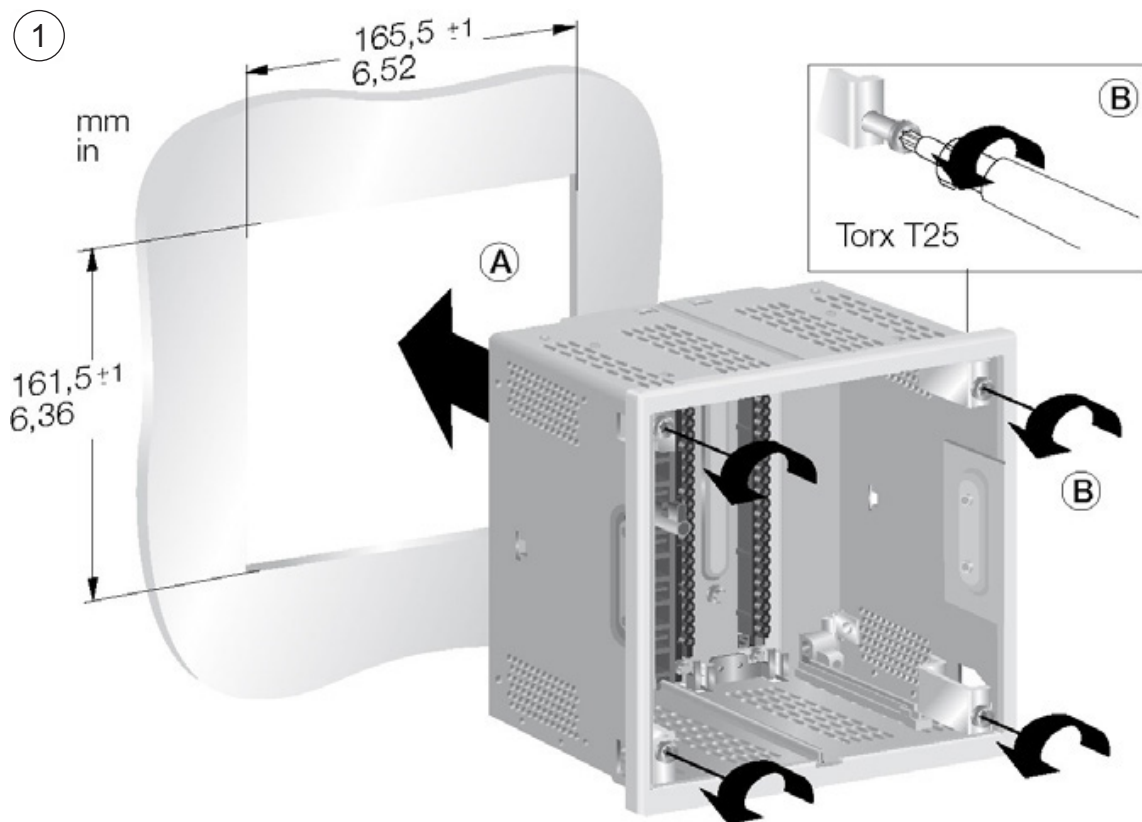


3


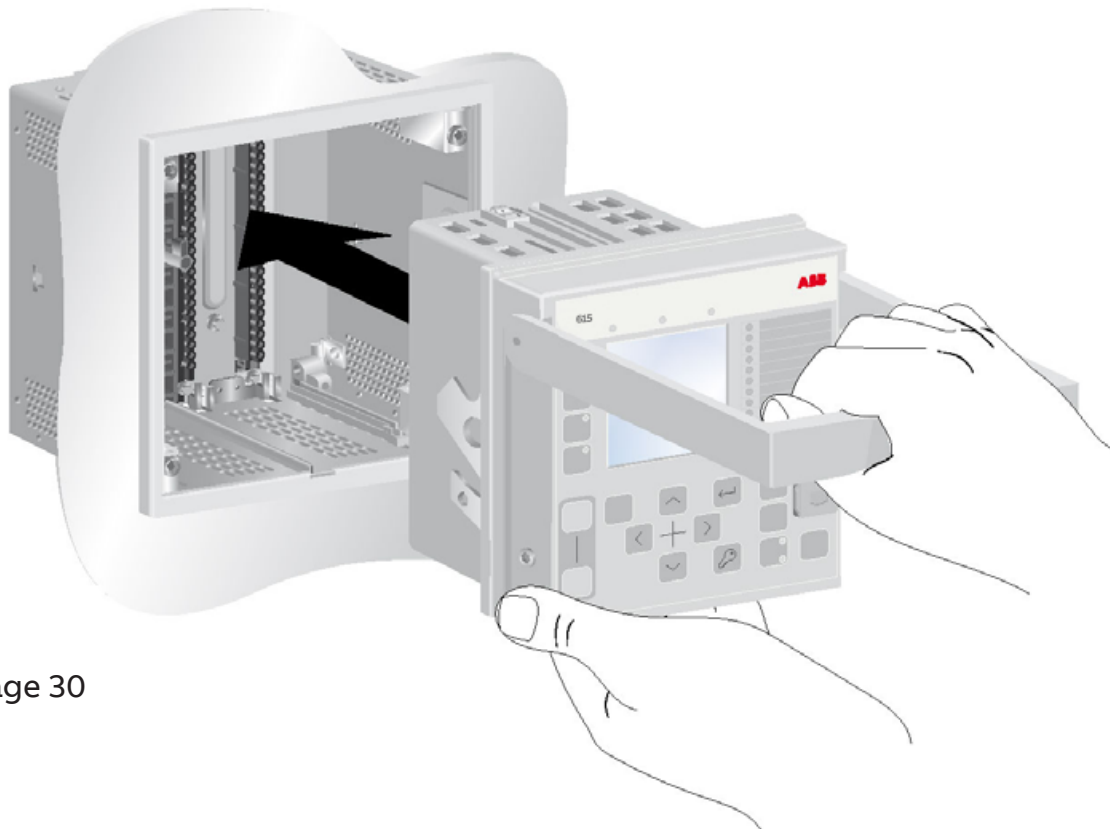


See page 30


4

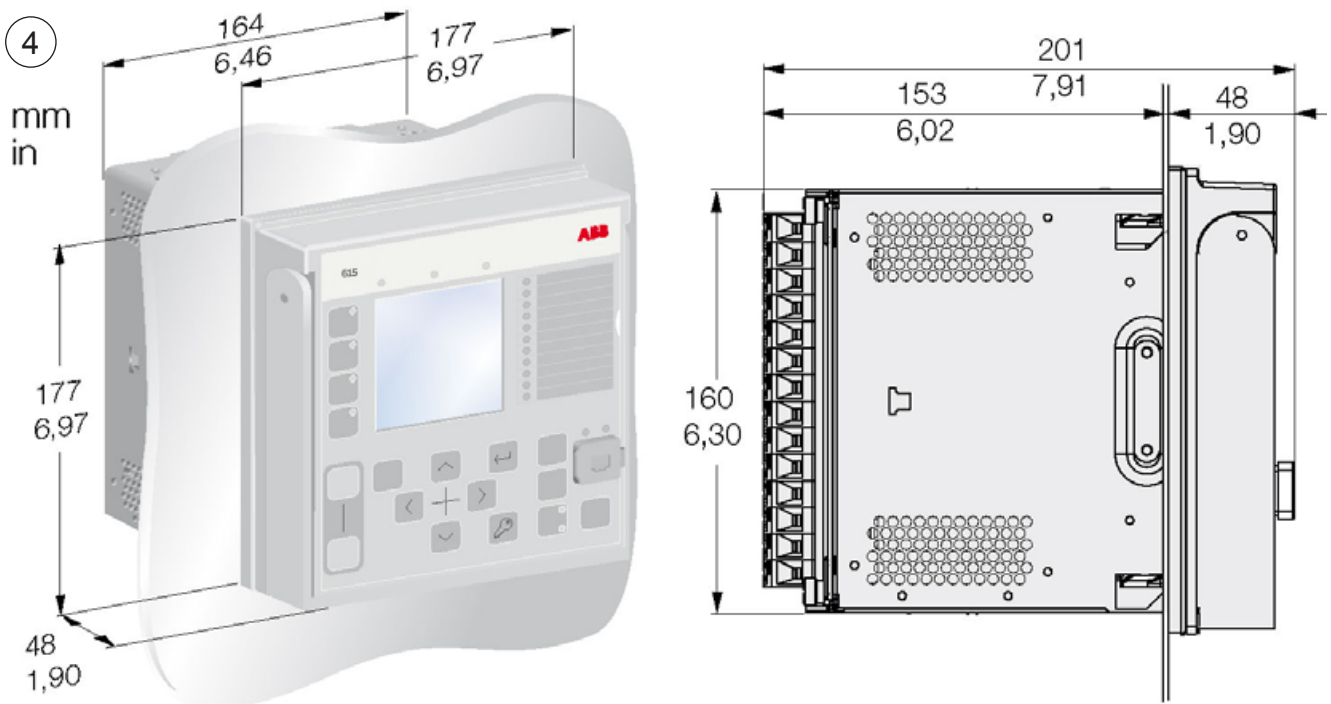

Flush mounting the wide size relay

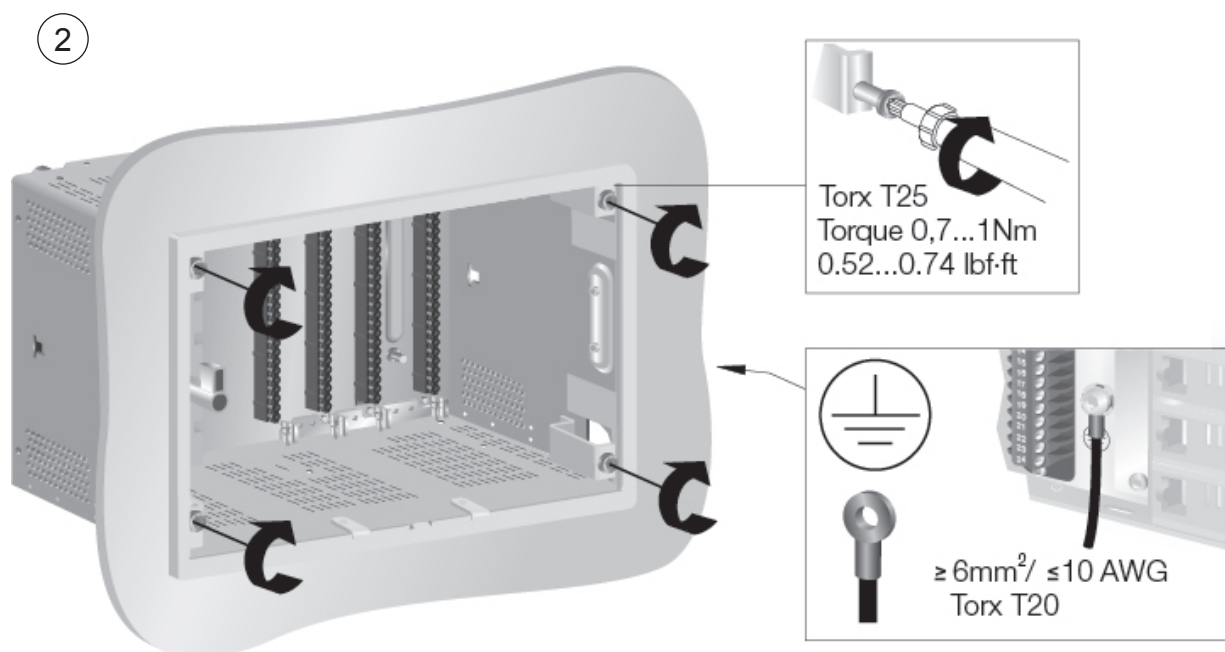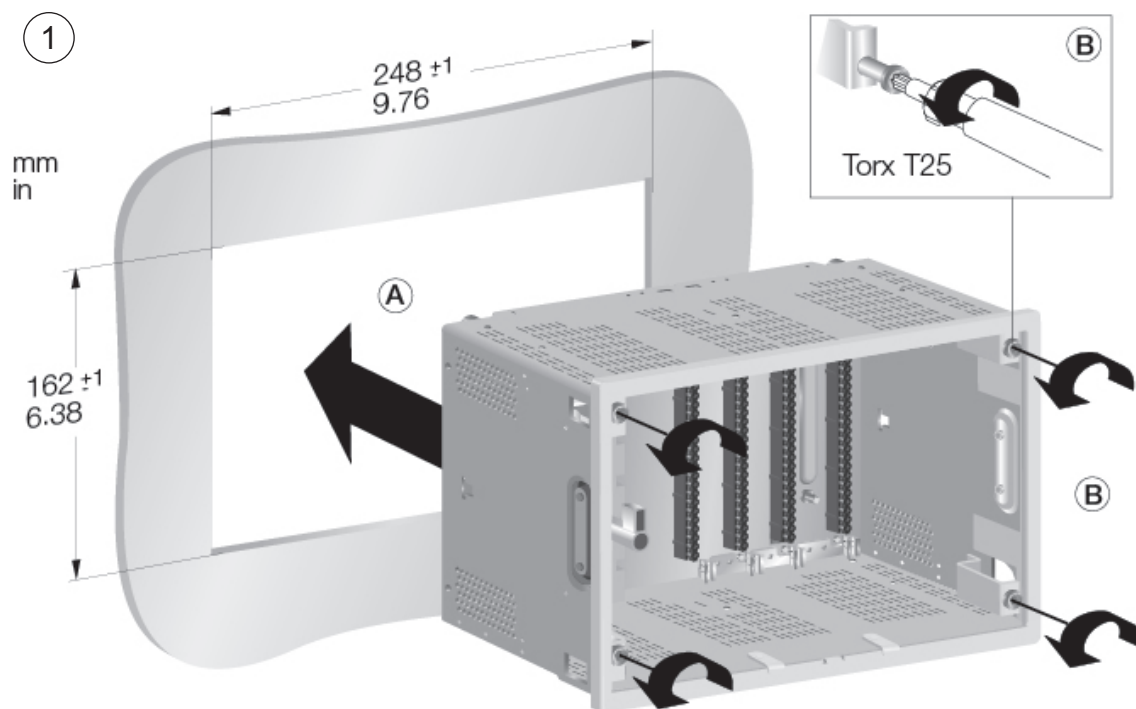


3


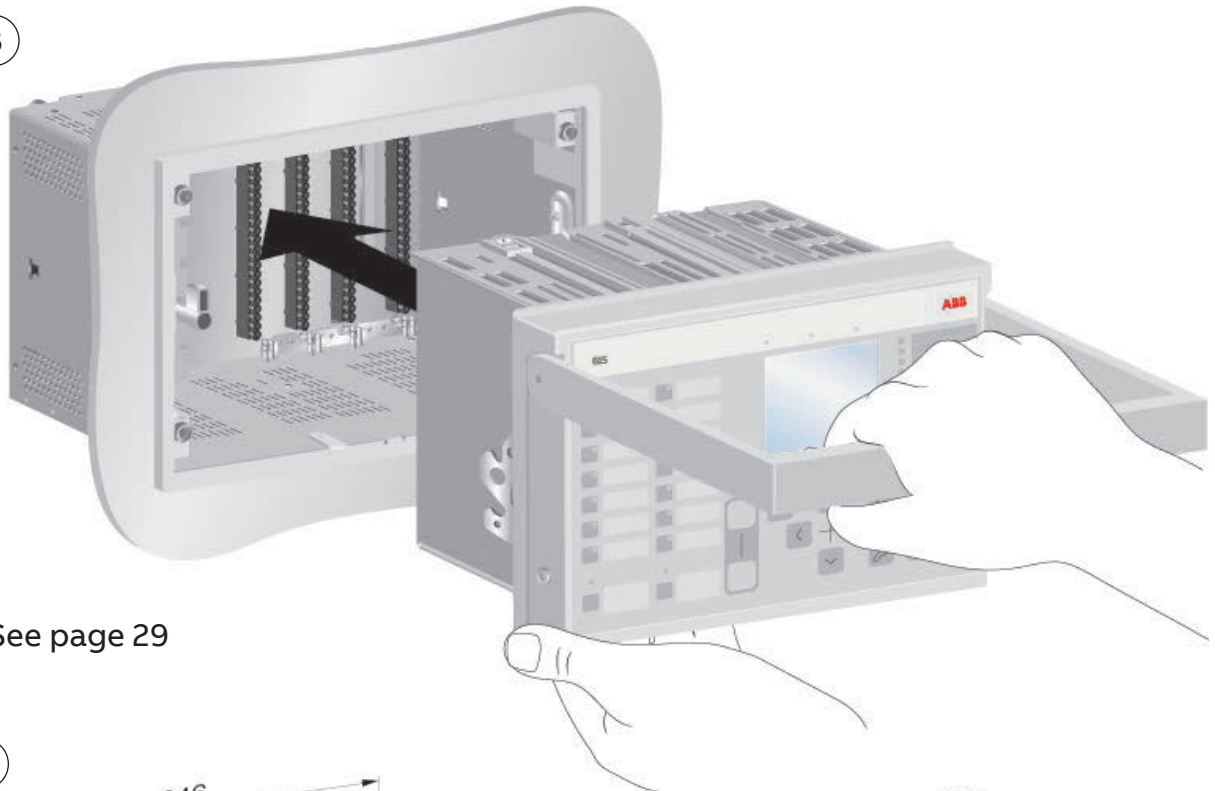


See page 29


4

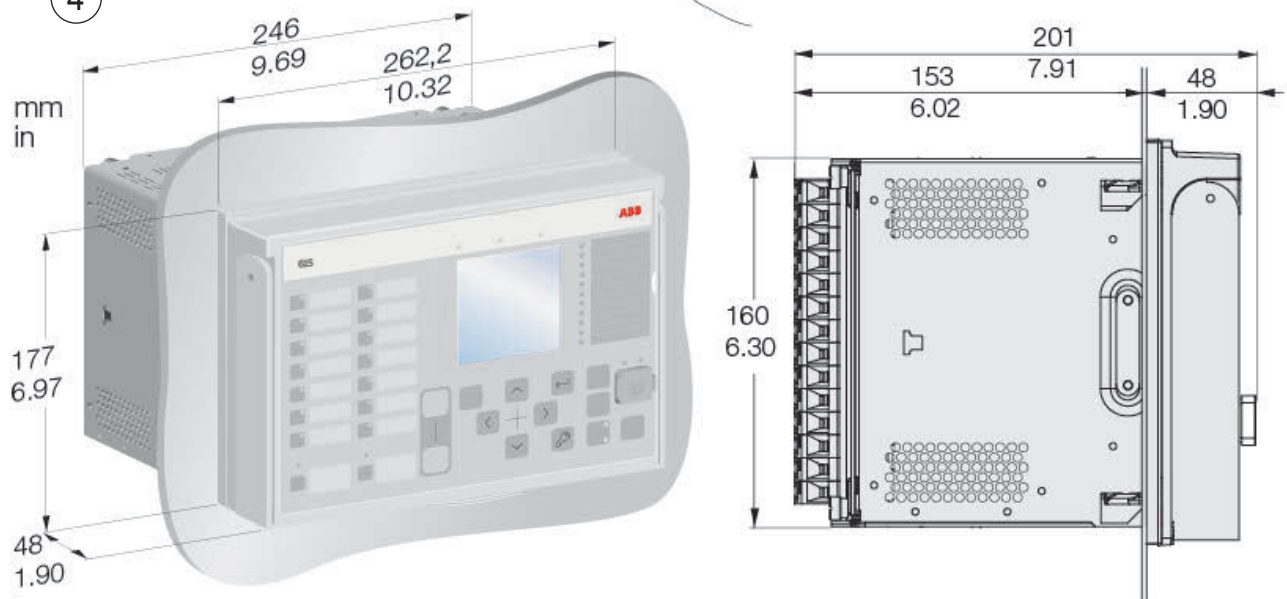



19" Rack mounting

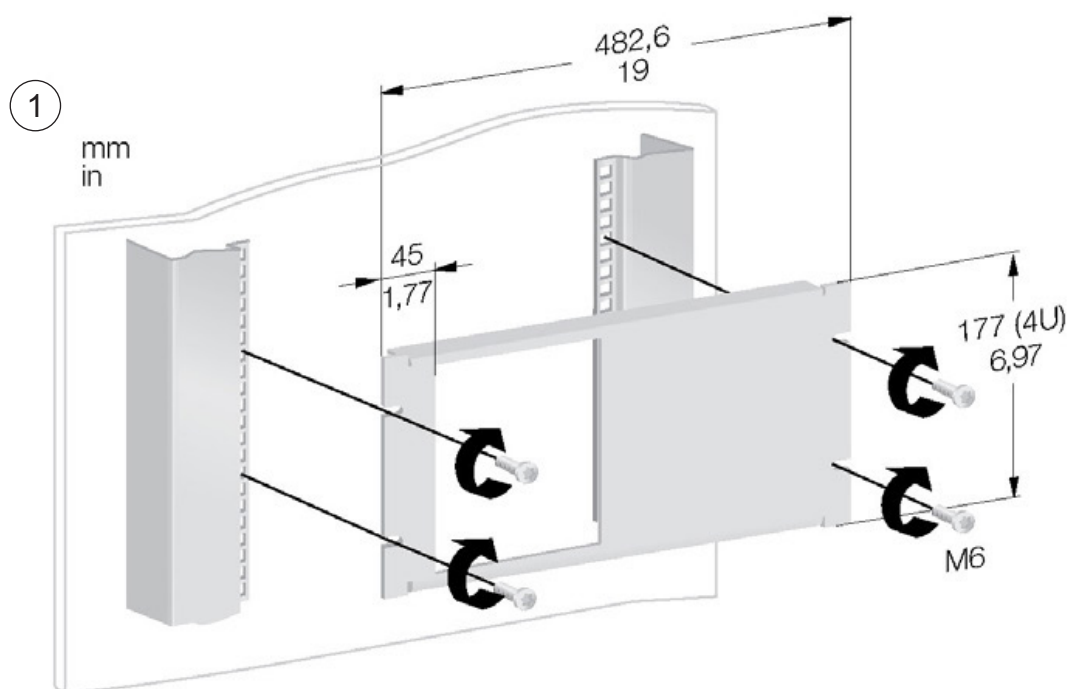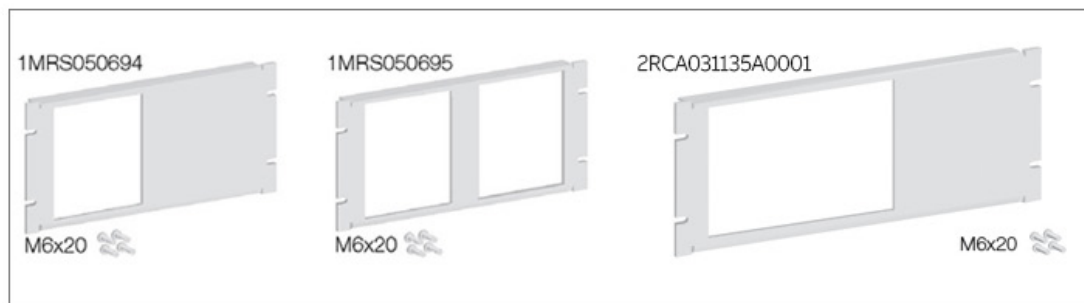


See page 7

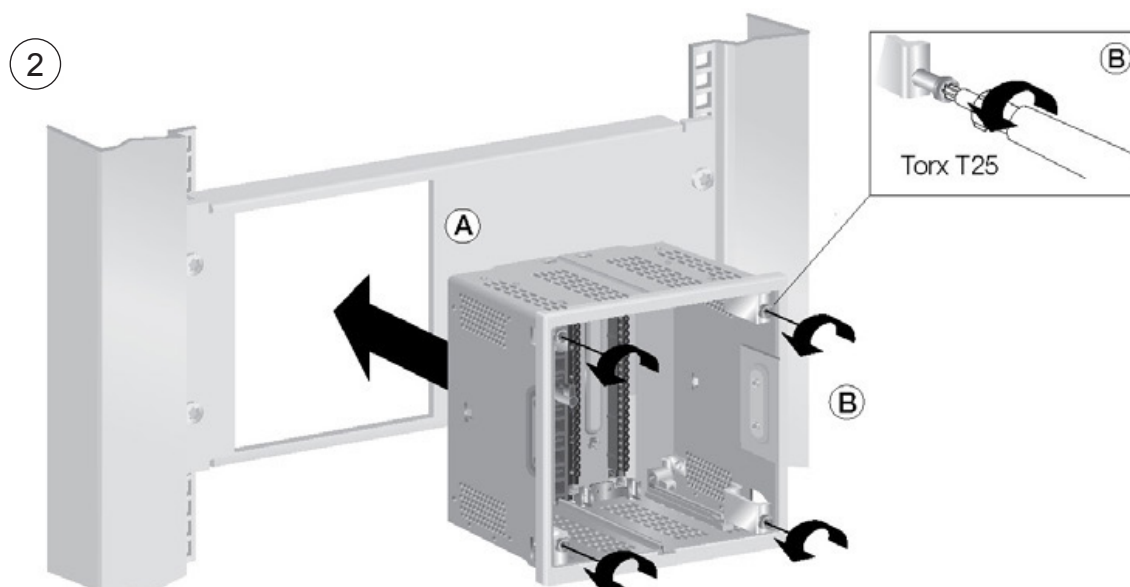

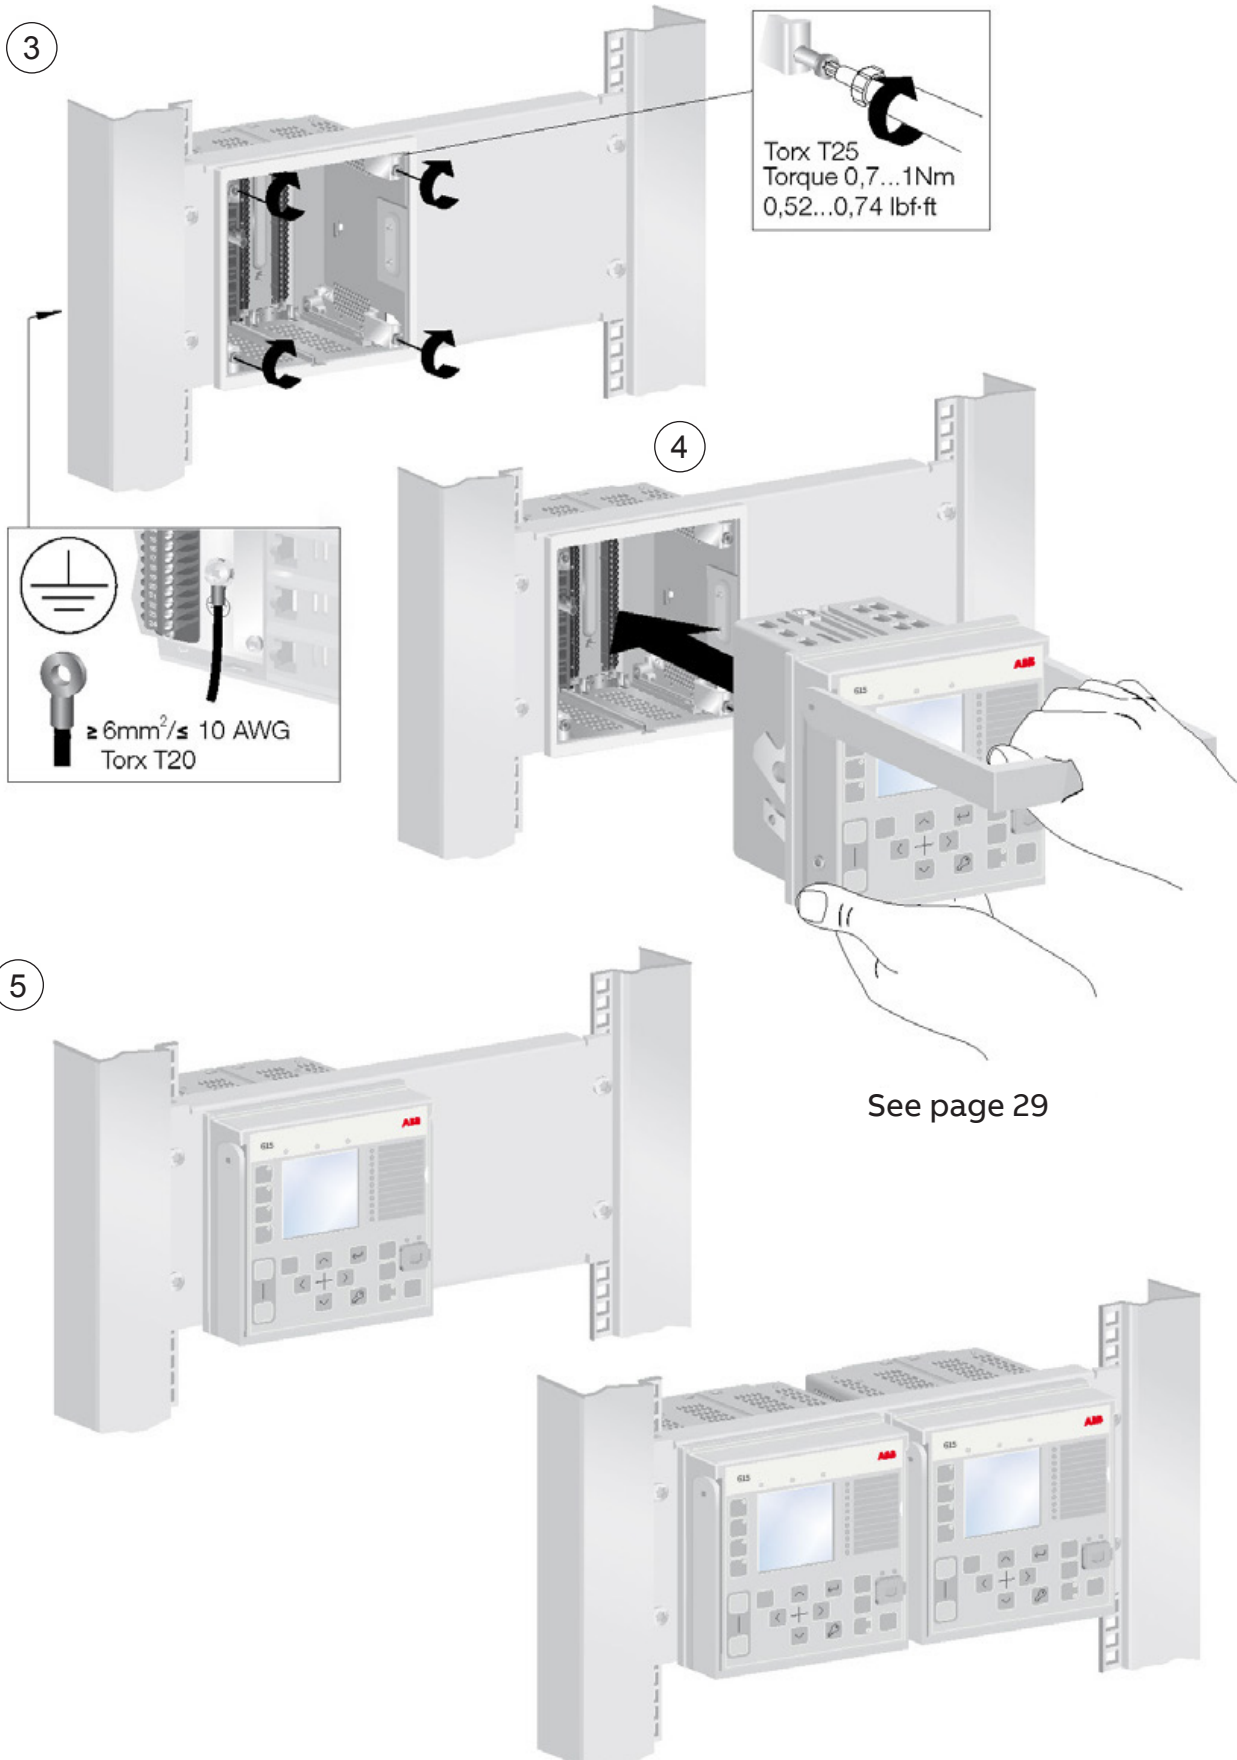


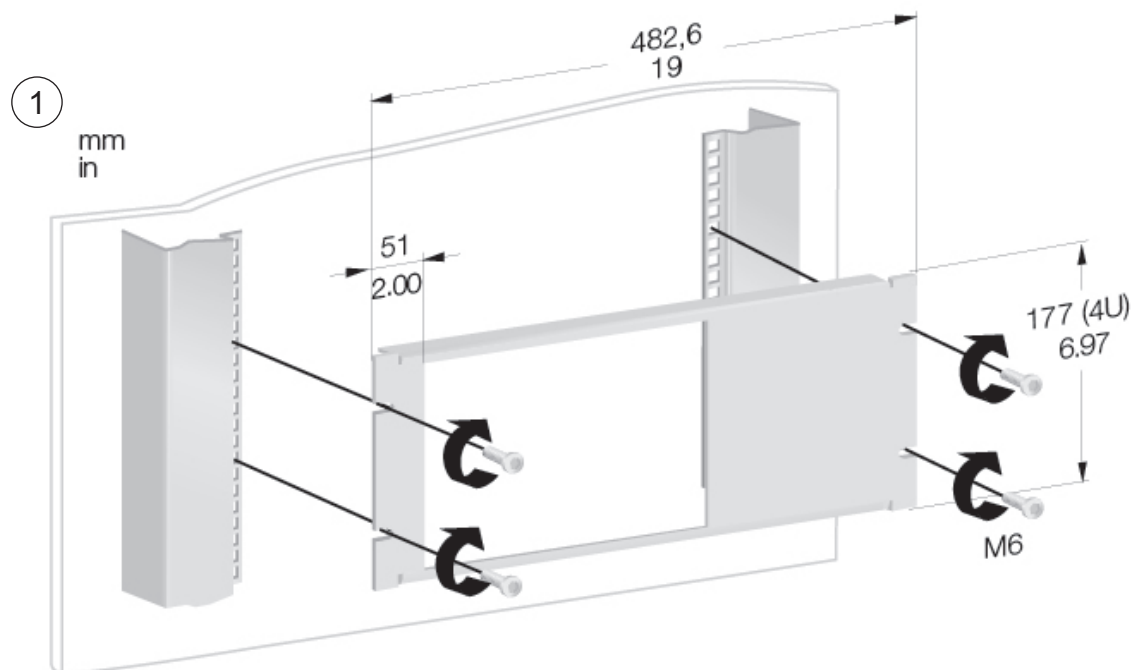


See page 7

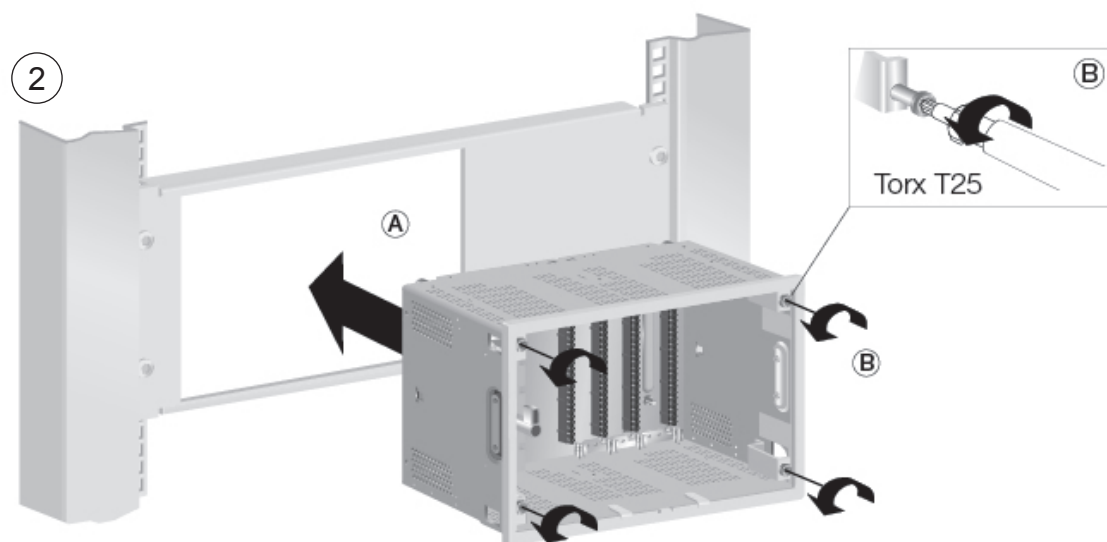

3

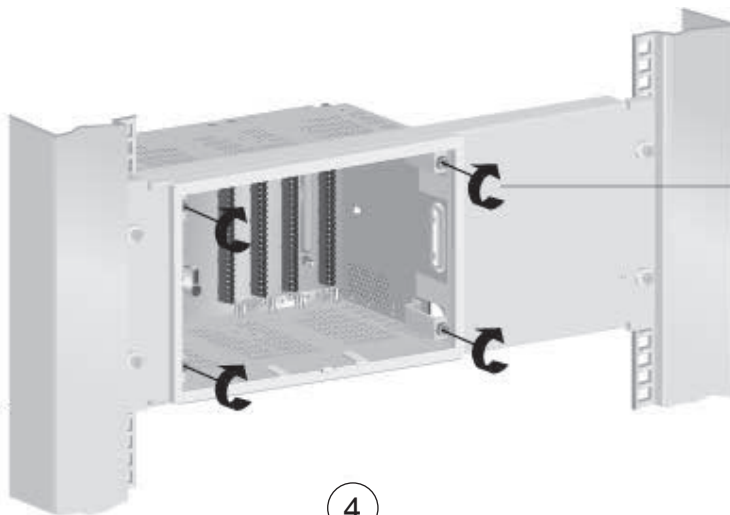

4

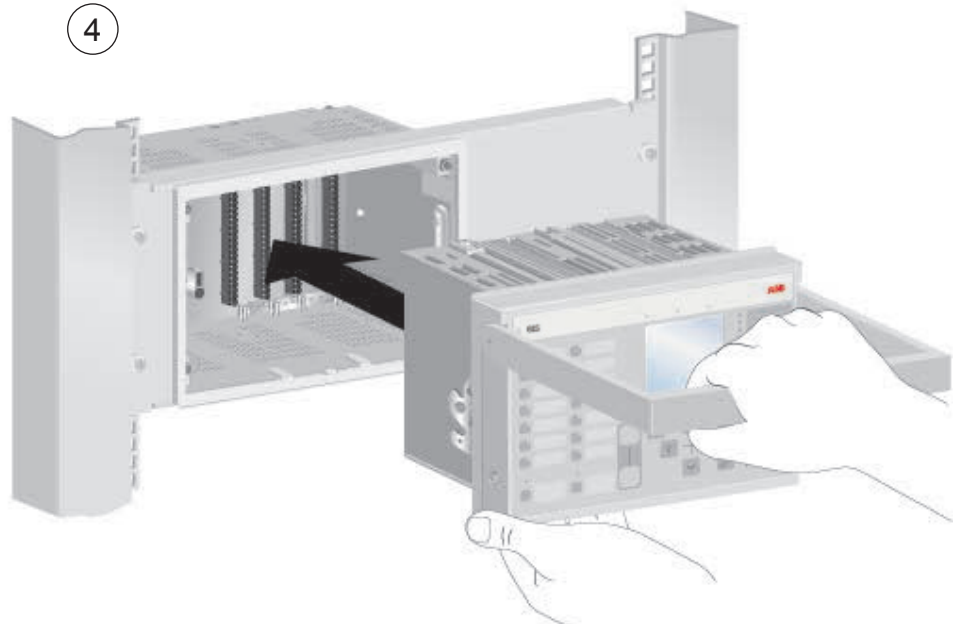


5




See page 29


Semi-flush mounting the standard size relay

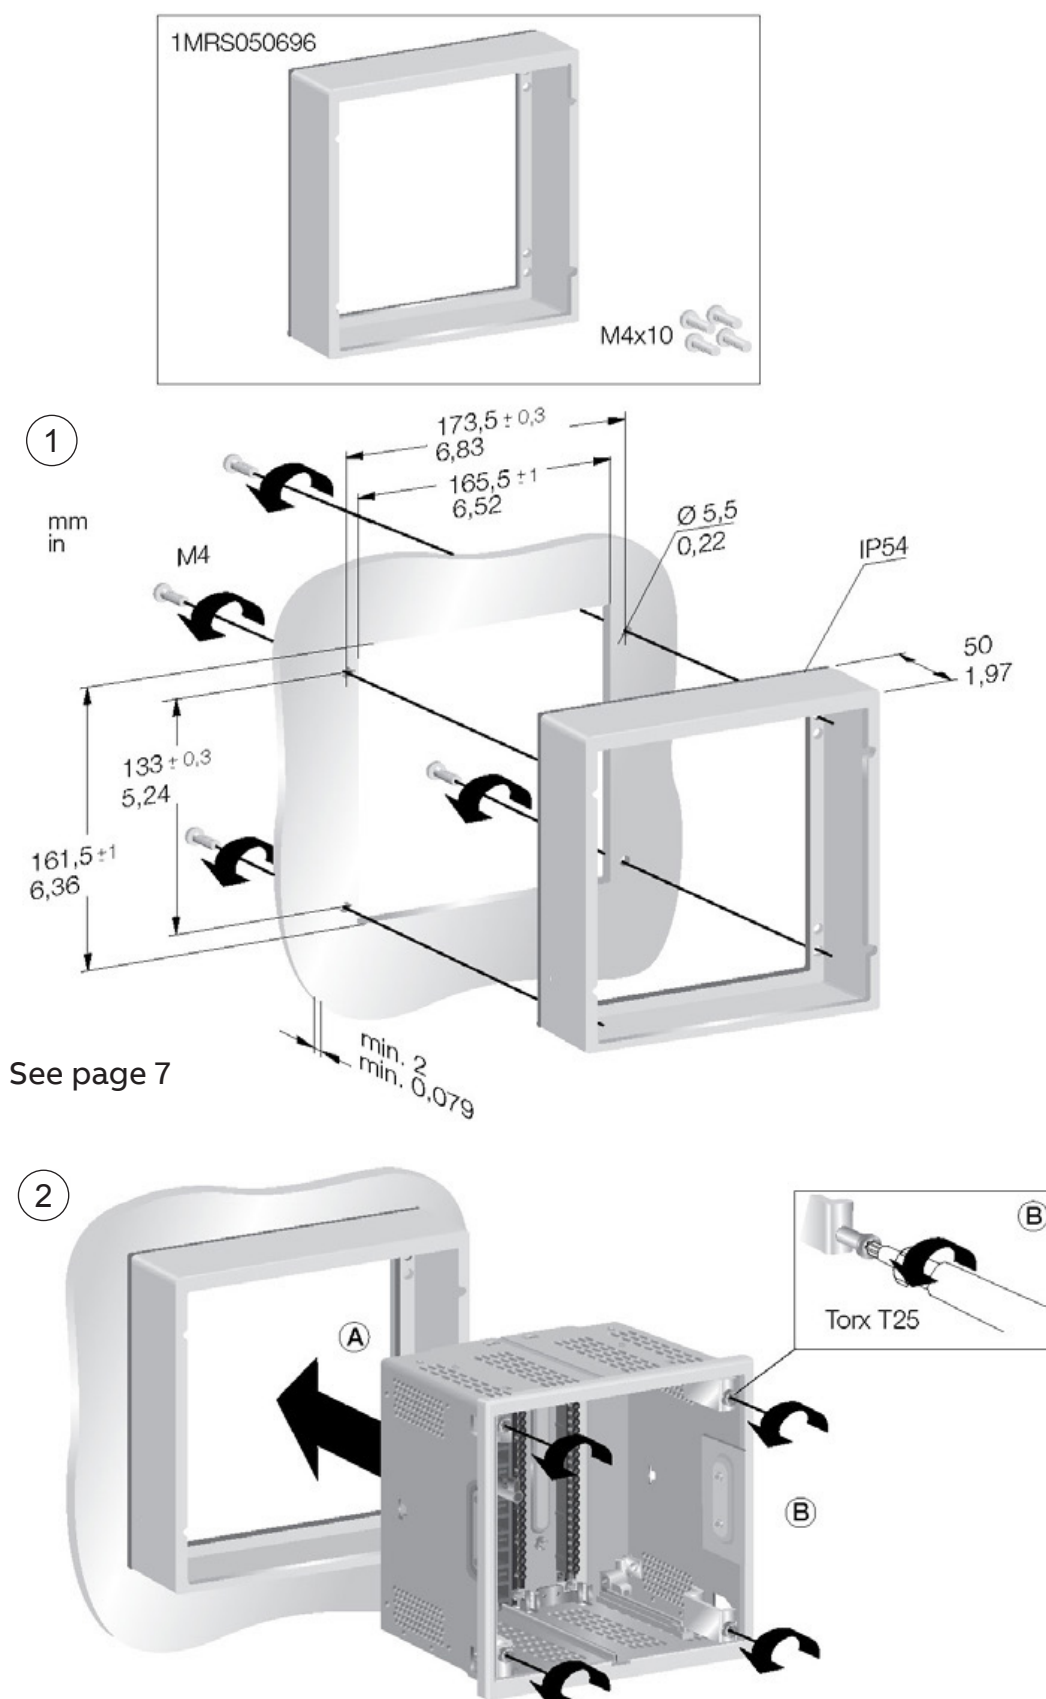

3

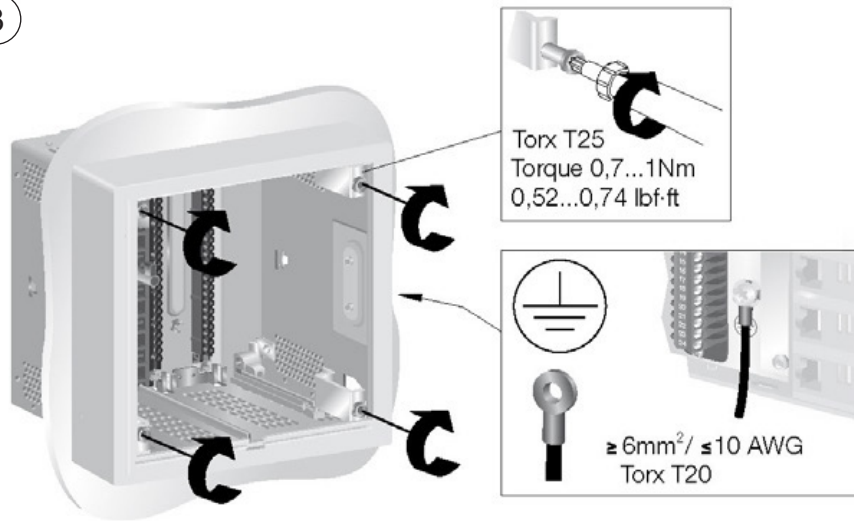


4


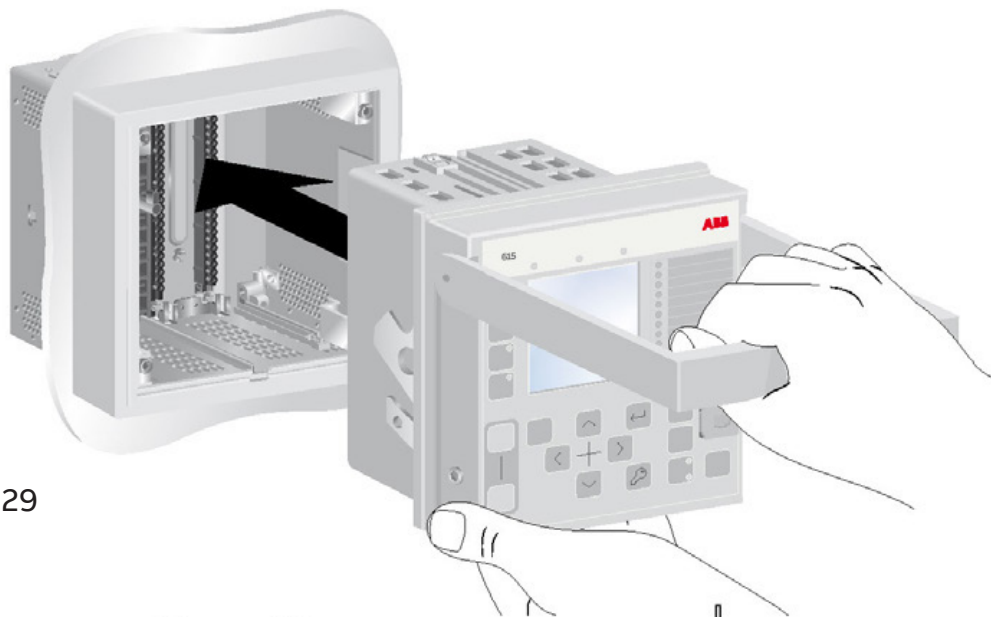


See page 29


5



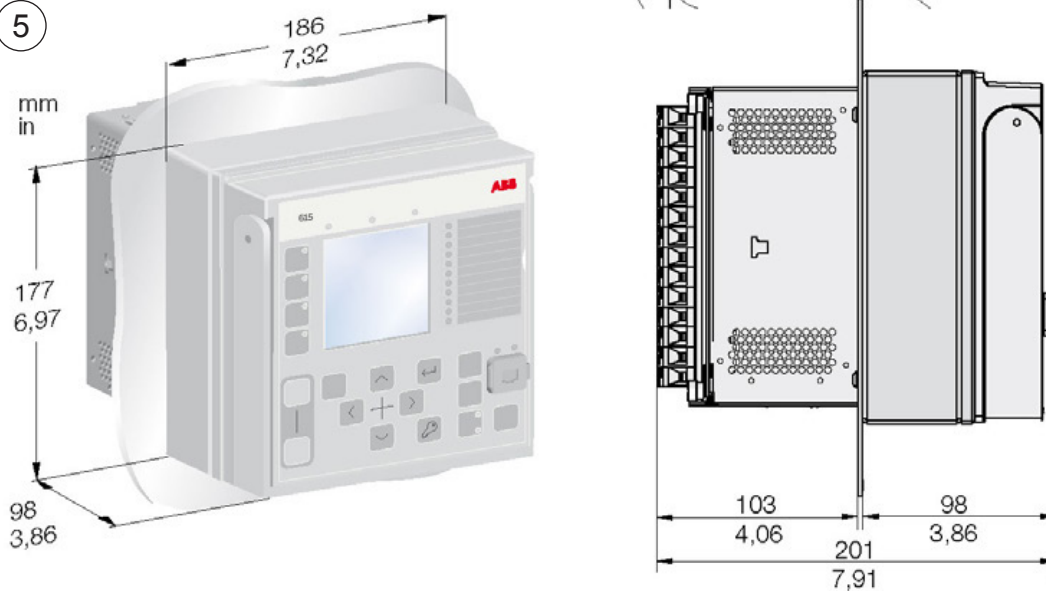


Semi-flush mounting the wide size relay

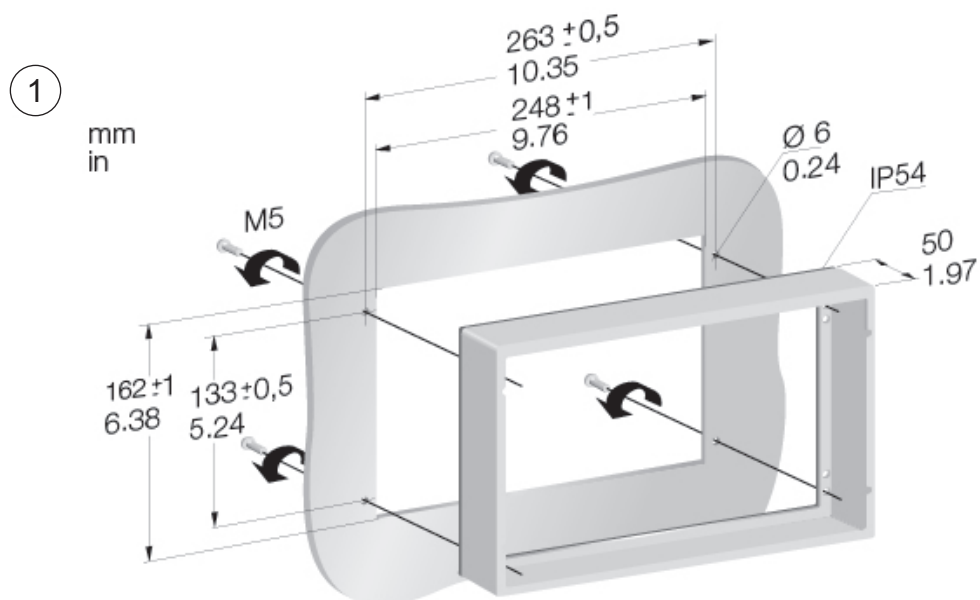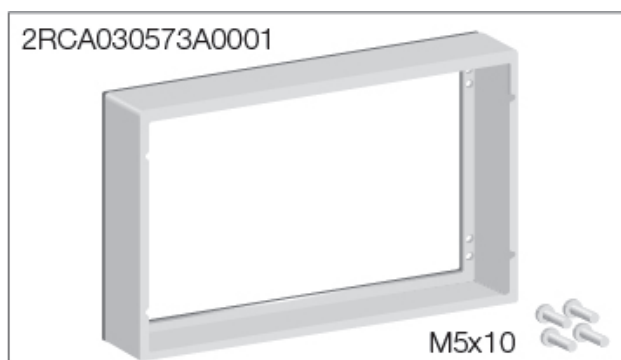



See page 7

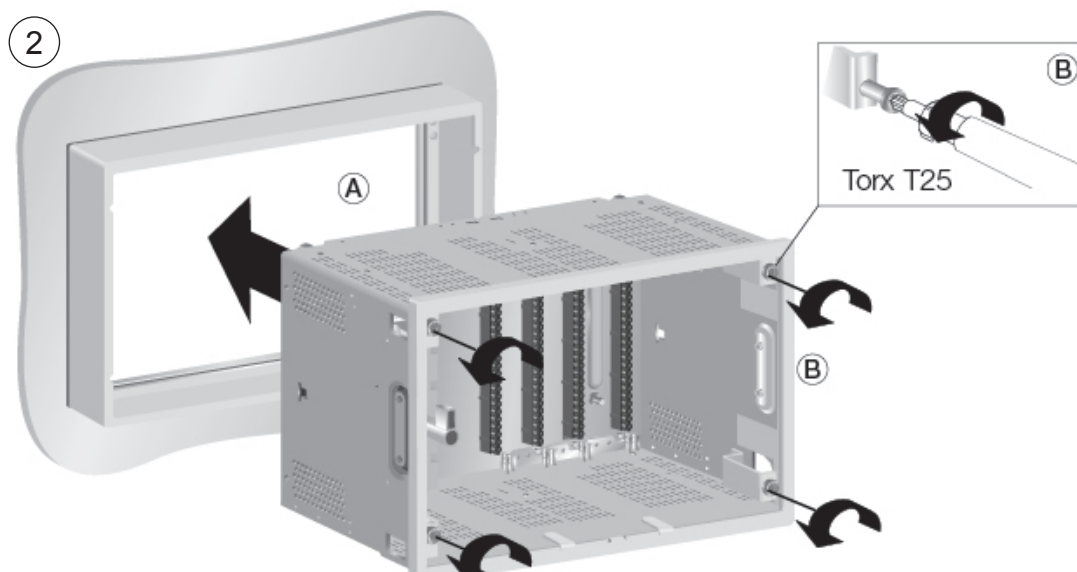

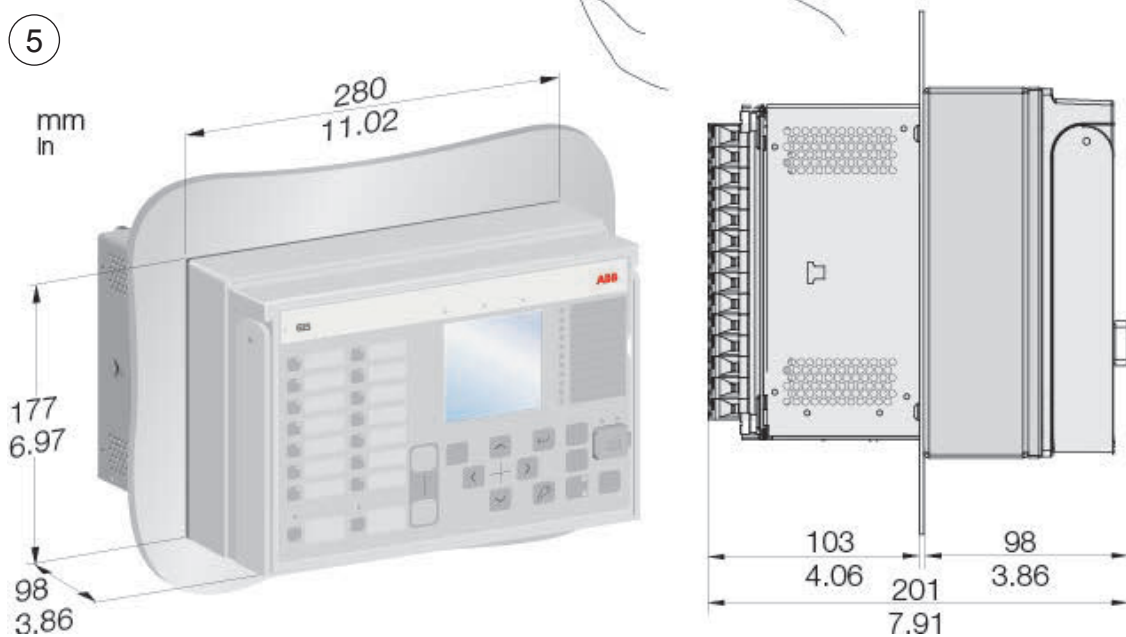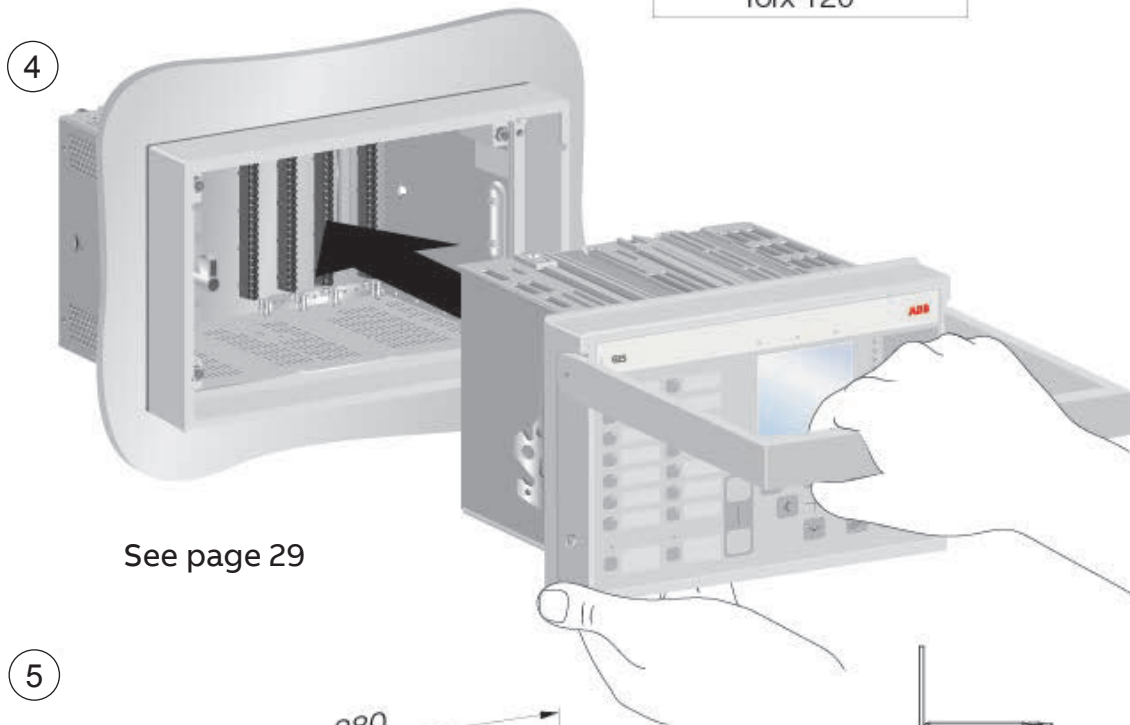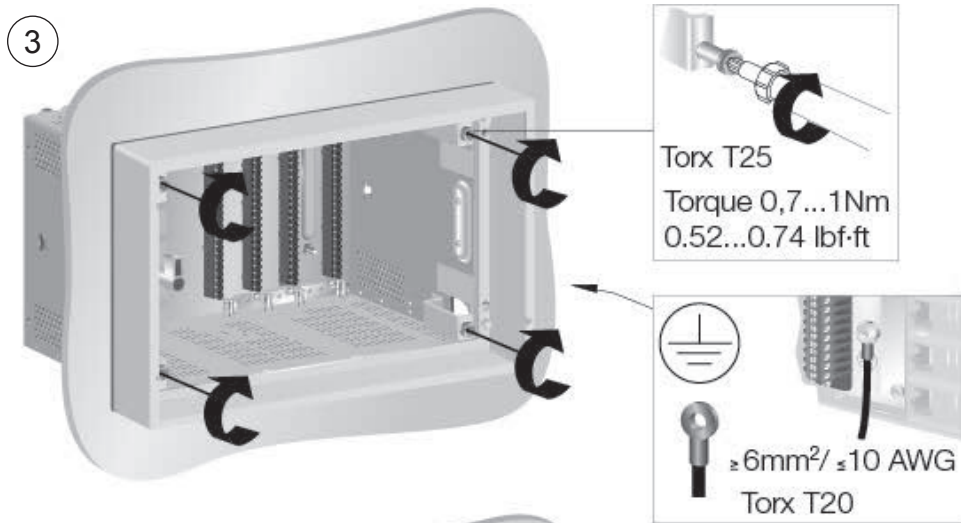

Inclined semi-flush mounting the standard size relay

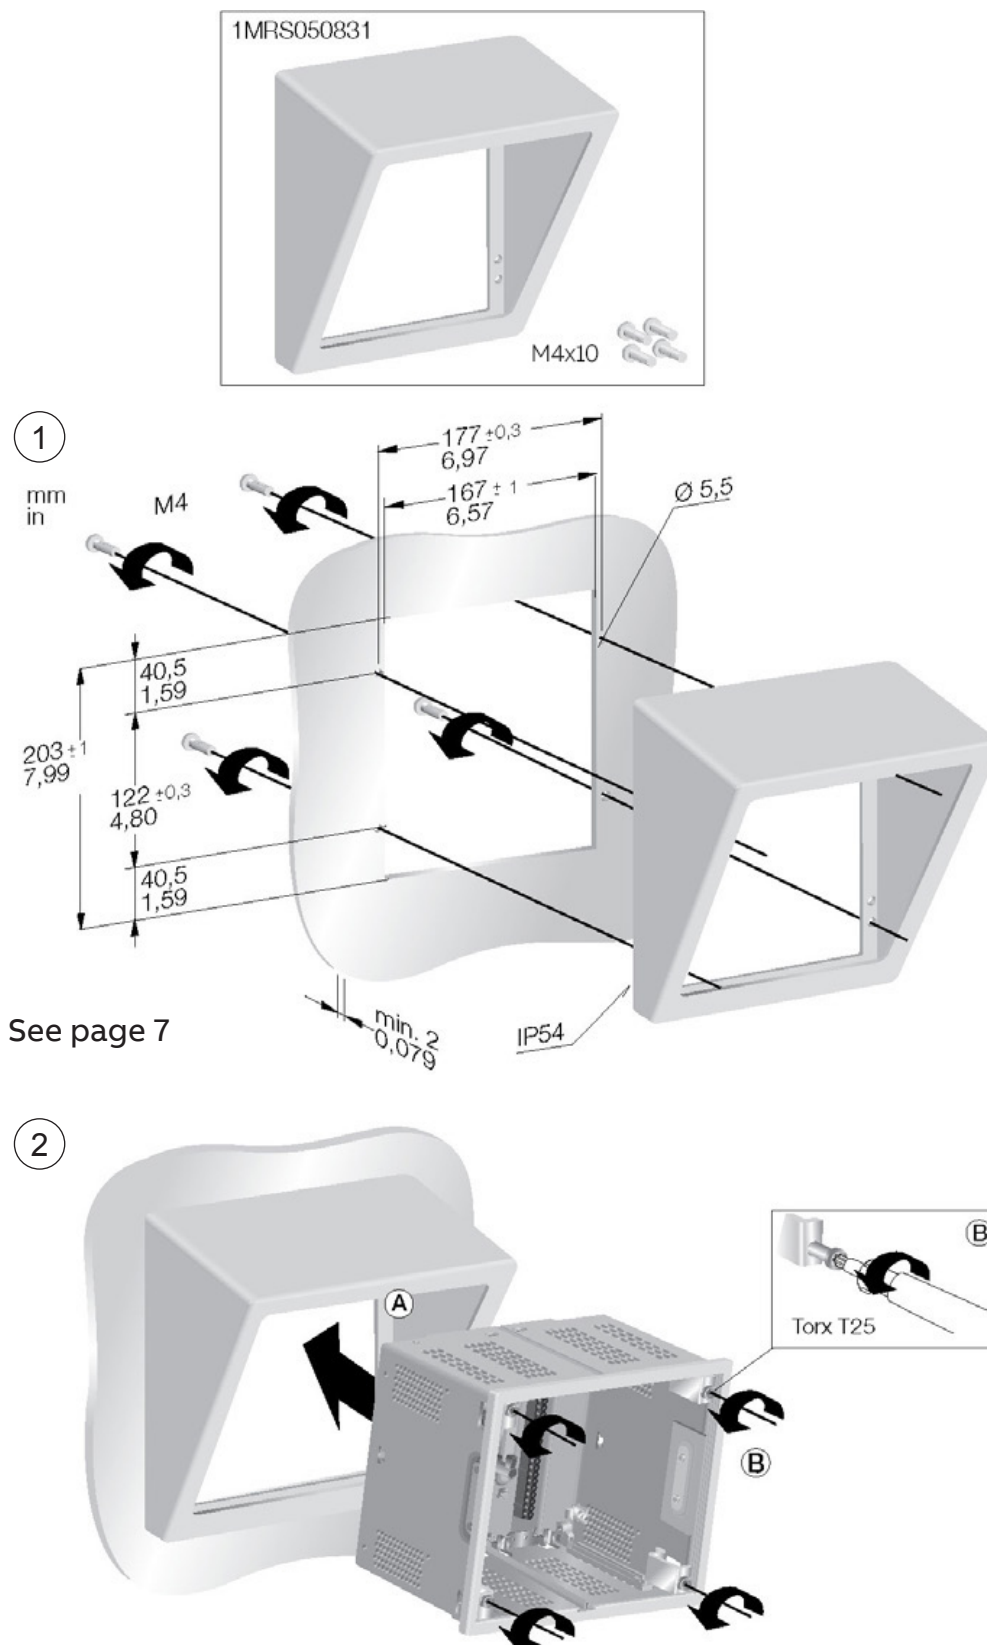


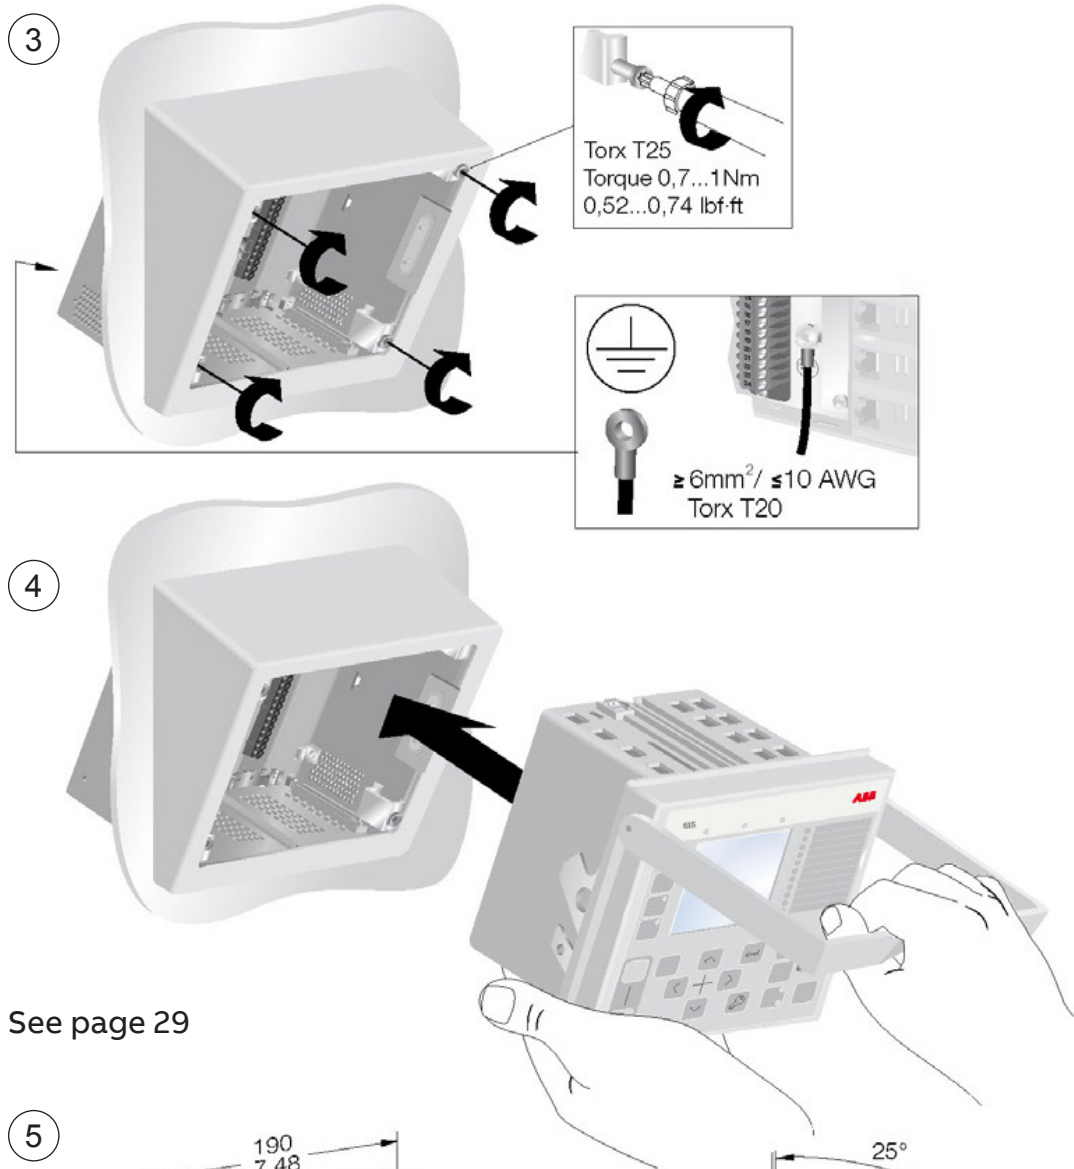

See page 29




Inclined semi-flush mounting the wide size relay

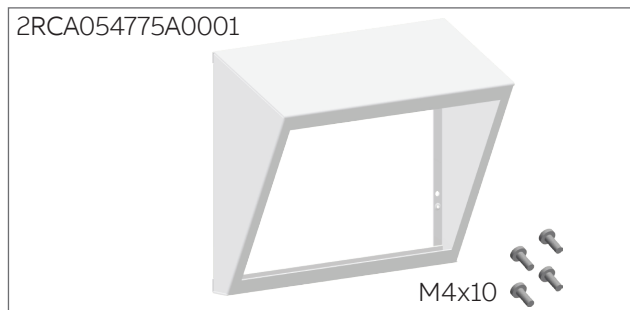


①




mm
in

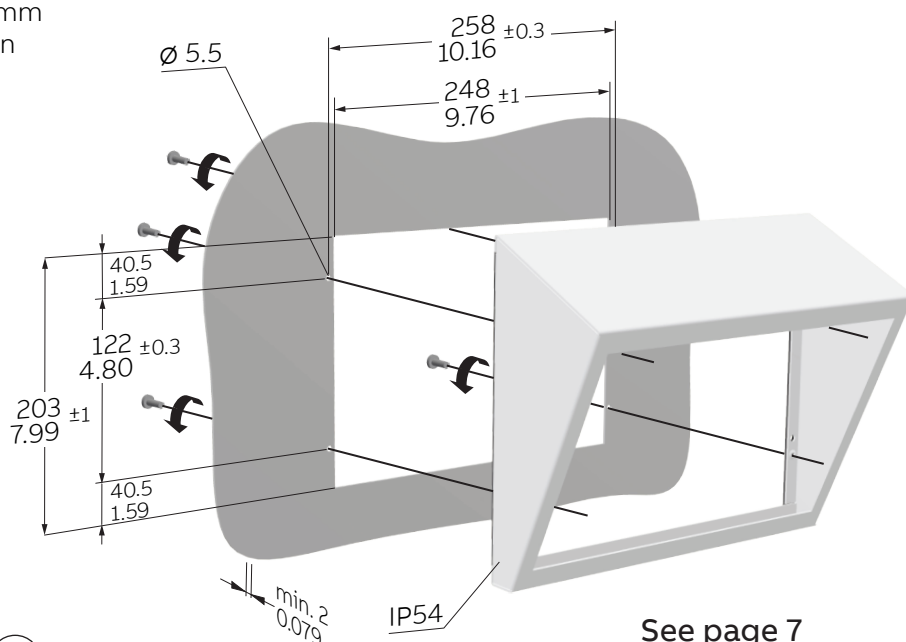




See page 7

②


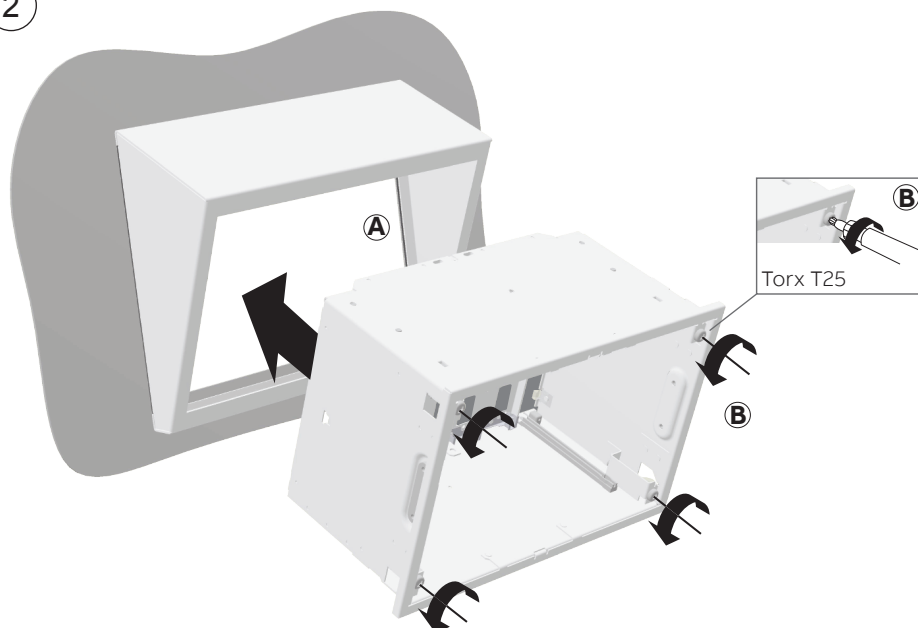


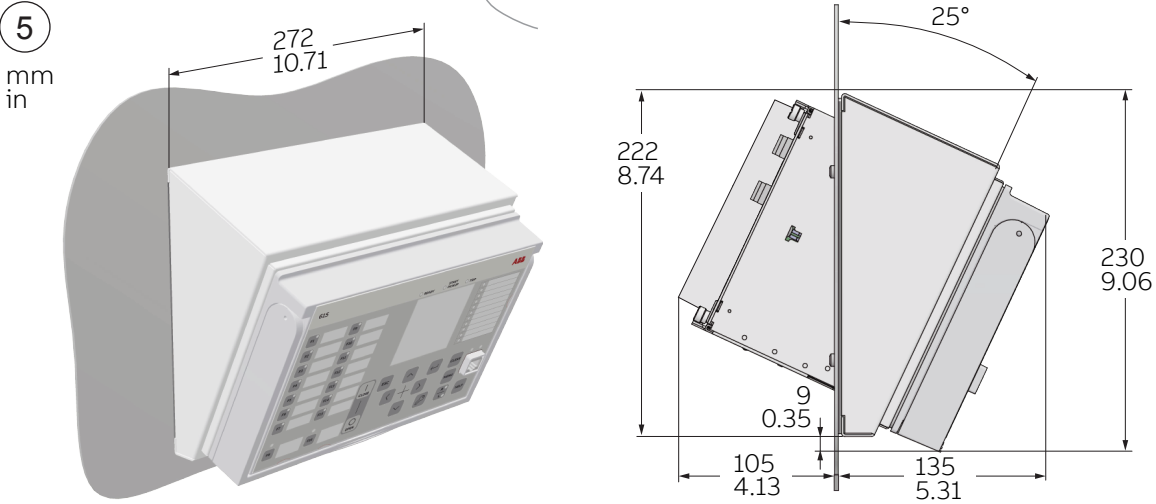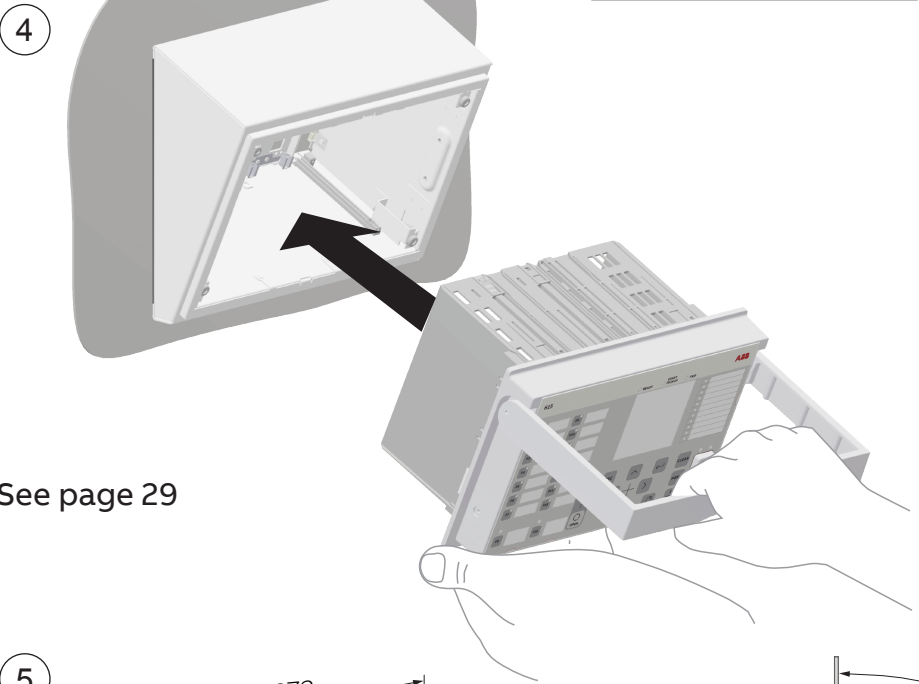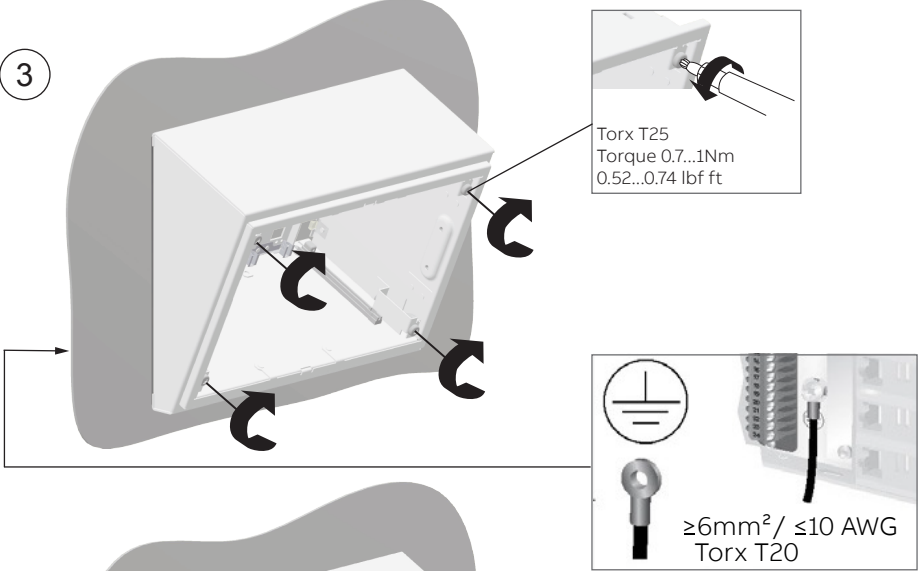


Wall mounting the standard size relay

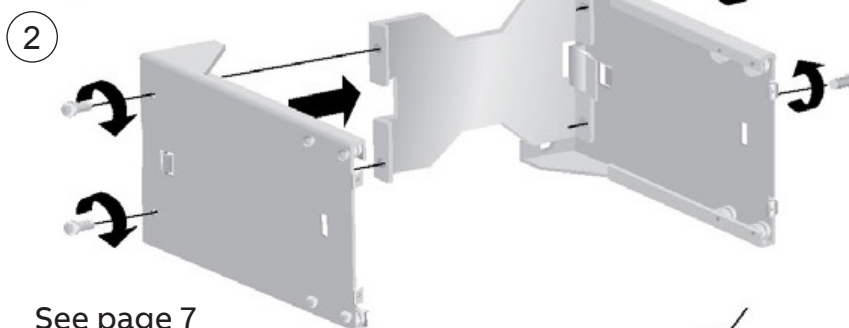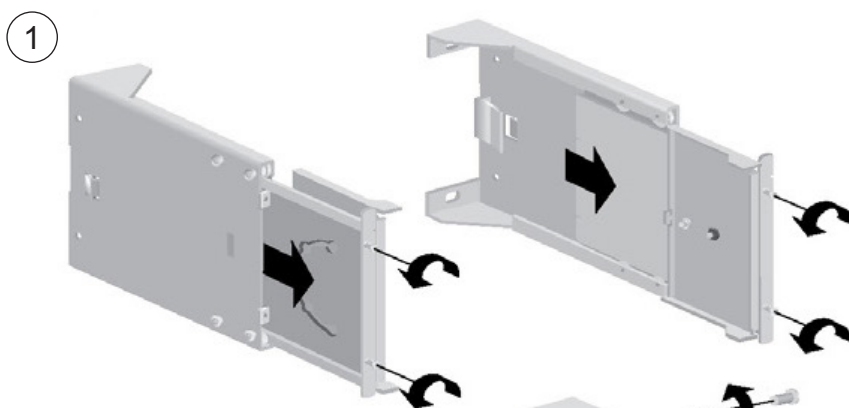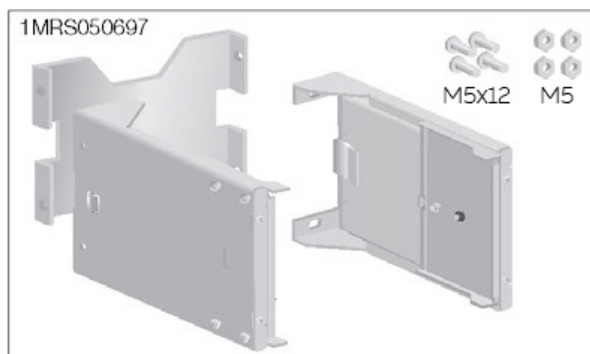


See page 7

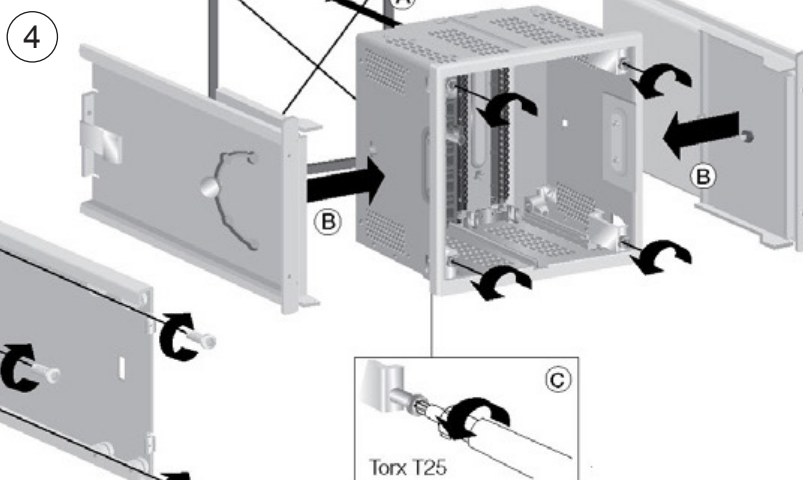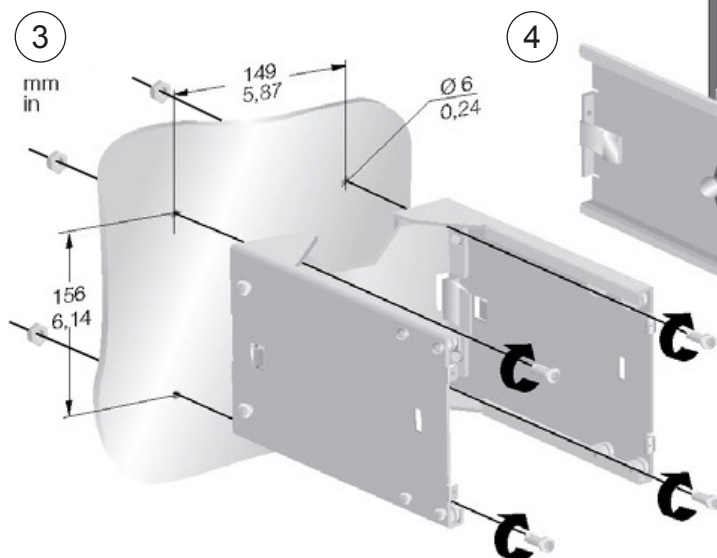


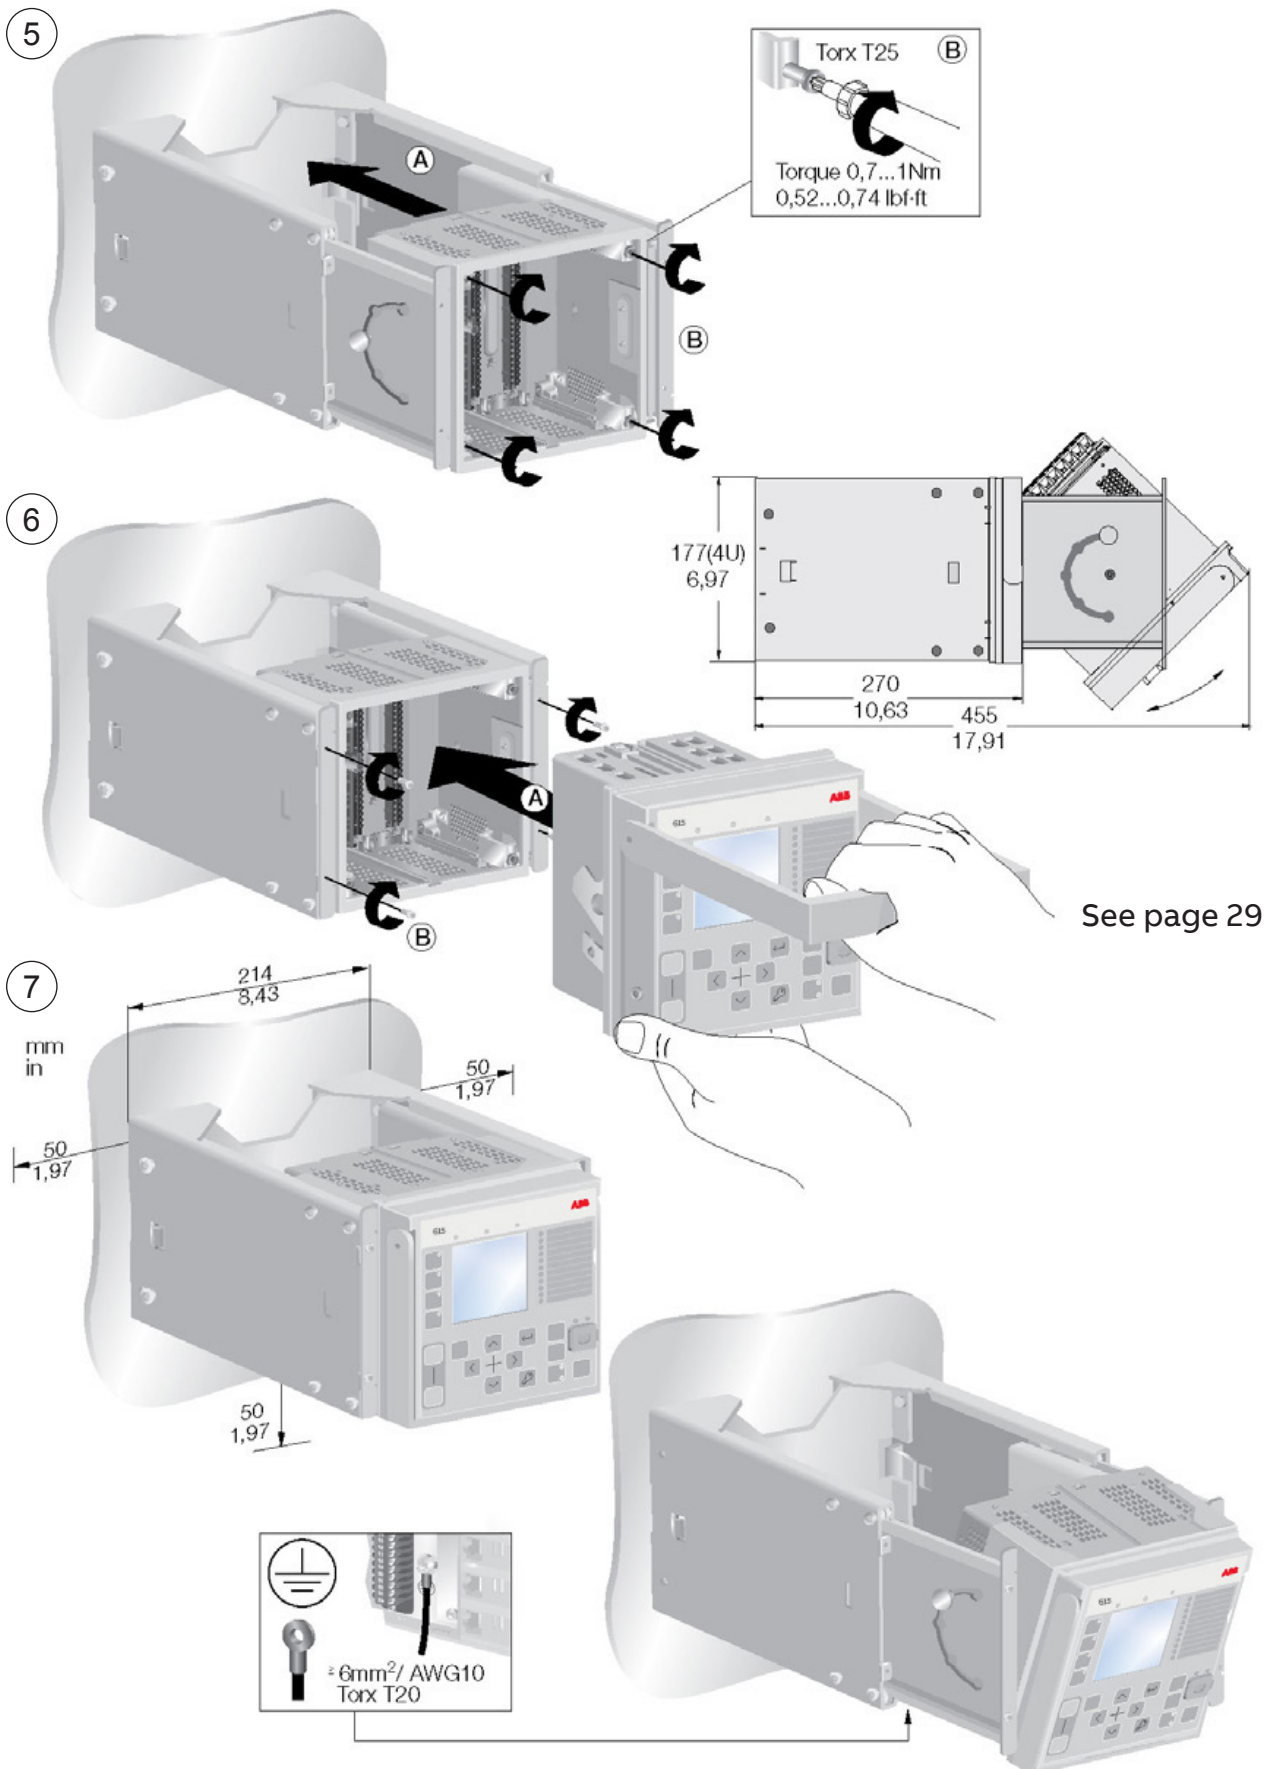


Wall mounting the wide size relay

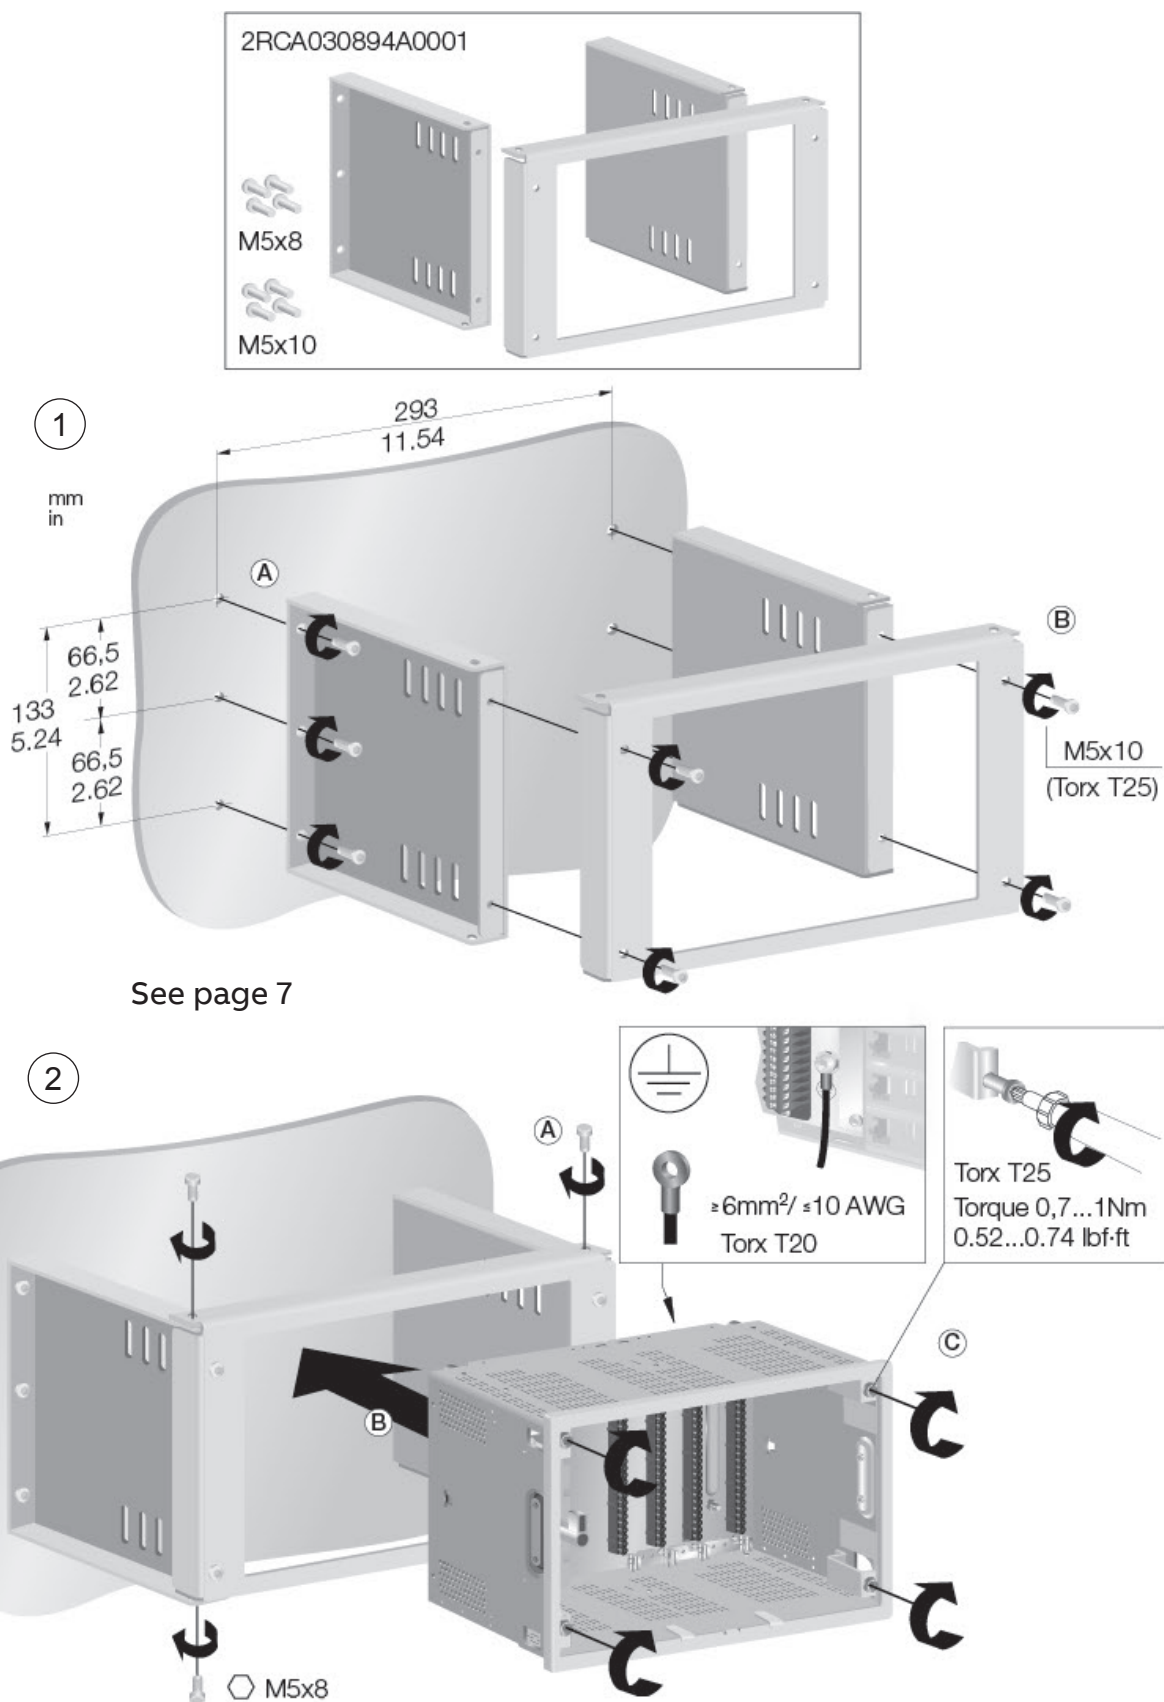


3

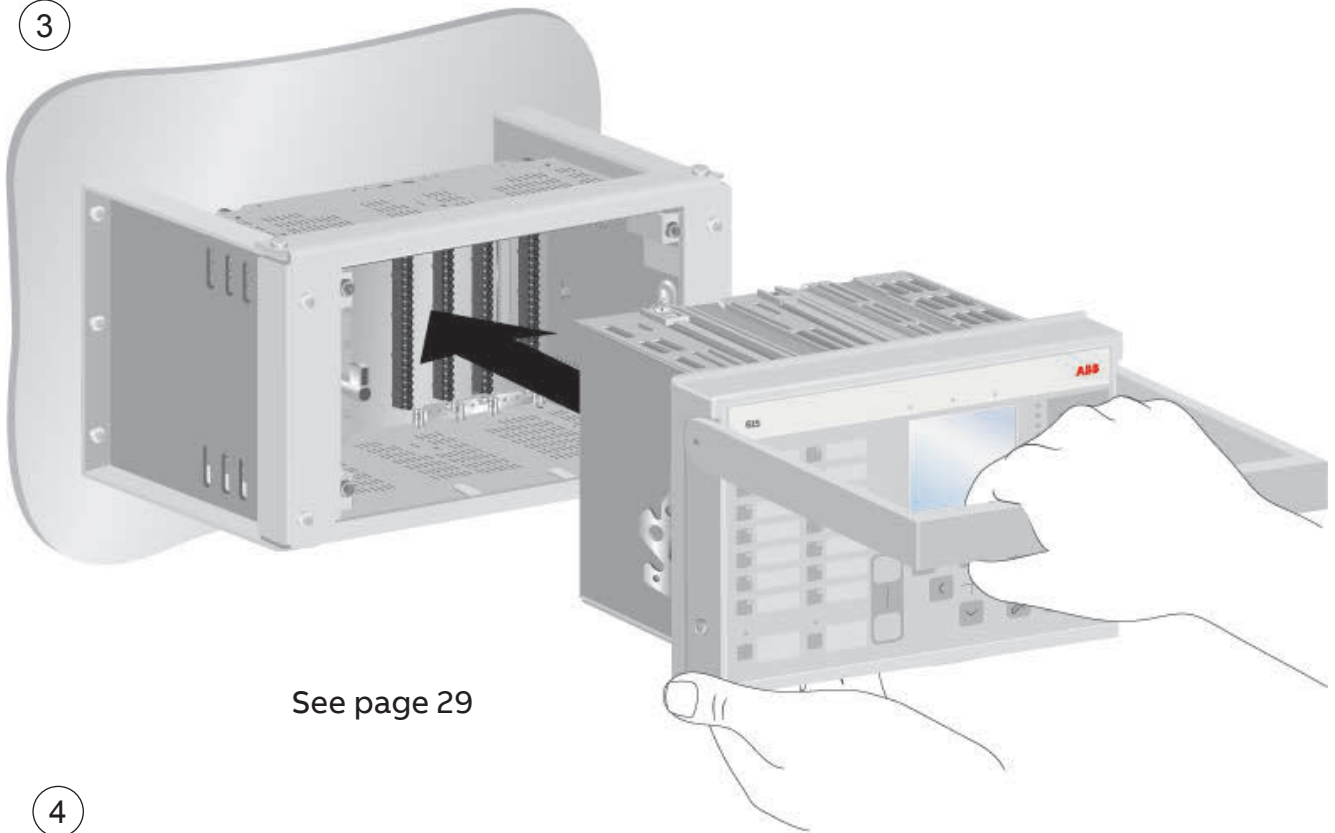

4

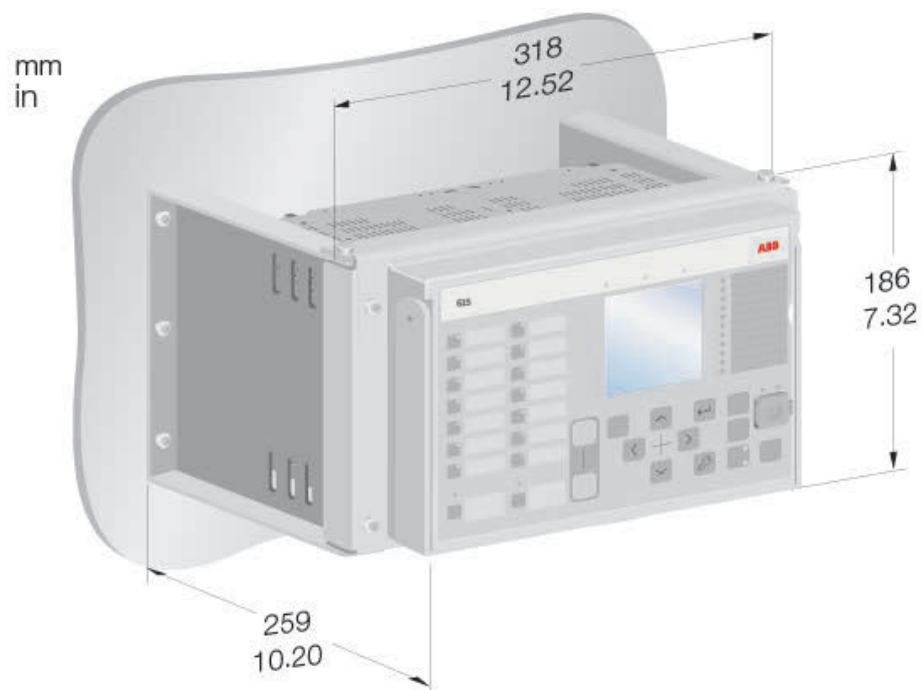


Swinging out the wall mounting frame

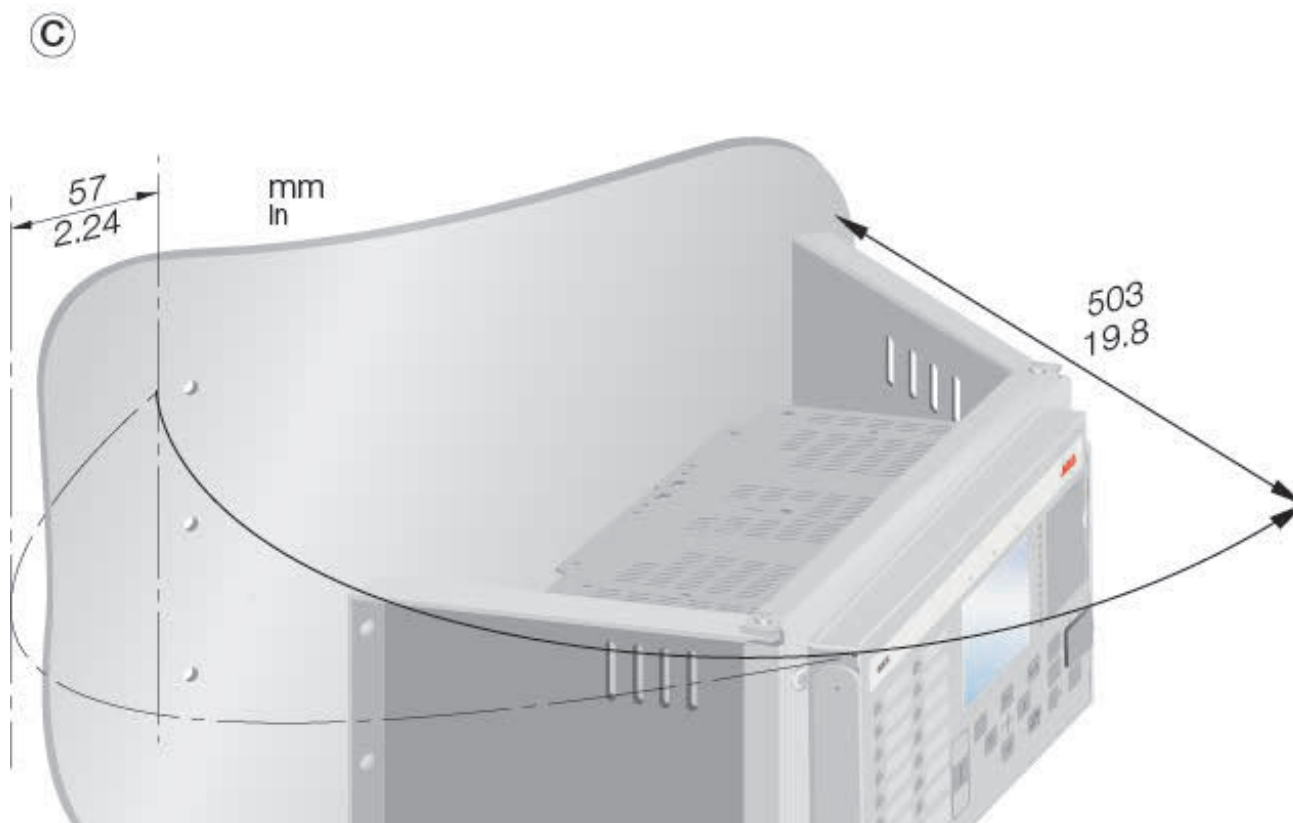

Inserting the plug-in unit into the case



It is not allowed to push or touch the screen during the plug-in unit handling.

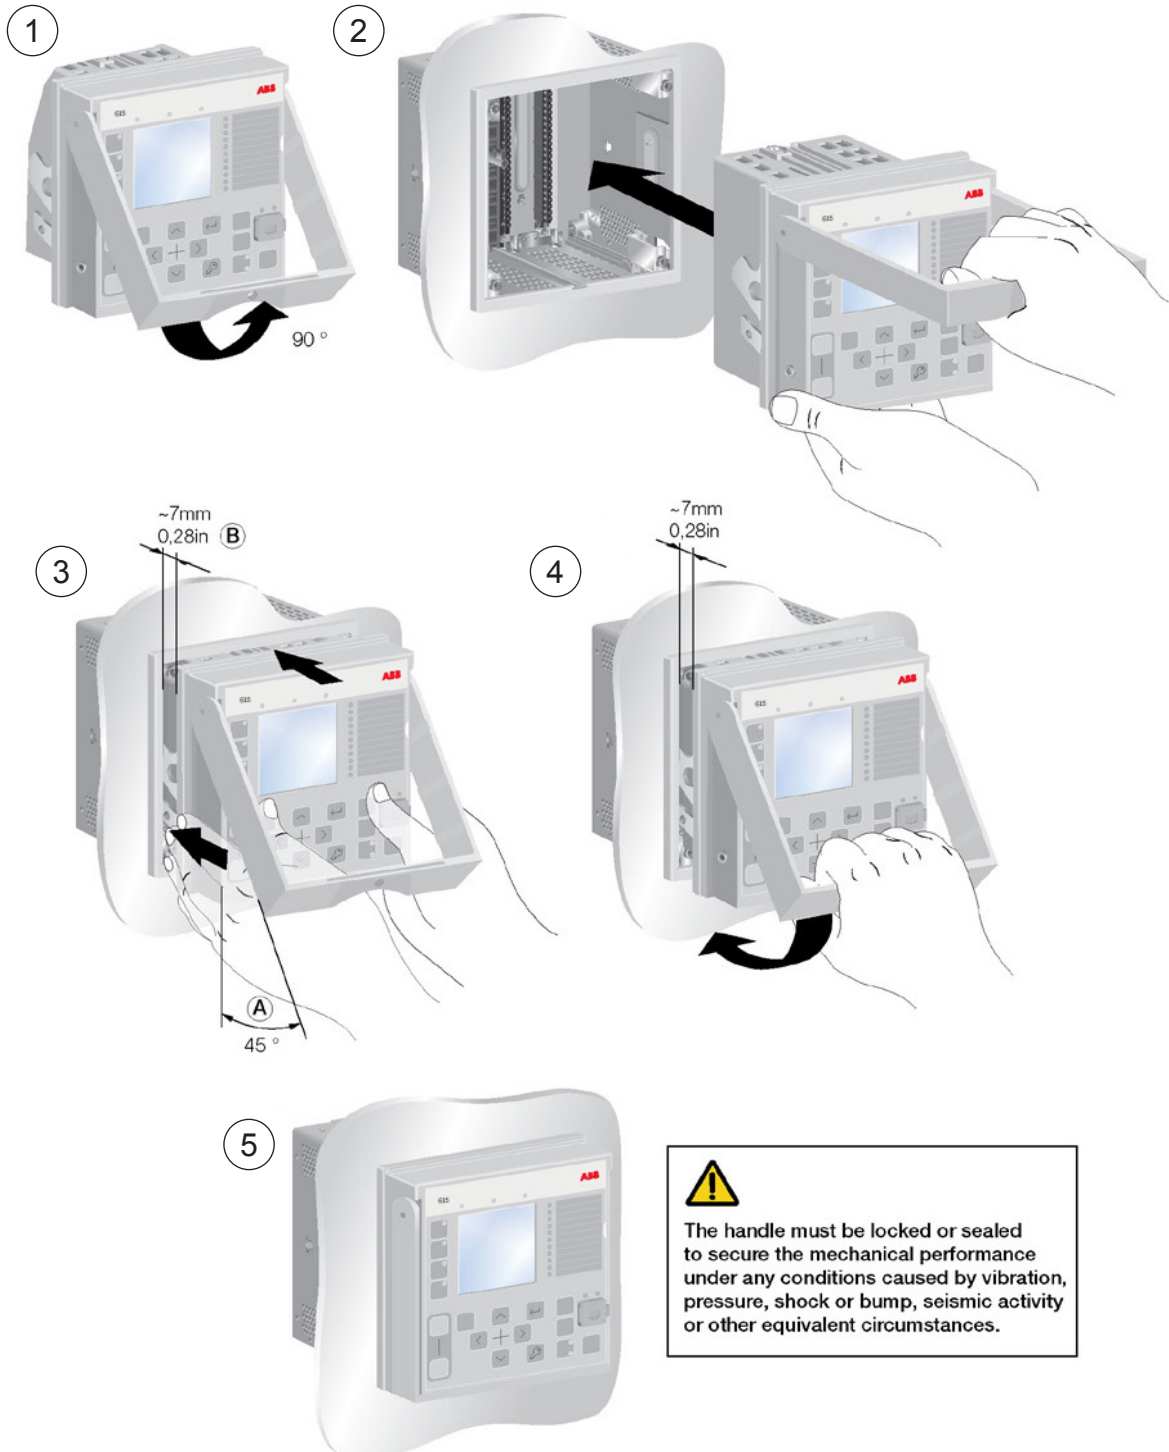


The handle must be locked or sealed to secure the mechanical performance under any conditions caused by vibration, pressure, shock or bump, seismic activity or other equivalent circumstances.


Locking the handle

See page 6

①

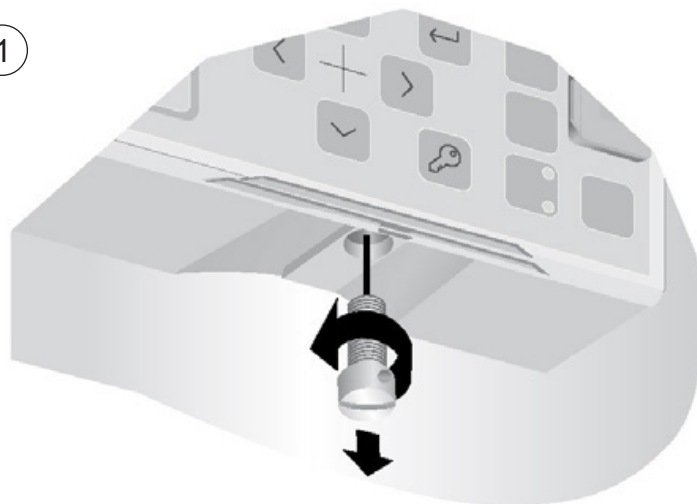

②

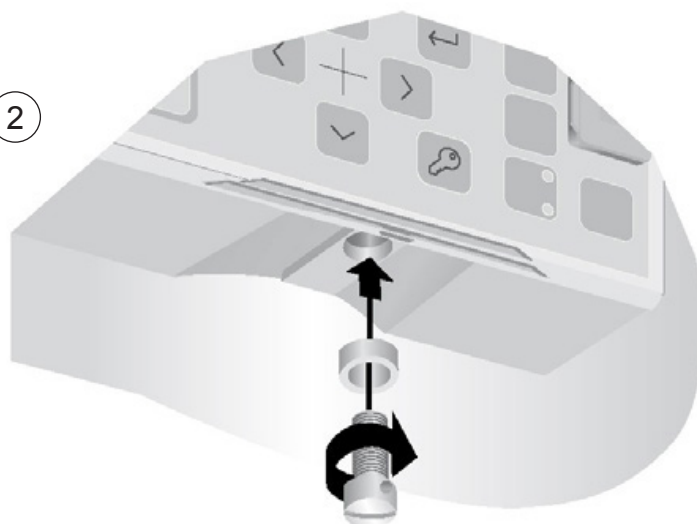

Sealing the handle

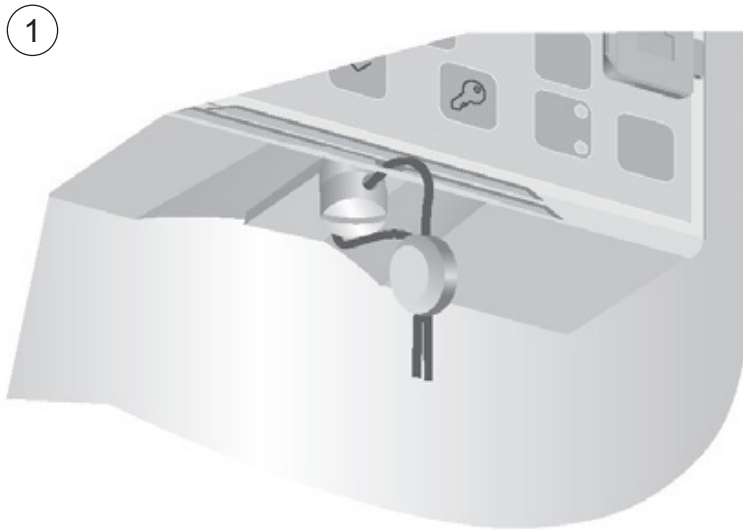




ABB Distribution Solutions
Digital Substation Products

P.O. Box 699

FI-65101 VAASA, Finland

Phone +358 10 22 11

www.abb.com/mediumvoltage

www.abb.com/relion

www.go.abb/digitalsubstations

