

Motor Pulley Size Guide

How to identify the correct AK-series pulley for your motor replacement


PRECISION SYSTEMS DEVELOPMENT

AK-Series · A-Belt · 5/8" Bore Shaft

⚠ **Important:** Giving us the wrong pulley size is the most common ordering mistake. Follow these 3 steps carefully before calling in your order. This guide covers **AK-series pulleys with a 5/8" bore**.

1 Look for an Engraved Part Number on the Pulley

Check the center hub AND the flat face — either location may have the engraving

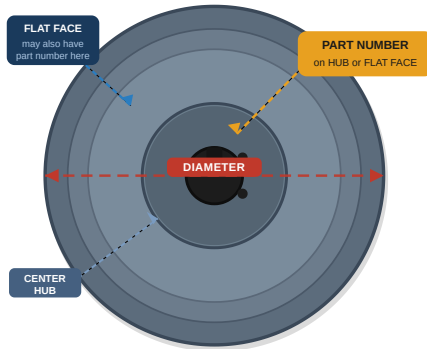

Top view — check hub and flat face

Pick up the pulley and look carefully at two places: the **center hub** (raised cylinder in the middle) and the **flat face** (outer flat ring surface on either side).

You are looking for engraved or stamped text in this format:

AKXX - 5/8

Example: AK34-5/8, AK40-5/8, AK30-5/8

✓ SEE A NUMBER?

Write it down exactly as stamped and give us that part number. **Skip to Step 3.**

✗ CAN'T FIND ONE?

Wipe the pulley clean with a rag first, then check again. If still nothing — **Continue to Step 2.**


⚠ TIP

The engraving is shallow and can be hard to see if the pulley is dirty or rusty. Use a flashlight and tilt the pulley to catch the light at an angle.


2 Measure the Pulley Diameter Using a Digital Caliper

Only needed if no part number was found in Step 1

WHAT DOES A DIGITAL CALIPER LOOK LIKE?

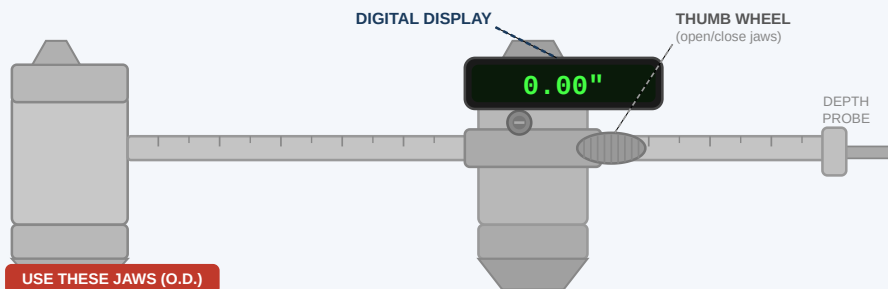

Available at most hardware stores for \$15–25. Use only the **outer (bottom) jaws** to measure the pulley diameter.

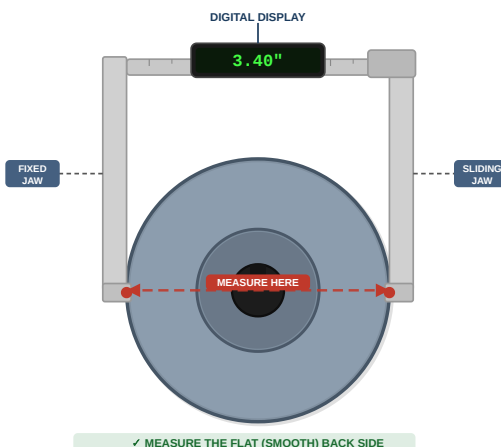

Place jaws flush on opposite edges — flat side

If no part number was found in Step 1, grab a digital caliper:

- Flip the pulley so the **flat, smooth back side** faces you — NOT the grooved belt side
- Open the caliper jaws wider than the pulley
- Place outer jaws on **both outside edges** at the widest point (straight across the center)
- Gently close the jaws until they barely touch both sides
- Read the number on the digital display
- **Write down the exact measurement** — then go to Step 3

✓ KEY TIP

Make sure the jaws are **straight across the widest point**. Rock the caliper slightly while closing to find the true widest point.


⚠ COMMON MISTAKE

Do NOT measure on the grooved belt side — the groove makes the reading smaller than the true diameter. Always use the **flat/smooth back side**.

No Caliper? Use a Tape Measure Instead

Alternative to Step 2 — only measure the flat, smooth back side of the pulley

PART 1 — HOW TO READ THE TICK MARKS ON A TAPE MEASURE

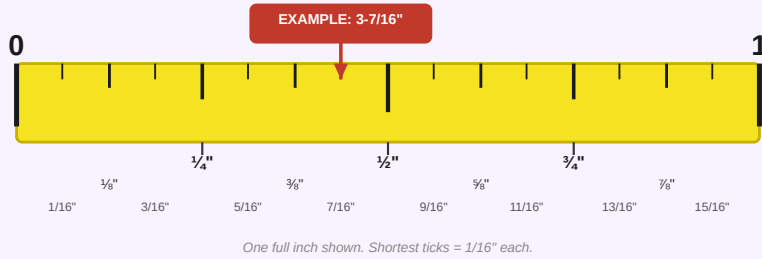

How to count: Find the last big number. Count each small mark past it — that count is your 1/16ths.

1 mark=1/16" | 2=1/8" | 4=1/4" | 6=3/8" | 8=1/2" | 12=3/4"


Tick Height = Fraction:

Tallest mark	= 1 inch
2nd tallest	= 1/2 inch
Medium tall	= 1/4 inch
Short	= 1/8 inch
Shortest	= 1/16 inch

Example: Your pulley edge falls **7 small marks** past the "3" on the tape → that's **3-7/16"** → matches **AK34-5/8**

How to lay the tape across the pulley:

- Flip the pulley **flat smooth side up** — NOT the grooved belt side
- Place the **0" end of the tape** flush with one edge of the pulley
- Stretch the tape straight across **through the very center** — the widest point
- Read the number where the **opposite edge** of the pulley lines up
- Use the cheat sheet below to find your part number

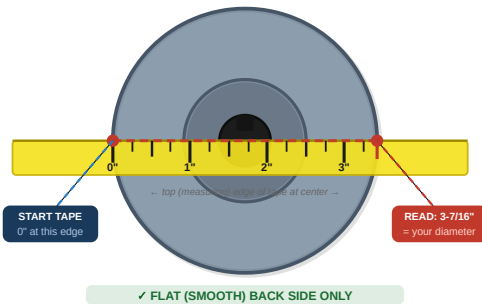

Line 0" at one edge — read mark where other edge falls

✓ KEY TIP

Rock the tape slightly to make sure you're going through the **exact center**. If the tape is off-center, your reading will be smaller than the true diameter.

⚠ COMMON MISTAKE

Do NOT measure the grooved belt side — the groove pulls the tape in and gives a smaller number. Always use the **flat smooth back side**.

TAPE MEASURE READING → PART NUMBER CHEAT SHEET — FIND YOUR ROW AND GIVE US THAT PART NUMBER

Tape Reads Between...	Order This	Tape Reads Between...	Order This
1-7/8" to 2-1/8"	AK20-5/8	3-1/2" to 3-11/16"	AK36-5/8
2-1/8" to 2-5/16"	AK22-5/8	3-11/16" to 3-7/8"	AK38-5/8
2-5/16" to 2-1/2"	AK24-5/8	3-7/8" to 4-1/8"	AK40-5/8
2-1/2" to 2-11/16"	AK26-5/8	4-1/8" to 4-5/16"	AK42-5/8
2-11/16" to 2-7/8"	AK28-5/8	4-5/16" to 4-1/2"	AK44-5/8
2-7/8" to 3-1/8"	AK30-5/8	4-1/2" to 4-11/16"	AK46-5/8
3-1/8" to 3-5/16"	AK32-5/8	4-11/16" to 4-7/8"	AK48-5/8
3-5/16" to 3-1/2"	AK34-5/8 ★	4-7/8" to 5-1/8"	AK50-5/8

★ AK34-5/8 is the example used throughout this guide. If your reading falls right at the boundary between two rows, round up to the larger size.

Find the row that matches your measured diameter. The **Part Number** column is what to give us when ordering. All sizes are **5/8" bore**, single groove, A-belt.

#	MEASURED DIAMETER	ACCEPTABLE RANGE	PART NUMBER TO ORDER
1	2.0" (2")	1.9" – 2.1"	AK20-5/8
2	2.2" (2-3/16")	2.1" – 2.3"	AK22-5/8
3	2.4" (2-7/16")	2.3" – 2.5"	AK24-5/8
4	2.6" (2-5/8")	2.5" – 2.7"	AK26-5/8
5	2.8" (2-13/16")	2.7" – 2.9"	AK28-5/8
6	3.0" (3")	2.9" – 3.1"	AK30-5/8
7	3.2" (3-3/16")	3.1" – 3.3"	AK32-5/8
8	3.4" (3-7/16")	3.3" – 3.5"	AK34-5/8 PHOTO EXAMPLE
9	3.6" (3-5/8")	3.5" – 3.7"	AK36-5/8
10	3.8" (3-13/16")	3.7" – 3.9"	AK38-5/8
11	4.0" (4")	3.9" – 4.1"	AK40-5/8
12	4.2" (4-3/16")	4.1" – 4.3"	AK42-5/8
13	4.4" (4-7/16")	4.3" – 4.5"	AK44-5/8
14	4.6" (4-5/8")	4.5" – 4.7"	AK46-5/8
15	4.8" (4-13/16")	4.7" – 4.9"	AK48-5/8
16	5.0" (5")	4.9" – 5.1"	AK50-5/8


📞 READY TO ORDER?

Call Precision Systems Development and give the part number exactly as shown (example: **AK34-5/8**). If your reading falls between two sizes, round up.

? NOT SURE?

If your measurement doesn't match any size, or the stamp looks different, take a clear photo of the hub and face and send it to us — we'll identify it.

Quick Size Comparison — drawn to scale:

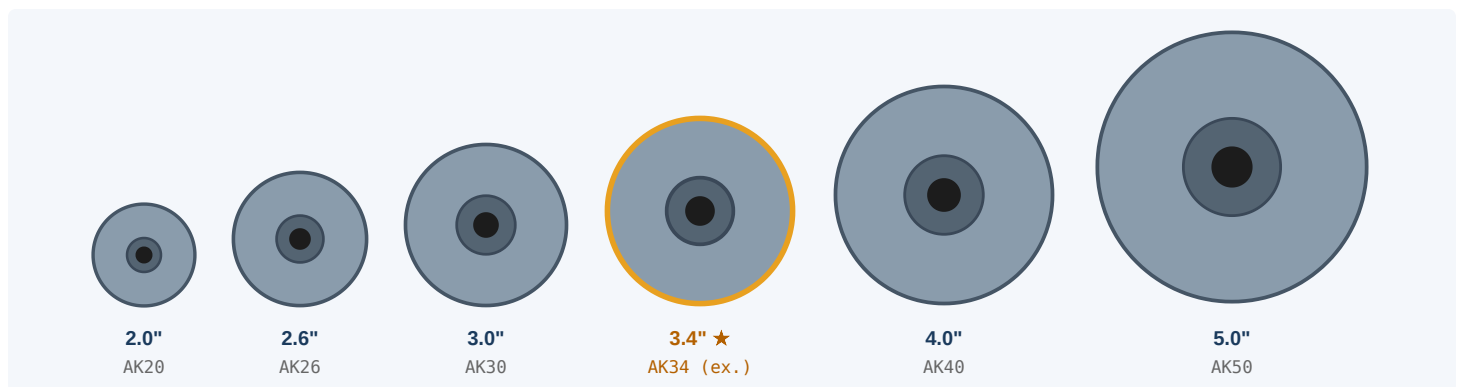

★ AK34-5/8 is the example used throughout this guide. All circles drawn to scale relative to each other.