


Assignment 6

Topology-

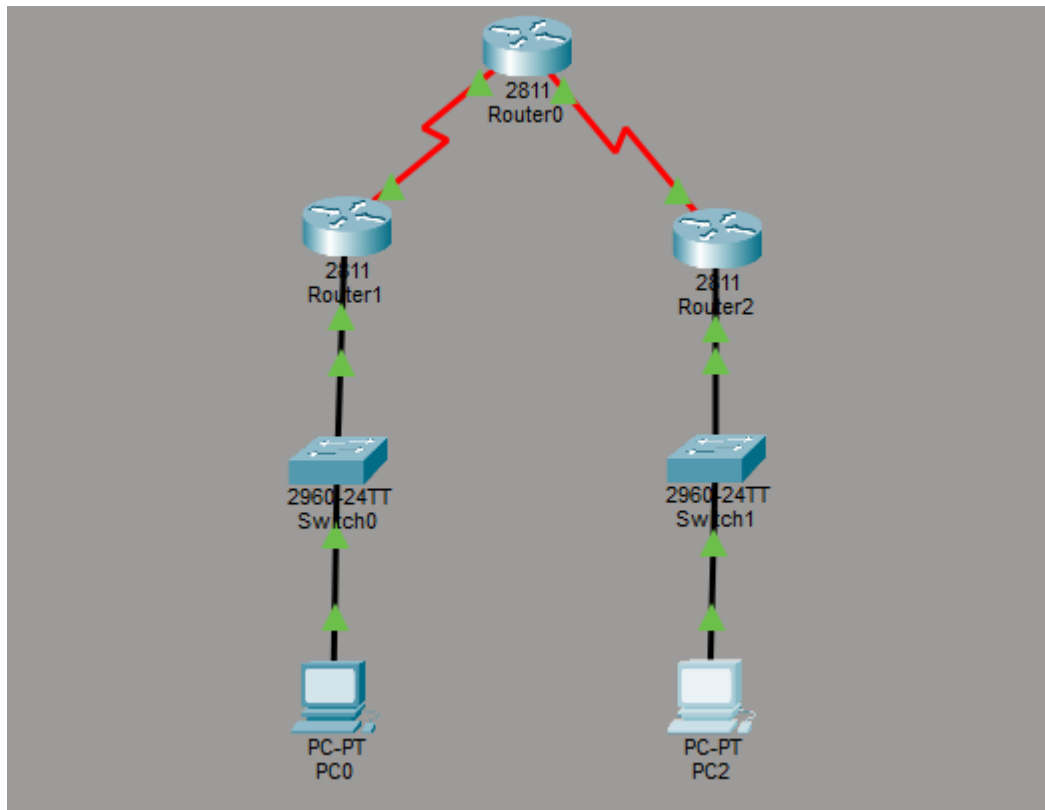

Configuration on Router 0-

```
Router>en
Router#config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#interface serial 0/0/0
Router(config-if)#ip address 100.1.1.2 255.255.255.0
Router(config-if)#clock rate 64000
This command applies only to DCE interfaces
Router(config-if)#no shut

%LINK-5-CHANGED: Interface Serial0/0/0, changed state to down
Router(config-if)#ex
Router(config)#interface serial 0/0/1
Router(config-if)#ip address 20.1.1.1 255.255.255.0
Router(config-if)#no shut

%LINK-5-CHANGED: Interface Serial0/0/1, changed state to down
Router(config-if)#
%LINK-5-CHANGED: Interface Serial0/0/0, changed state to up

%LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/0/0, changed state to up
%LINK-5-CHANGED: Interface Serial0/0/1, changed state to up

%LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/0/1, changed state to up
```

```

Router#show ip interface brief
Interface          IP-Address      OK? Method Status      Protocol
FastEthernet0/0    unassigned      YES unset   administratively down down
FastEthernet0/1    unassigned      YES unset   administratively down down
Serial0/0/0        100.1.1.2       YES manual   up          up
Serial0/0/1        20.1.1.1        YES manual   up          up
Vlan1              unassigned      YES unset   administratively down down
Router#config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#router rip
Router(config-router)#version 2
Router(config-router)#no auto-summary
Router(config-router)#network 100.1.1.0
Router(config-router)#network 20.1.1.0

```

Configuration on Router 1-

```

Router>en
Router#config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#interface serial 0/0/0
Router(config-if)#ip address 100.1.1.1 255.255.255.0
Router(config-if)#clock rate 64000
Router(config-if)#no shut

Router(config-if)#
%LINK-5-CHANGED: Interface Serial0/0/0, changed state to up

Router(config-if)#ex
Router(config)#int
%LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/0/0, changed state to up

% Incomplete command.
Router(config)#interface fa0/0
Router(config-if)#ip address 172.16.2.1 255.255.0.0
Router(config-if)#no shut

Router(config-if)#
%LINK-5-CHANGED: Interface FastEthernet0/0, changed state to up

%LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/0, changed state to up

```

```

Router#show ip interface brief
Interface          IP-Address      OK? Method Status      Protocol
FastEthernet0/0    172.16.2.1      YES manual   up          up
FastEthernet0/1    unassigned      YES unset   administratively down down
Serial0/0/0        100.1.1.1       YES manual   up          up
Serial0/0/1        unassigned      YES unset   administratively down down
Vlan1              unassigned      YES unset   administratively down down
Router#config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#router rip
Router(config-router)#version 2
Router(config-router)#no auto-summary
Router(config-router)#network 100.1.1.0
Router(config-router)#network 172.16.0.0
Router(config-router)#

```

PC0 Configuration-

IP Configuration	
☒ DHCP	☒ Static
IPv4 Address	172.16.2.10
Subnet Mask	255.255.0.0
Default Gateway	172.16.2.1
DNS Server	0.0.0.0

Configuration on Router 2-

```
Router>en
Router#config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#interface serial 0/0/0
Router(config-if)#ip address 20.1.1.2 255.255.255.0
Router(config-if)#clock rate 64000
Router(config-if)#no shut

Router(config-if)#
%LINK-5-CHANGED: Interface Serial0/0/0, changed state to up

Router(config-if)#ex
Router(config)#interface
%LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/0/0, changed state to up

% Incomplete command.
Router(config)#interface fa0/0
Router(config-if)#ip address 10.2.2.1 255.255.255.0
Router(config-if)#no shut

Router(config-if)#
%LINK-5-CHANGED: Interface FastEthernet0/0, changed state to up

%LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/0, changed state to up
```

```
Router#show ip interface brief
Interface                IP-Address      OK? Method Status      Protocol
FastEthernet0/0          10.2.2.1        YES manual up          up
FastEthernet0/1          unassigned      YES unset   administratively down down
Serial0/0/0              20.1.1.2        YES manual up          up
Serial0/0/1              unassigned      YES unset   administratively down down
Vlan1                    unassigned      YES unset   administratively down down

Router#config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#router rip
Router(config-router)#version 2
Router(config-router)#no auto-summary
Router(config-router)#network 20.1.1.0
^
% Invalid input detected at '^' marker.

Router(config-router)#network 20.1.1.0
Router(config-router)#network 10 2 2 0
```

PC2 Configuration-

IP Configuration	
☒ DHCP	☒ Static
IPv4 Address	10.2.2.20
Subnet Mask	255.0.0.0
Default Gateway	10.2.2.1
DNS Server	0.0.0.0

Ping from PC0-

```
Cisco Packet Tracer PC Command Line 1.0
C:\>ping 10.2.2.20

Pinging 10.2.2.20 with 32 bytes of data:

Request timed out.
Reply from 10.2.2.20: bytes=32 time=32ms TTL=125
Reply from 10.2.2.20: bytes=32 time=16ms TTL=125
Reply from 10.2.2.20: bytes=32 time=36ms TTL=125

Ping statistics for 10.2.2.20:
    Packets: Sent = 4, Received = 3, Lost = 1 (25% loss),
Approximate round trip times in milli-seconds:
    Minimum = 16ms, Maximum = 36ms, Average = 28ms
```

Ping from PC2-

```
Cisco Packet Tracer PC Command Line 1.0
C:\>ping 172.16.2.10

Pinging 172.16.2.10 with 32 bytes of data:

Reply from 172.16.2.10: bytes=32 time=2ms TTL=125
Reply from 172.16.2.10: bytes=32 time=39ms TTL=125
Reply from 172.16.2.10: bytes=32 time=40ms TTL=125
Reply from 172.16.2.10: bytes=32 time=28ms TTL=125

Ping statistics for 172.16.2.10:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 2ms, Maximum = 40ms, Average = 27ms
```