DRAFT INFORMATION ONLY

User Manual

Black Box (Remote Diagnostics System)




Overview

The Black Box is a network gateway device capable of connecting various Hobart HT devices. Depending on the type of system support needed, the black box and other HT devices can be configured using the HT Setup Device Tool (HTDST).

Where used

- ***Remote Monitoring System*** *- Black box (BB-2) and NGW*






Wired

Black Box (Device Gateway)
Remote Monitoring


Legend		
Wireless Network		
Symbol	Count	Description
	1	Router
	1	Switch
	1	Black Box
	1	Wrapper

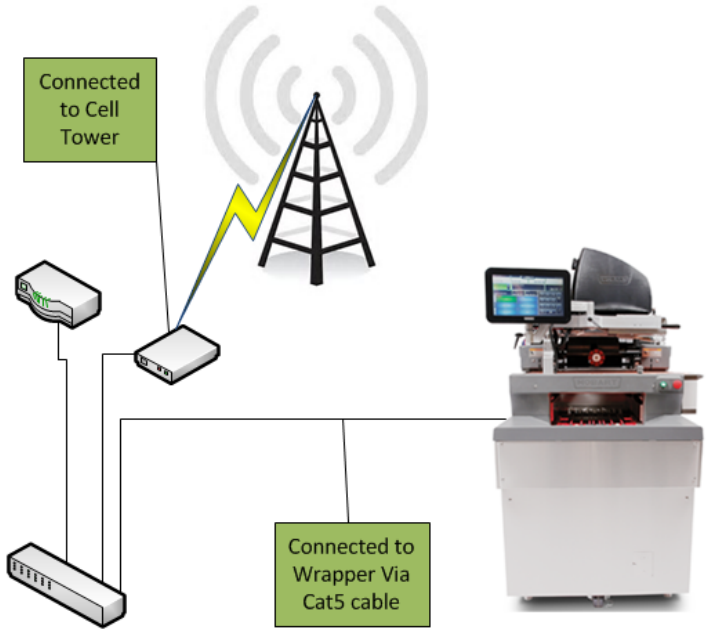

Wireless

Black Box (Device Gateway)
Remote Monitoring

Legend		
Wireless Network		
Symbol	Count	Description
	1	Router
	1	Switch
	1	Black Box
	1	Wrapper
	1	Cell Tower
	1	Access Point

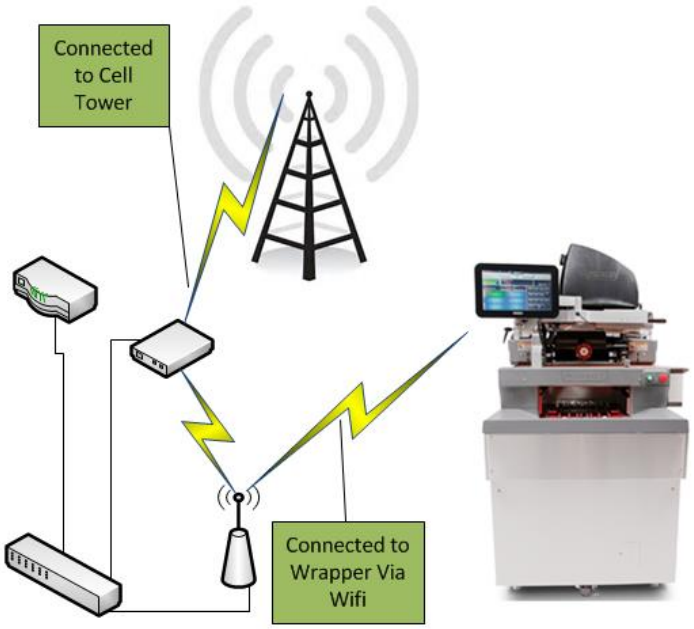

Prerequisites – Customer Network Hardware

Introduction

The HT Setup Device Tool (HTDST) is a HT device setup Tool that performs various setup functions for HT series scale, black box (Remote Diagnostics System) and other Hobart Network devices. A laptop computer is required.

Benefits


- Preparation of configuration file use on HT Scale, Black Box or other Hobart network devices.
- Save configuration files.
- Open and append configuration with new or updated values.

HTDST INSTALLATION


System Requirements
• Microsoft Windows 7/10

HT device setup Tool Installation Steps

1. Double click the 'HTDeviceSetupUtility.exe.' file. Select **OK**

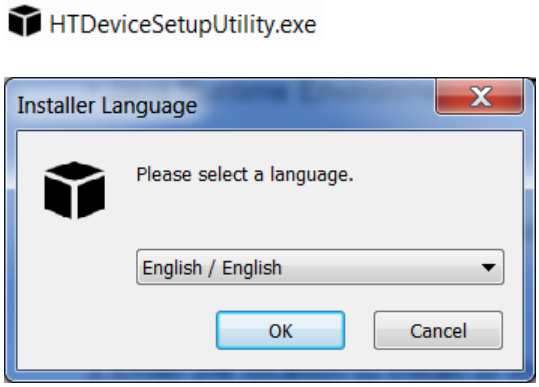


2. Allow software to install to the default directory 'Program Files (x86). Select **Install**.

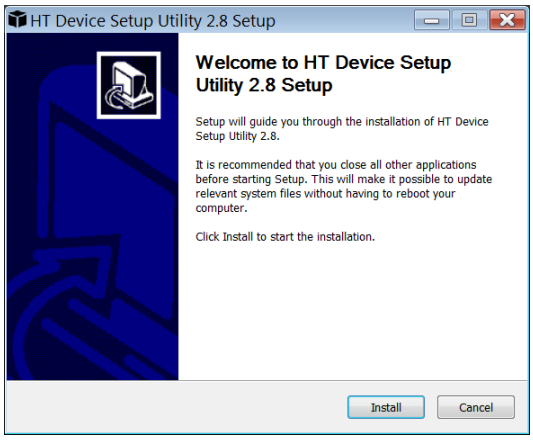

3. Select **Finish**

   Note: if you leave 'Run HT Device Setup Utility' checked it will automatically start.

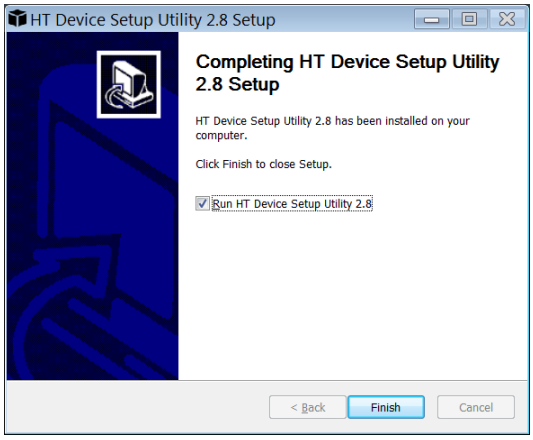


Hobart Remote Diagnostics System configuration

1. Double click on the HTDST icon to start the tool. The tool will open showing the Initial HT Device Setup Tool screen.

2. Select **New** or **Open.**

   a. Start New Configuration File = Create New File
   b. Open Configuration File = Open existing file for modification

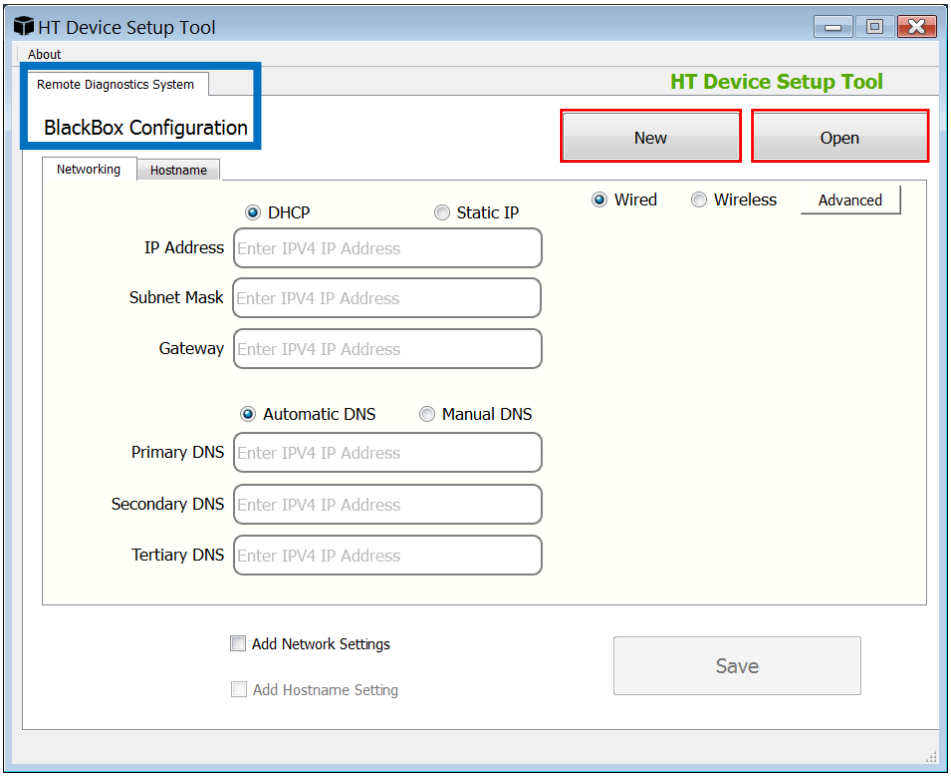

Select Tab for device you want to configure


1. Select the **Tab** you want to configure settings for.

   Note: Data must be entered in the Tab(s) screen to select settings to save in the configuration file.

   Note: As data is entered for each **Tab** the ‘Add Settings’ check box options will display on the bottom left of the configuration screen.

2. Check the ‘Add Settings’ check box for the settings you want to include in the configuration file.

Tab Selection	Add setting check box
Networking	Add Network Settings
Hostname	Add Hostname Settings

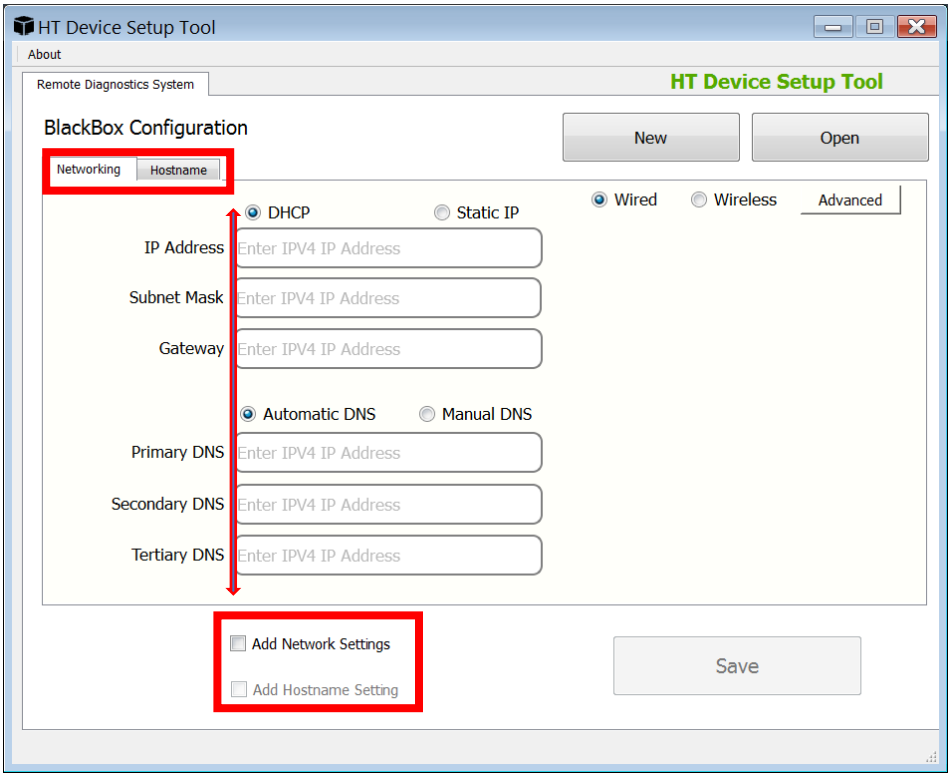


Avaialble Configuration settings

Basic Networking Settings for black box (Remote Diagnostics System)

- DHCP or Static IP address
- Wired or Wireless


DHCP / Wired

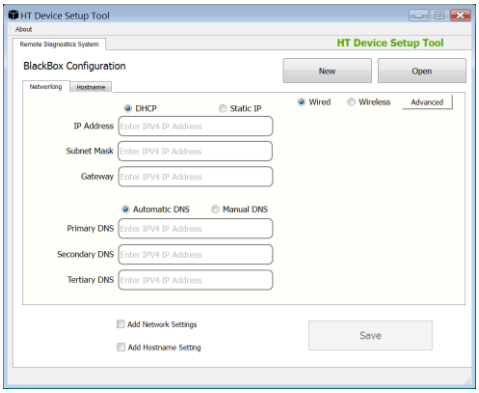


DHCP / Wireless

Note: Based on ‘Security Method’ selected - security options will change.


Security Method=WEP

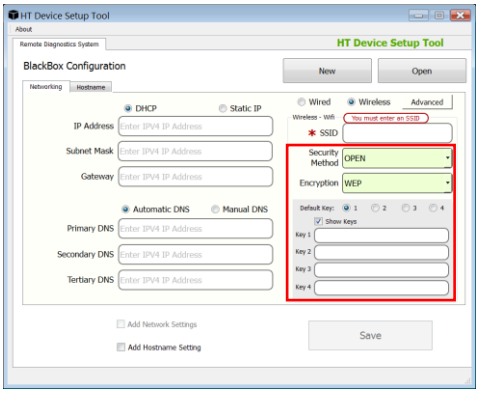

Security Method=WPA-Personal

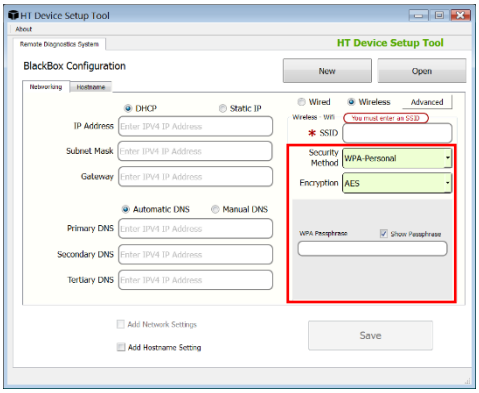


Static IP / Wired

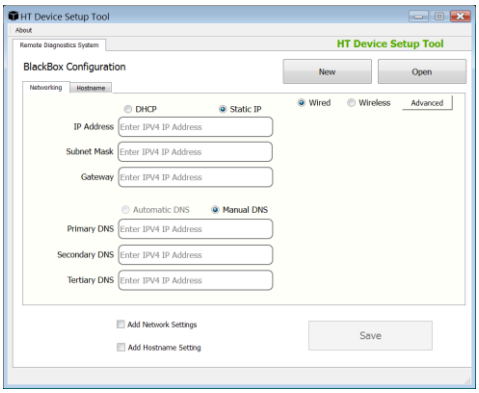


Static IP / Wireless

Note: Based on ‘Security Method’ selected - security options will change.

Security Method=WEP

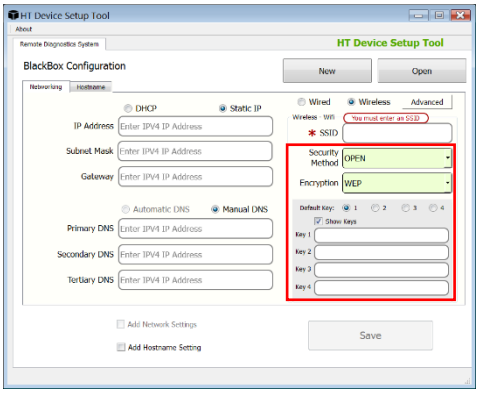


Security Method=WPA-Personal

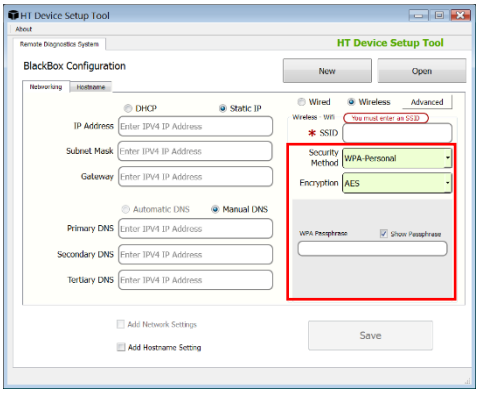


Hostname

Note: ConfigureHostname as required by customer.

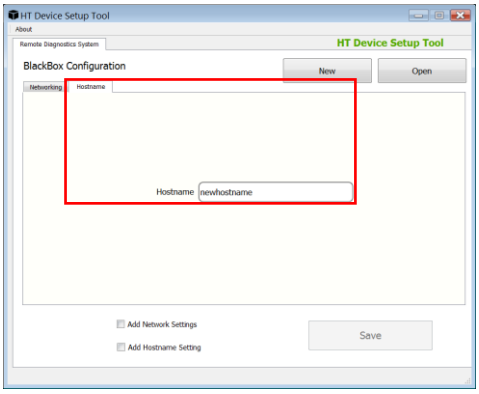


3. Configure network settings as required for customer's network.

4. Select 'Save' to save configuration file (hdconfig).

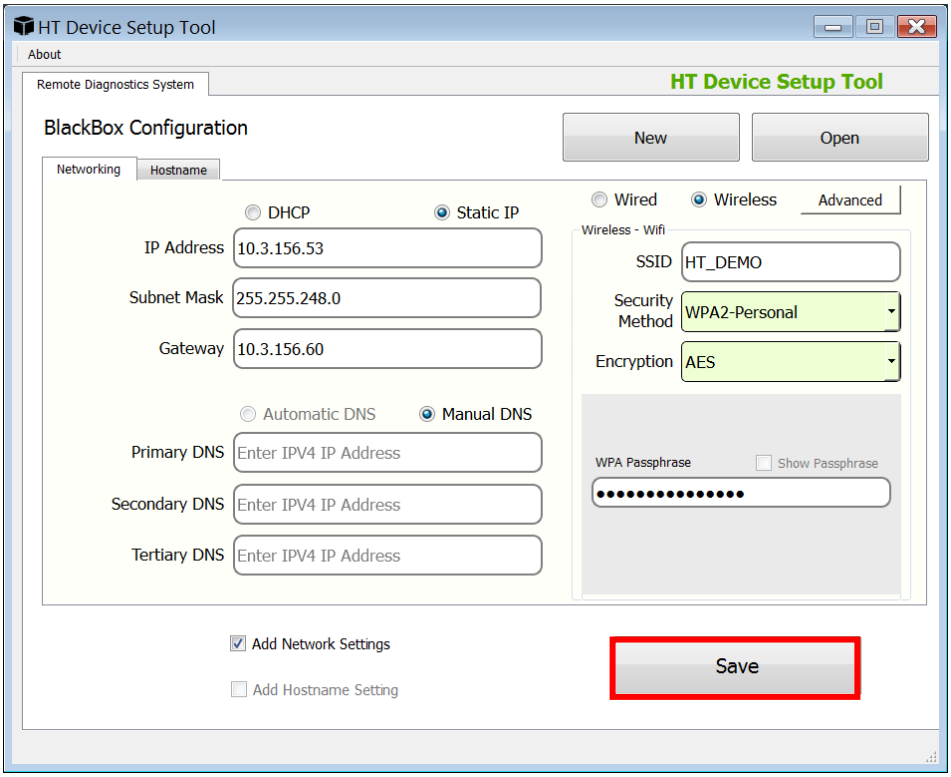

Note: Tool automatically seeks the ‘autoconfig’ folder when a USB drive is plugged in.

- Must have folder ‘autoconfig’ on root of USB drive.
- Does not have to be a Hobart Service Key.

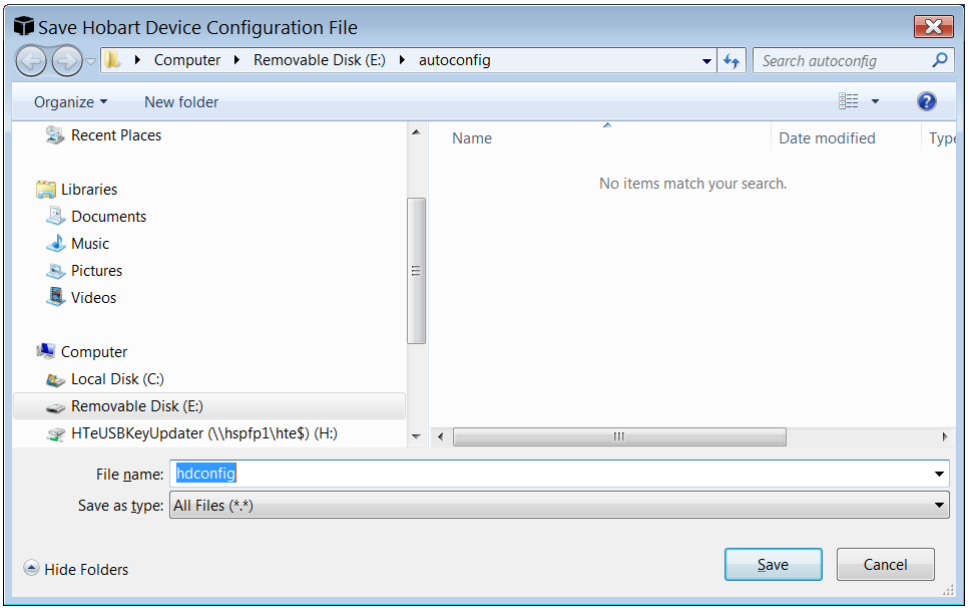


5. Choose folder where you want to save the configuration file.

6. Name the file something you will remember for the device you are configuring.

   CustomerName_Device_Serialnumberofdevice_date

   i.e. MainMarket_BB_451145053_10032017

   - BB=Black Box

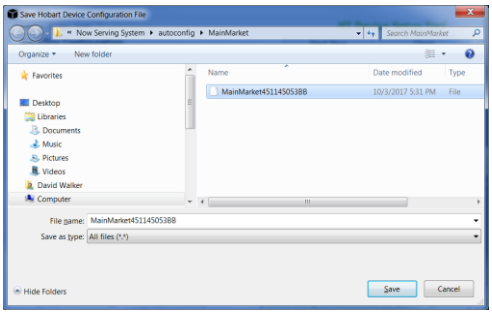

Note: You can save any number of configuration files, however you will be required to rename the file to ‘hdconfig’ prior to loading to a device.

Import configuration file to Black Box (Remote Diagnostics System)

Pre-import

- Create folder called ‘autoconfig’ on USB drive.
- Place configuration file for the device you are configuring in the ‘autoconfig’ folder.
- The device checks for a file called ‘hdconfig’ during auto configuration.
    - Wired connection - Network cable connection to hub/switch from BB.
    - Wireless connection – Available Access Point to connect BB.

Important: Make sure you have renamed the configuration file to ‘hdconfig’ before importing.

1. Plug the ‘USB drive’ with the ‘network’ file into the USB port on the black box (Remote Diagnostics System).

2. Wait for the Black Box (Remote Diagnostics System) to reboot. This process takes approx. 3 to 4 minutes.

3. Once the Black Box (Remote Diagnostics System) has rebooted remove the ‘USB drive’.

