


Atualizar o NAT e obter o IP Externo do PABX

O IP externo serve para configurar telefones ip's e aplicativos voip tipo microsip.

- 1) Para obter o IP externo acesso o PABX, vá em 'Settings, Asterisk SIP Settings'. Acesse a aba 'General SIP Settings'.

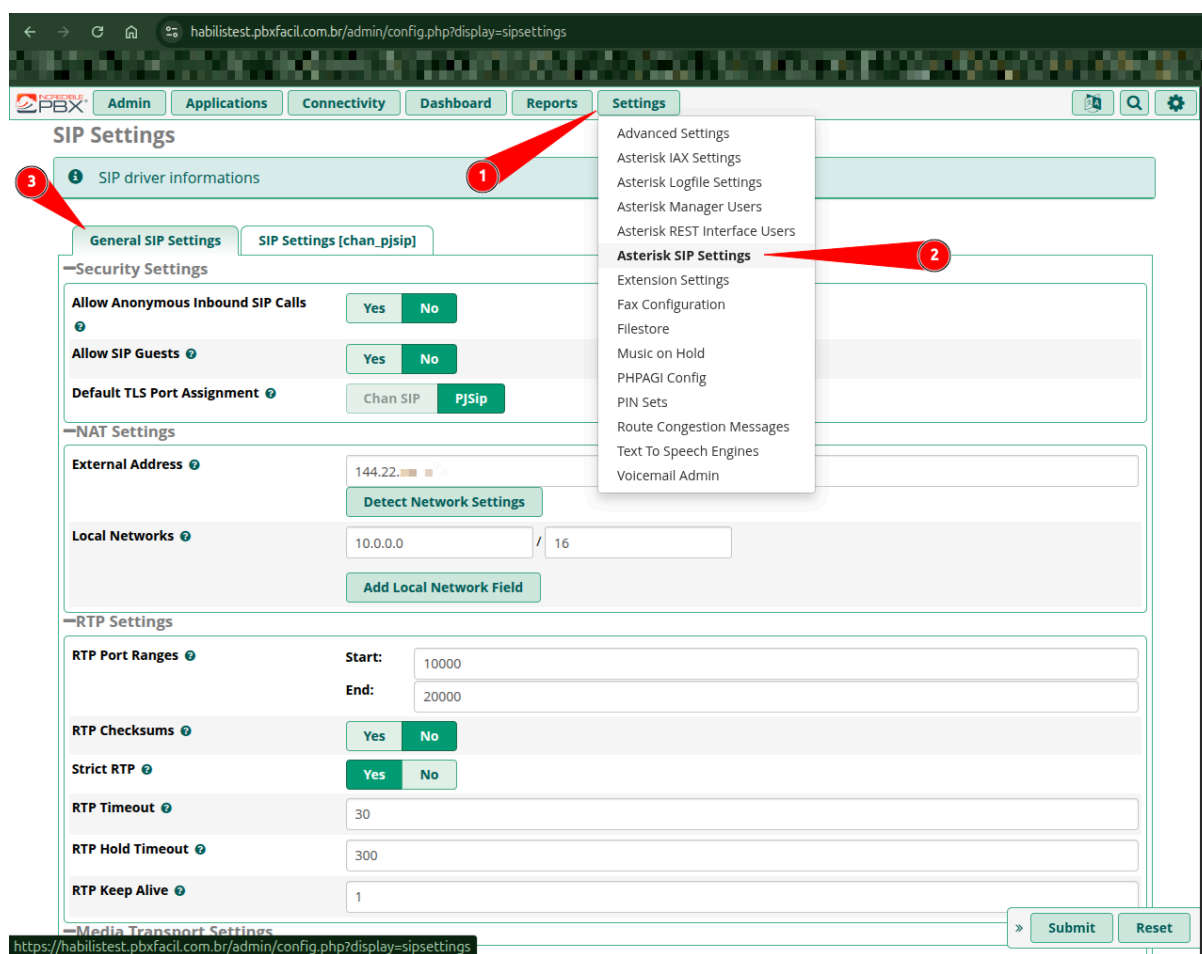

[imagem1]

2) Em 'NAT Settings' no campo 'External Address' clique no botão 'Detect Network Settings'

The screenshot shows the 'SIP Settings' page in a PABX administration interface. The 'NAT Settings' section is active, and the 'Detect Network Settings' button is highlighted with a red circle and the number '4'. The 'External Address' field contains '144.22.' and the 'Local Networks' field contains '10.0.0.0 / 16'. The 'Security Settings' section includes options for 'Allow Anonymous Inbound SIP Calls', 'Allow SIP Guests', and 'Default TLS Port Assignment'. The 'RTP Settings' section includes fields for 'RTP Port Ranges', 'RTP Checksums', 'Strict RTP', 'RTP Timeout', 'RTP Hold Timeout', and 'RTP Keep Alive'. The 'Media Transport Settings' section is partially visible at the bottom.

Section	Field/Option	Value/Status
Security Settings	Allow Anonymous Inbound SIP Calls	No
	Allow SIP Guests	No
	Default TLS Port Assignment	PJSip
NAT Settings	External Address	144.22.
	Local Networks	10.0.0.0 / 16
RTP Settings	RTP Port Ranges Start	10000
	RTP Port Ranges End	20000
	RTP Checksums	No
	Strict RTP	No
	RTP Timeout	30
	RTP Hold Timeout	300
Media Transport Settings	RTP Keep Alive	1

[imagem2]

Pronto. O IP será atualizado. Use-o para configurar os acessos externos ao PABX.