





This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for:

BMW 1 Hatchback (E87) 116i 1.6, BMW 1 Hatchback (E87) 116i 2.0, BMW 1 Hatchback (E87) 118i 2.0, BMW 1 Hatchback (E87) 120i 2.0, BMW 1 Hatchback (E87) 130i 3.0, BMW 1 Hatchback (E87) 116d 2.0, BMW 1 Hatchback (E87) 118d 2.0, BMW 1 Hatchback (E87) 120d 2.0, BMW 1 Hatchback (E87) 123d 2.0


The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 1 Coupe (E82) 125i 3.0

CLUB.AUTODOC.CO.UK 1-6



REPLACEMENT: GLASS FOR WING MIRROR – BMW 1 HATCHBACK (E87). LIST OF THE TOOLS YOU'LL NEED:

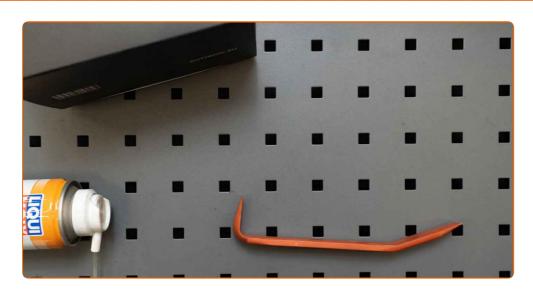

Plastic trim tool

Fender cover

Buy tools

CLUB.AUTODOC.CO.UK 2-6





Replacement: glass for wing mirror – BMW 1 Hatchback (E87). Professionals recommend:

- The replacement procedure is identical for the right and left side mirror glass.
- All work should be done with the engine stopped.

REPLACEMENT: GLASS FOR WING MIRROR – BMW 1 HATCHBACK (E87). RECOMMENDED SEQUENCE OF STEPS:

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



7 Tilt the mirror glass out of the housing.



Carefully release the mirror glass from its attachment. Use a plastic trim tool.



CLUB.AUTODOC.CO.UK 3-6







4 Remove the mirror glass.



AUTODOC recommends:

- Replacement: glass for wing mirror BMW 1 Hatchback (E87). Do not use excessive force when removing the part as this may damage it.
- 5 Detach the mirror heating connectors.



6 Attach the mirror heating connectors.



Install the new mirror glass. Make sure you hear a click indicating that it is locked in place.



CLUB.AUTODOC.CO.UK 4-6





Replacement: glass for wing mirror – BMW 1 Hatchback (E87). AUTODOC recommends:

- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.
- Make sure the mirror glass is positioned correctly. It should be aligned with the locking tabs on the housing.
- Clean the mirror glass.
- Remove the fender protection cover.



Switch on the ignition. This is necessary in order to make sure that the component operates properly.



Switch off the ignition.



VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 5-6